

HSH-09-003B

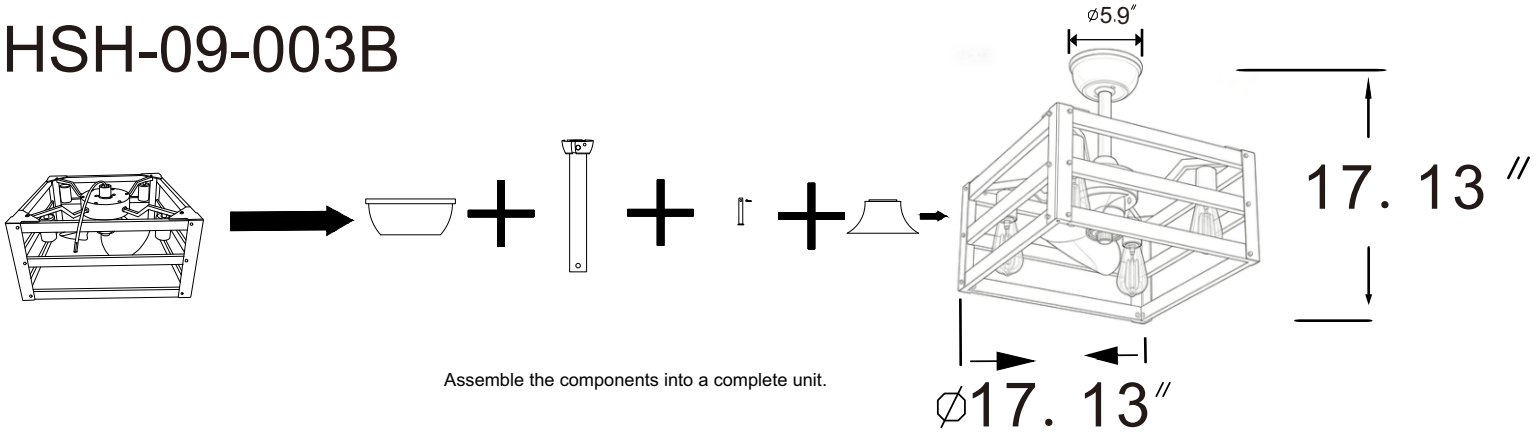


Assemble the components into a complete unit.

1

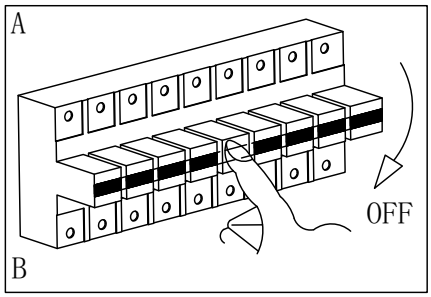


Please ensure the voltage matches the product and disconnect the power at the installation location for safety.

2

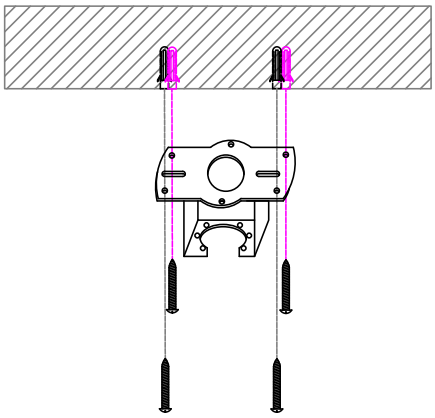


Securely fasten the mounting bracket to the ceiling.

3

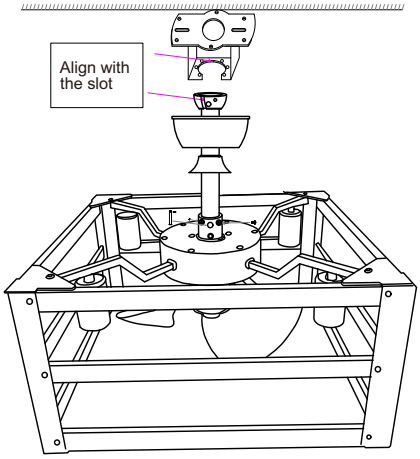


Align and snap the light fixture onto the mounting bracket, ensuring the tabs are seated in the corresponding slots.

4

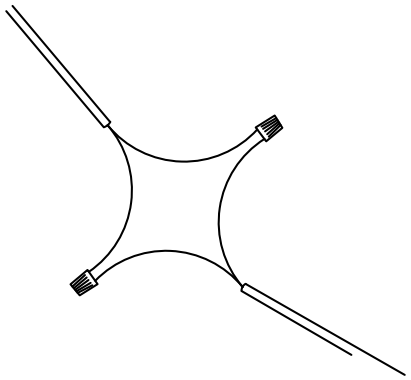


Correctly and securely connect the driver input to the power supply.

5

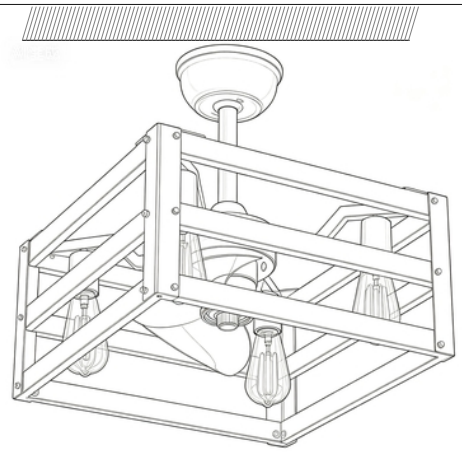

Slide the decorative cover and ceiling canopy over the mounting area, then secure the ceiling canopy in place.

6

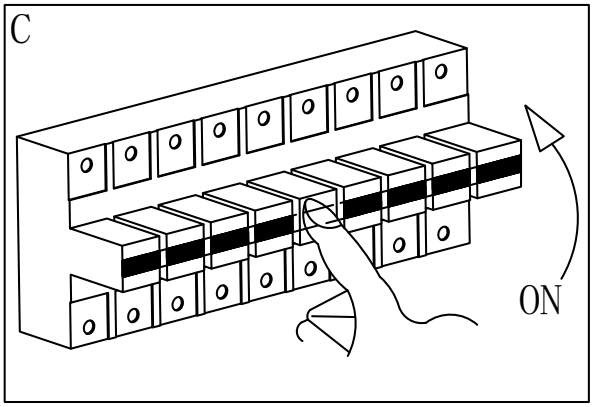

Turn on the power switch.

Fan lamp remote control instructions

Remote control key function:

ALL OFF :Main switch

LIGHT ON/OFF :Light switch

F :rotation

:Natural wind

R :reversal

FAN/OFF :Fan off


:Fan gear key Gear 1-6 Forward

1H :Fixed time 1 hour

2H :Fixed time 2 hours+**pair key**

4H :Fixed time 4 hours

Remote control battery : No. 7 1.5V*2

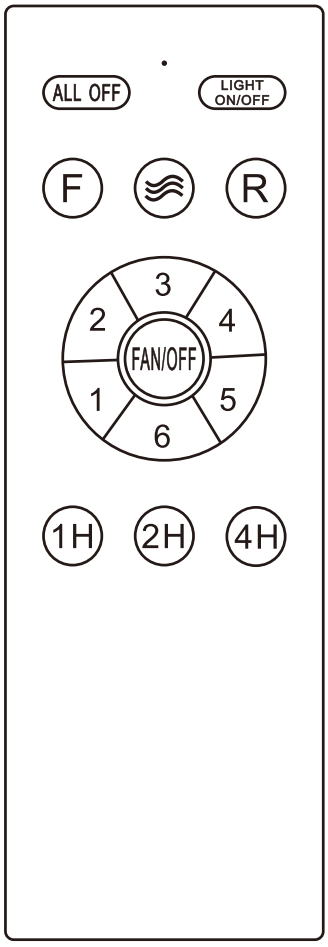

Product introduction :

1. This product adopts 433 wireless digital technology ,

Remote control one-to-one control ,

The workpiece can be controlled from any angle within the allowable space ,

Not limited by direction , Simple and convenient operation ,

Strong anti-interference ability。

2 . Remote control instructions :

① . If the remote control is not used for a long time , Please remove the battery。

② . Remote control matching code :

Turn on the power ,

Press the pair code button within 5 seconds of the light on ,

When you hear two"tick" sound or the light flashes, the code matches successfully。

If you need to match the code again , You need to wait 30 seconds before turning on the power and repeat the above operation。

warning :

This electronic switch product needs to be operated by professionals during installation。

Remote trigger electronic switch ,

The radio frequency of the remote control transmitter is 433M

