
17



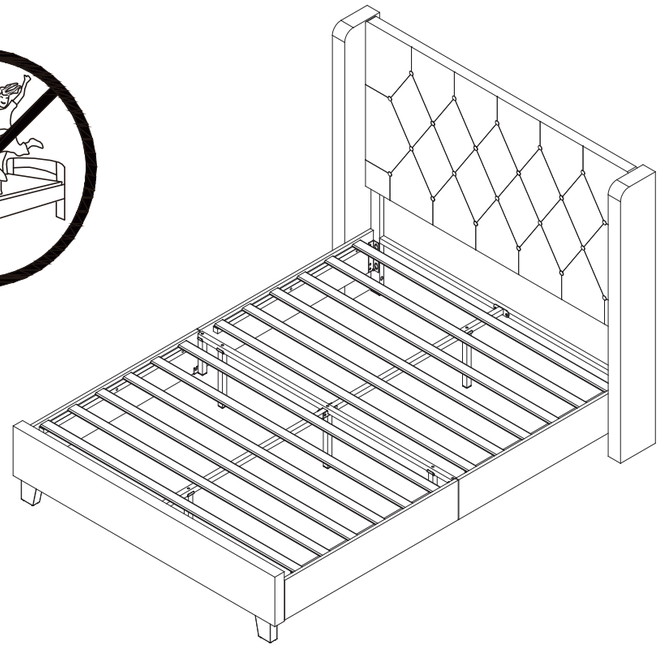


Finish

BED FRAME



Thank you for choosing our products, please assemble and use it following the instructions.

Assembly Instruction

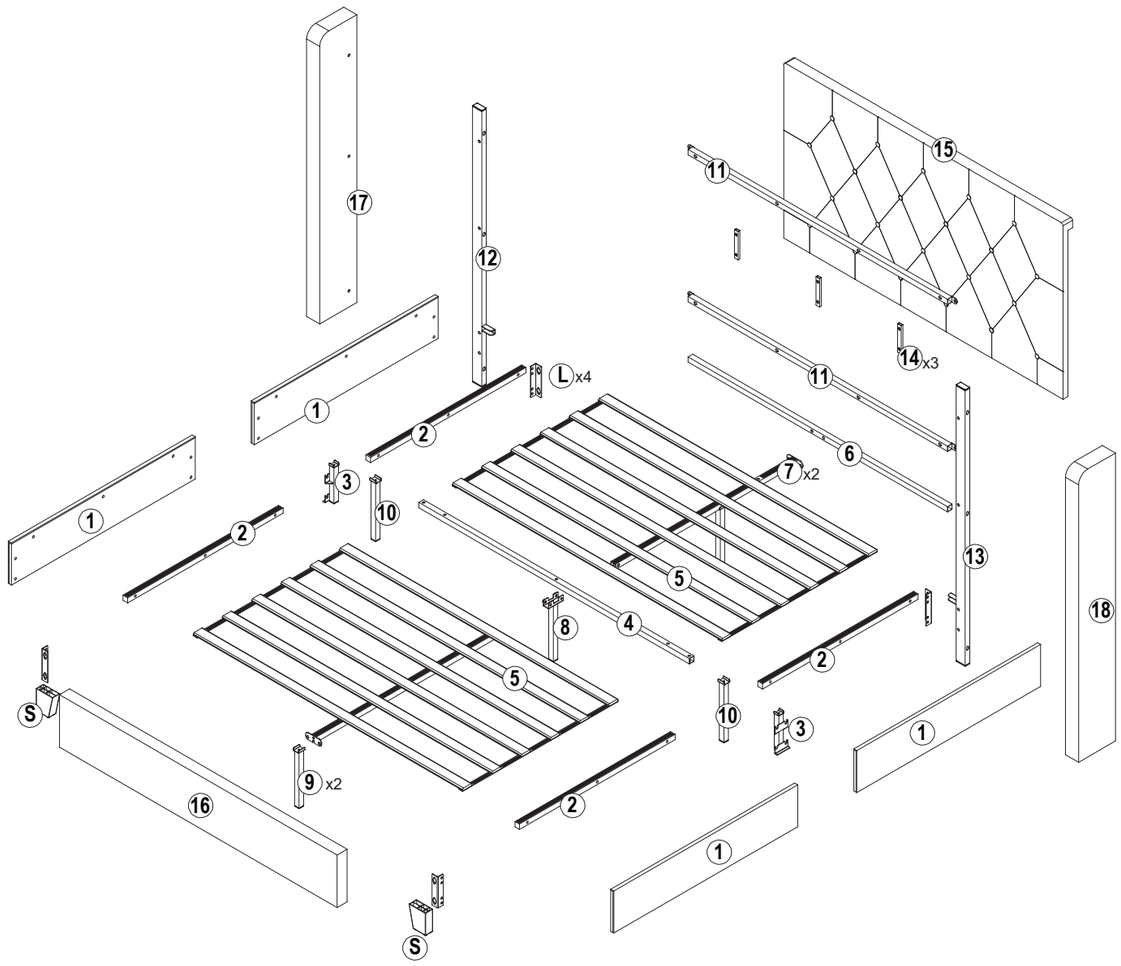

B669


Important Note

HARDWARE NOTE :

1.Two or more people are required for assembly


2.Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.

13

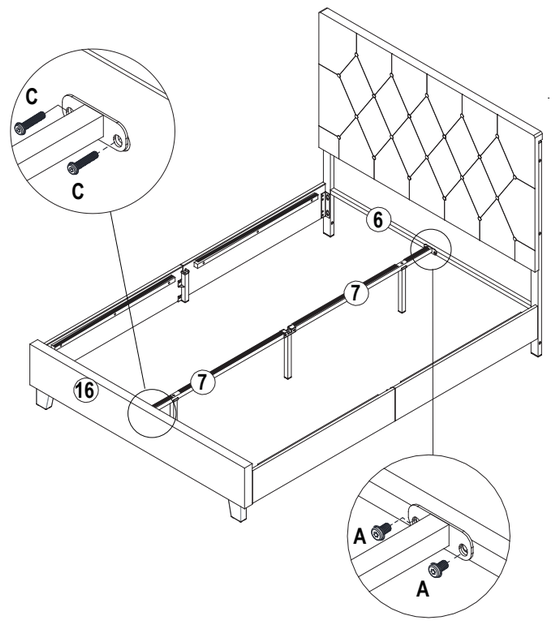


A	M8x16	2pcs
D	M8x30	2pcs

14

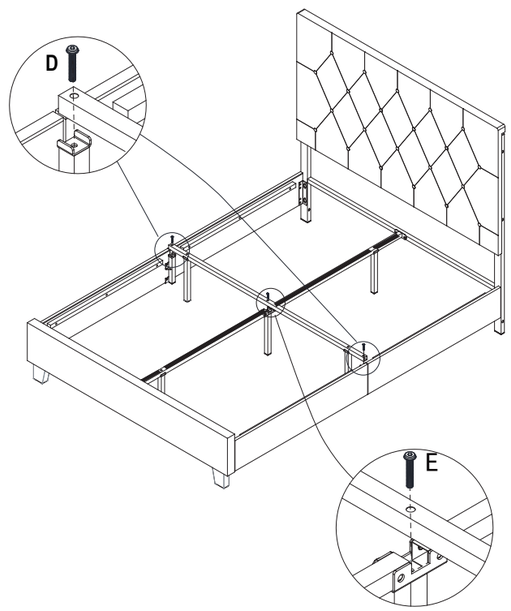


D	M8x38	2pcs
E	M8x45	1pc

15

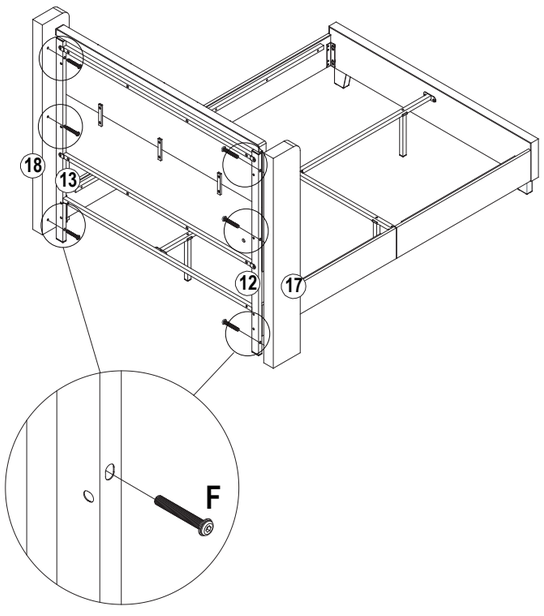


F	M8x70	6pcs

16

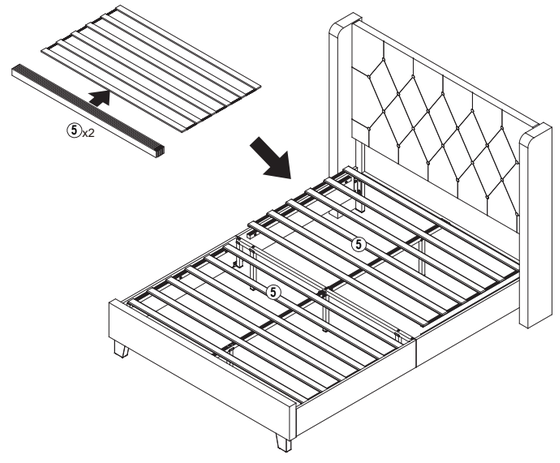


9

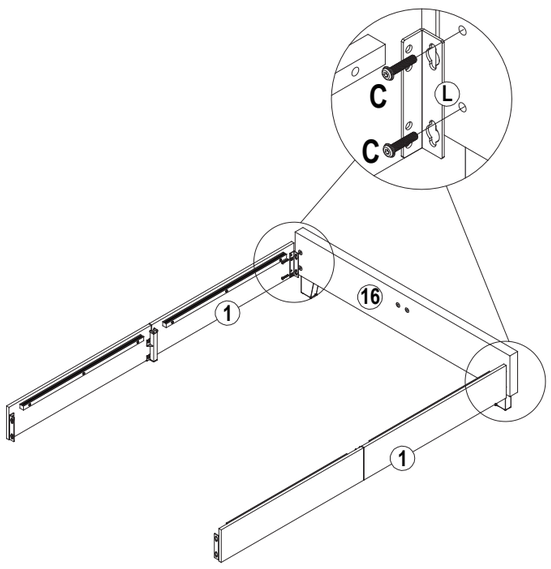


C	M8x30	4pcs

10

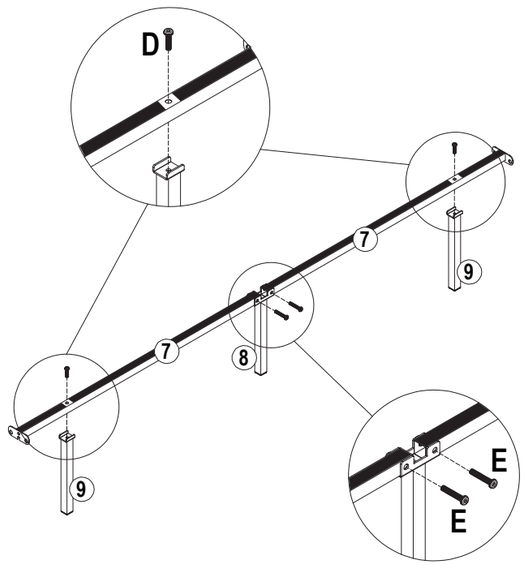


D	M8x38	2pcs
E	M8x45	2pcs

11

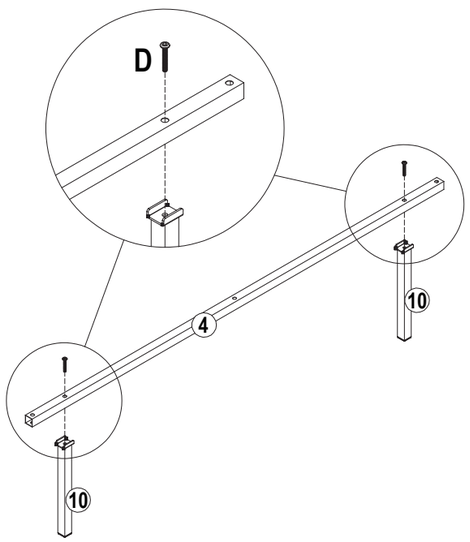


D	M8x38	2pcs

12

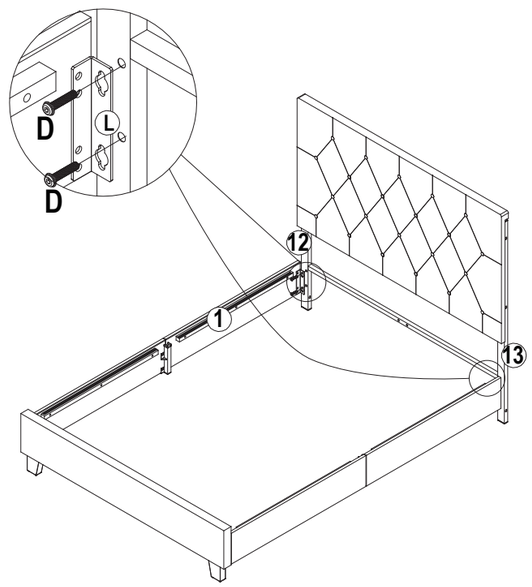

D	M8x38	4pcs

Components

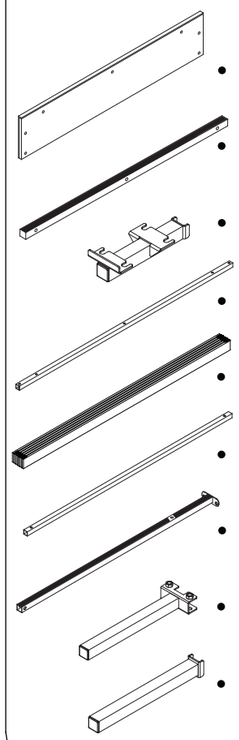

1 x4pcs

2 x4pcs

3 x2pcs

4 x1pc


5 x2pcs

6 x1pc

7 x2pcs

8 x1pc

9 x2pcs

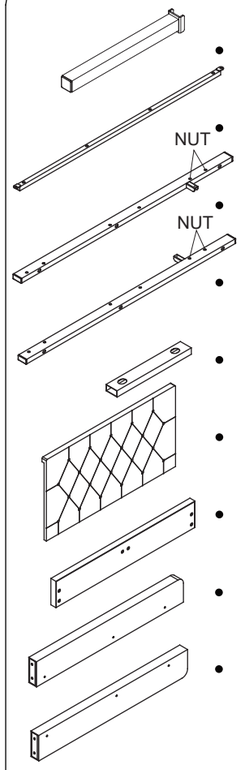

10 x2pcs

11 x2pcs

12 x1pc

13 x1pc


14 x3pcs

15 x1pc

16 x1pc


17 x1pc

18 x1pc



S x2pcs

L x4pcs

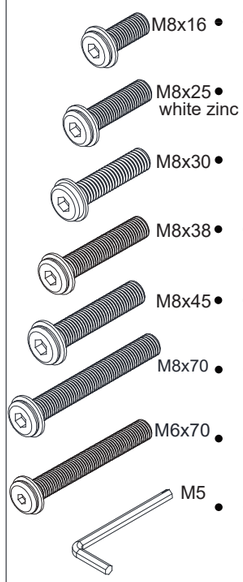

A x24pcs

B x6pcs

C x6pcs

D x34pcs


E x3pcs

F x6pcs

G x4pcs


H x1pc

1

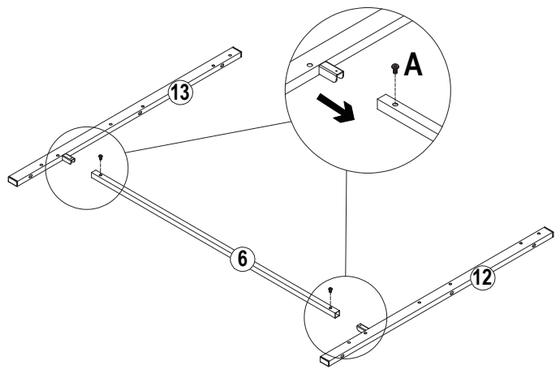


A	M8x16	2pcs

2

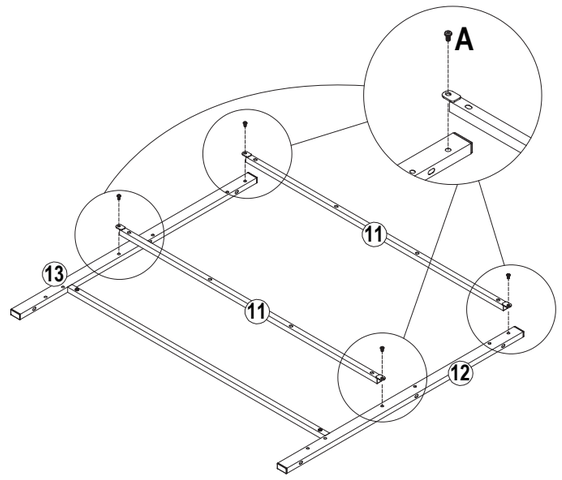


A	M8x16	4pcs

5

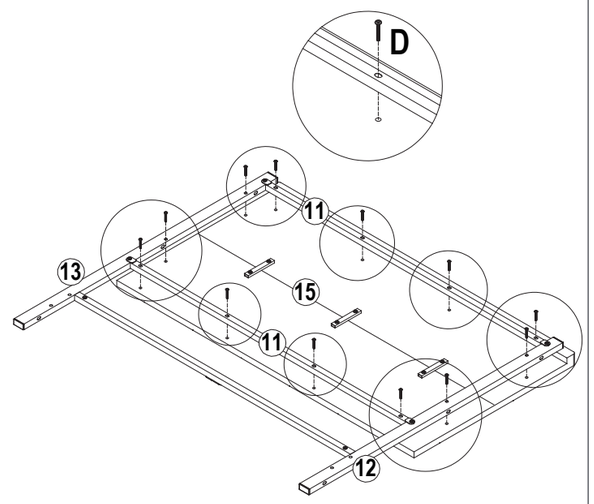


D	M8x38	12pcs

6

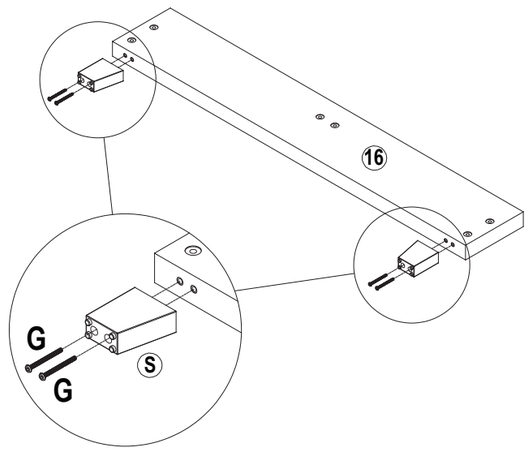


G	M6x70	4pcs

3

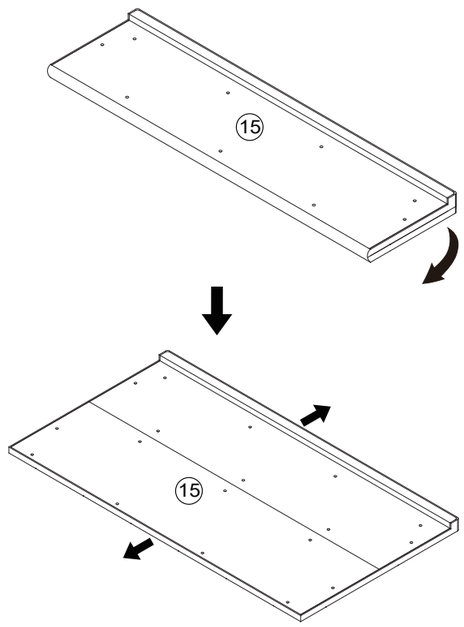


4

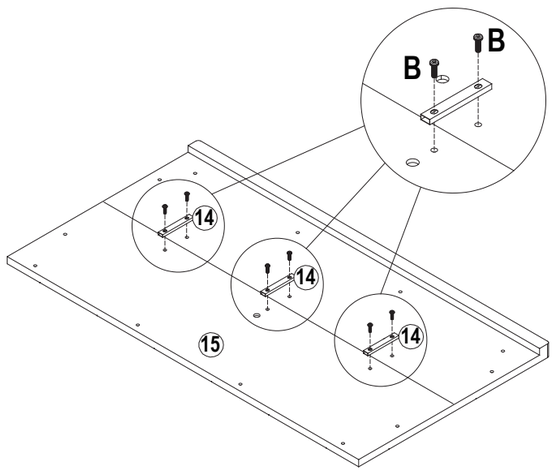

B	M8x25	6pcs	white zinc

7


X2

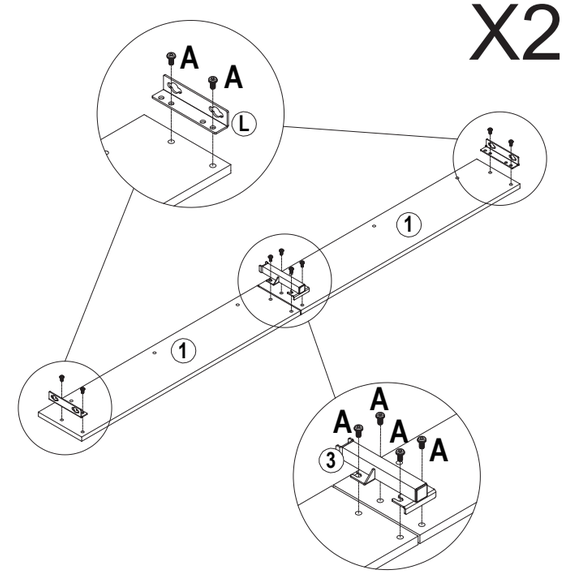

A	M8x16	16pcs

8

X2

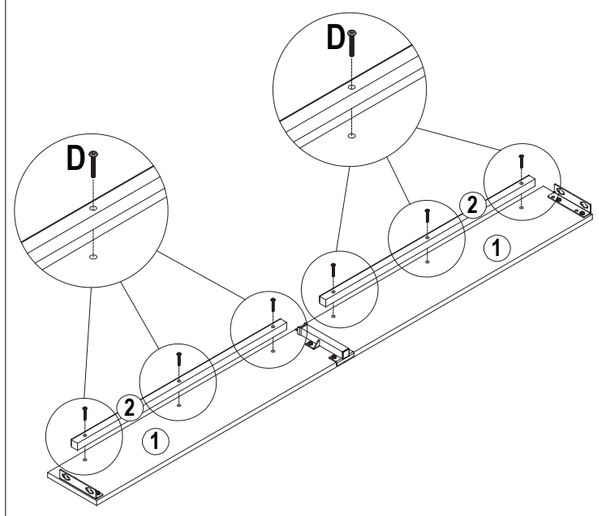

D	M8x38	12pcs