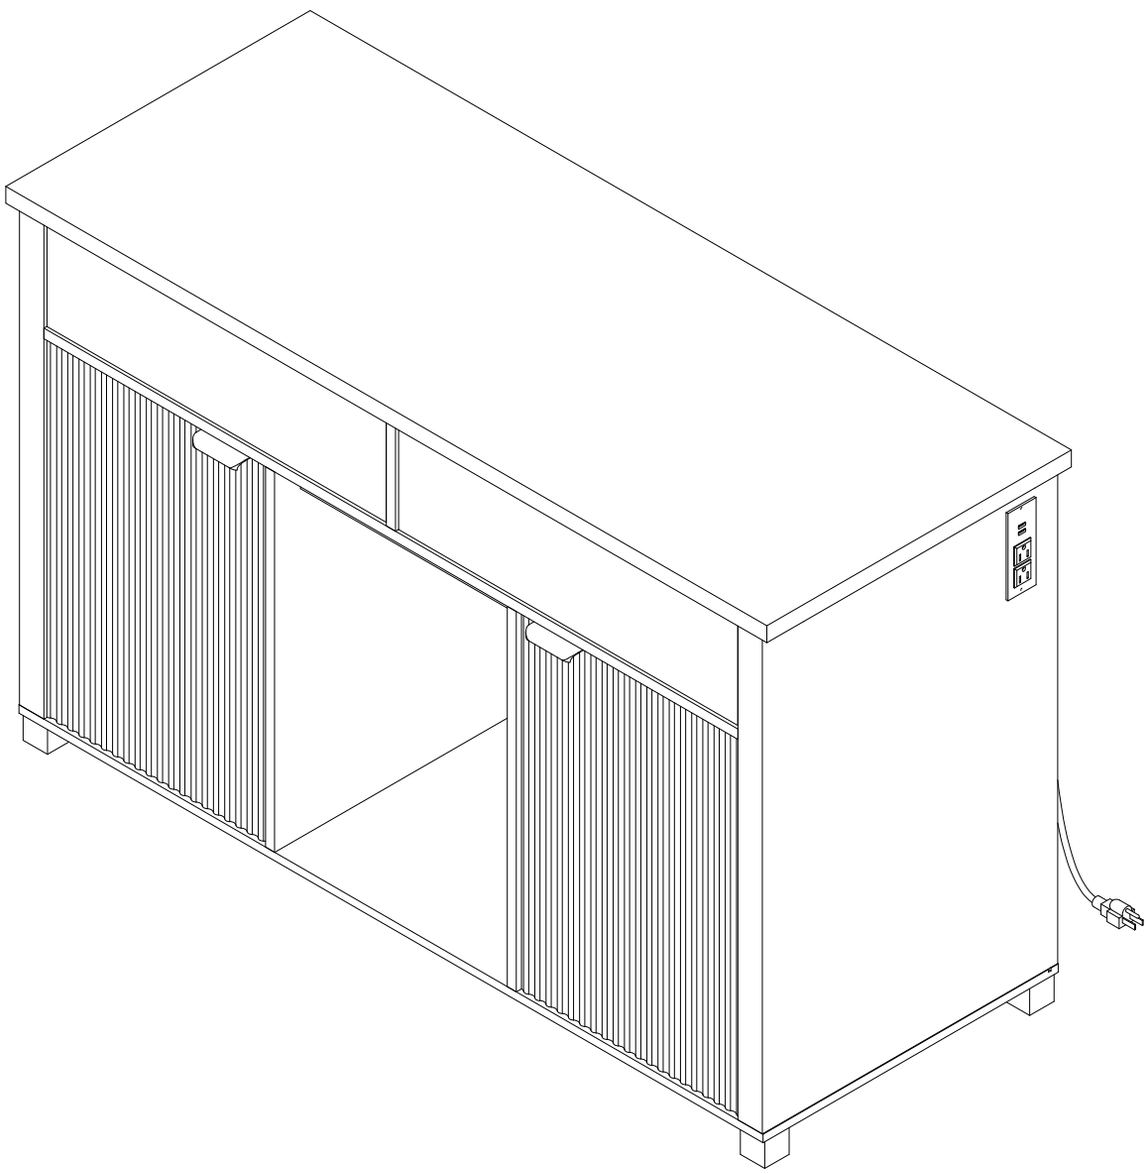
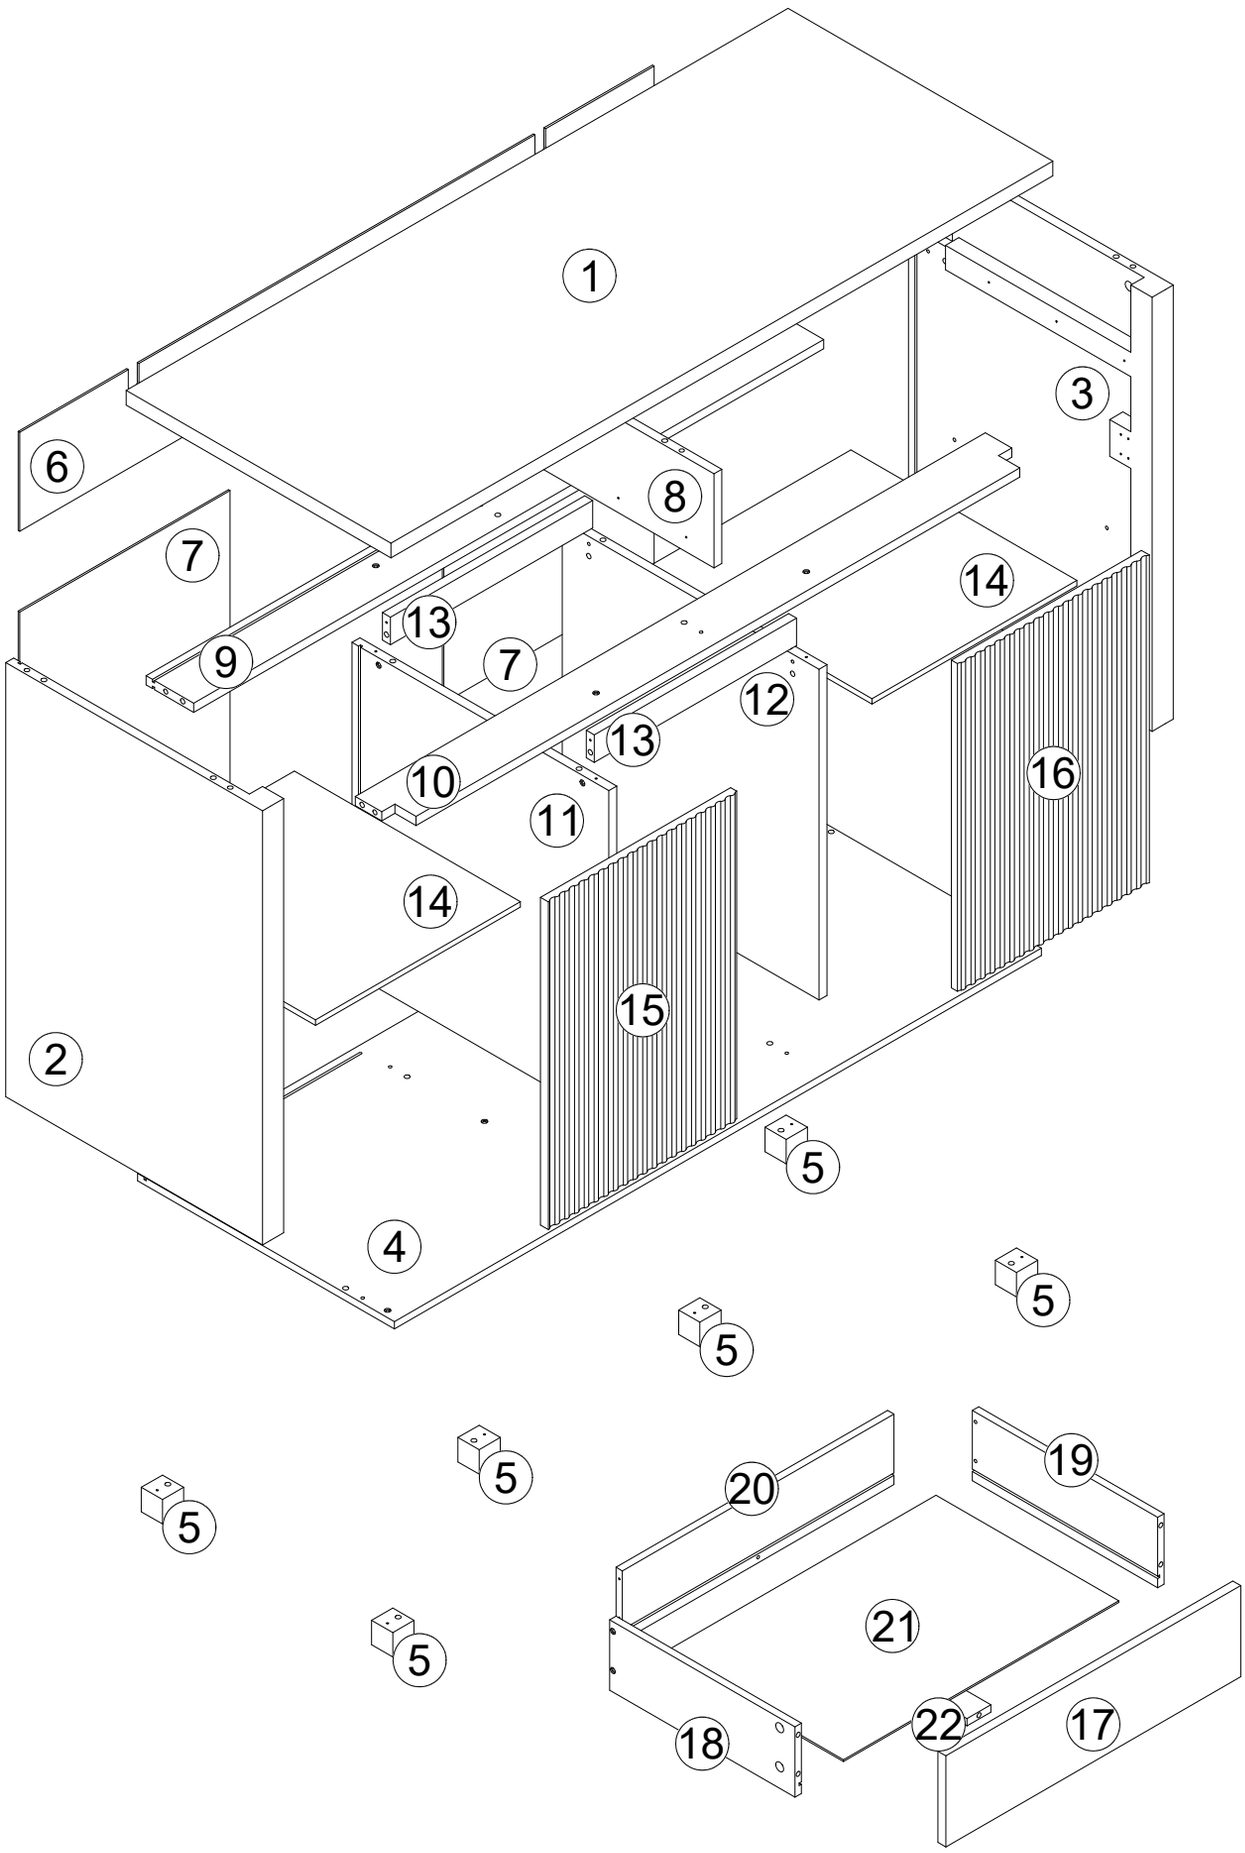
ASSEMBLY INSTRUCTION



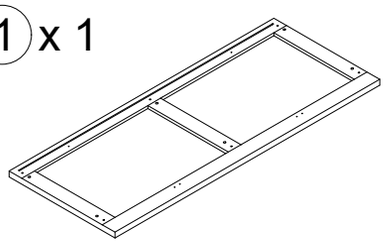
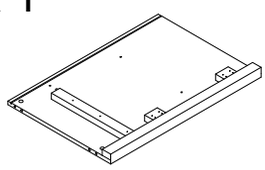
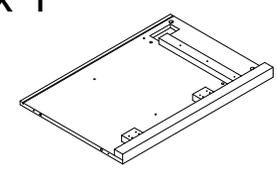
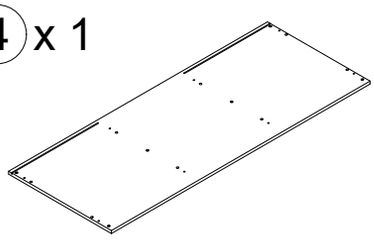

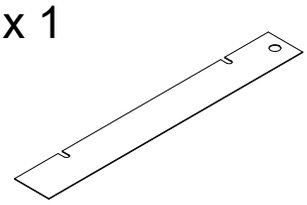
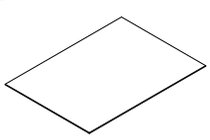
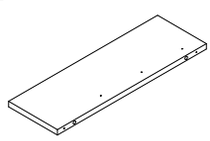
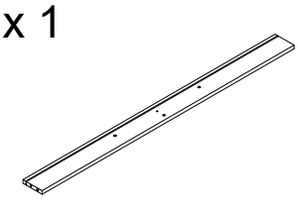
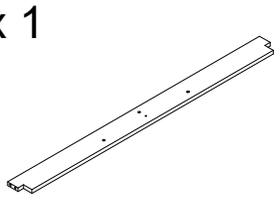
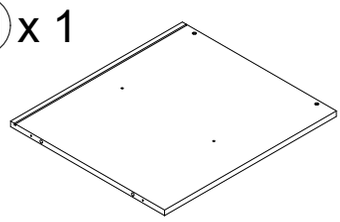
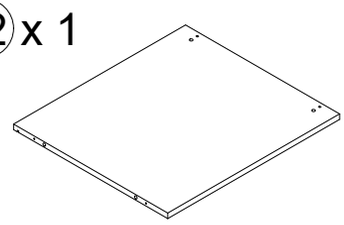

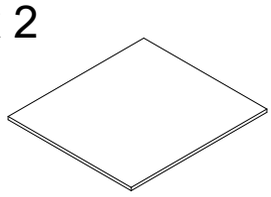
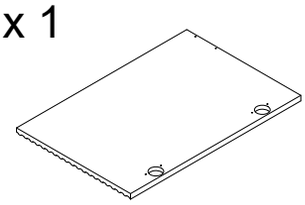
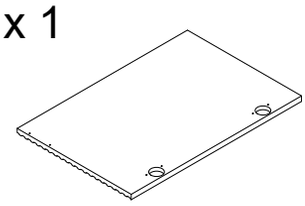
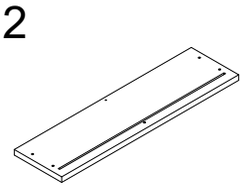

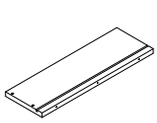
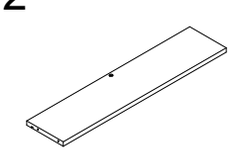
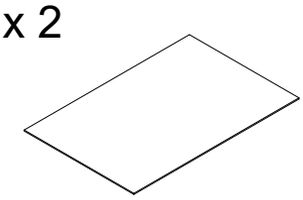
N704P521424

IMPORTANT NOTE:


1.Place all parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
2.Before you begin, kindly follow the assembly instruction step by step.
3.Do not tighten all screws and bolts until the bench is fully set-up.
4.Please do not return to store, contact the seller if you have any troubles with this product.


1
3
6
8
7
14
13
9
7
12
13
10
16
11
14
15
2
5
4
5
5
5
5
19
20
21
22
18
17















Part List

1 x 1 	2 x 1 	3 x 1 
4 x 1 	5 x 6 	6 x 1 
7 x 2 	8 x 1 	9 x 1 
10 x 1 	11 x 1 	12 x 1 
13 x 2 	14 x 2 	15 x 1 
16 x 1 	17 x 2 	18 x 2 
19 x 2 	20 x 2 	21 x 2 


22 x 1






Hardware List

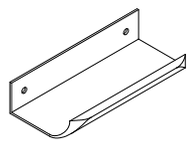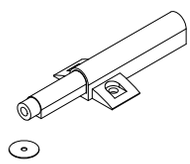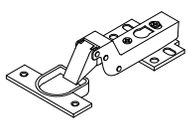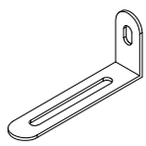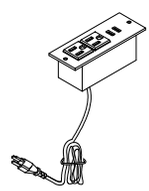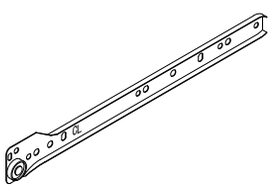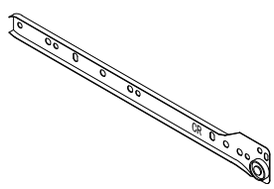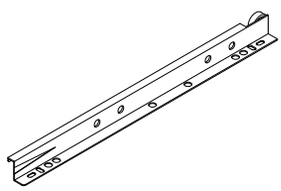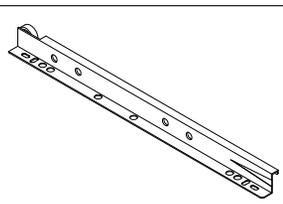A  M6*35	B  Ø15*10	C  Ø8*30
20+2 PCS	20+2 PCS	34+2 PCS
D  M3.5*12	E  M4*35	F 
64+2 PCS	36+2 PCS	2 PCS
G 	H 	I 
2 PCS	8 PCS	2 PCS
J 	K 	L  M4*14
4 PCS	2 PCS	2 PCS
M 	N  Ø6*30	O 
2 PCS	2 PCS	1 PC
CL 	CR 	DL 
2 PCS	2 PCS	2 PCS
DR 	 Screwdriver	
2 PCS	Not Provided	

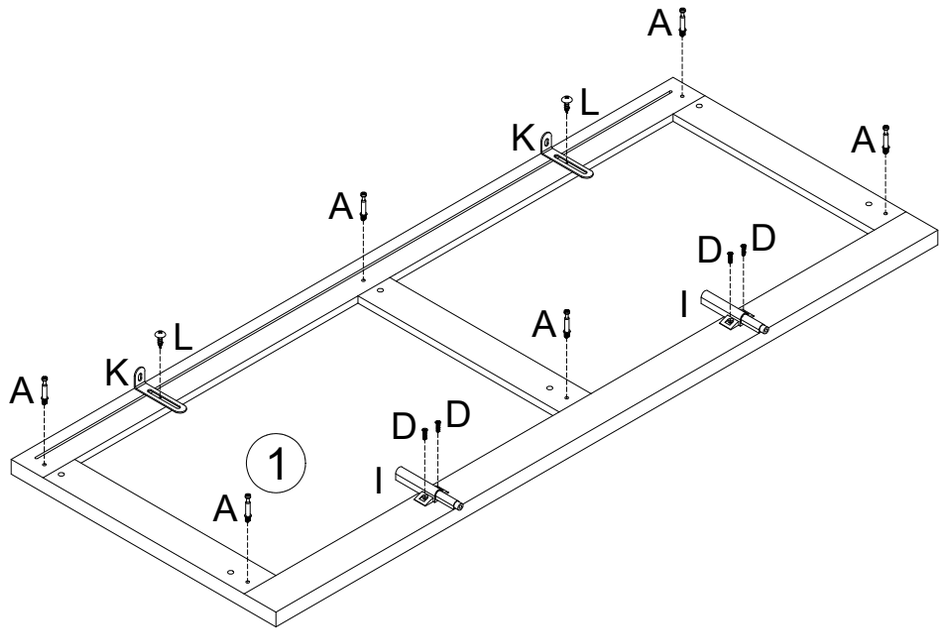
Step 1





A x 6 PCS		D x 4 PCS	
I x 2 PCS		K x 2 PCS	
L x 2 PCS			

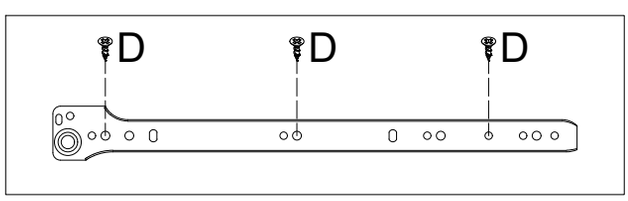


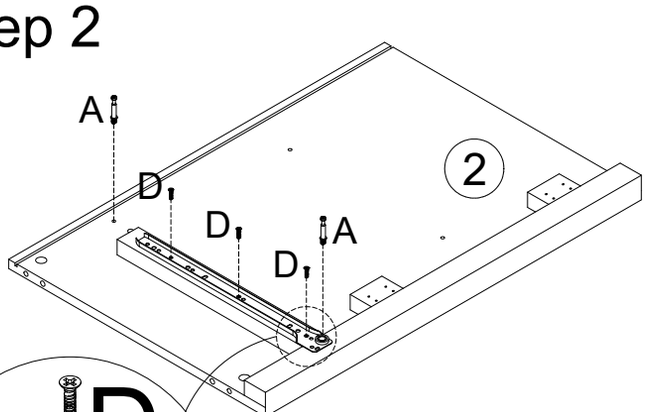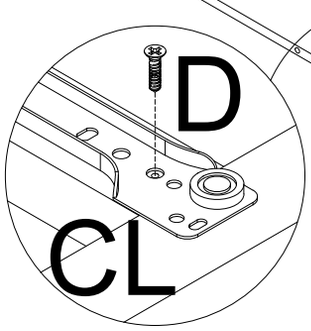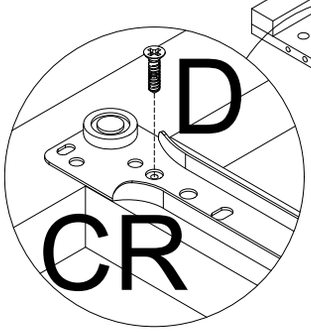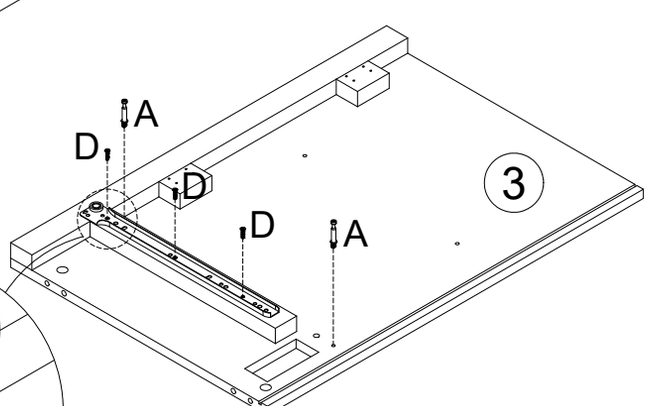

Step 2












A x 4 PCS		D x 6 PCS	
CL x 1 PC		CR x 1 PC	

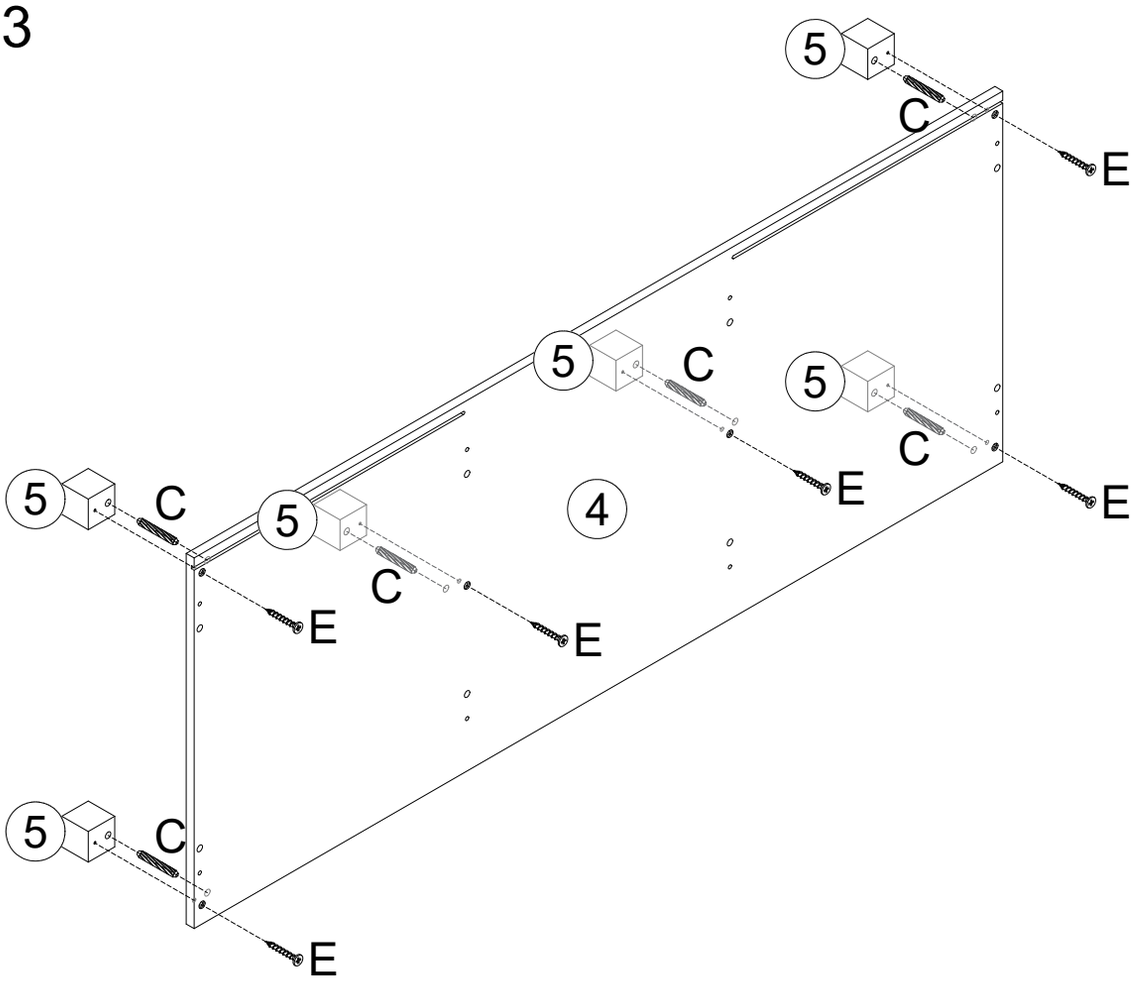
Step 3






C x 6 PCS		E x 6 PCS	

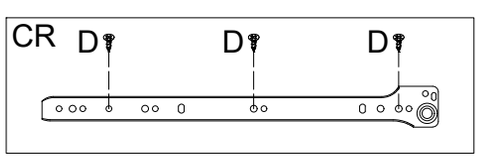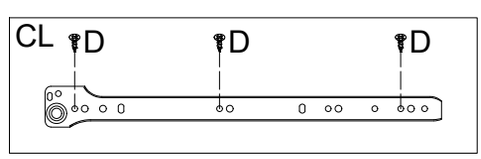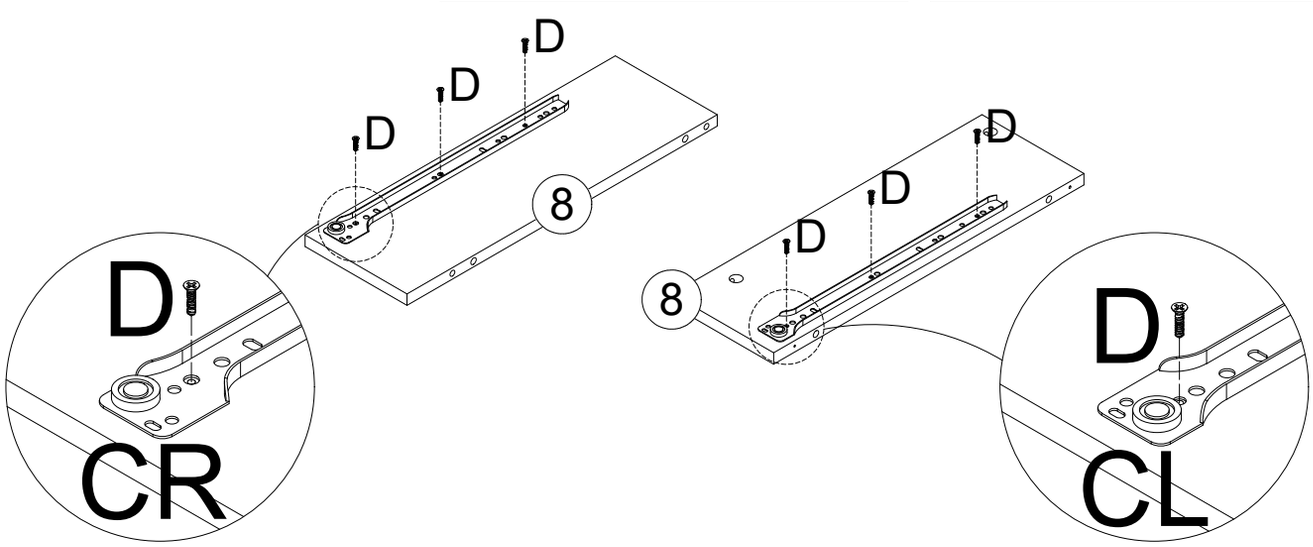Step 4











D x 6 PCS		CL x 1 PC	
CR x 1 PC			

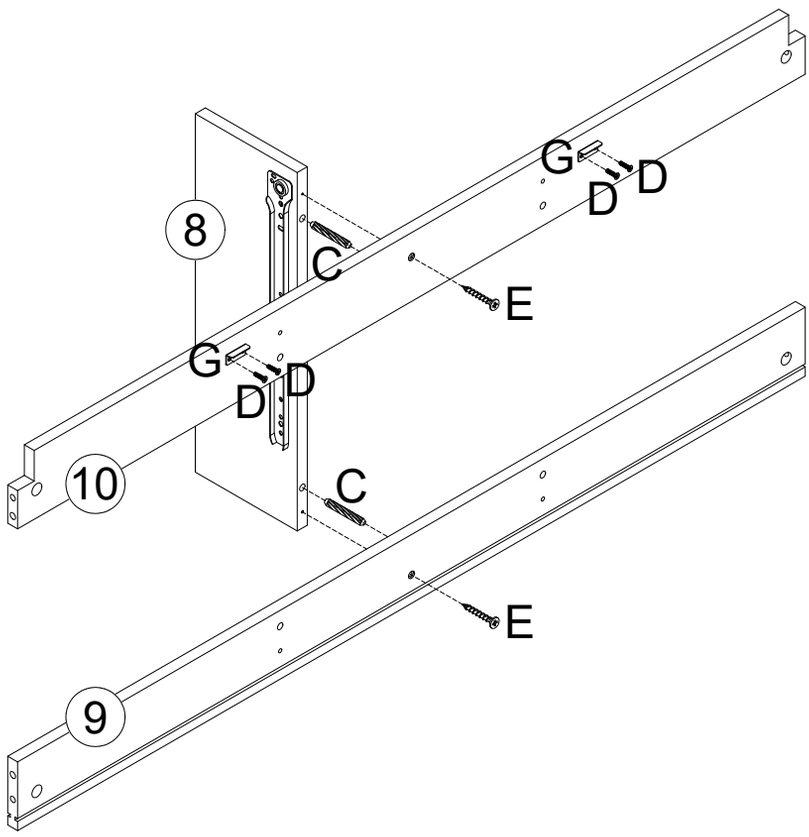
Step 5




C x 2 PCS		D x 4 PCS	
E x 2 PCS		G x 2 PCS	

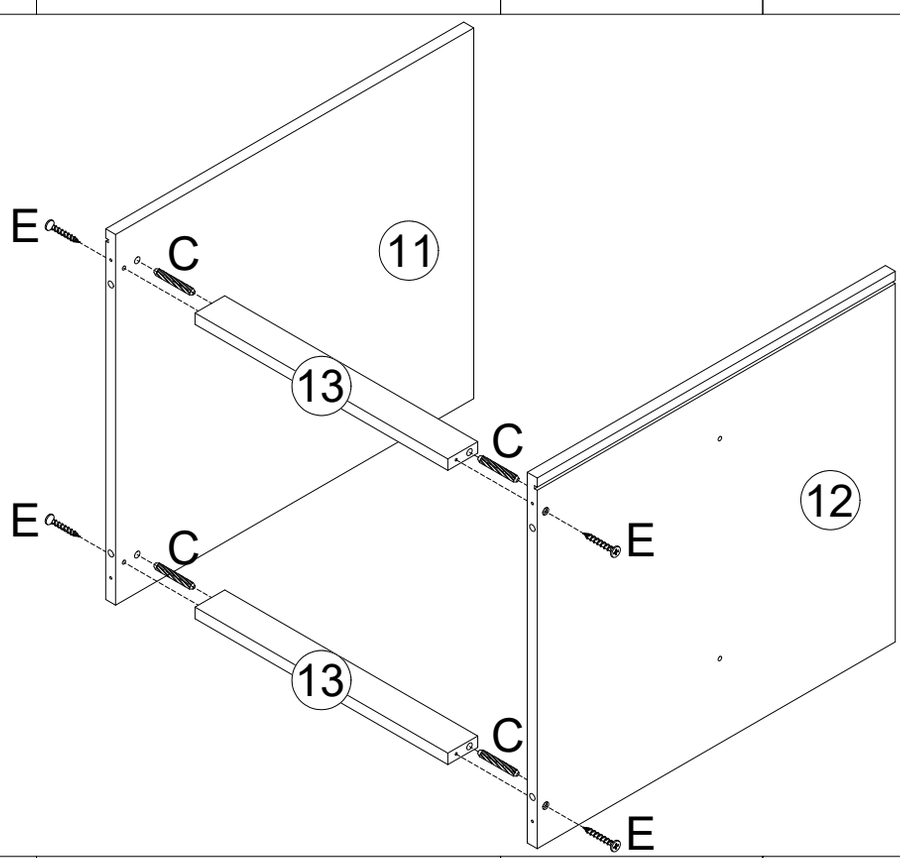
Step 6




C x 4 PCS		E x 4 PCS	

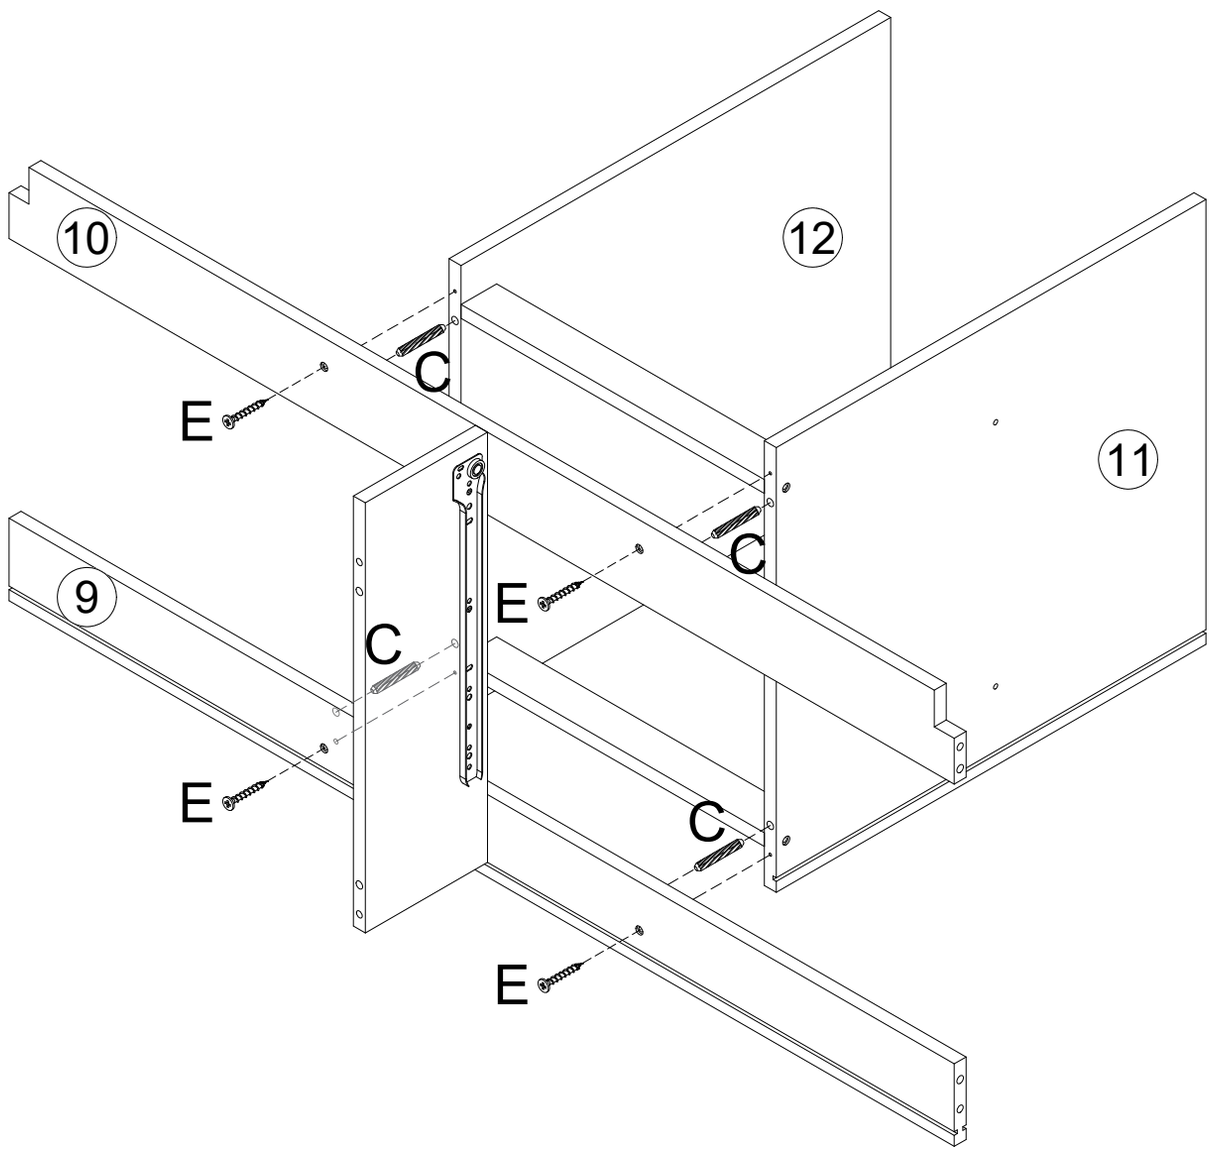
Step 7




C x 4 PCS		E x 4 PCS	

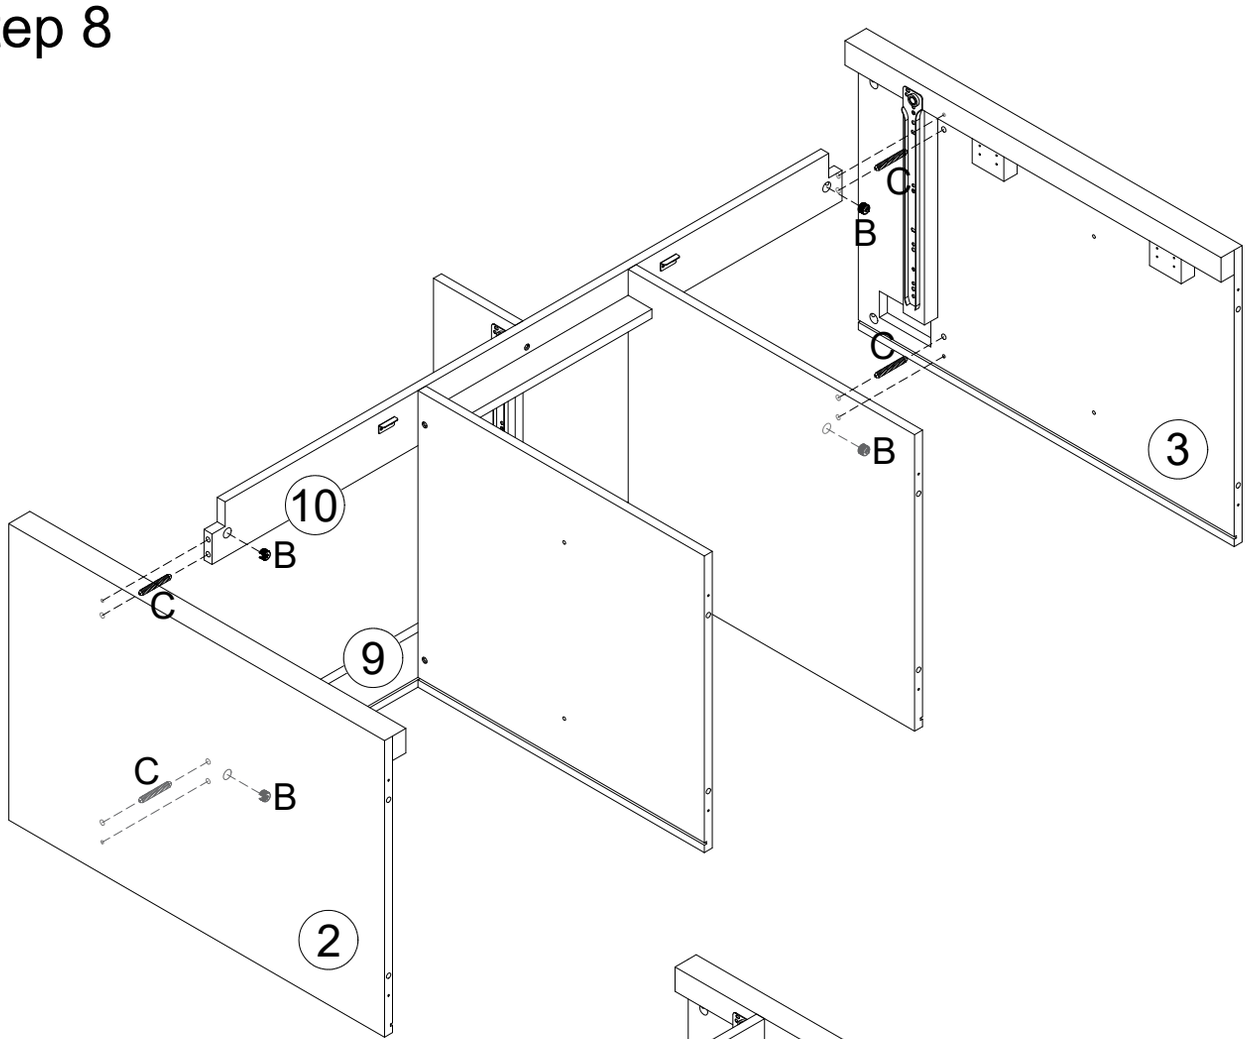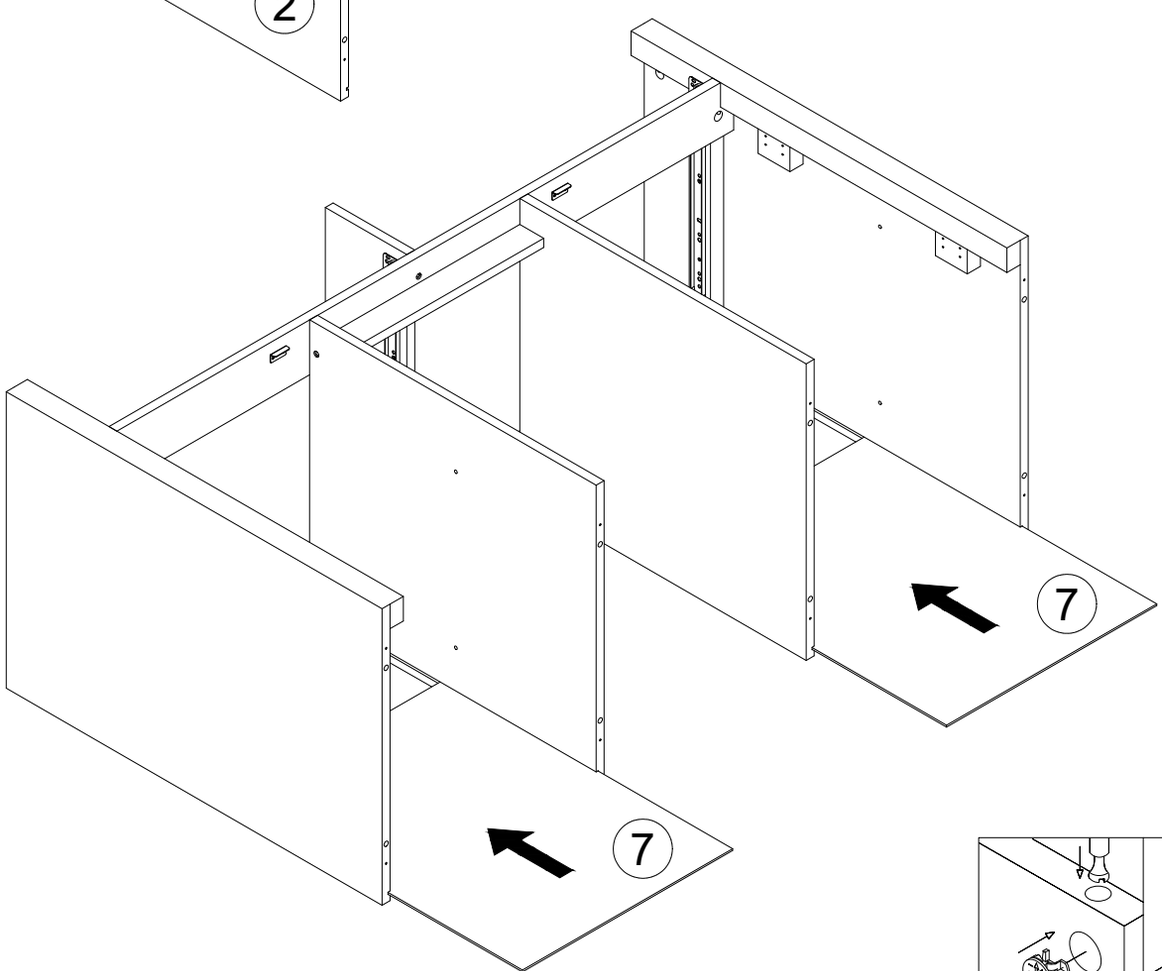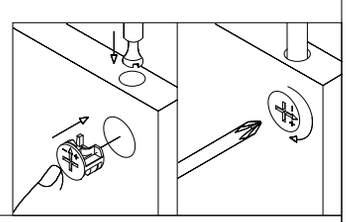Step 8










B x 4 PCS		C x 4 PCS	

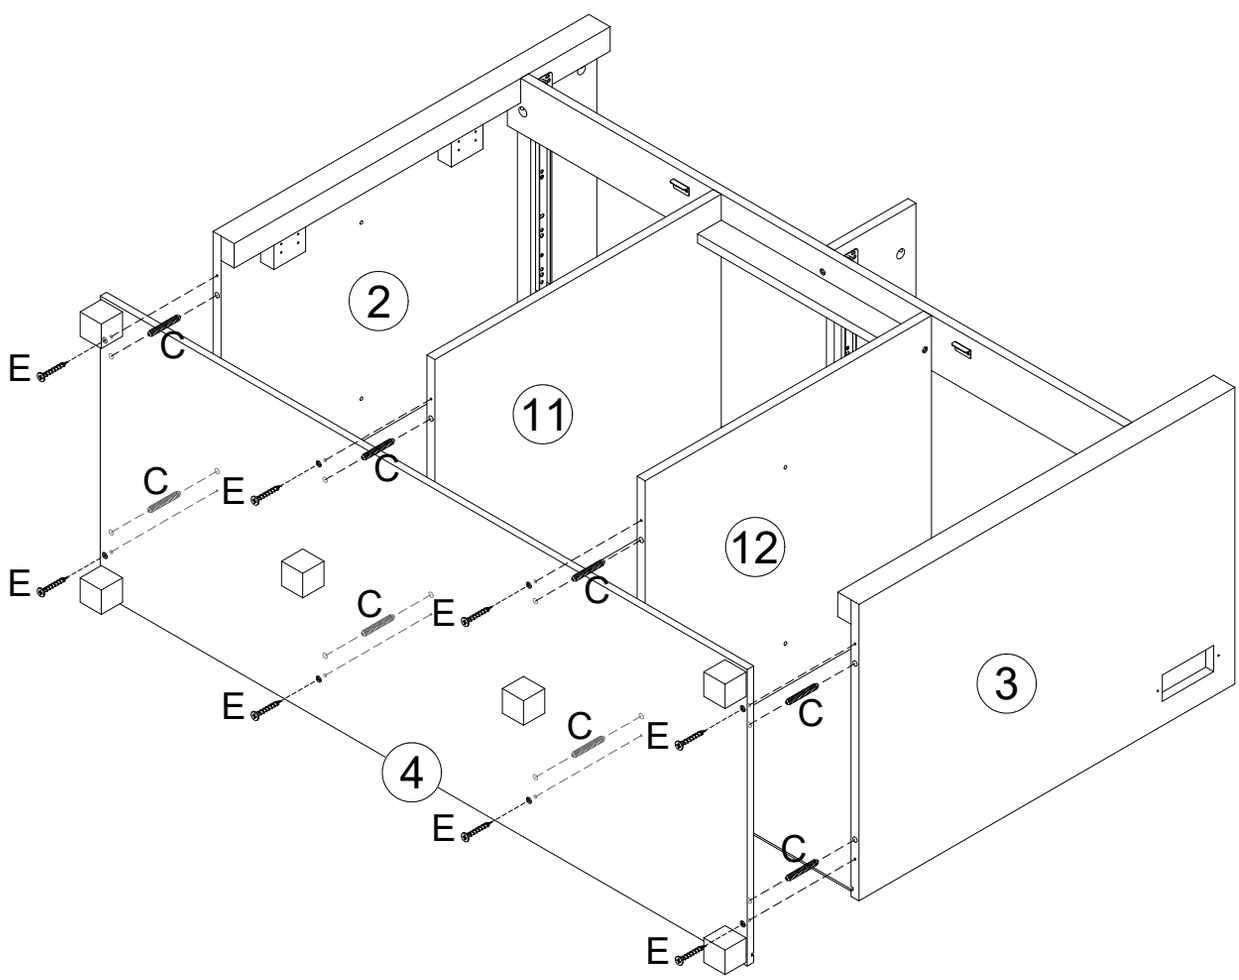Step 9





C x 8 PCS		E x 8 PCS	

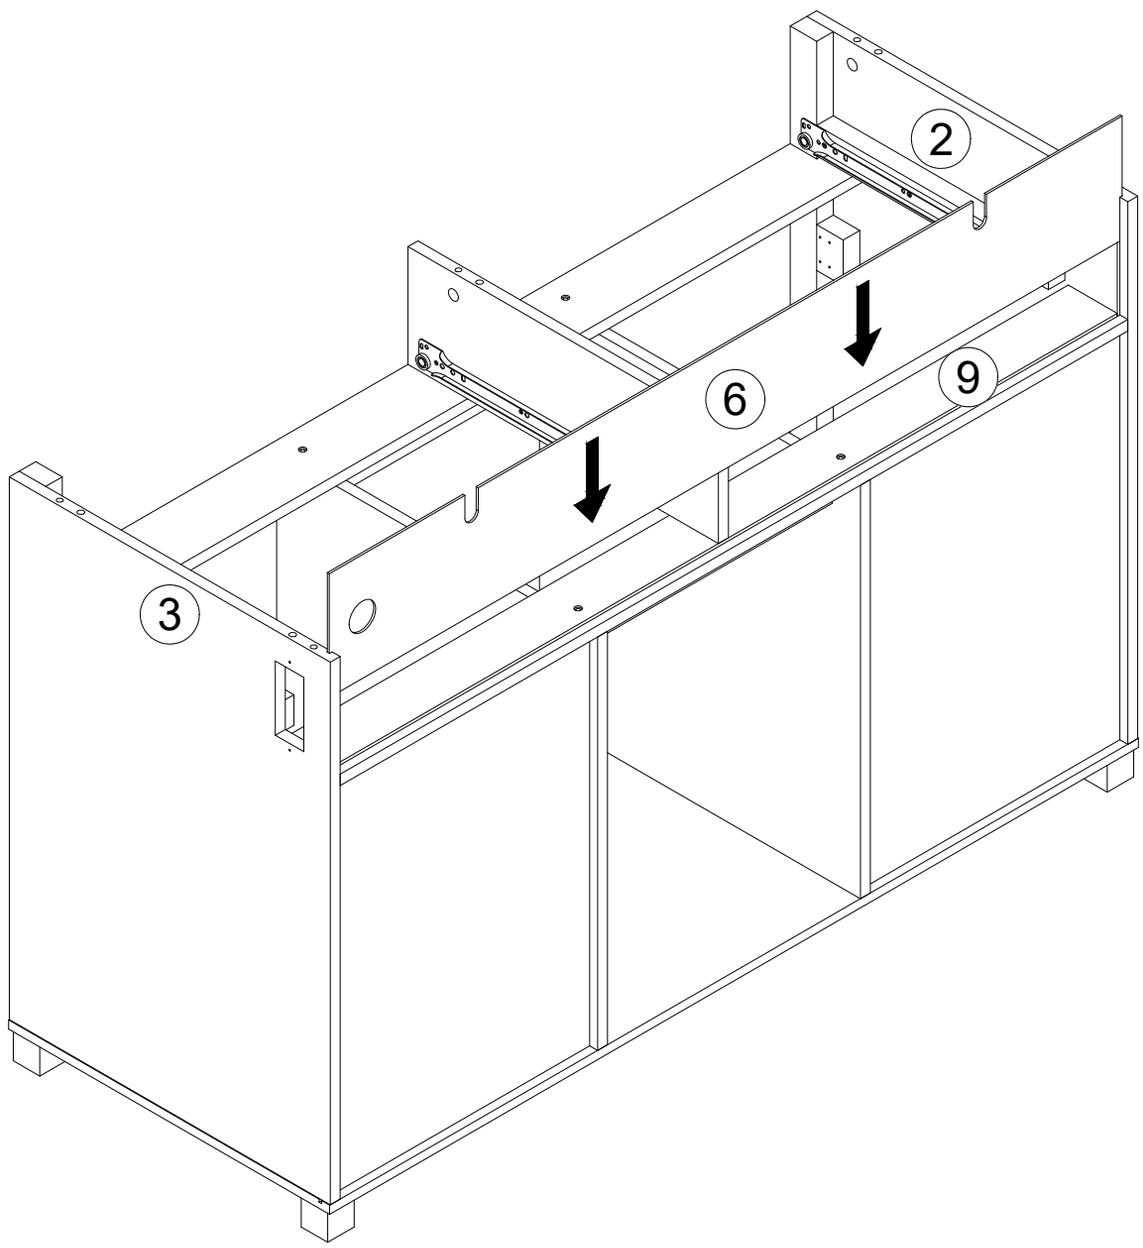Step 10




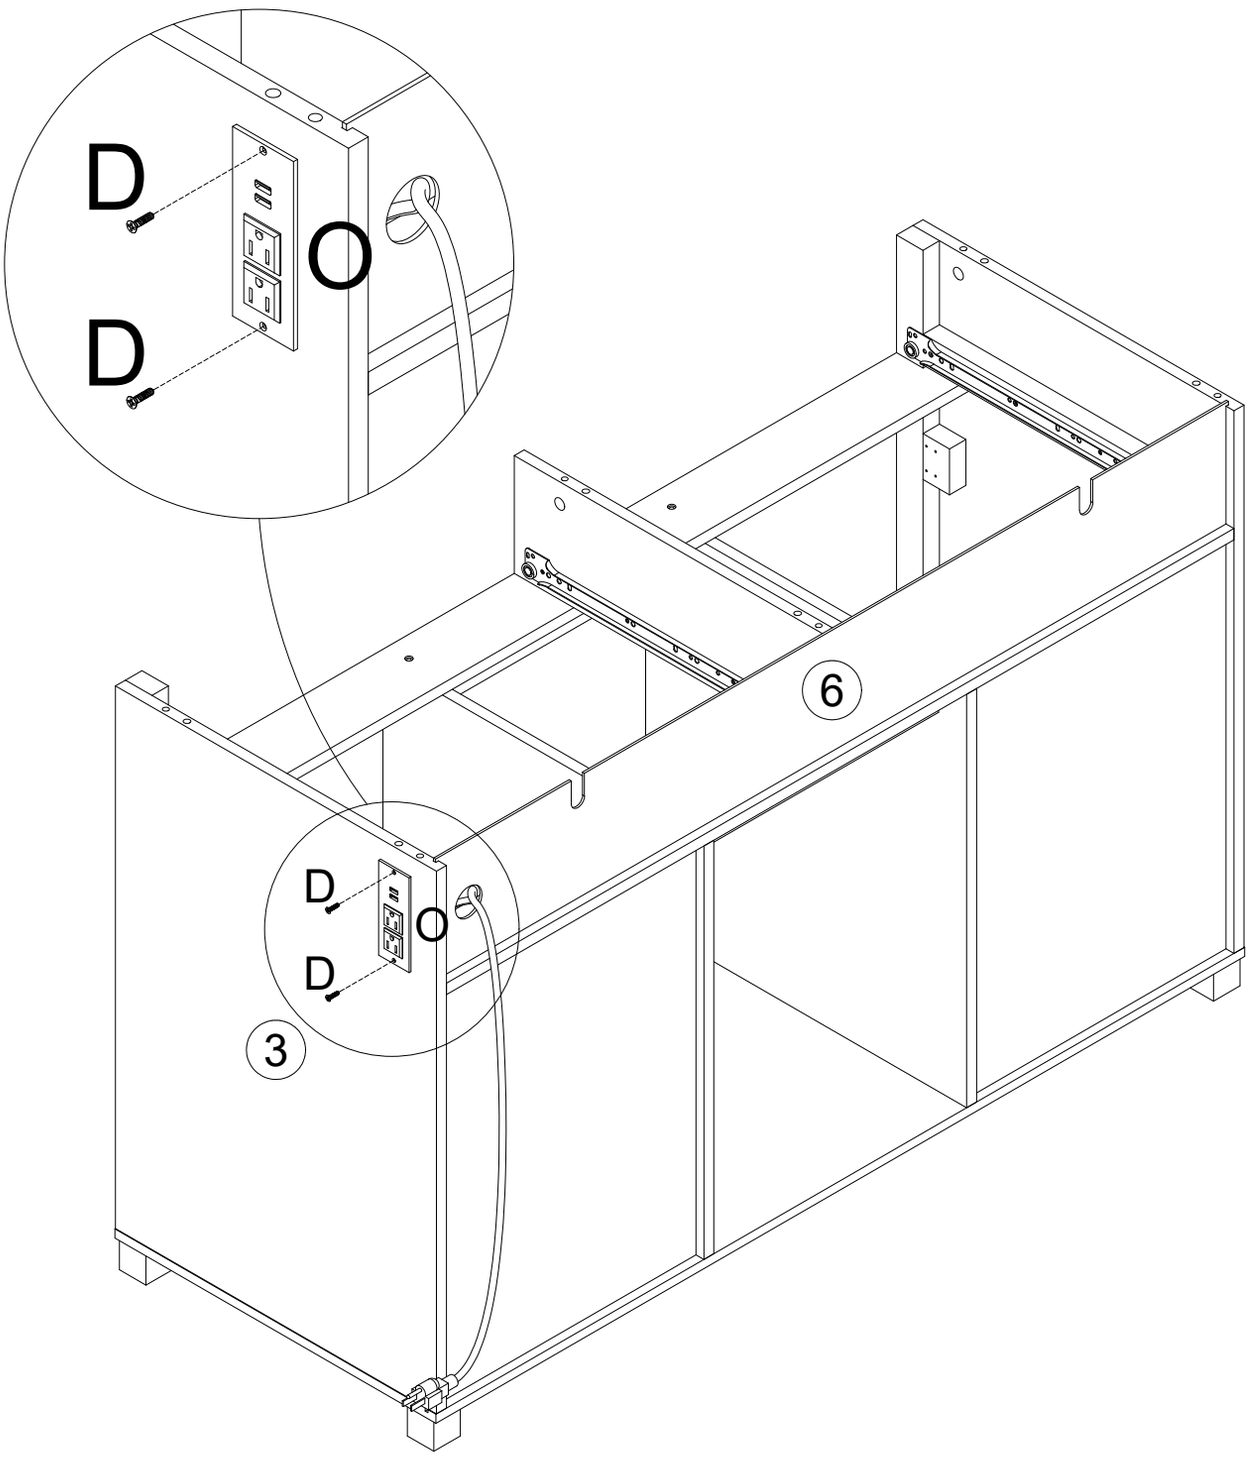
Step 11



D x 2 PCS		O x 1 PC	

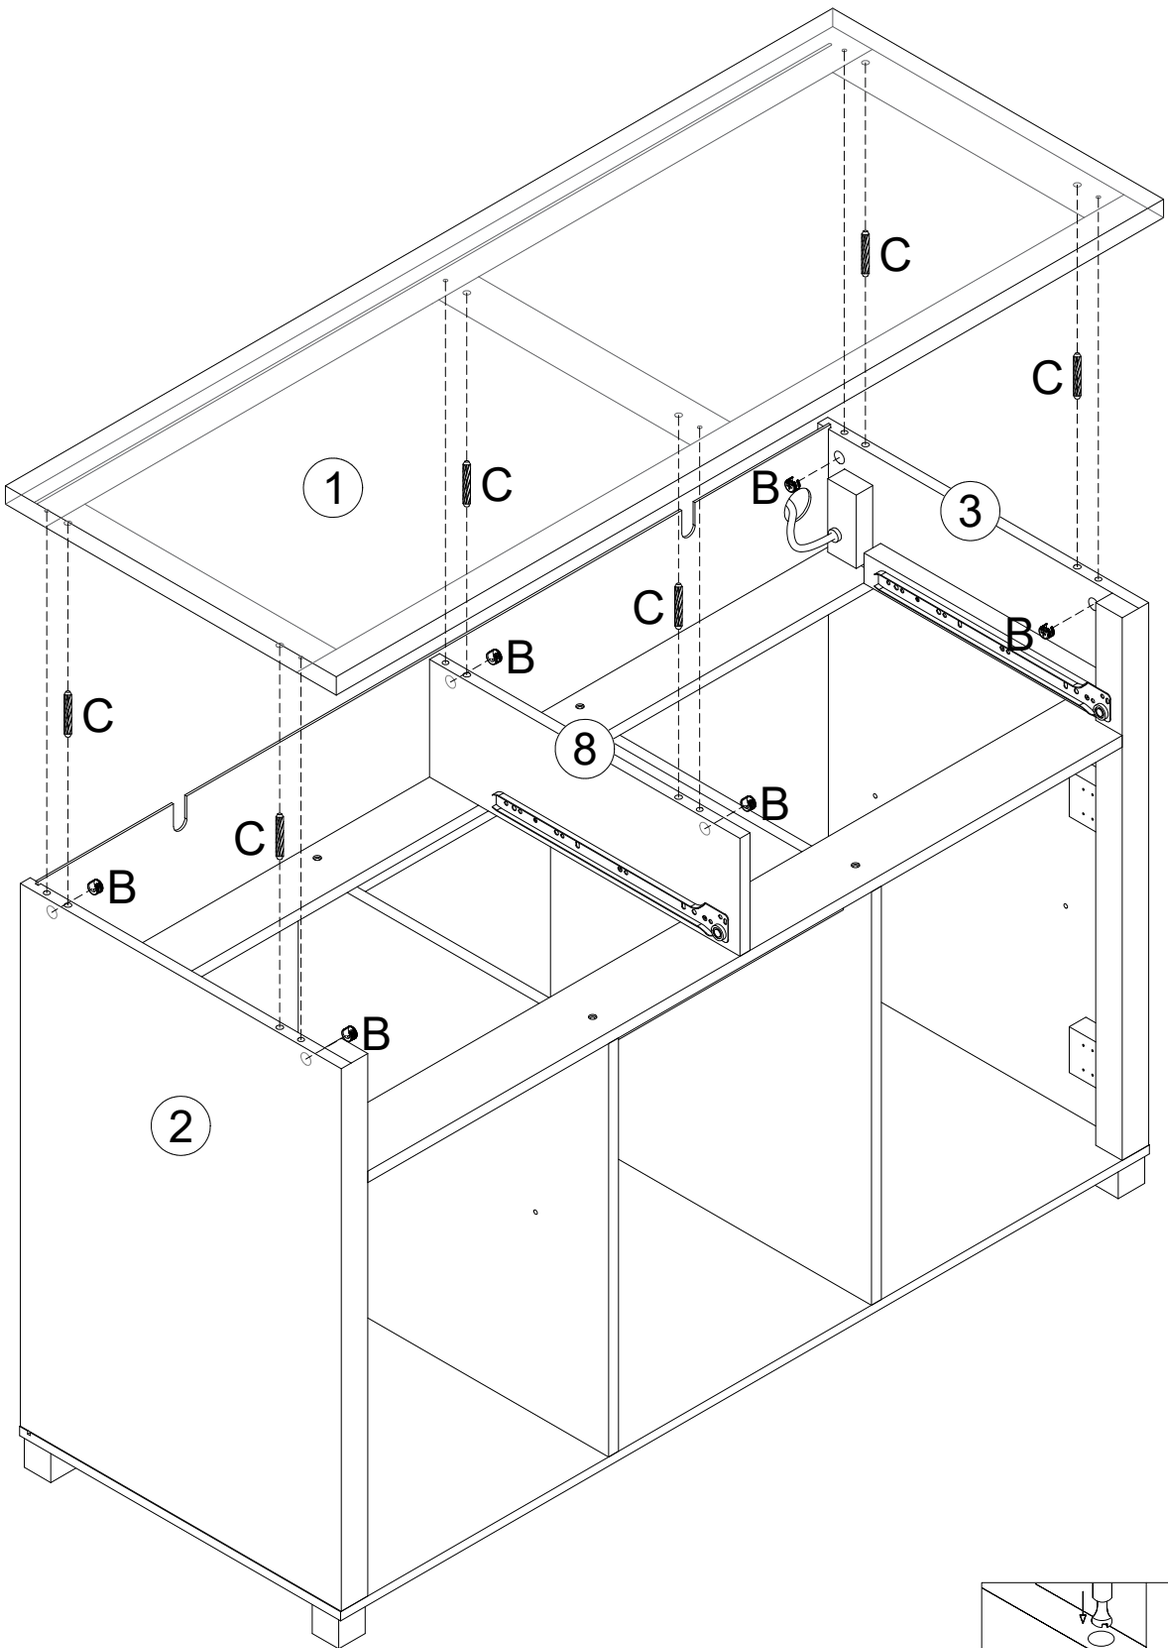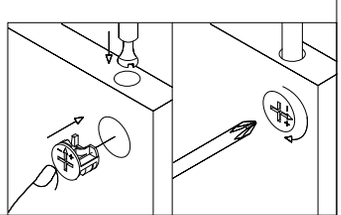
Step 12








B x 6 PCS		C x 6 PCS	

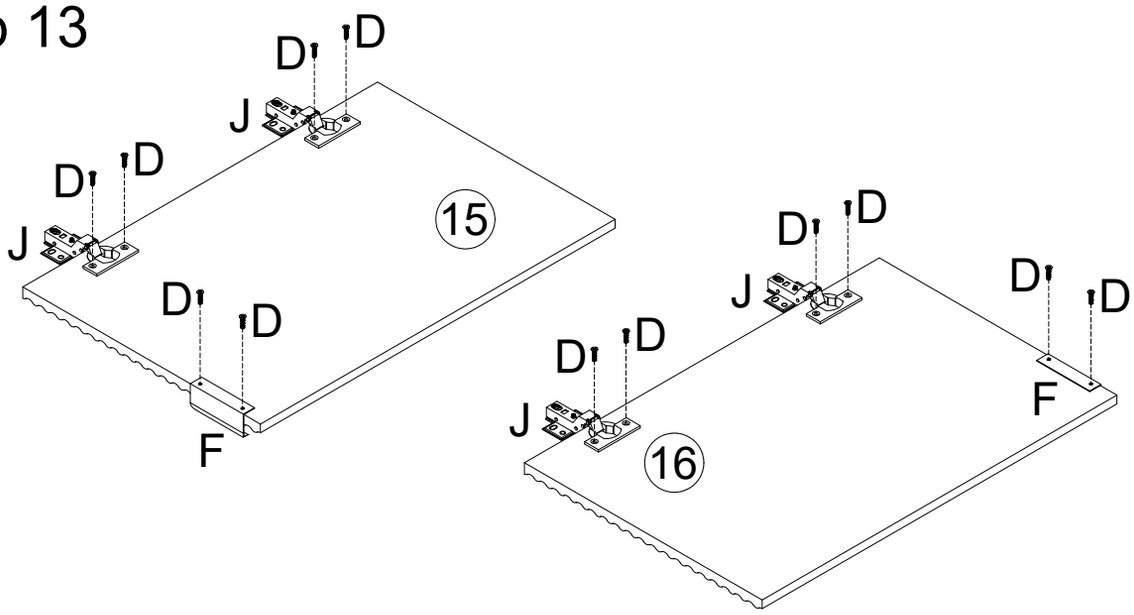Step 13





D x 12 PCS		F x 2 PCS	
J x 4 PCS			

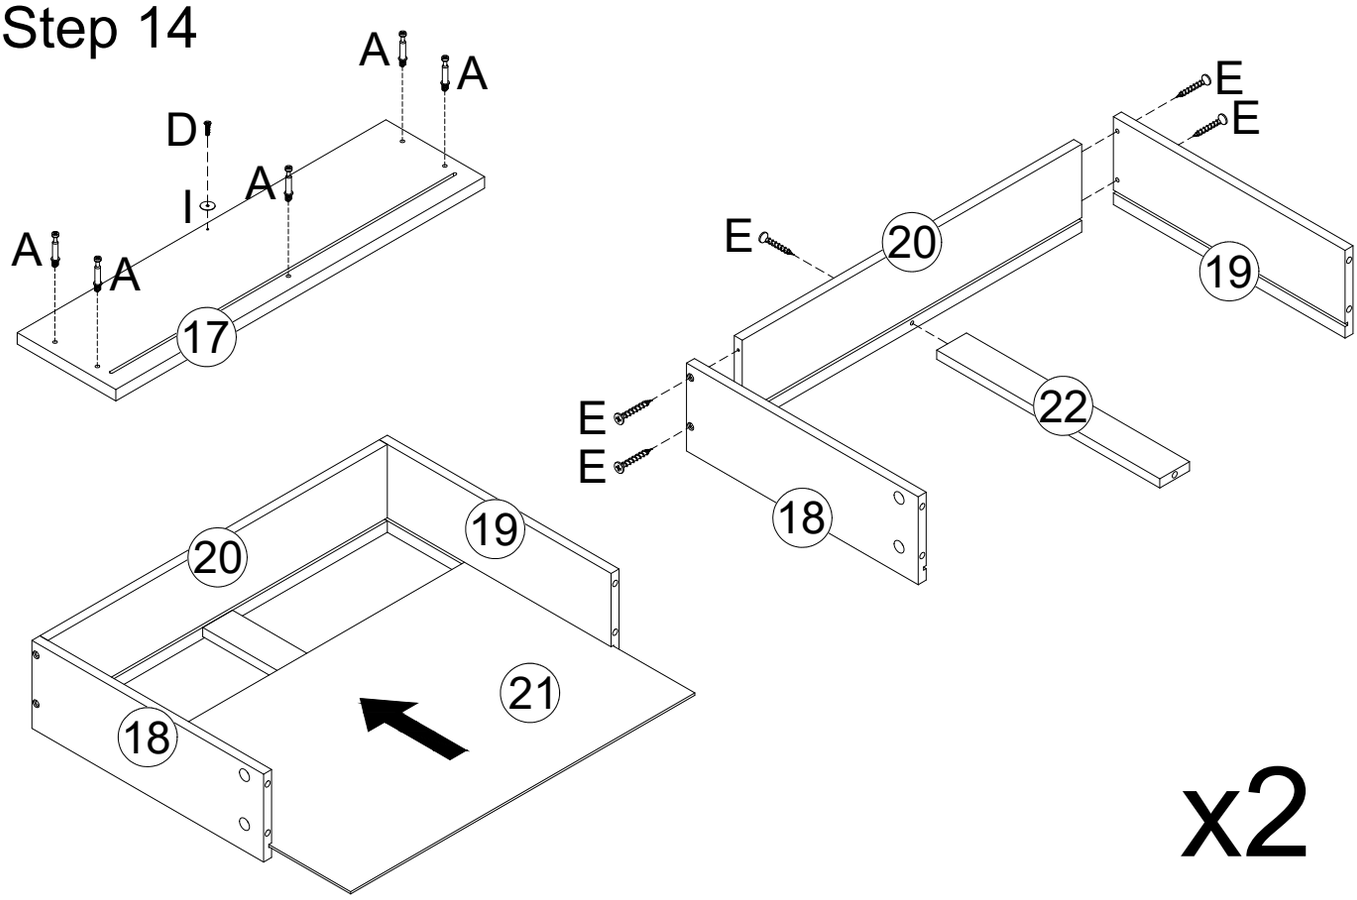Step 14





x2


A x 10 PCS		D x 2 PCS	
E x 10 PCS		I x 2 PCS	

Step 15

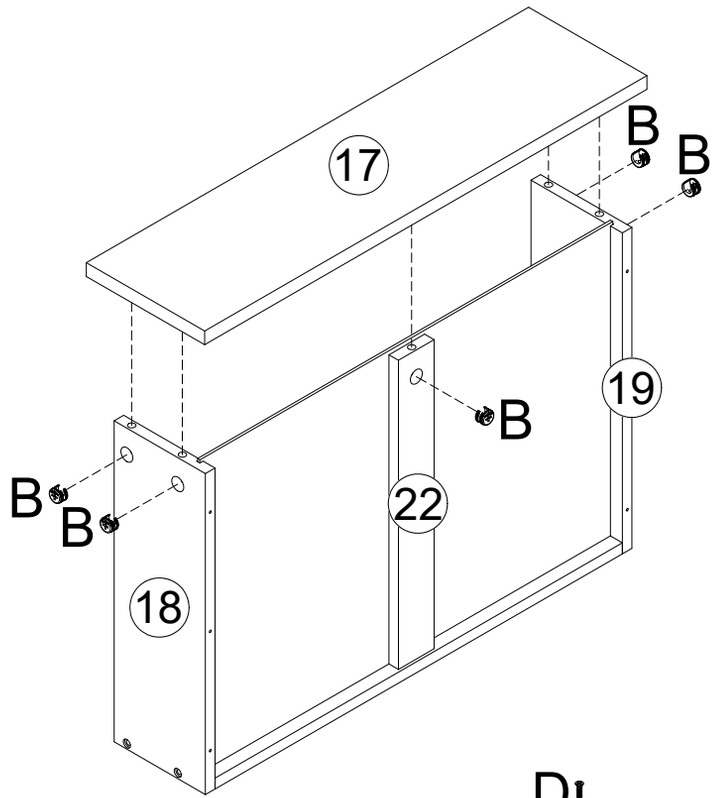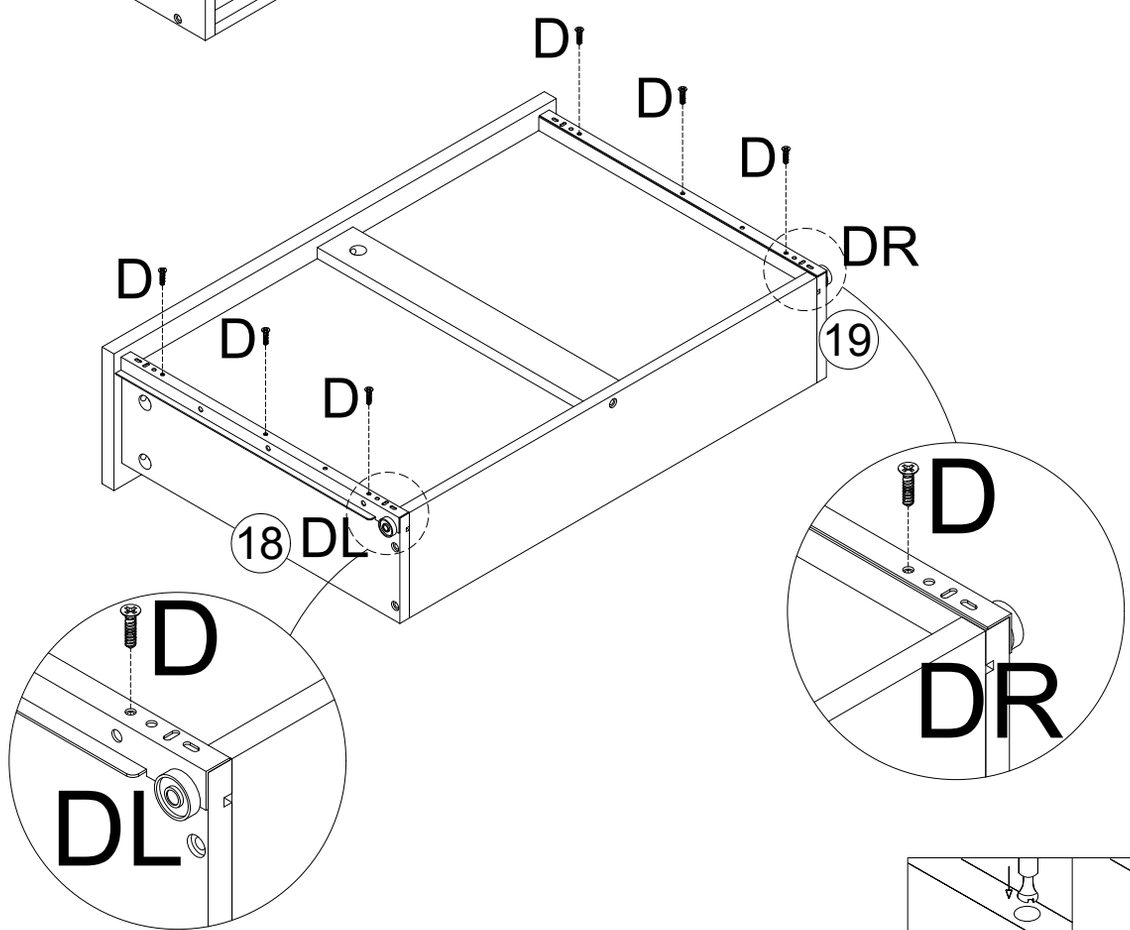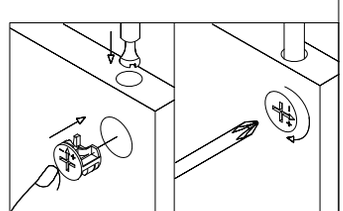x2







B x 10 PCS		D x 12 PCS	
DL x 2 PCS		DR x 2 PCS	

Anti-Tip Safety Installation

To reduce the risk of tip-over injuries, this product must be **secured to the wall using the supplied anti-tip device.**

Installation Steps:

1. Install the anti-tip brackets onto the back of the unit at the designated locations as shown in the illustration.
2. Secure the brackets firmly to the furniture using the provided screws.
3. Attach the wall anchors into a solid wall structure (such as a wall stud or suitable masonry).
4. Connect the anti-tip straps/cables between the furniture and the wall anchors.
5. Tighten all fasteners securely and verify that the unit is stable and cannot tip forward.

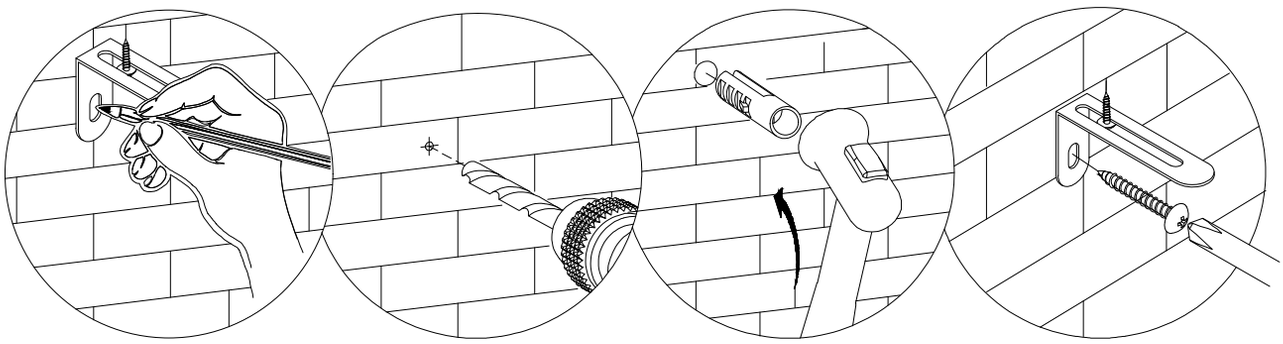
⚠ **Important Safety Notice:**

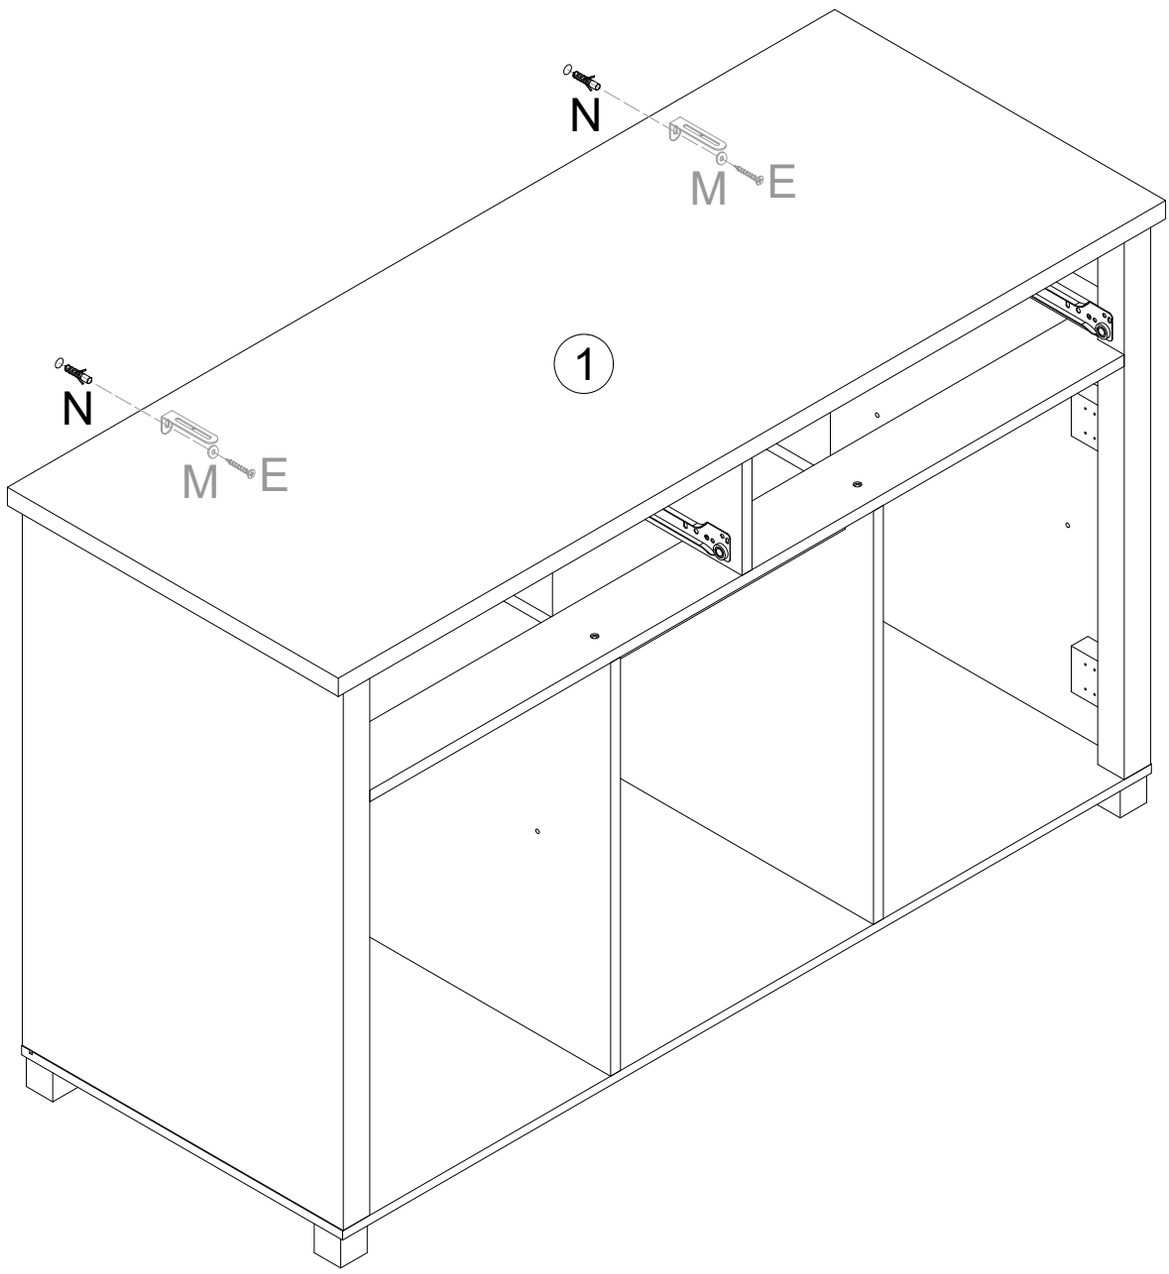
Failure to install the anti-tip device as instructed may result in the furniture tipping over, which can cause serious injury or death. This anti-tip device must be installed to comply with U.S. safety standards.

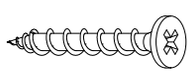
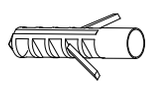
If you are unsure about wall construction or proper installation, contact a qualified professional installer.

Manufacturer's Name : SIN LI FURNITURE INDUSTRIES SDN BHD
PTD 4961 BATU 8 1/2, KAWASAN PERINDUSTRIAN,
BUKIT BAKRI, MUAR, JOHOR.
Manufacturer's Date : 05/2026


Step 16






E x 2 PCS			
M x 2 PCS		N x 2 PCS	

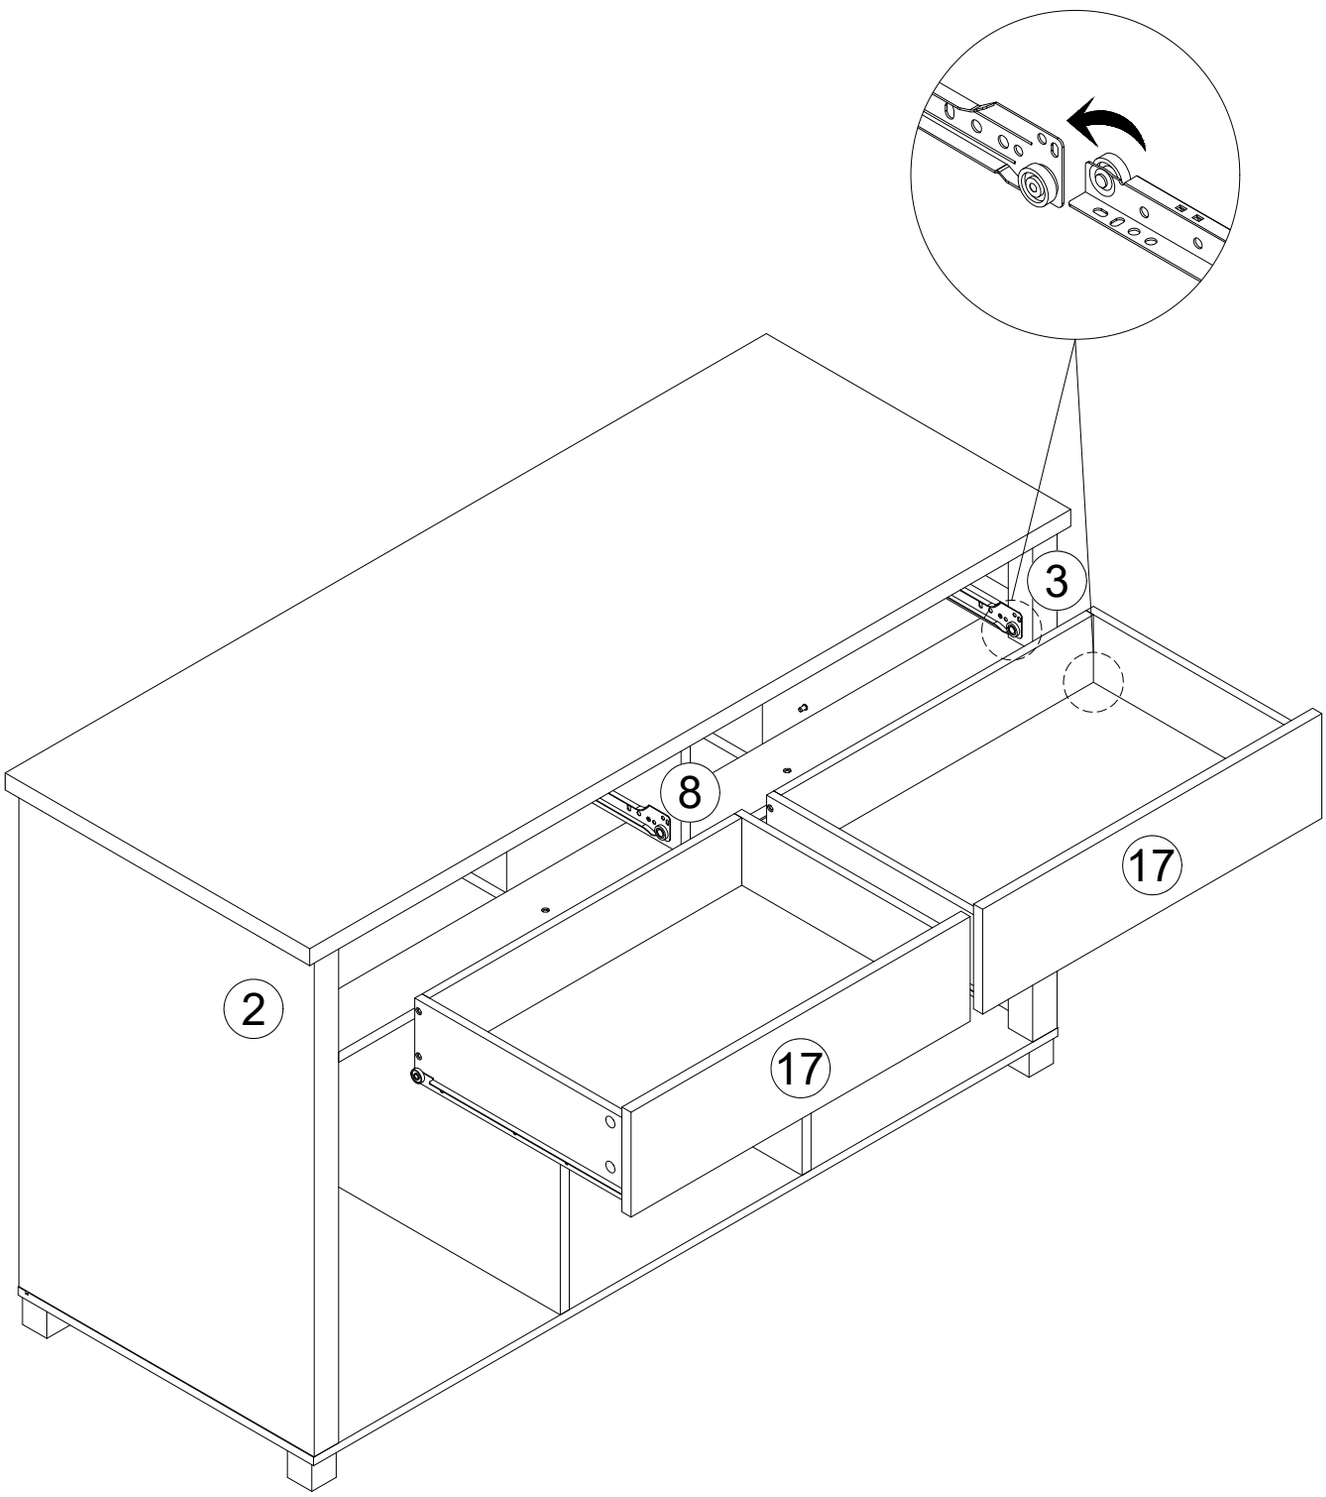Step 17




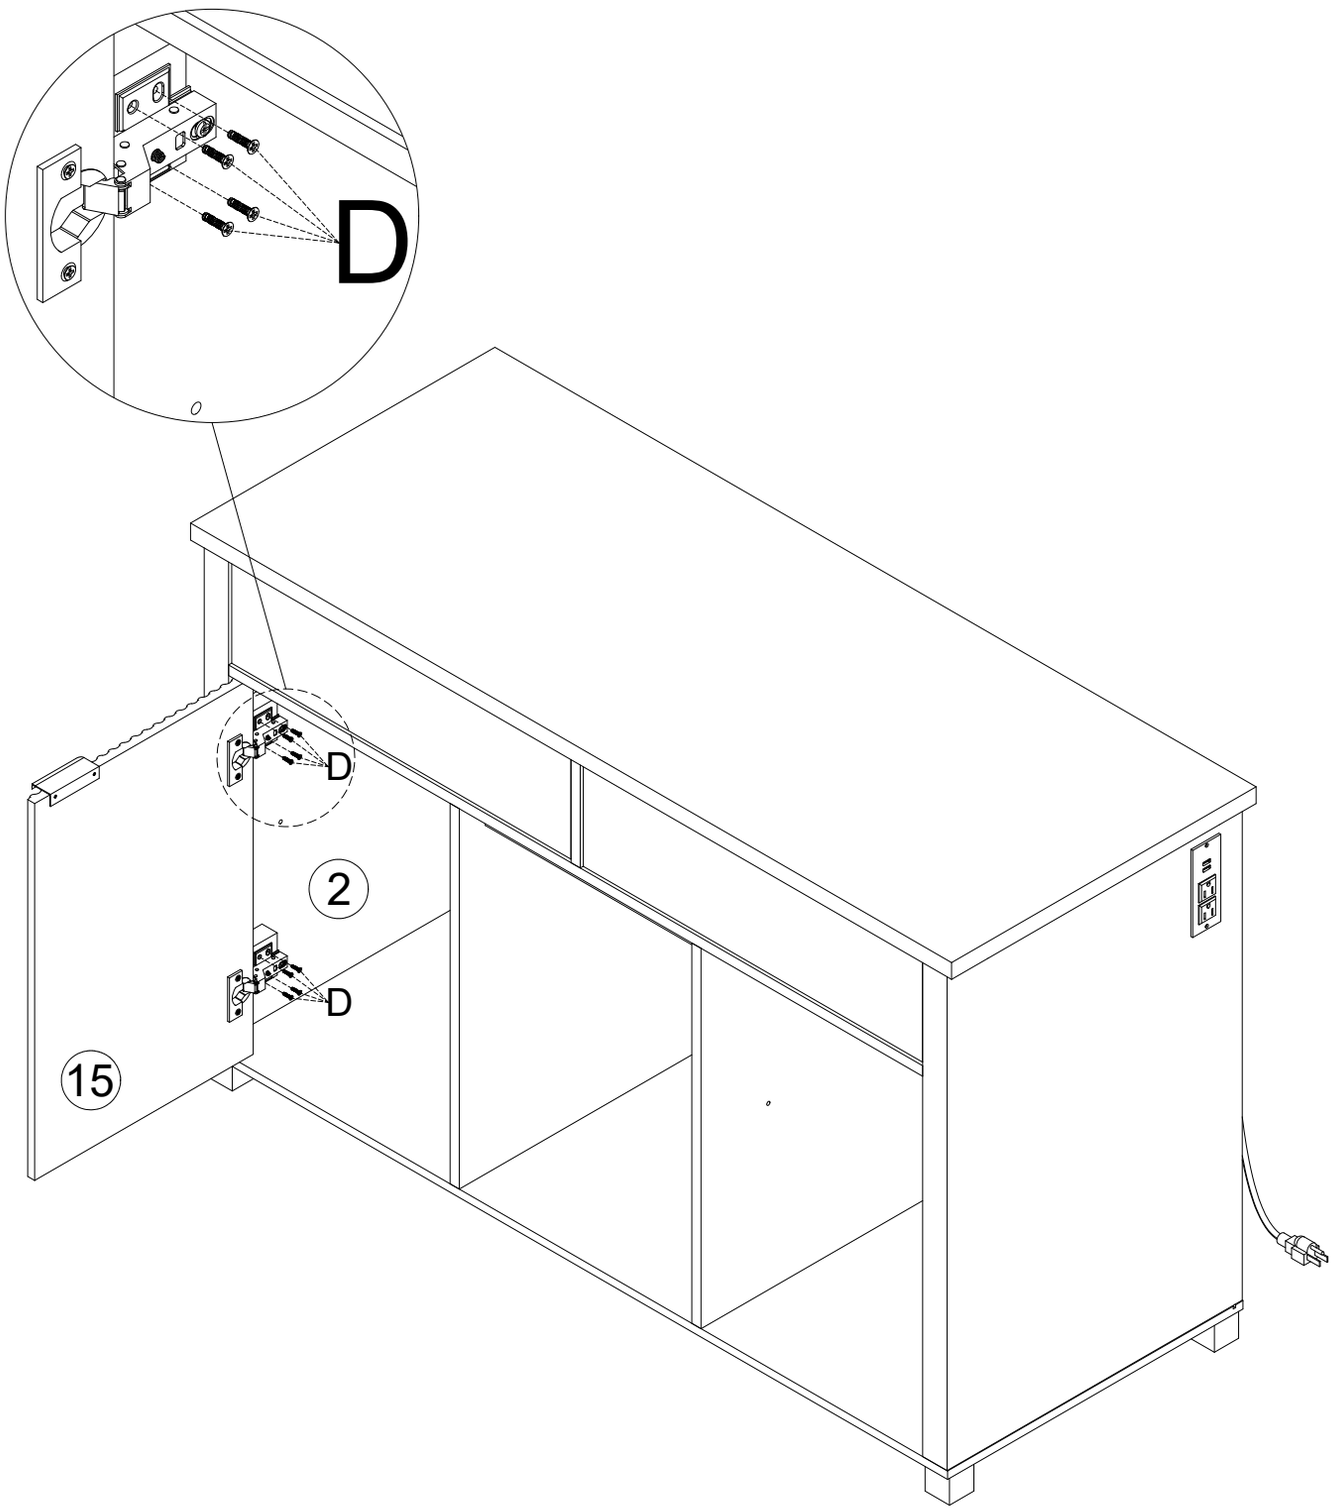Step 18




D x 8 PCS	

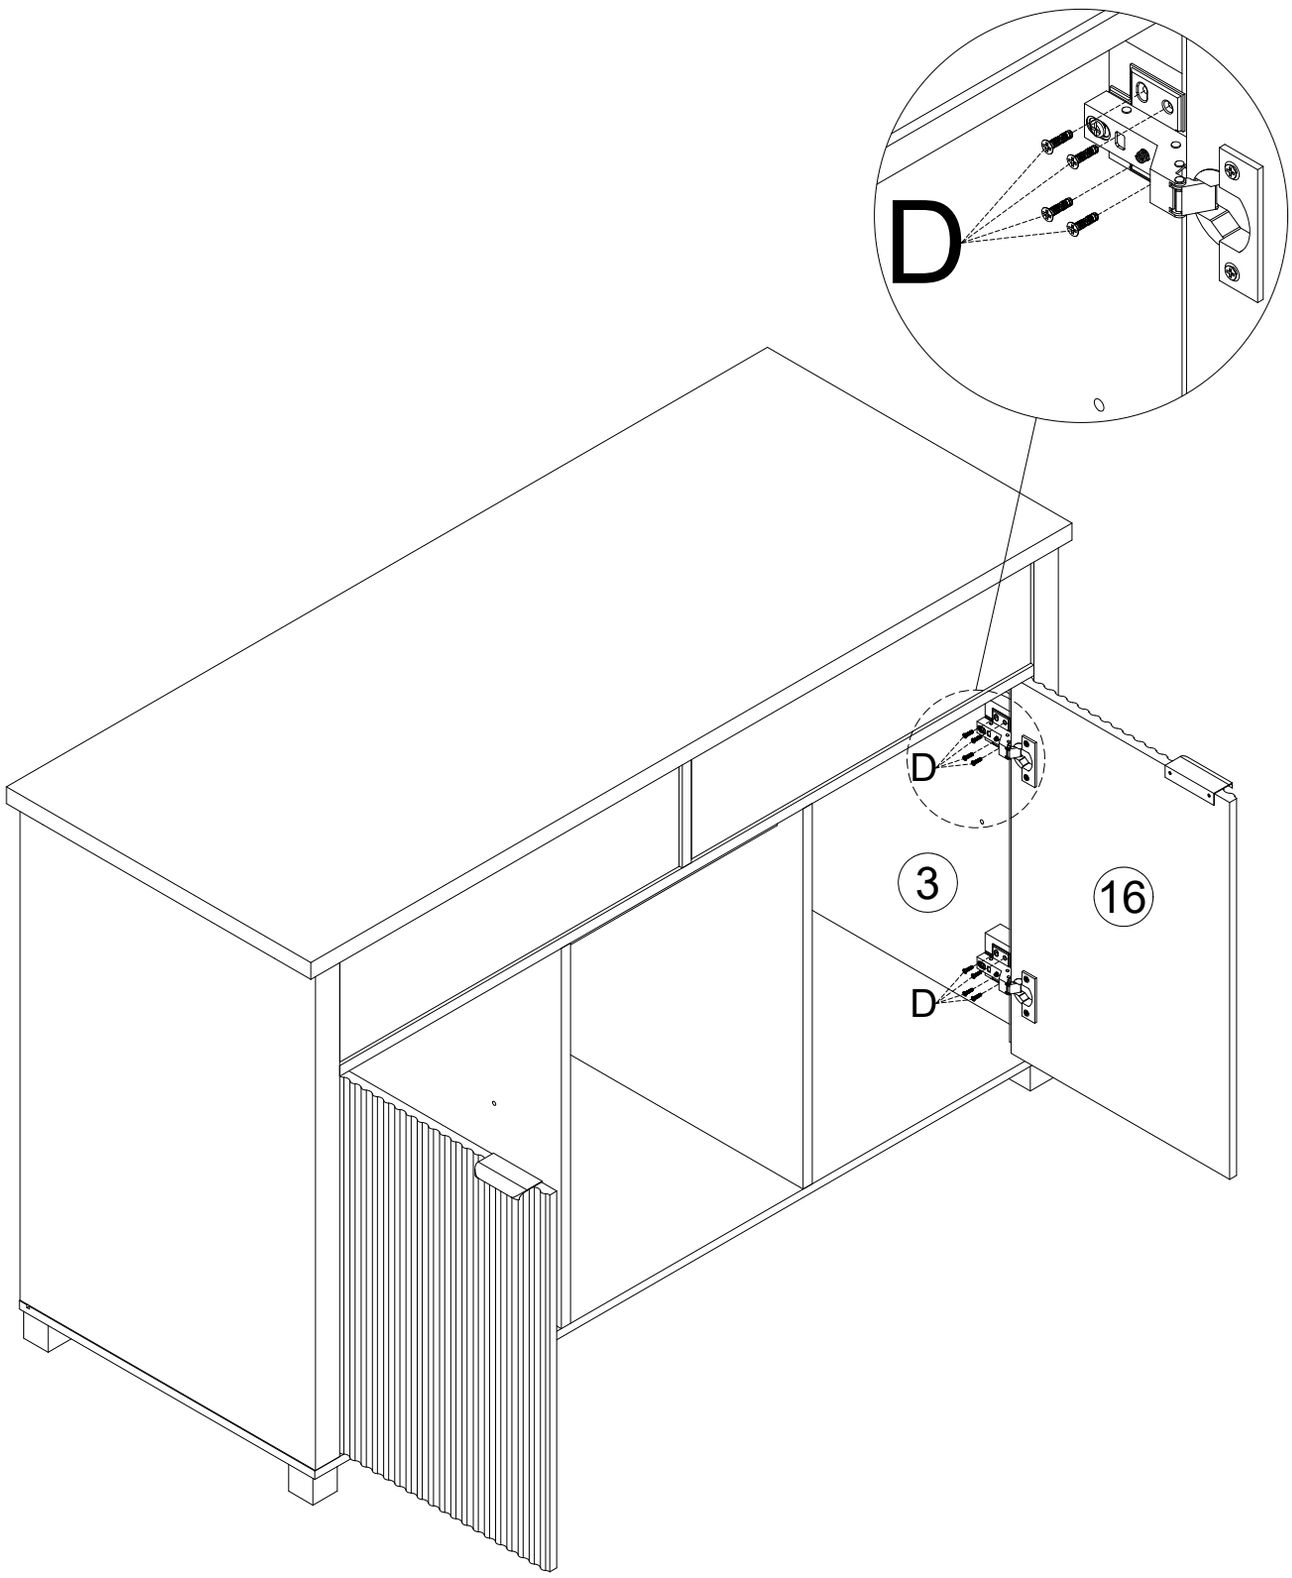Step 19



D x 8 PCS	

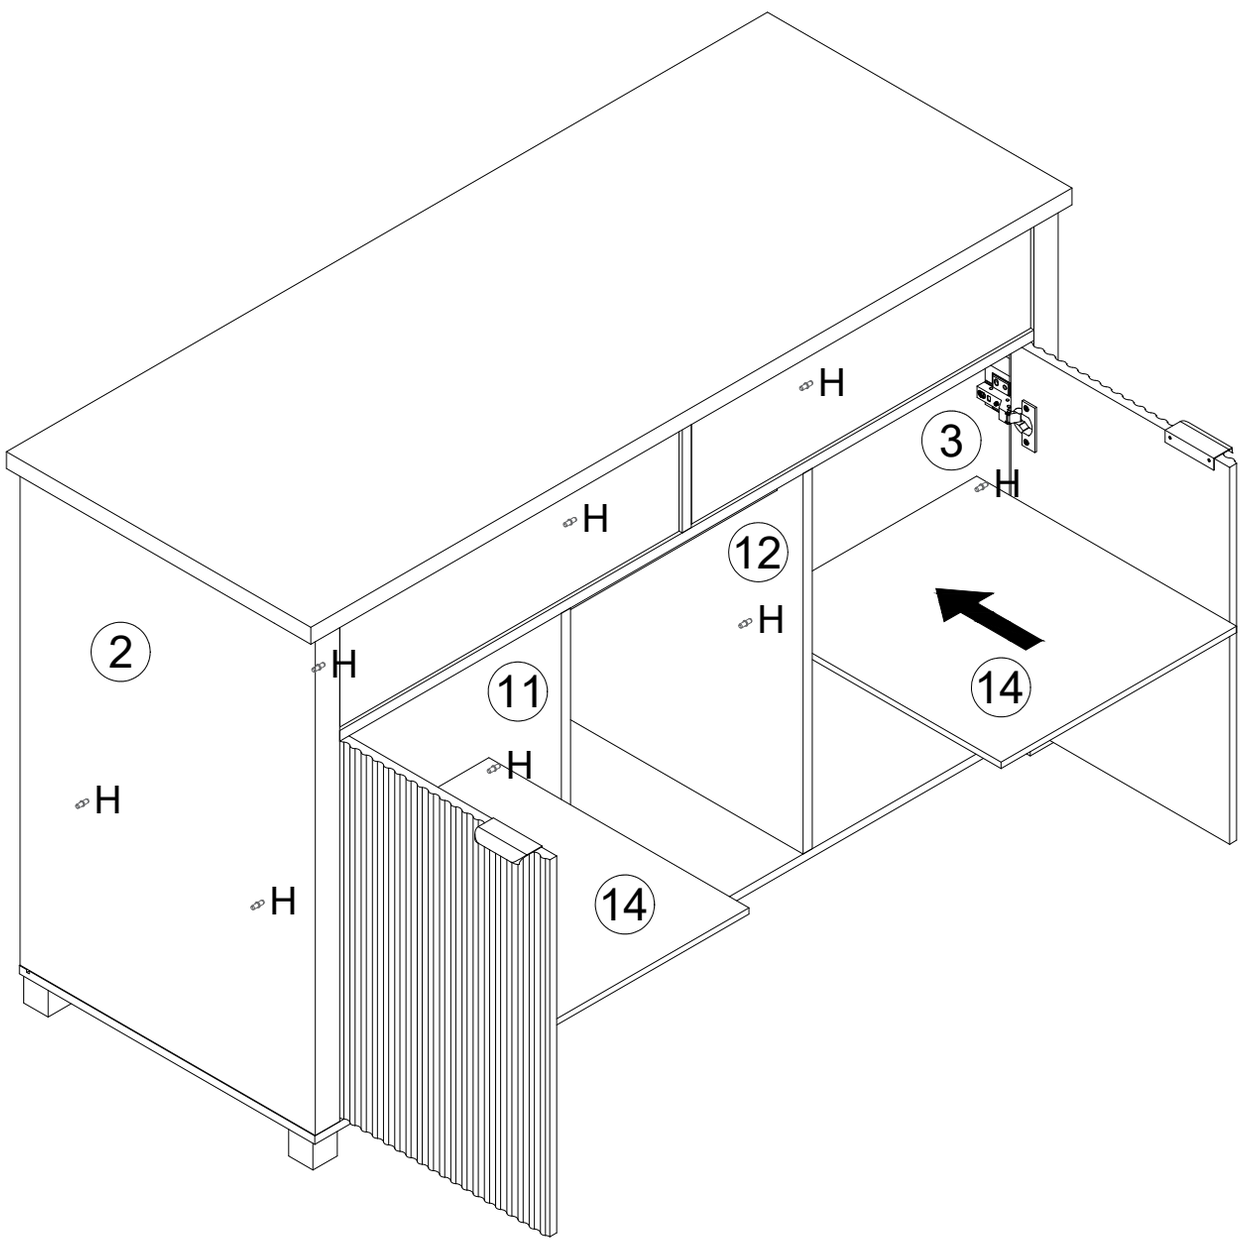
Step 20



H x 8 PCS	


Step 21

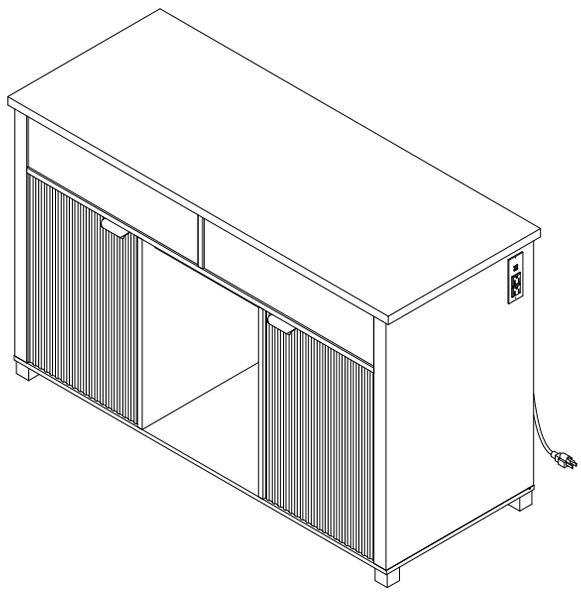if there is misalignment after you install,adjust the screw to the best condition.




When the door position is not standard,please adjust the door according to the right picture.

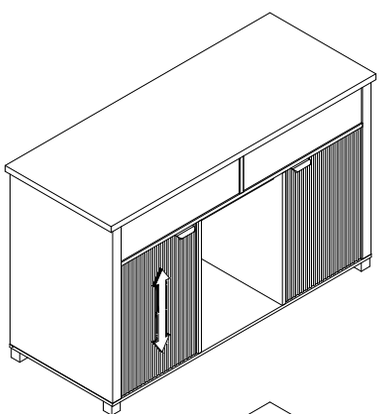Please place the cabinet on the flat floor before adjustment.



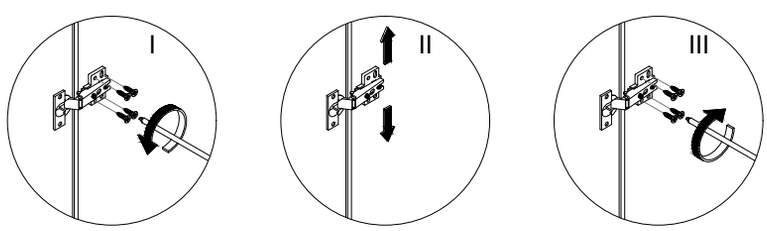
Adjust the door up and down to match the cabinet.



I:loosen the screw.

II:Adjust the upper and lower position.

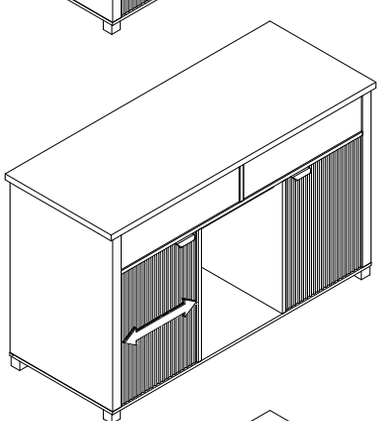II:tighten the screw.




Adjust the door left and right to match the cabinet for suitable crack of the door



I:loosen the screw to keep hinge apply force toward the direction of arrow.

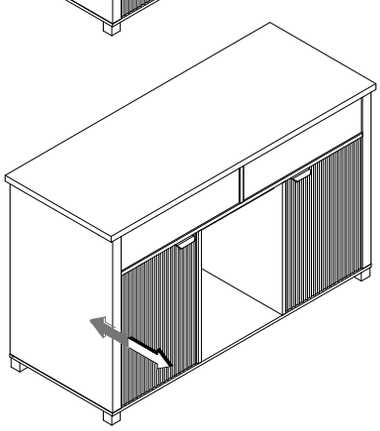II:tighten the screw to keep hinge apply force toward the direction of arrow.



Adjust the door backwards and forwards to match the cabinet.



I:loosen the screw.

II:Adjust the distance between front and back.