

Driling and Inserting Ground Sleeves

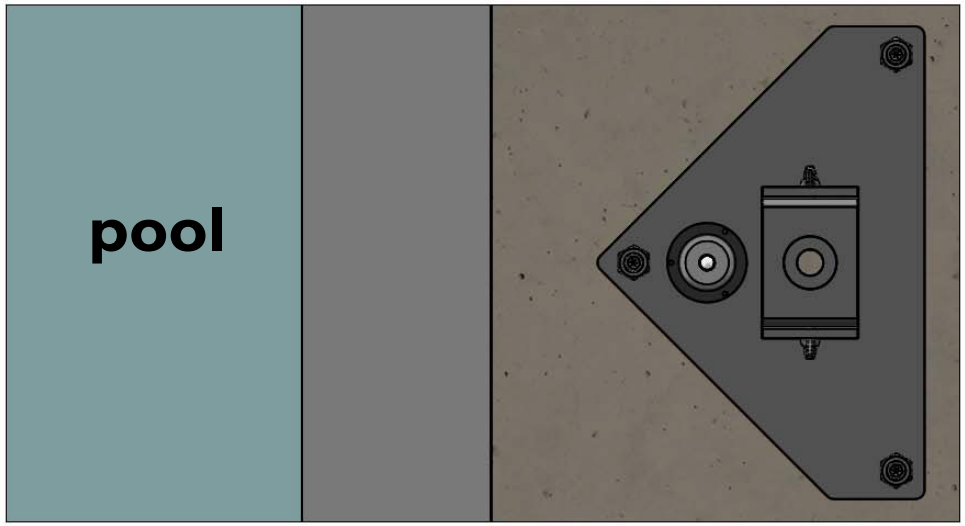


Recommended Drill Guide: We have an optional drill guide that will help you with drilling holes needed for proper installation.

Align: the drill guide over the marked hole with the bubble level pointing to the pool edge.

Level: The three bolts attached to the bottom of the base allow the user to level the drill guide. Simply turn the bolts clockwise or counter clockwise.

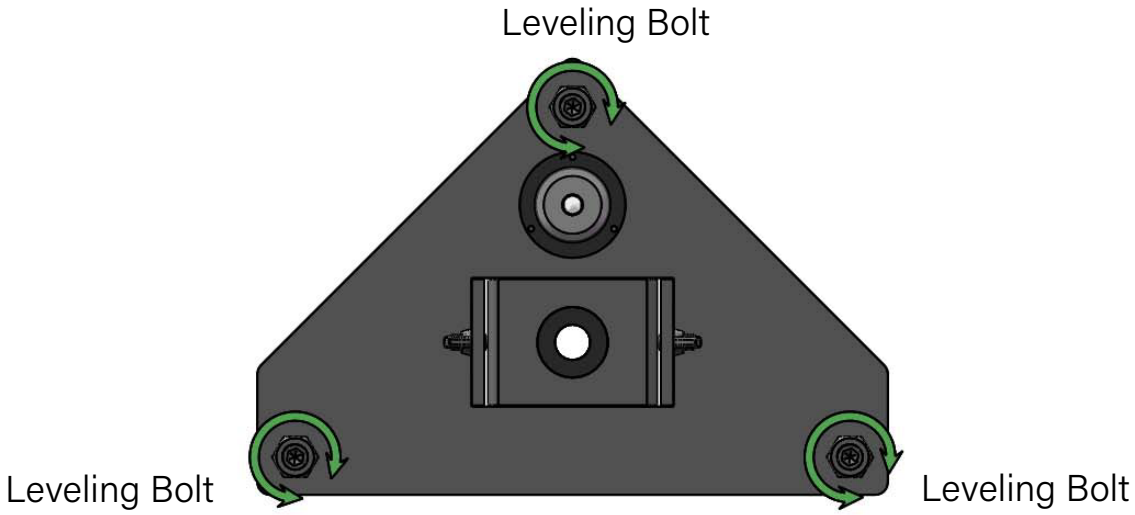



Drill Guide Base leveling bolts. There are 3 bolts to adjust.

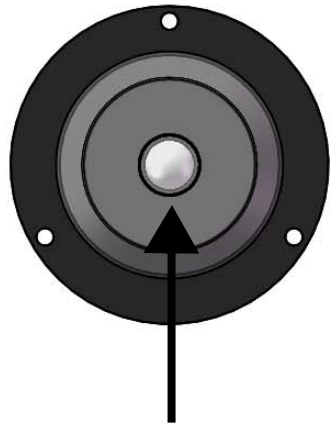


Bubble in middle indicates Drill Guide Base is level.

wingnuts

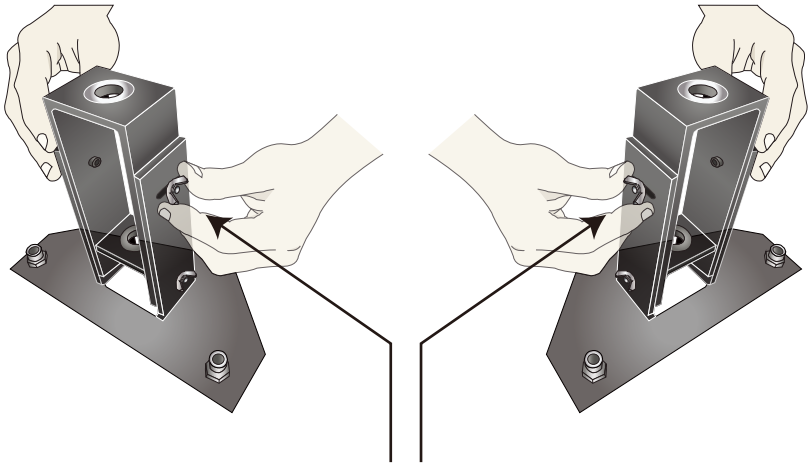


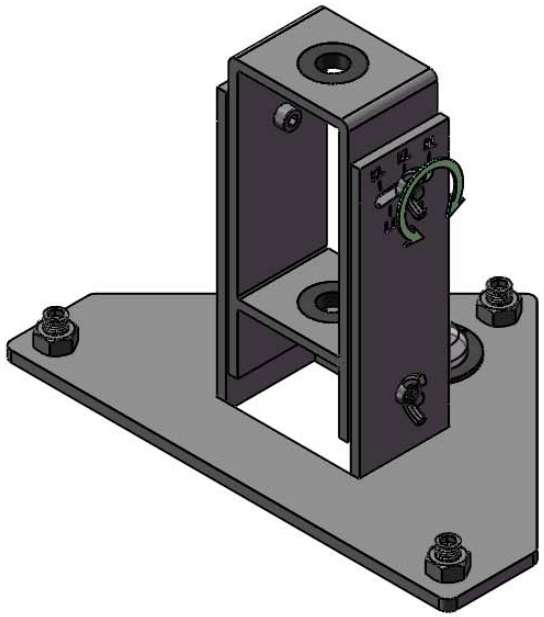


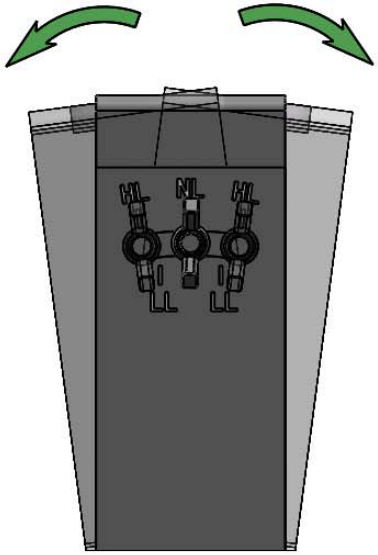

After adjustment has been made be sure to tighten wingnuts back down firmly.

Lean: the guide either away from the pool, toward the pool, or at the zero mark for level drilling. To adjust the pitch simply loosen the upper wingnuts on either side of the drill guide.

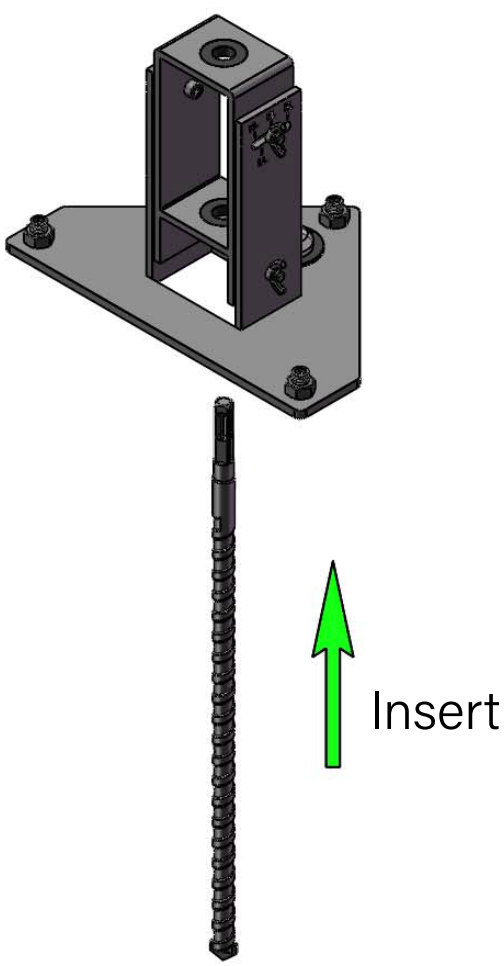


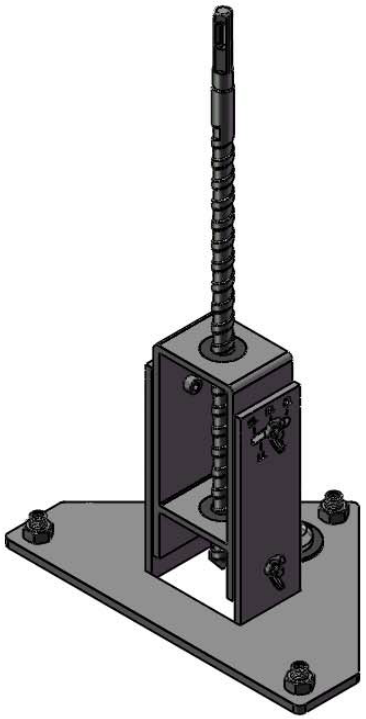



Installation of the impact drill bit (D16*400mm) requires passing underneath the drill guide and installing it on the impact drill.


Drilling: Begin at your start point to drill out fence as shown. Check the hole you are about to drill making sure you have the appropriate degree of lean & the direction of the hole to be drilled either towards the pool or away from the pool.

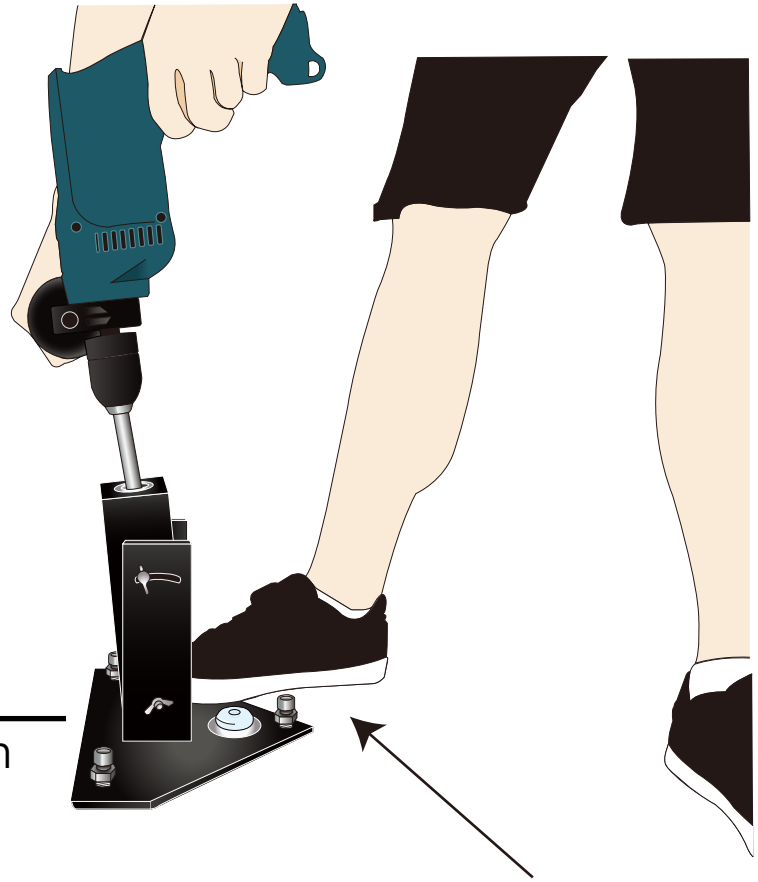



Light Lean
Direction of Lean

NOTE: Stabilize drill guide with foot pressure to prevent drill guide from shifting.


In this example we are drilling away from the pool. Remember to always adjust your bubble indicator to level.

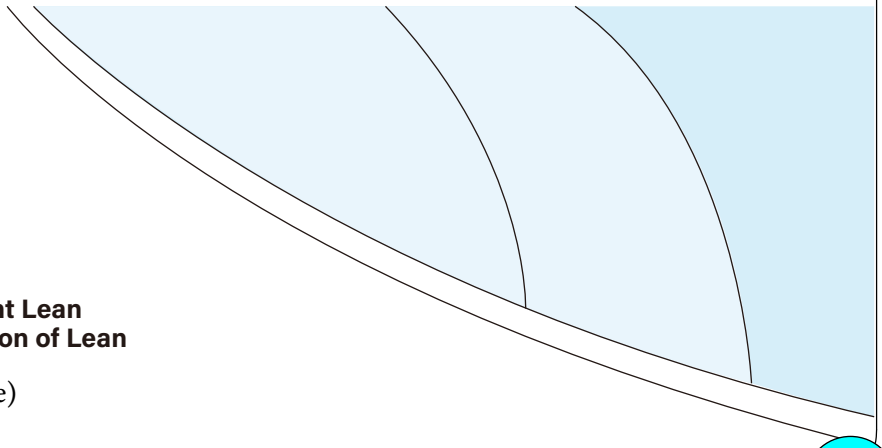

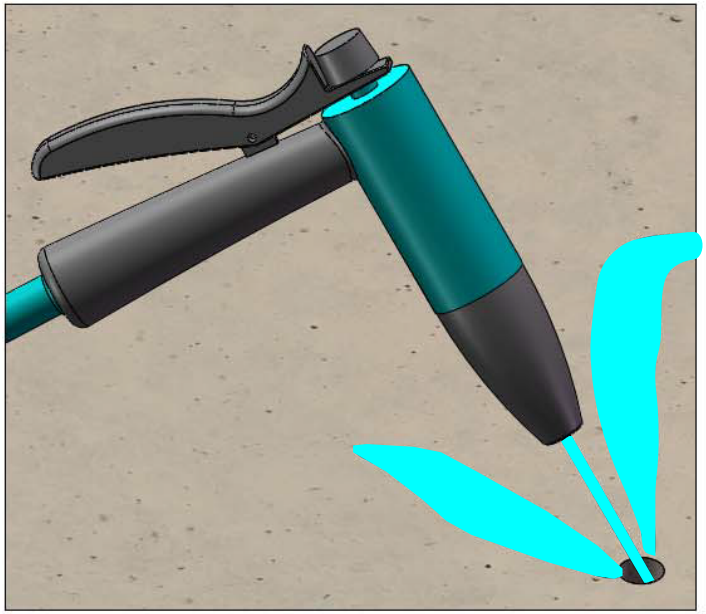

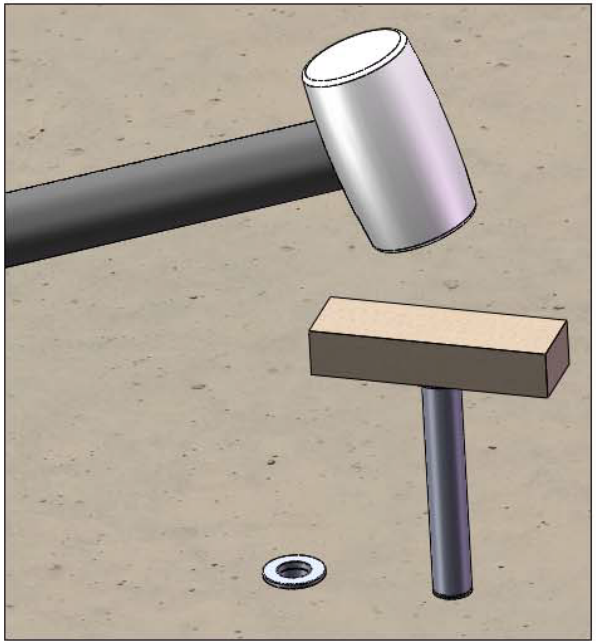

Sleeving: Once drilling is completed flush out the debris from the holes using a garden hose. Next insert the plastic sleeves in the holes and tap down completely.
PRO NOTE: To keep from damaging the sleeve, place a wood block on top of it as shown and gently tap sleeve down into the hole until it is flush with the ground.

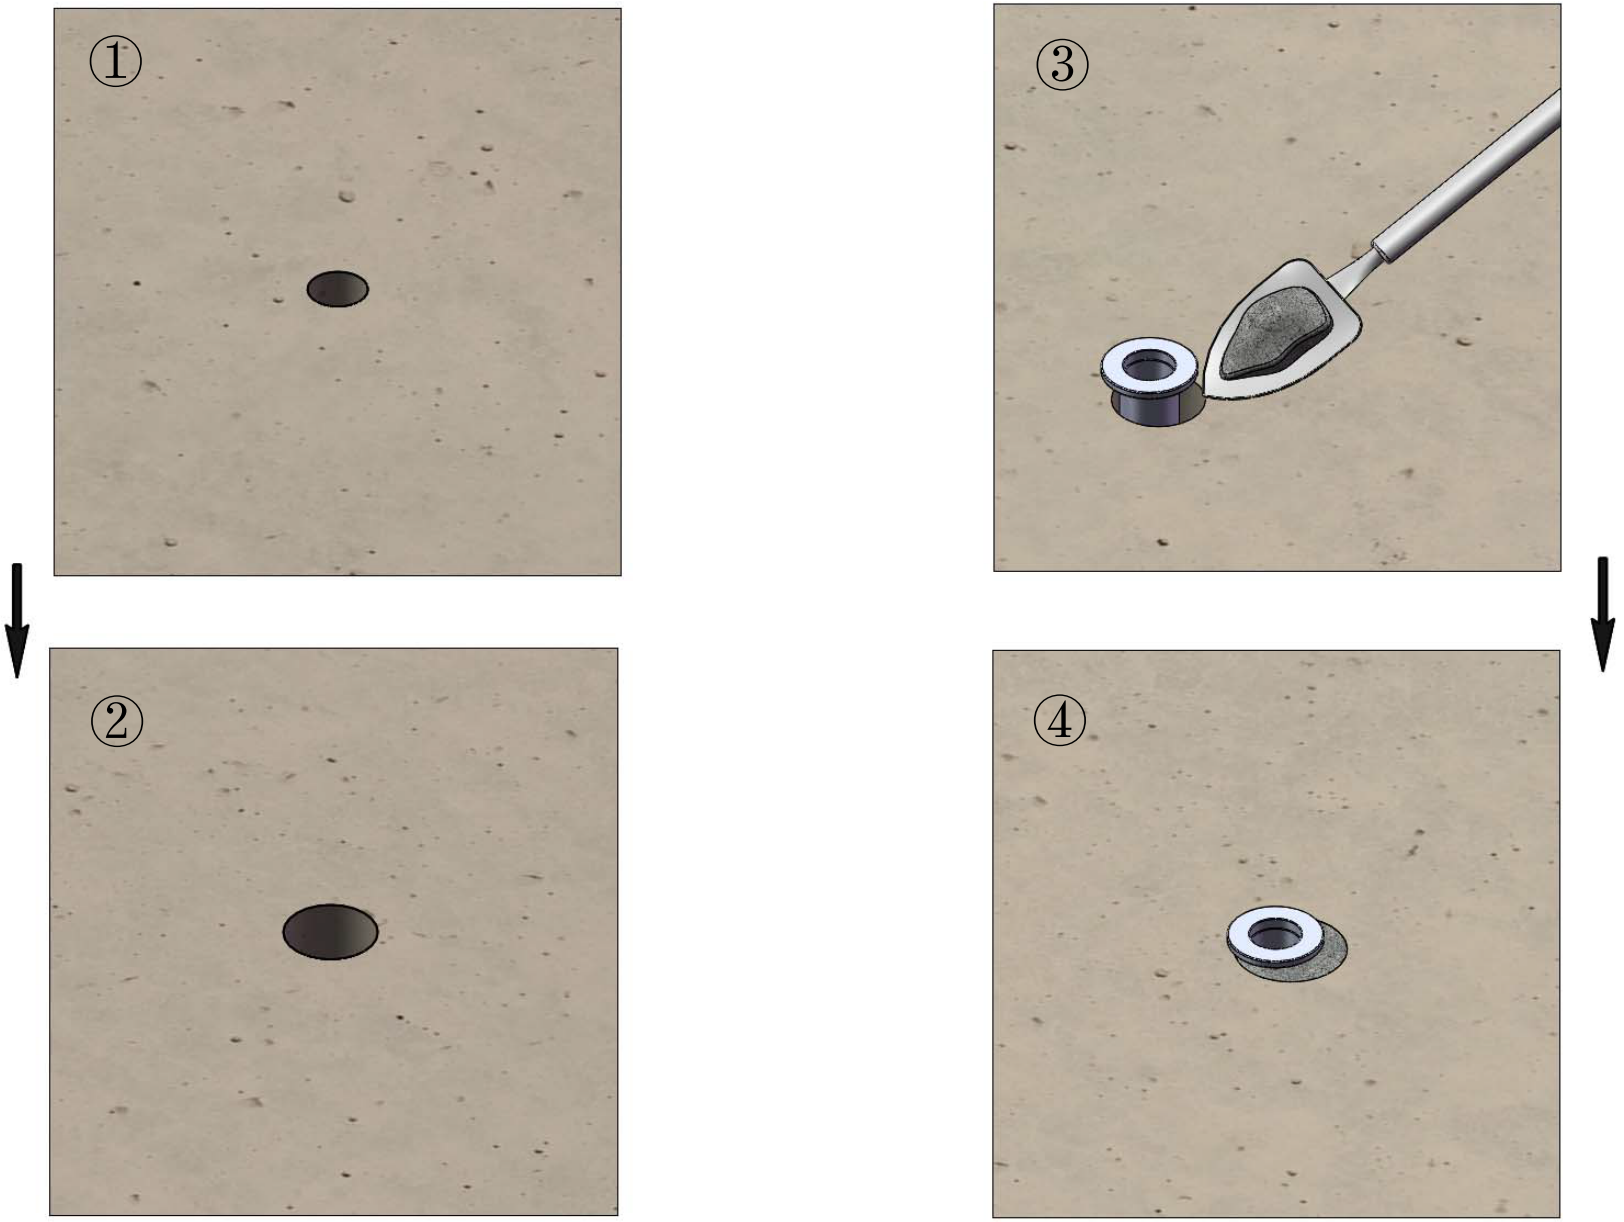

After drilling the holes, the hole position may be slightly deviated. You can enlarge the hole position.
Then place the plastic sleeves into the determined position, and fill the perimeter with soil mix as shown.

domi
outdoor living

RESORT COMFORT IN YONR

OWN BACKYARD

Support:

Business cooperation contact email:
marketing@domioutdoorliving.com

After-sales contact email:
service@domioutdoorliving.com

Please tell us your order ID when contact.

Attach photos of damaged part for instant reply.