
Domi outdoor living

domi
outdoor living

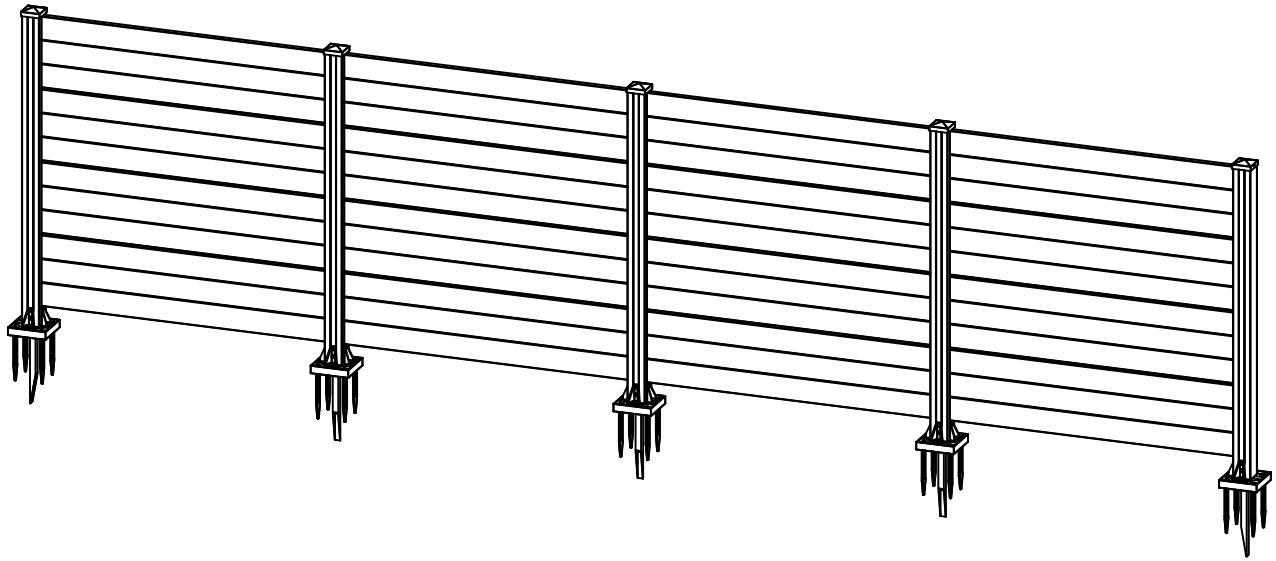


SKU: LNCF0644-4pcs

Outdoor Privacy Screen


Assembly Manual (for Soft Surfaces)

© Copyright 2024-2026 Domi Outdoor Living LLC.All Rights Reserved.


U Type

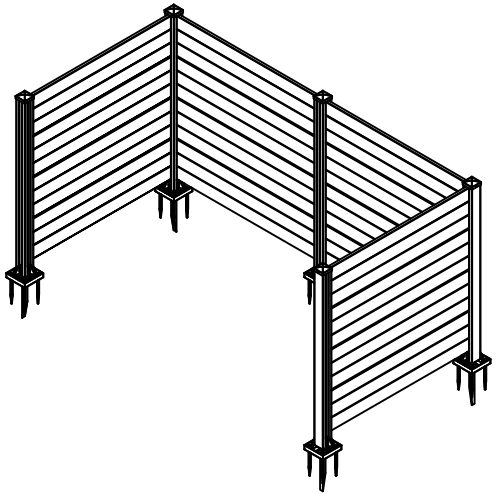


H Type

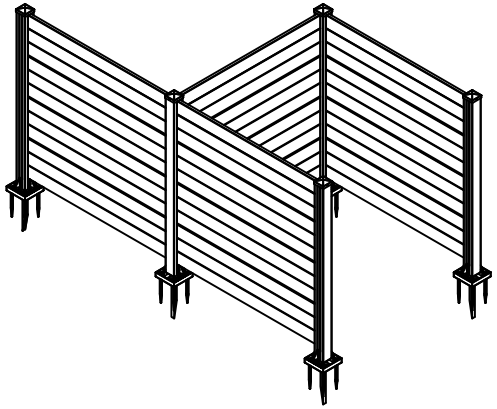


F Type

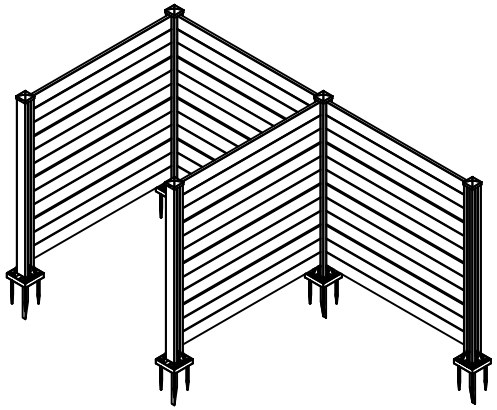


















L Type

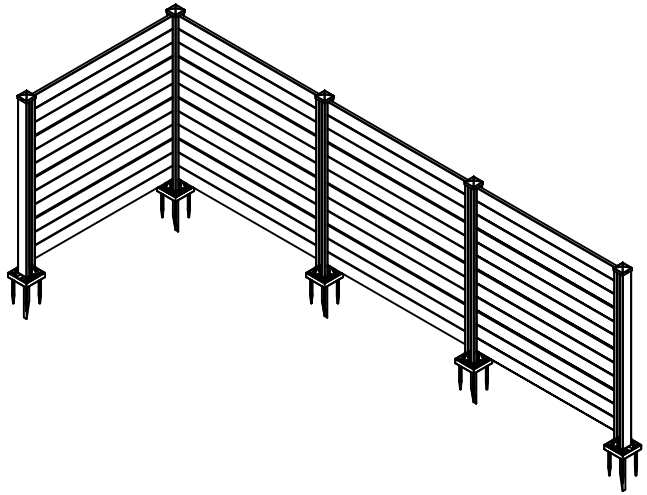



Z Type

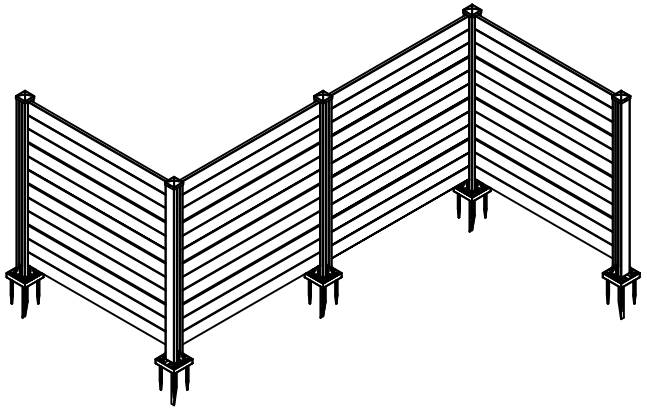


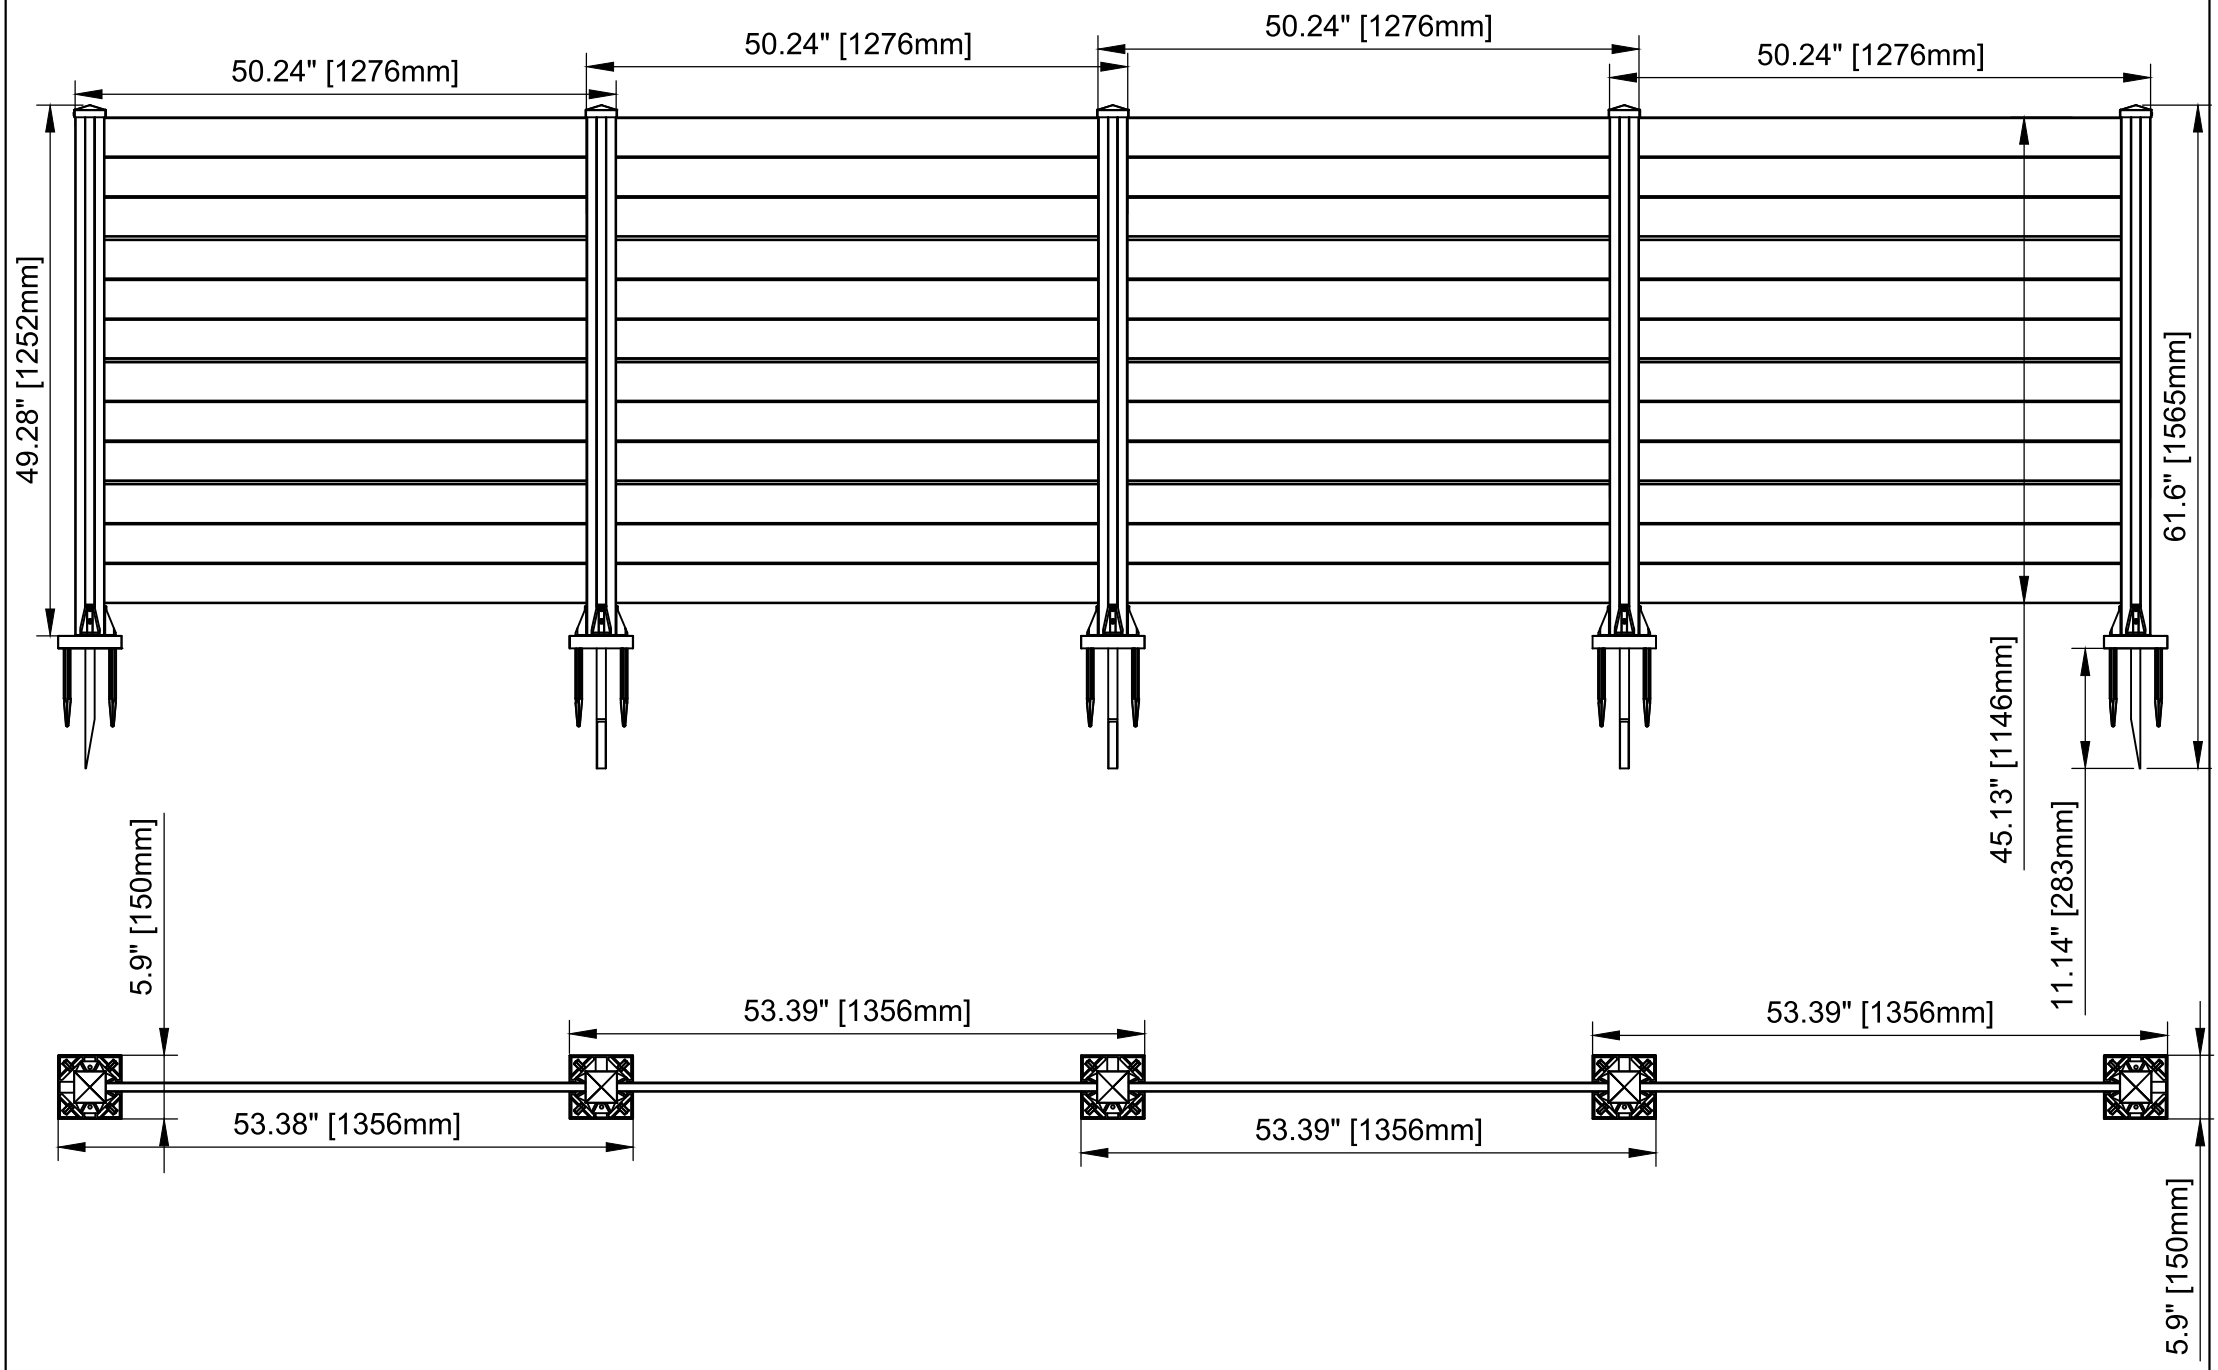
50.24" [1276mm]
50.24" [1276mm]
50.24" [1276mm]
50.24" [1276mm]
49.28" [1252mm]
61.6" [1565mm]
45.13" [1146mm]
11.14" [283mm]
5.9" [150mm]
53.39" [1356mm]
53.39" [1356mm]
53.38" [1356mm]
53.39" [1356mm]
5.9" [150mm]

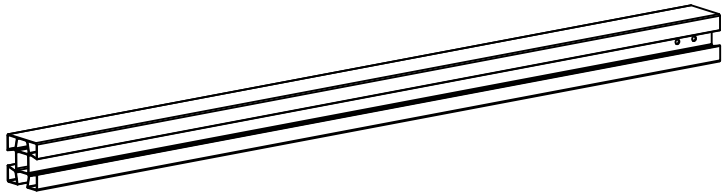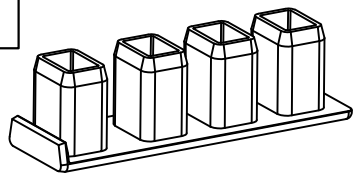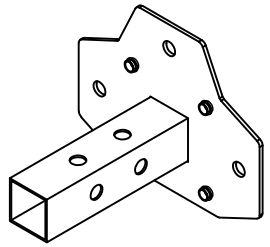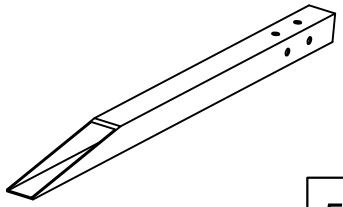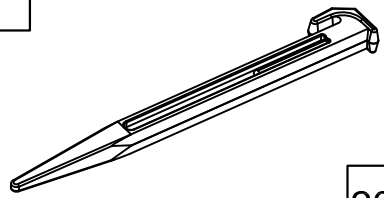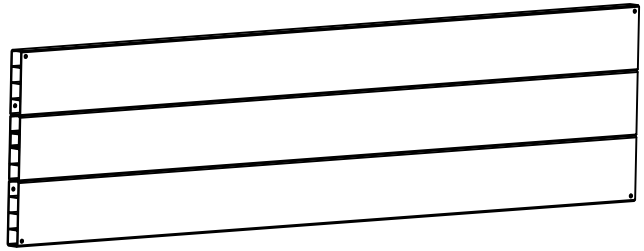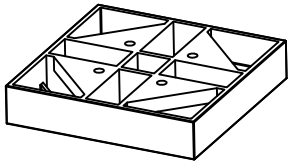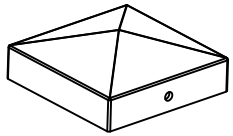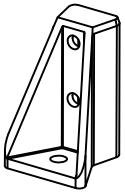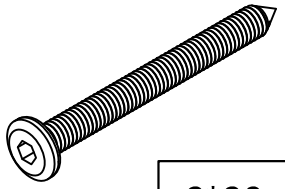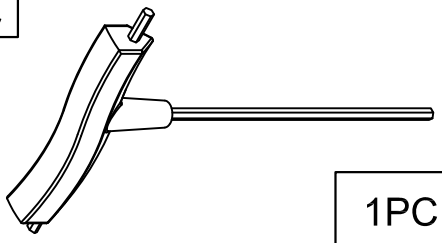
A  5PCS	B  64PCS	C  5PCS		
D  7PCS	E  5PCS	F  20PCS		
G  16PCS	H  5PCS	I  5PCS		
J  15PCS	K  ST4*12 133PCS	L  M6*16 20PCS	M  M6*30 30PCS	
N  15PCS	O  15PCS	P  6*60 15PCS	Q  1PC	

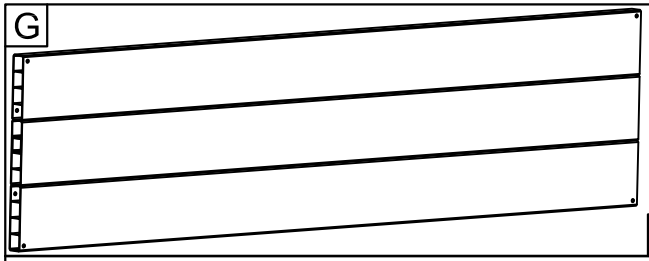

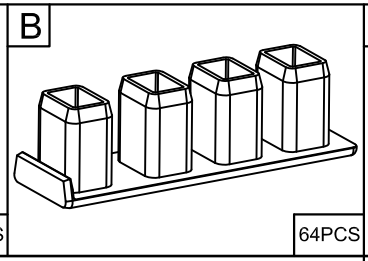

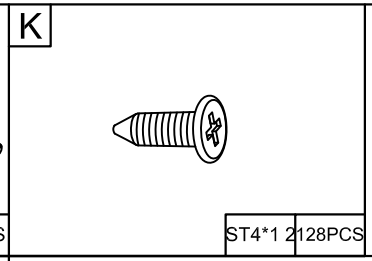


①×16

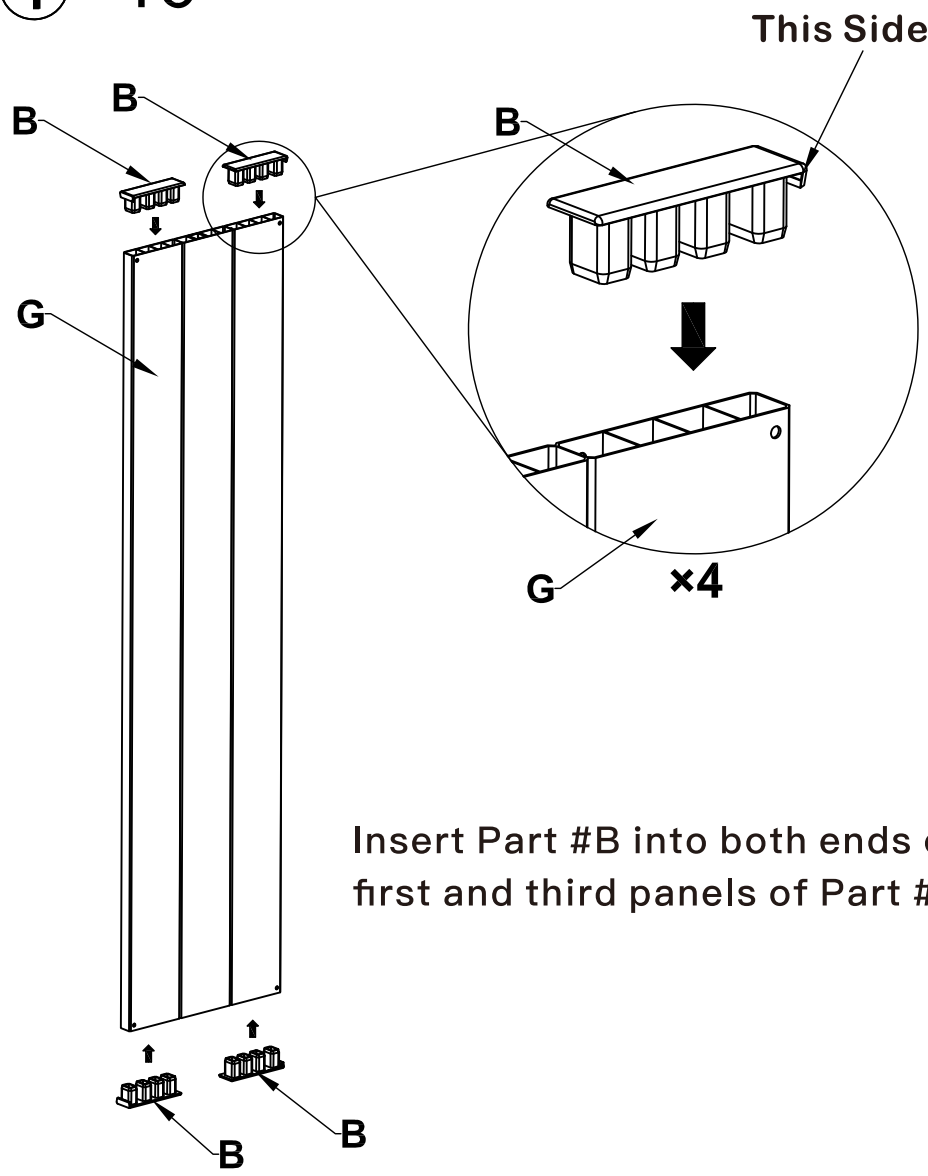



Insert Part #B into both ends of the first and third panels of Part #G.


②×16

Use 4 Screws #K to secure Part B through the holes as show.

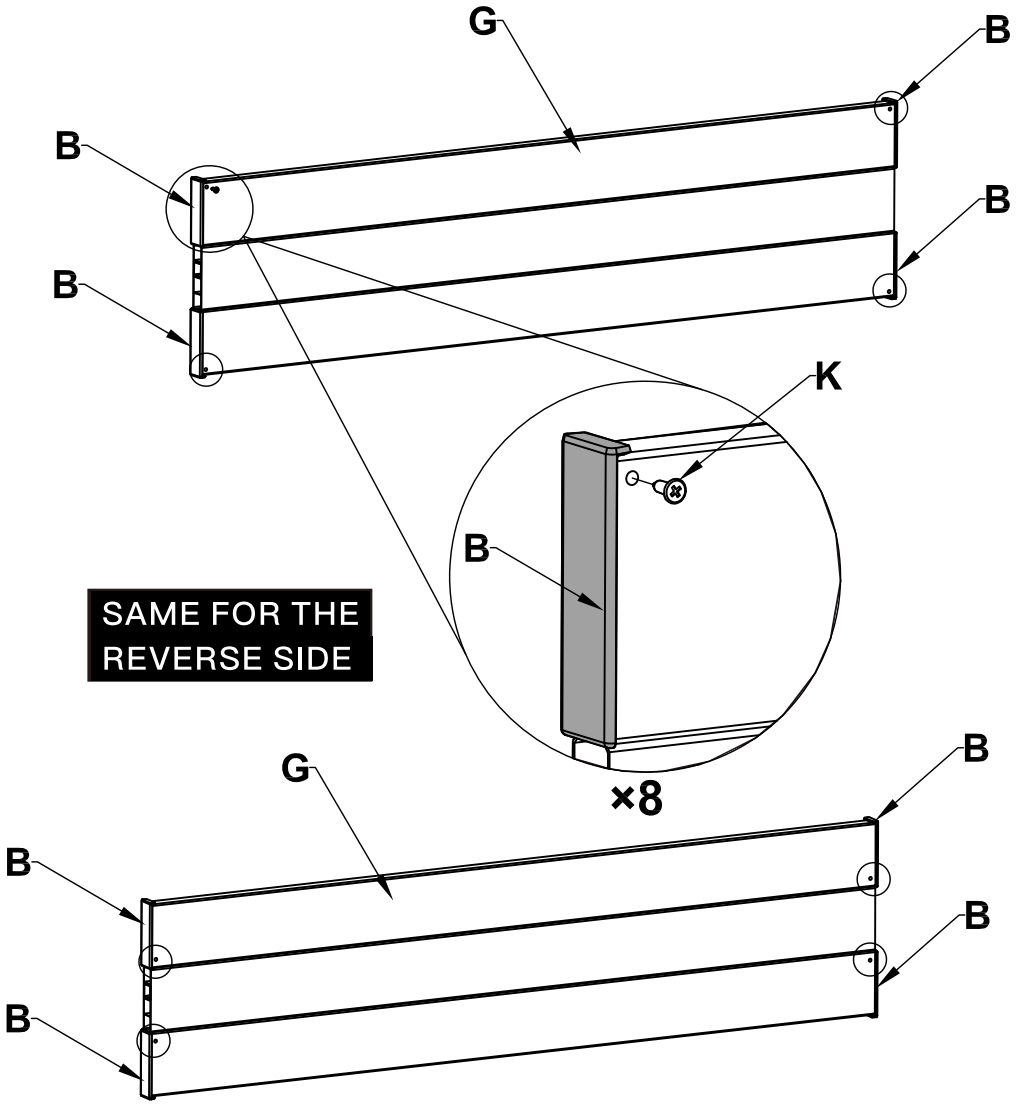


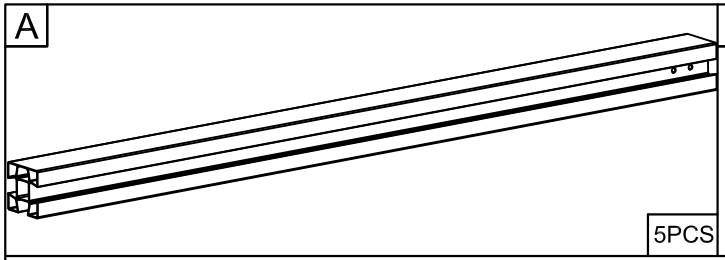

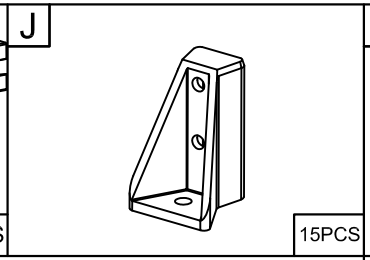

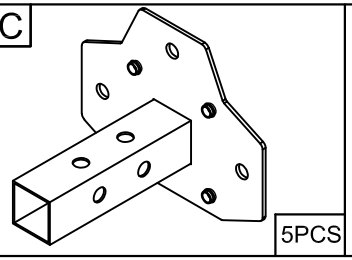


③×5



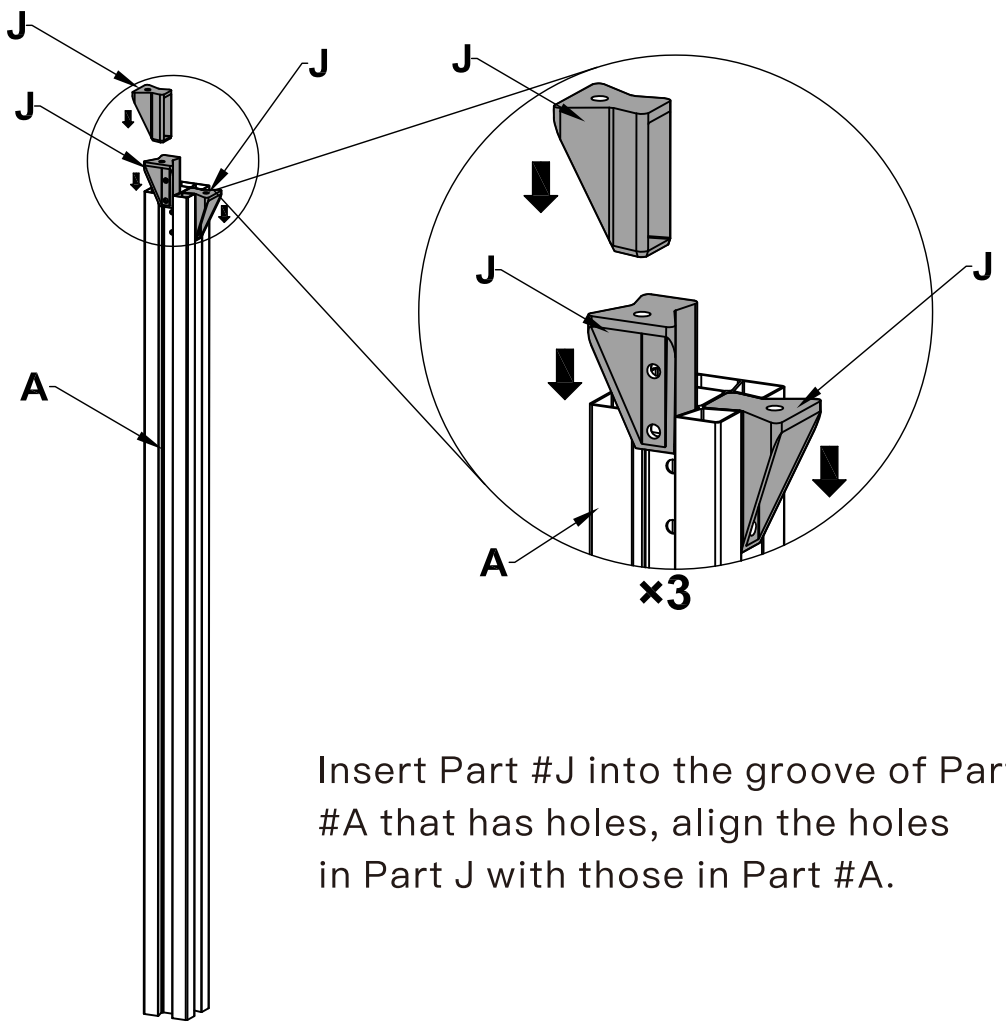


Insert Part #J into the groove of Part #A that has holes, align the holes in Part J with those in Part #A.

④×5

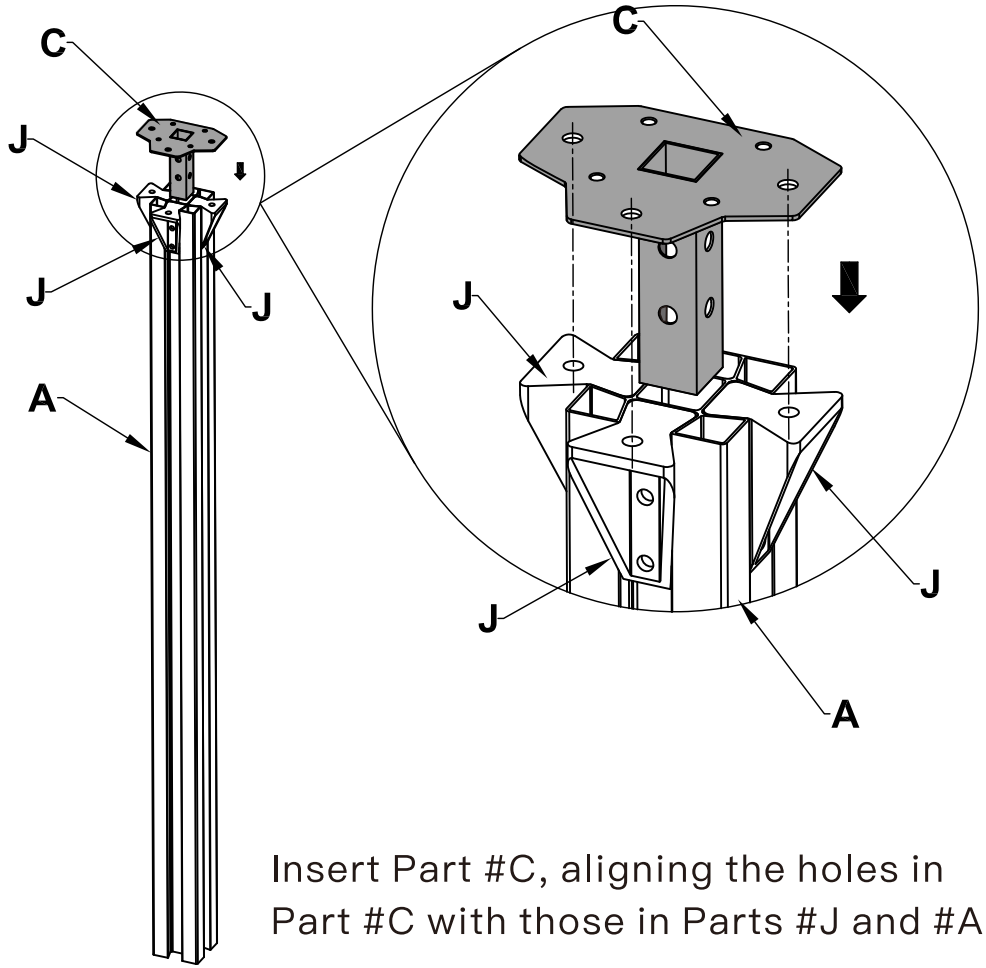


Insert Part #C, aligning the holes in Part #C with those in Parts #J and #A.

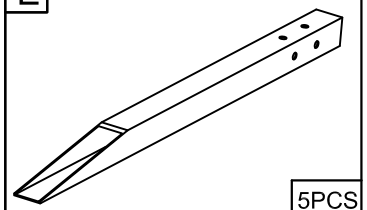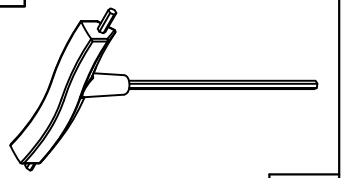E			M	Q	
 5PCS			 M6*30 30PCS	 1PC	


⑤×5

Insert Part #E into Part #C and align the holes.

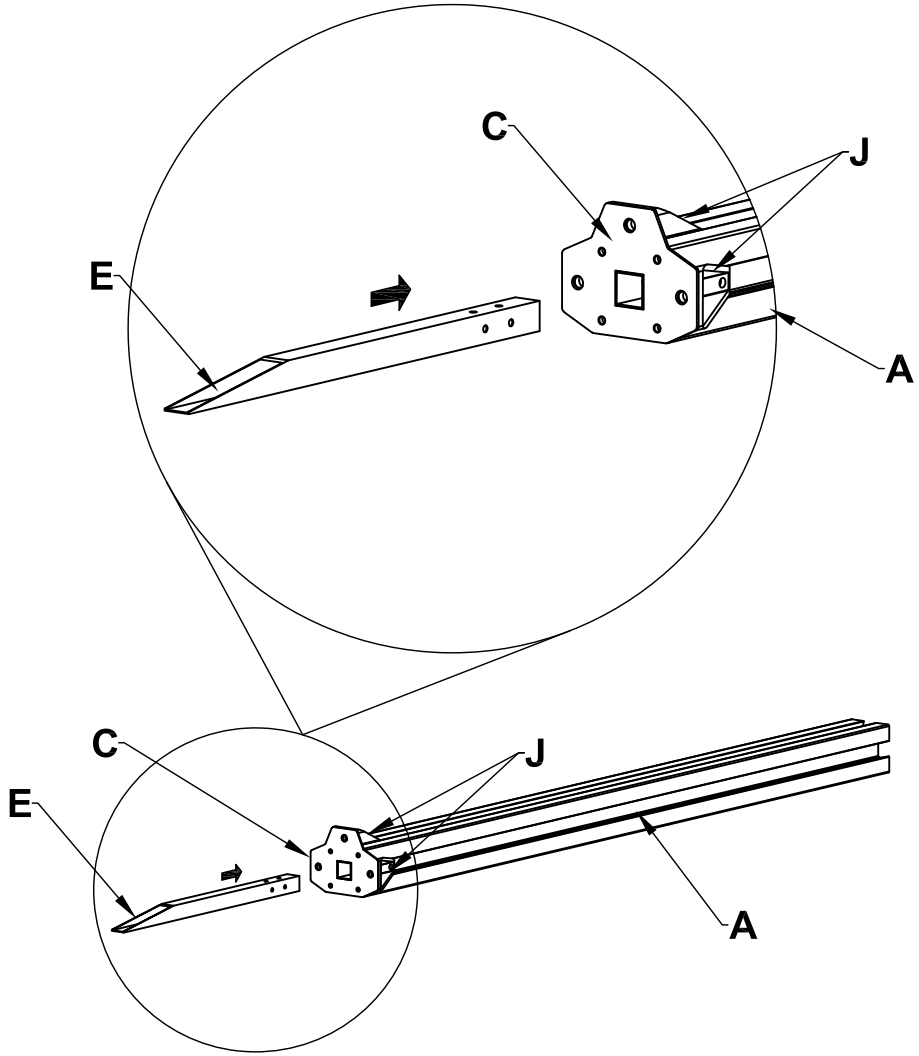


⑥×5

Notice: Tighten all screws to 60% first. After all screws are in place, fully tighten them uniformly.

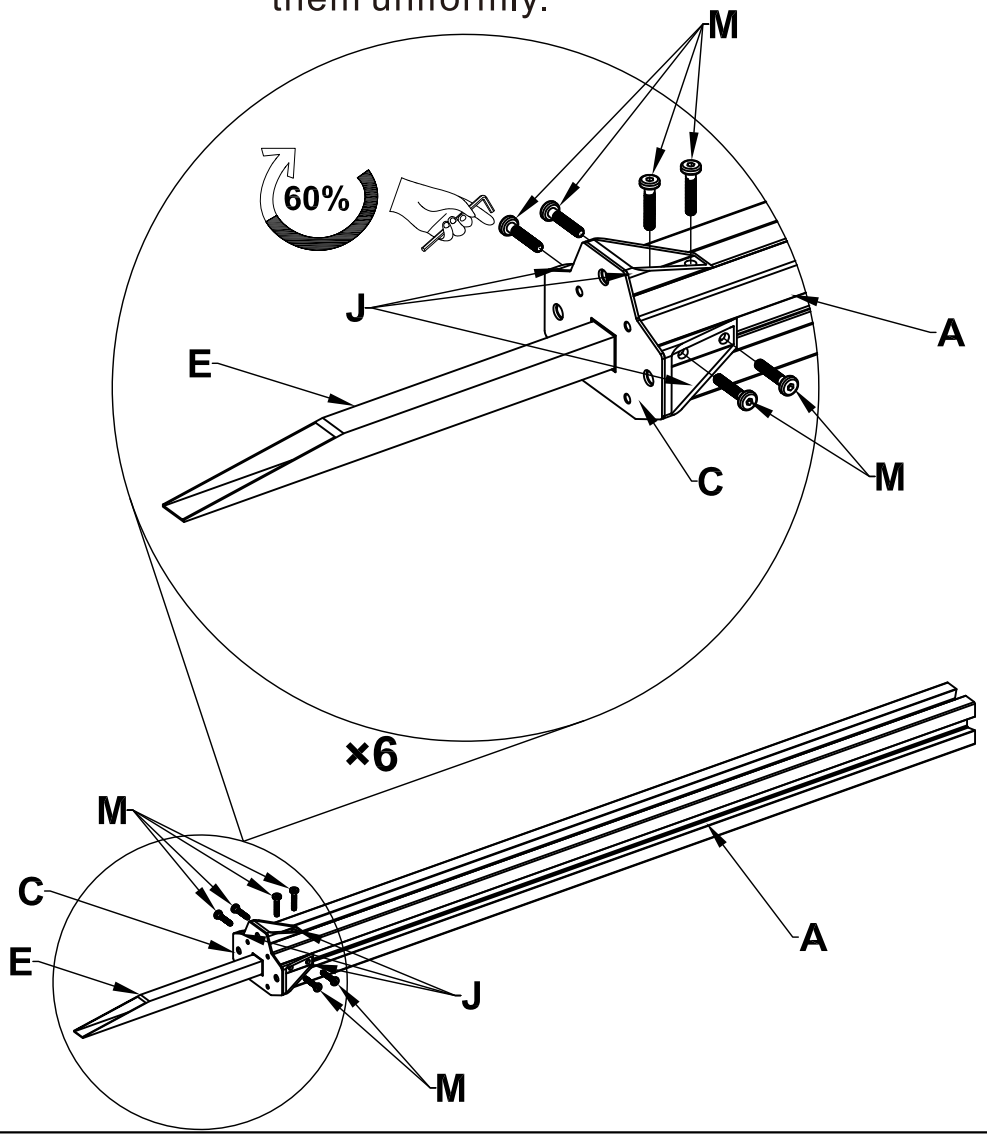


H

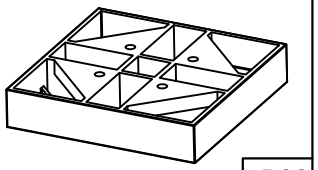


5PCS

L




M6*16 20PCS

Q

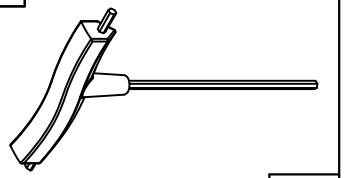


1PC

⑦×5

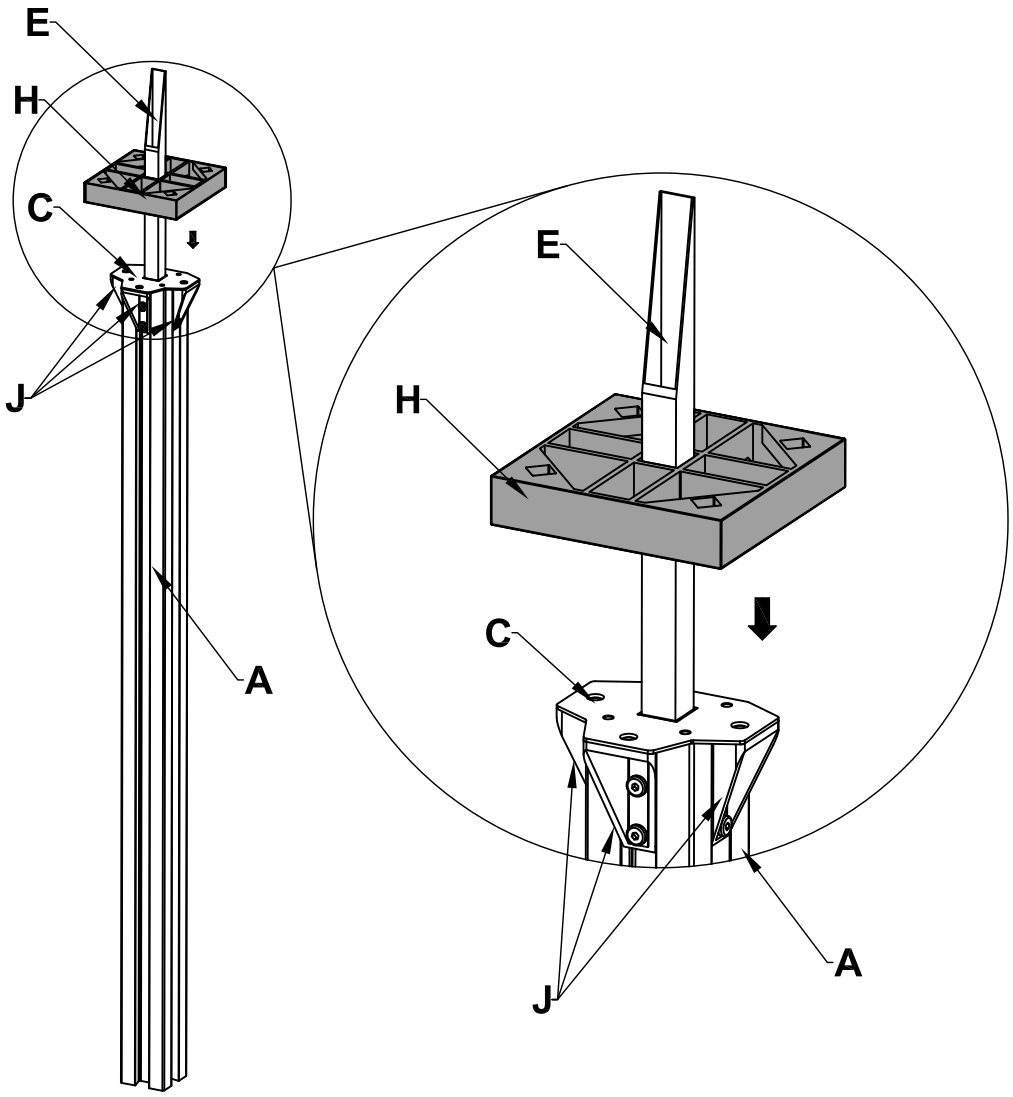


⑧×5

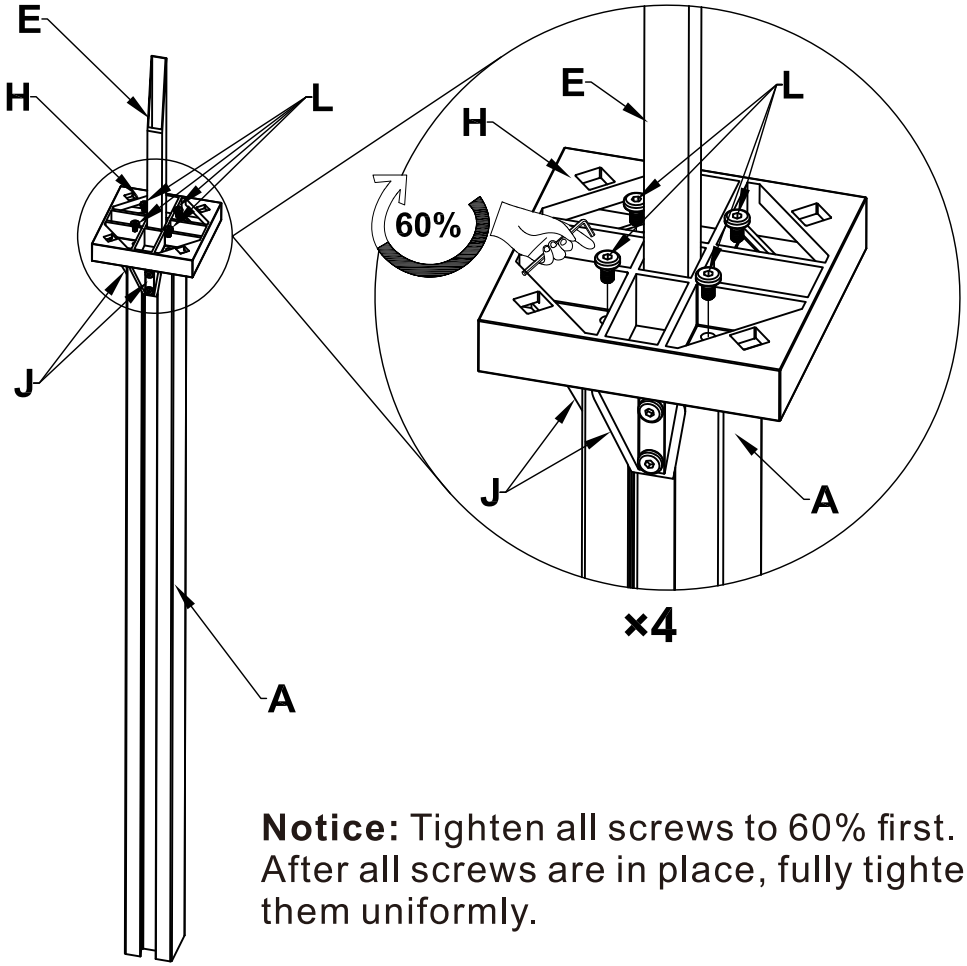


Notice: Tighten all screws to 60% first. After all screws are in place, fully tighten them uniformly.

9

NOTICE: When inserting the middle Panel into the Post, ensure both sides are inserted simultaneously and kept parallel.

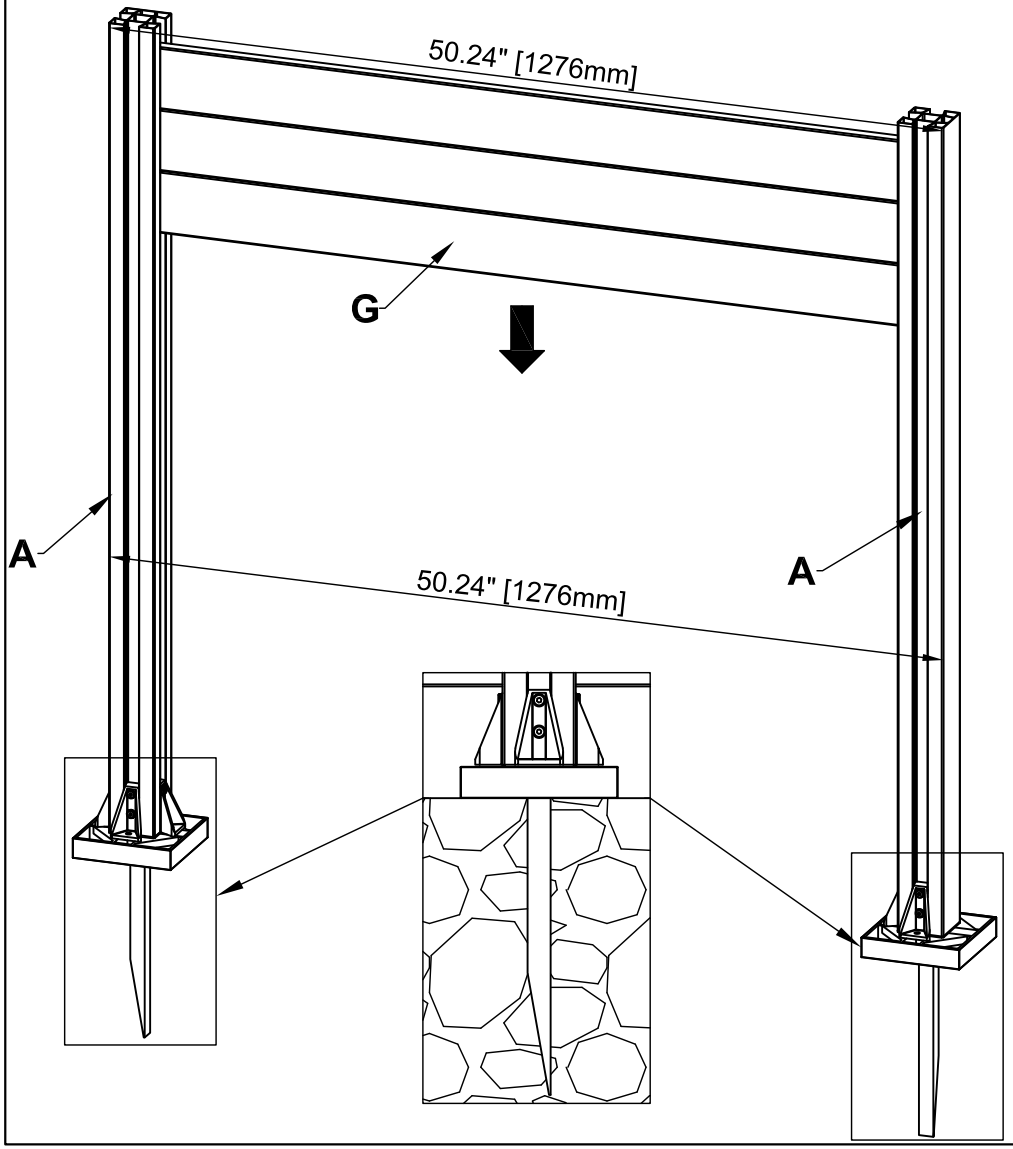


10

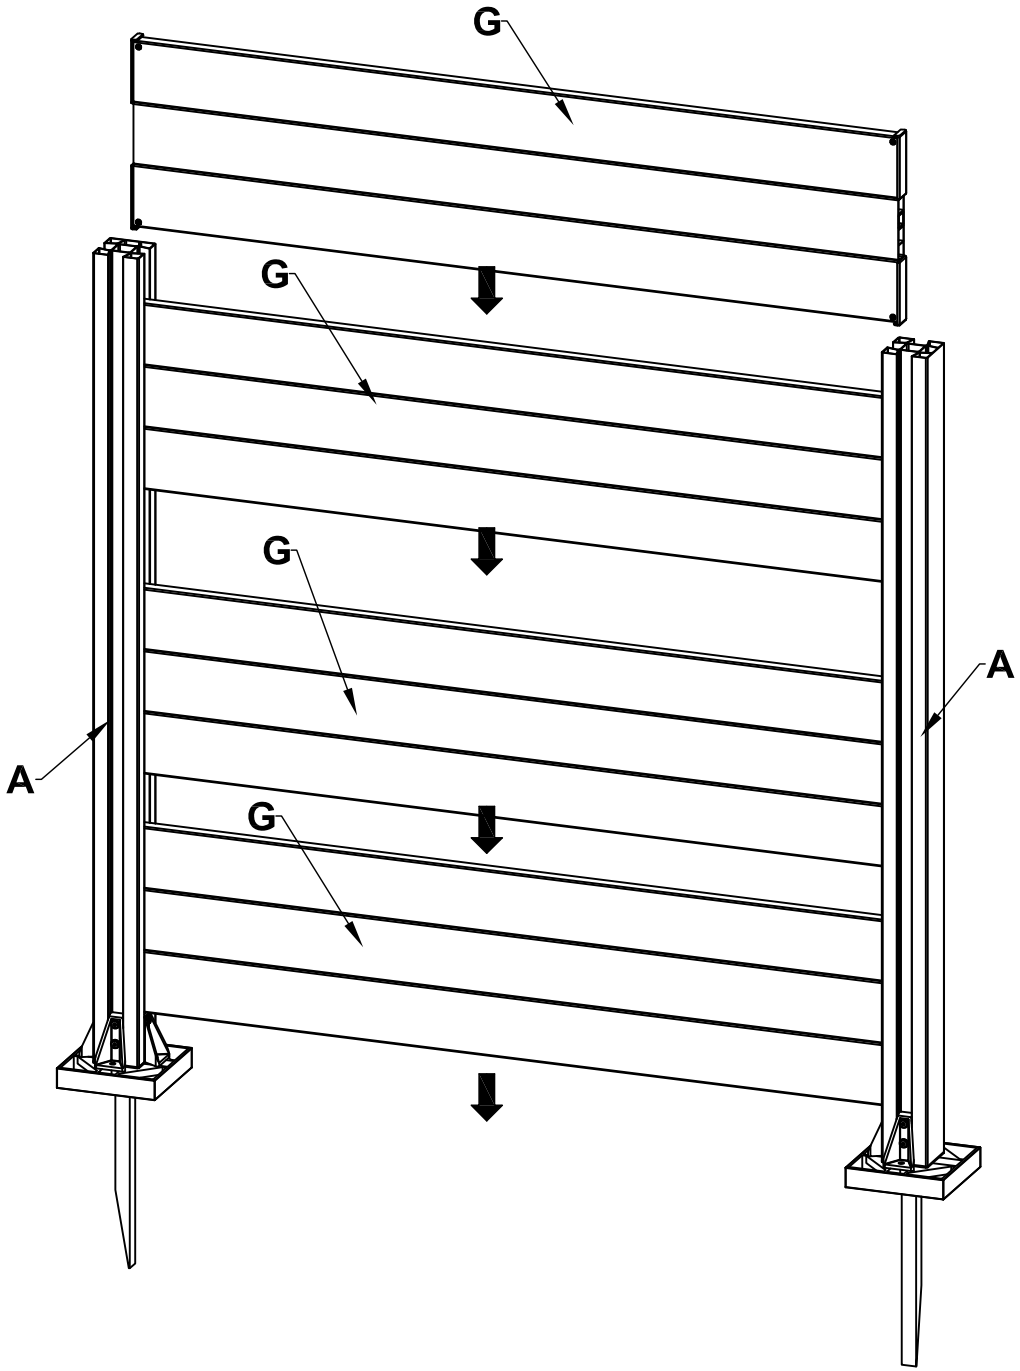


11

Once this step is complete, drive the ground stakes into the lawn to secure the fence.
Ensure they are positioned at an equal distance from both the top and bottom connections.

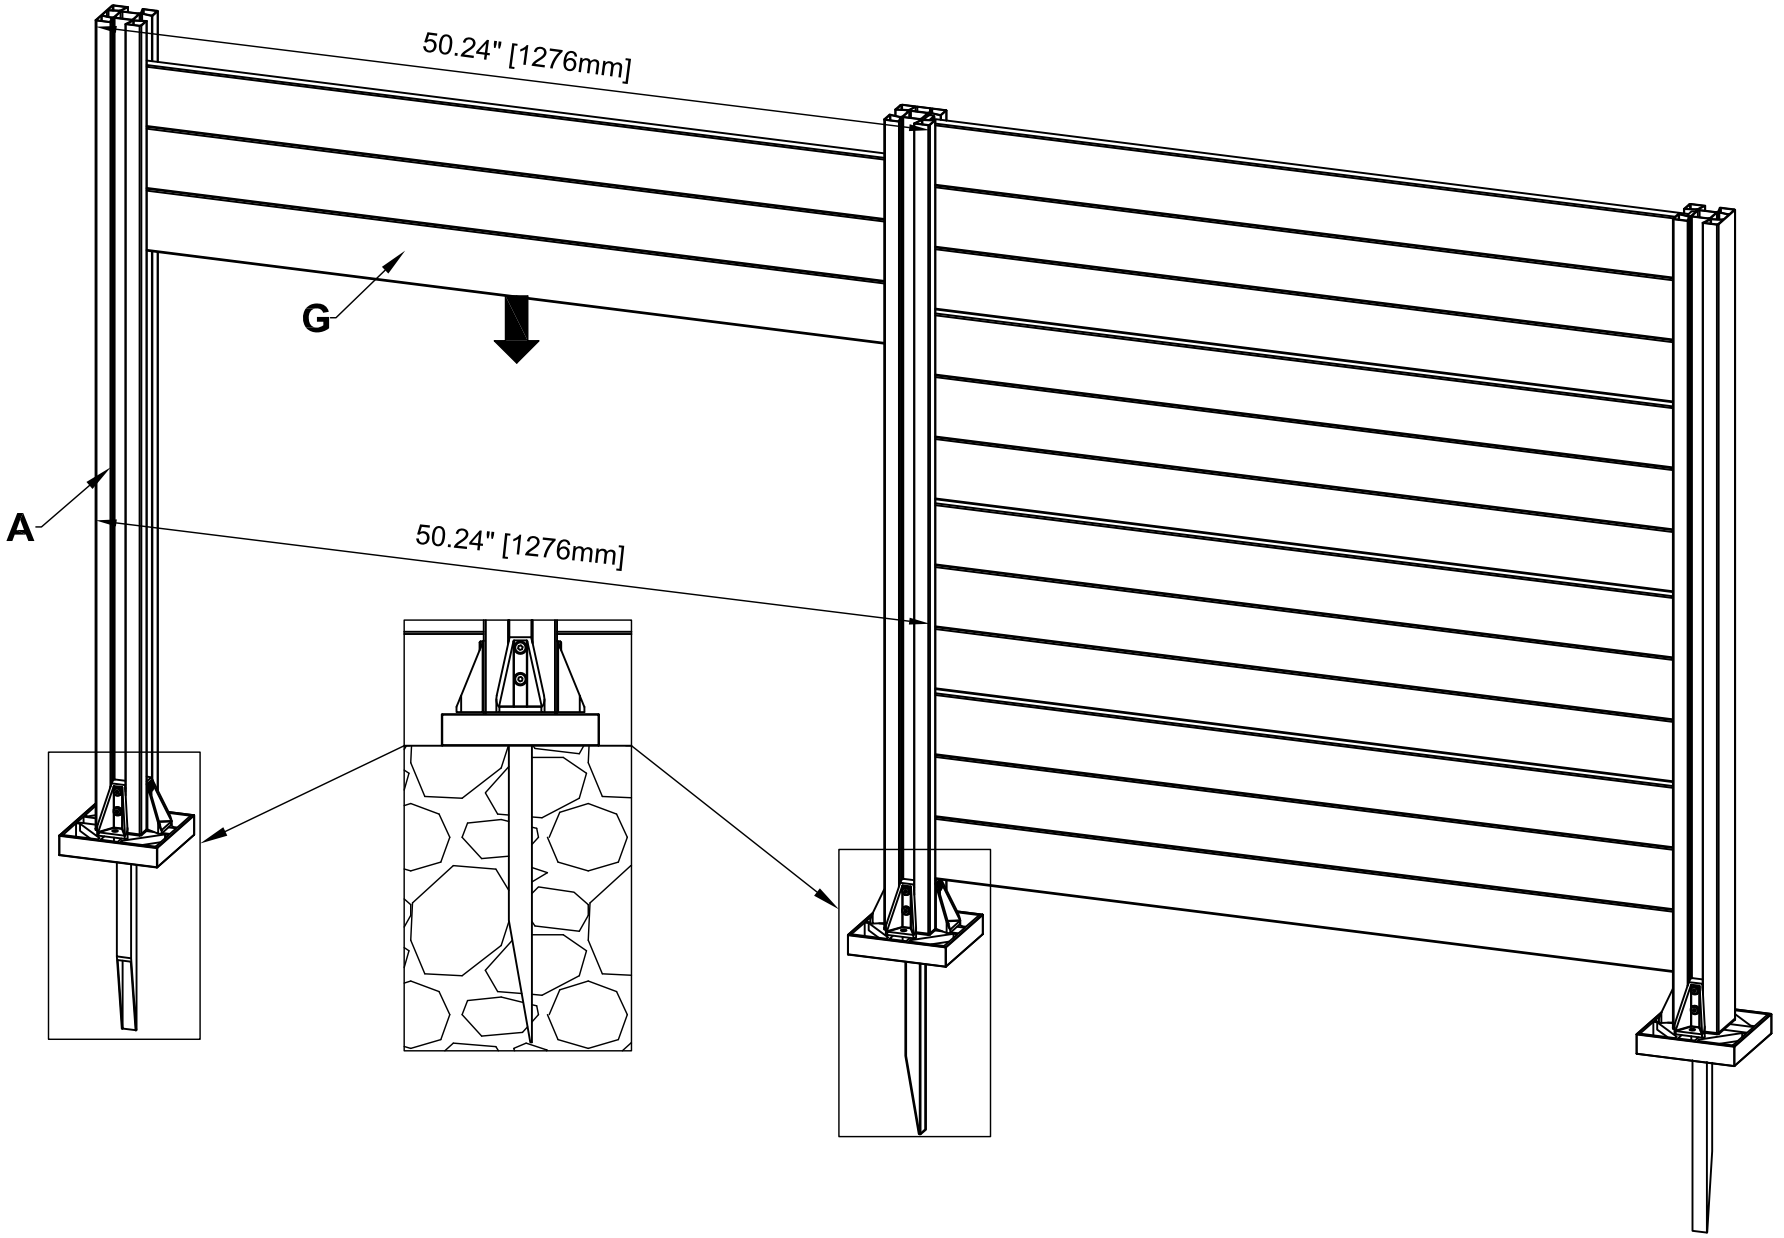


12

NOTICE: When inserting the middle Panel into the Post, ensure both sides are inserted simultaneously and kept parallel.

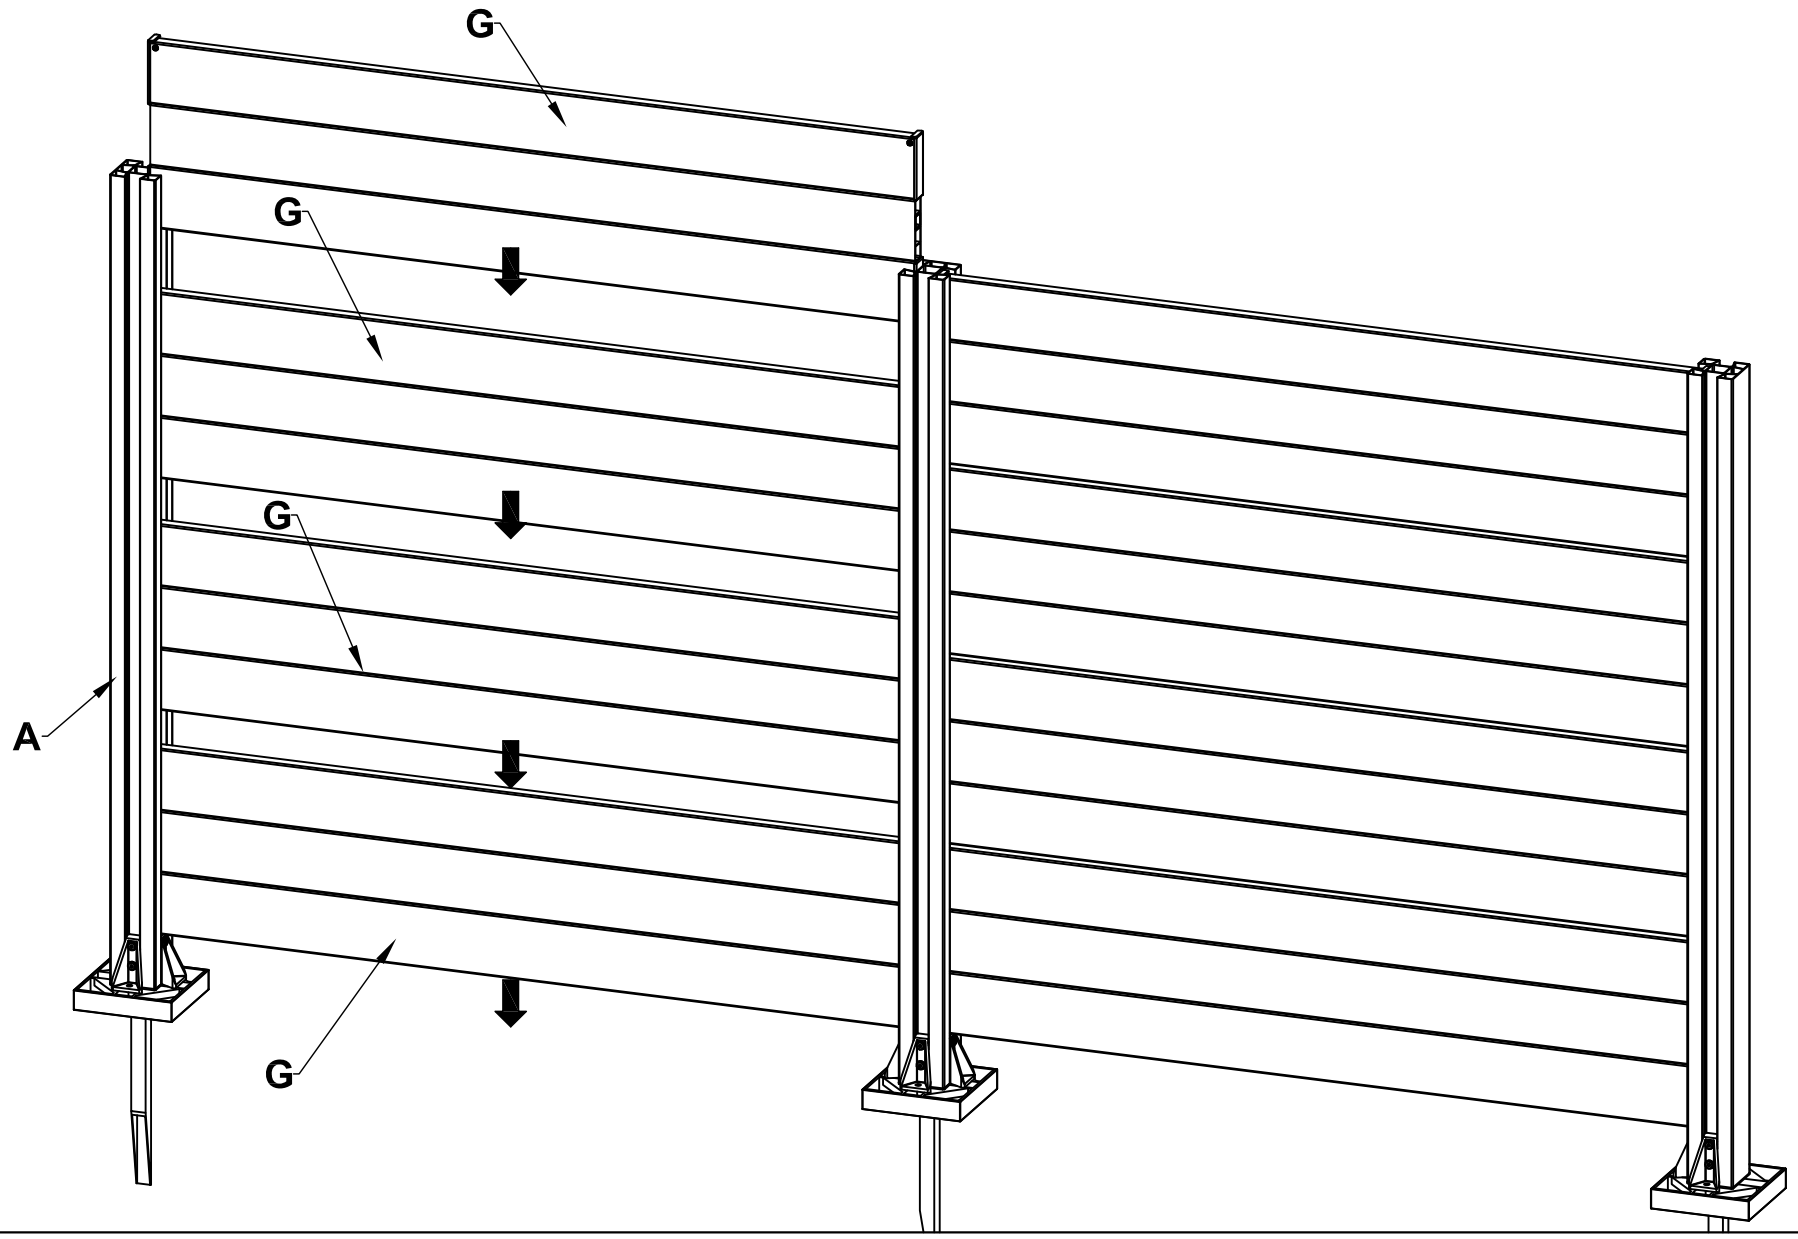


13

Once this step is complete, drive the ground stakes into the lawn to secure the fence.
Ensure they are positioned at an equal distance from both the top and bottom connections.

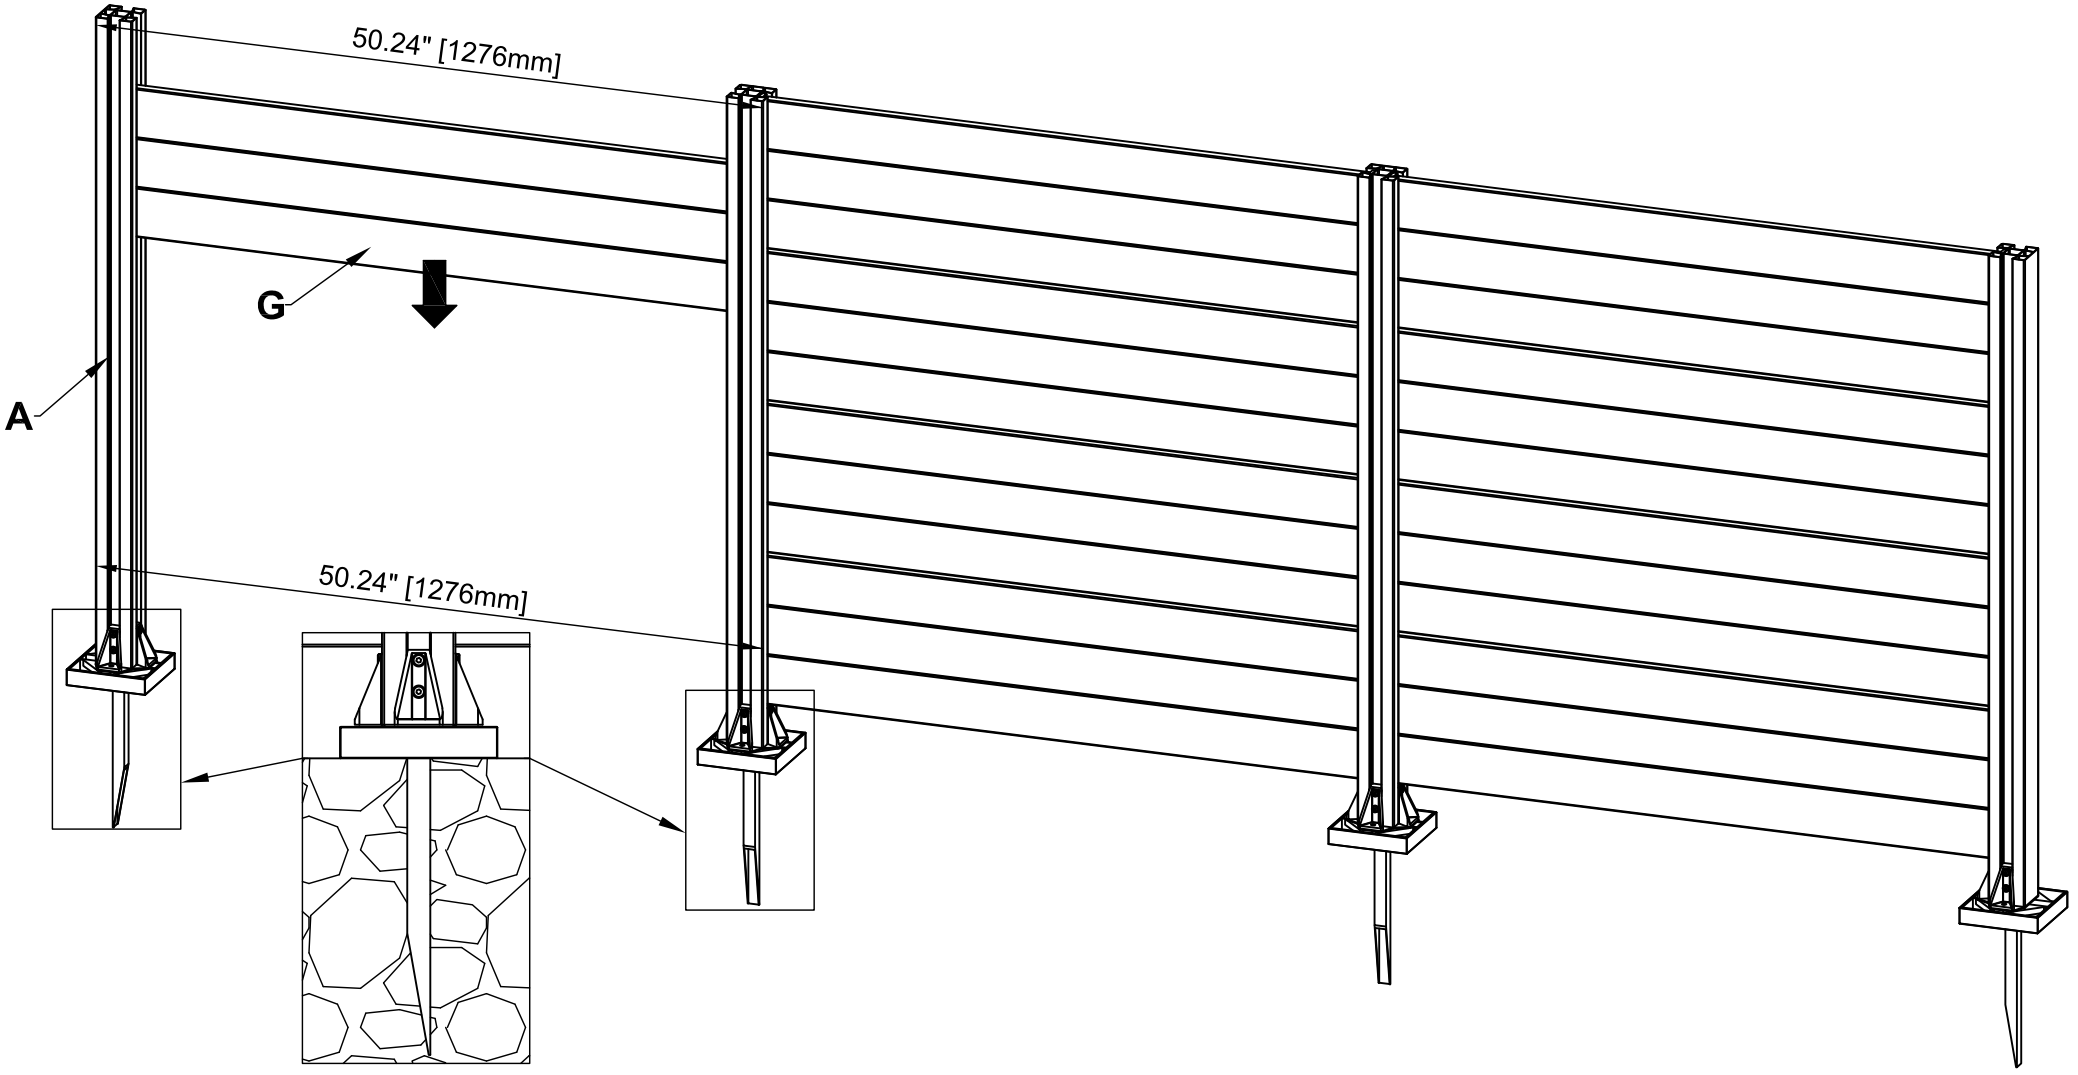


14

NOTICE: When inserting the middle Panel into the Post, ensure both sides are inserted simultaneously and kept parallel.

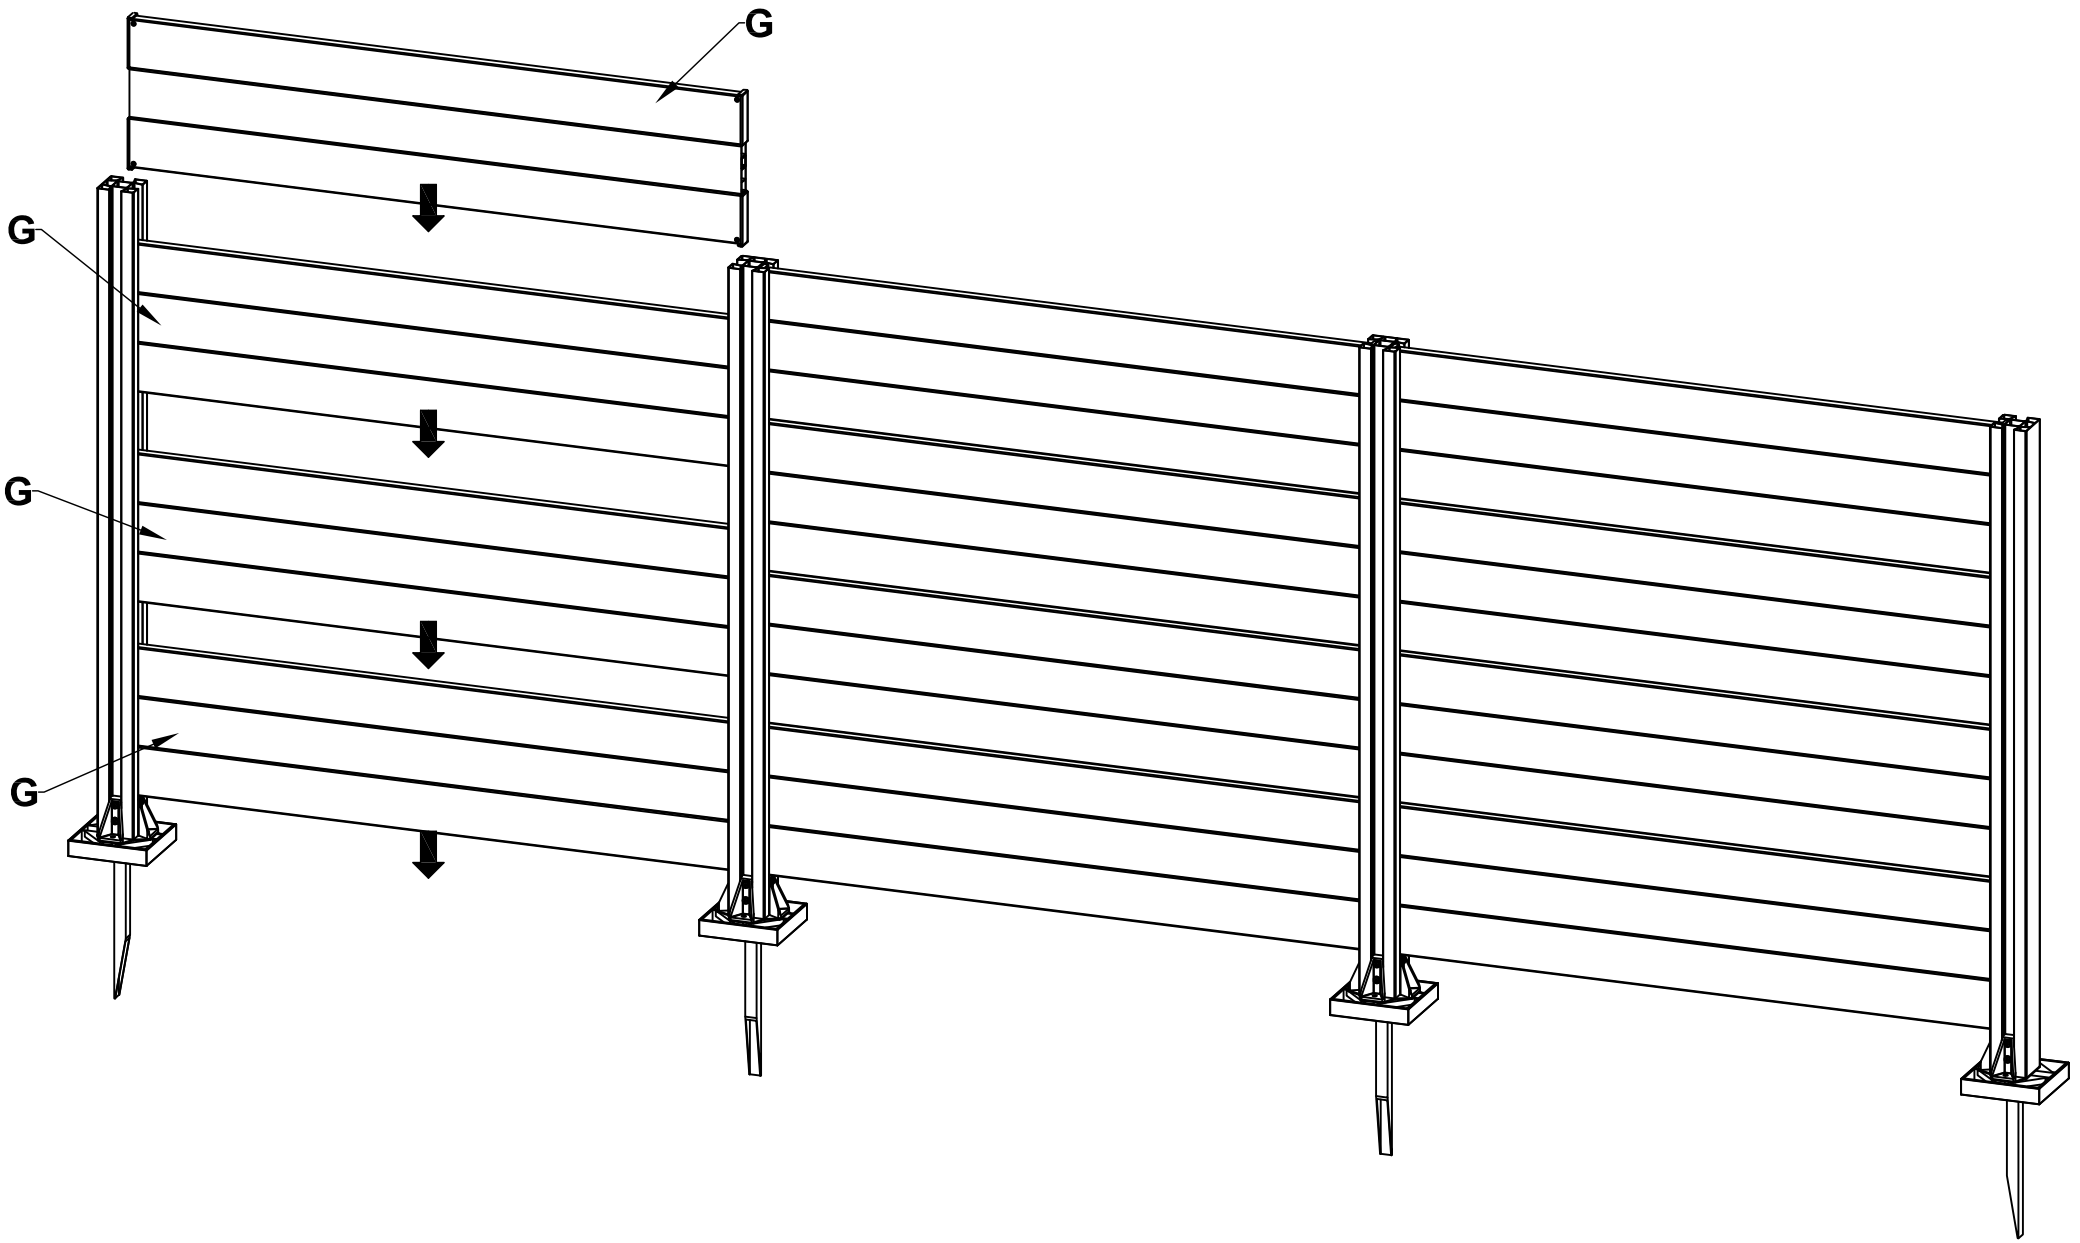


15

Once this step is complete, drive the ground stakes into the lawn to secure the fence.
Ensure they are positioned at an equal distance from both the top and bottom connections.

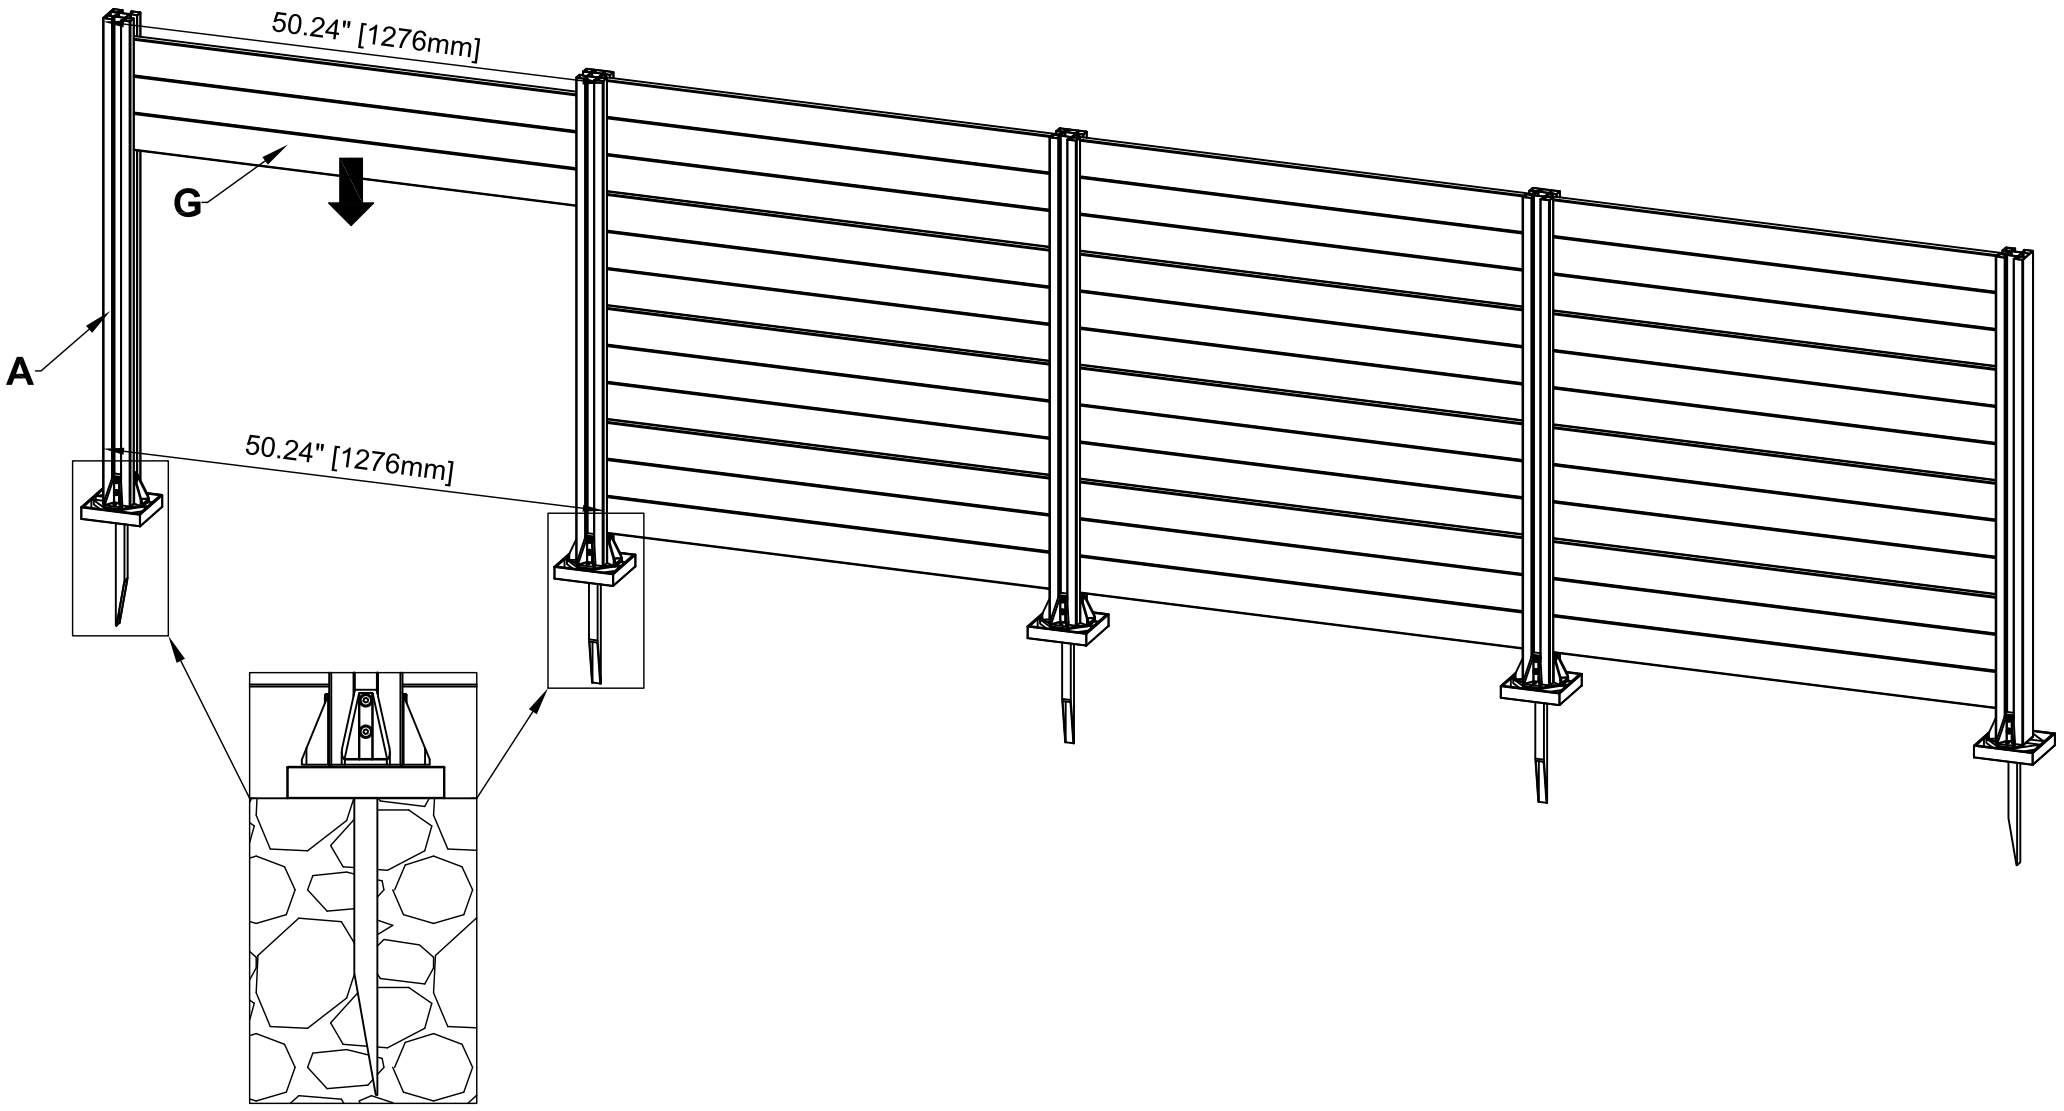

16

NOTICE: When inserting the middle Panel into the Post, ensure both sides are inserted simultaneously and kept parallel.

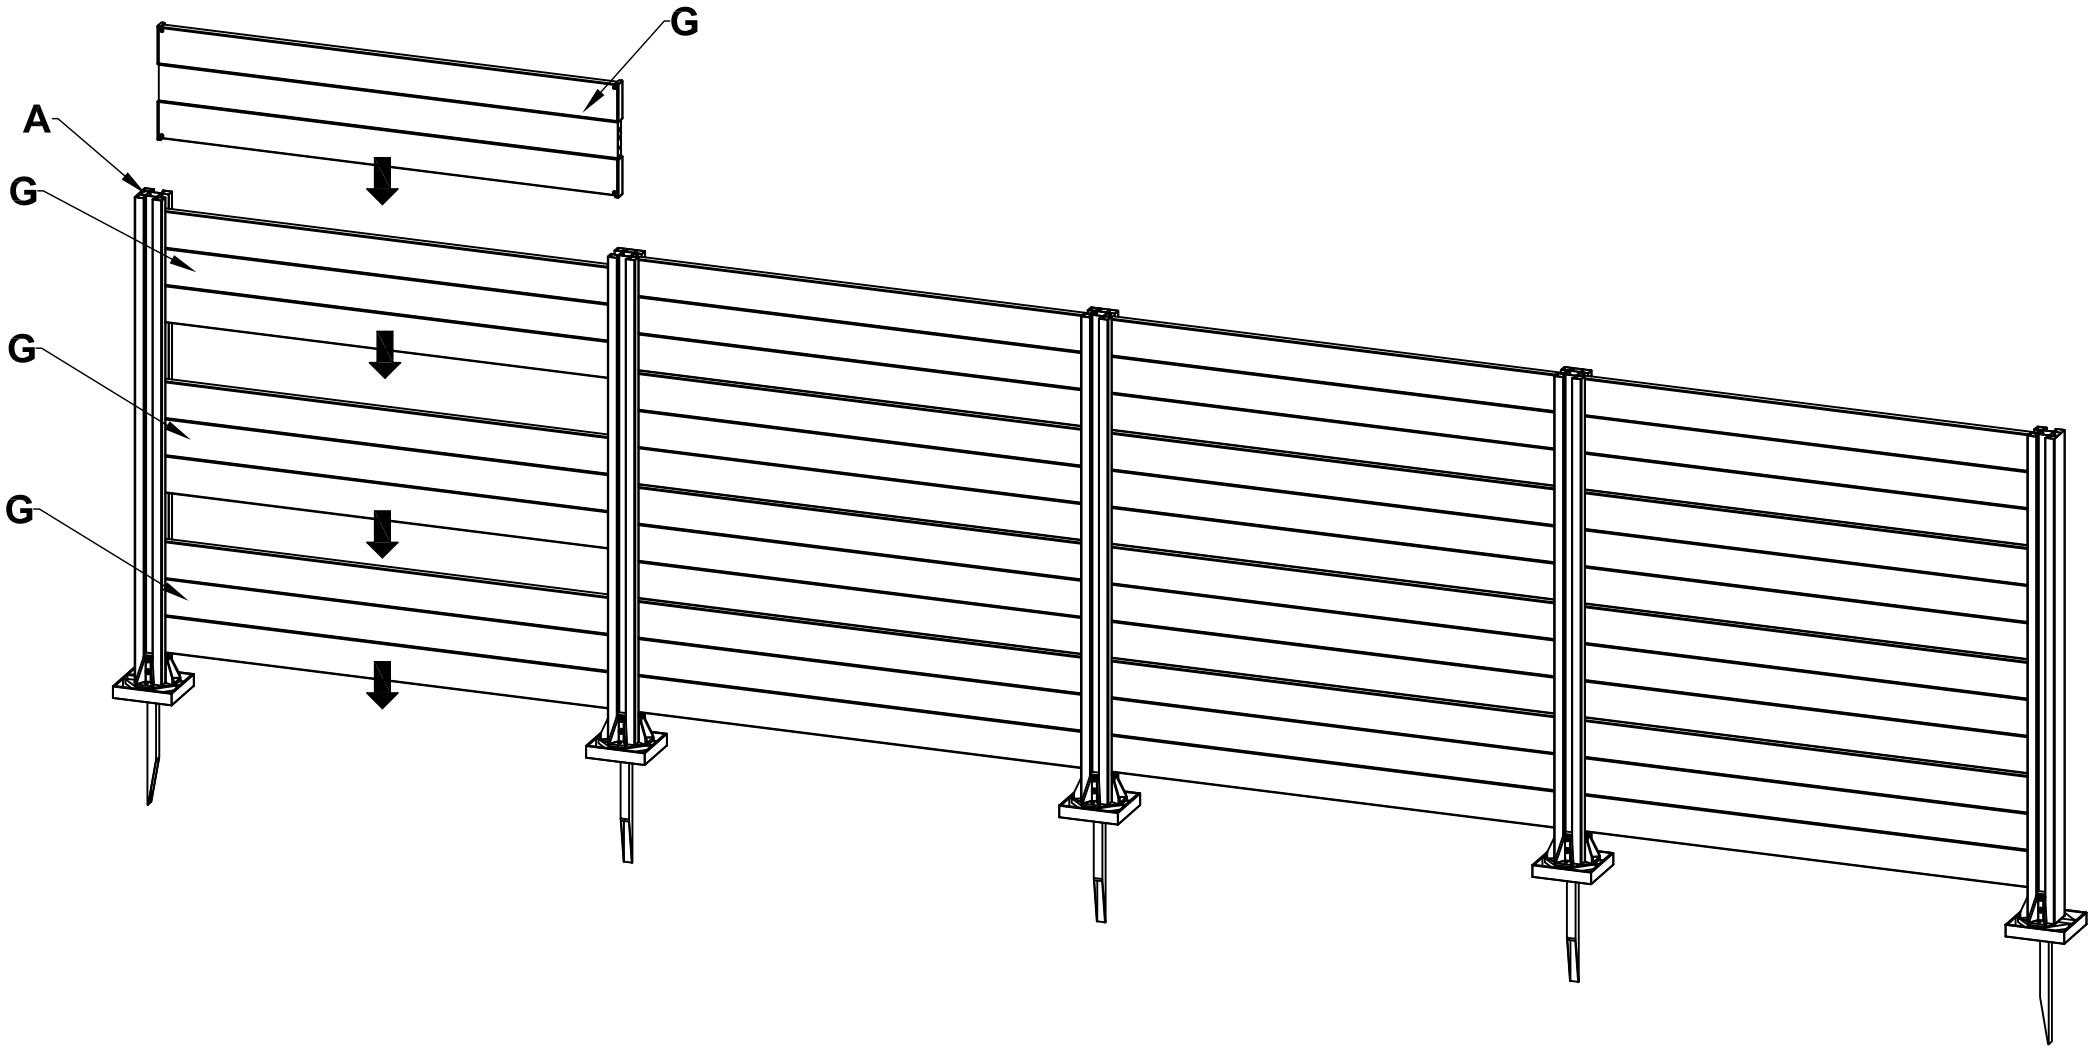


D




7PCS

17

Please insert Part #D (cover channel) into the posts where no panel is installed to fill the gaps.

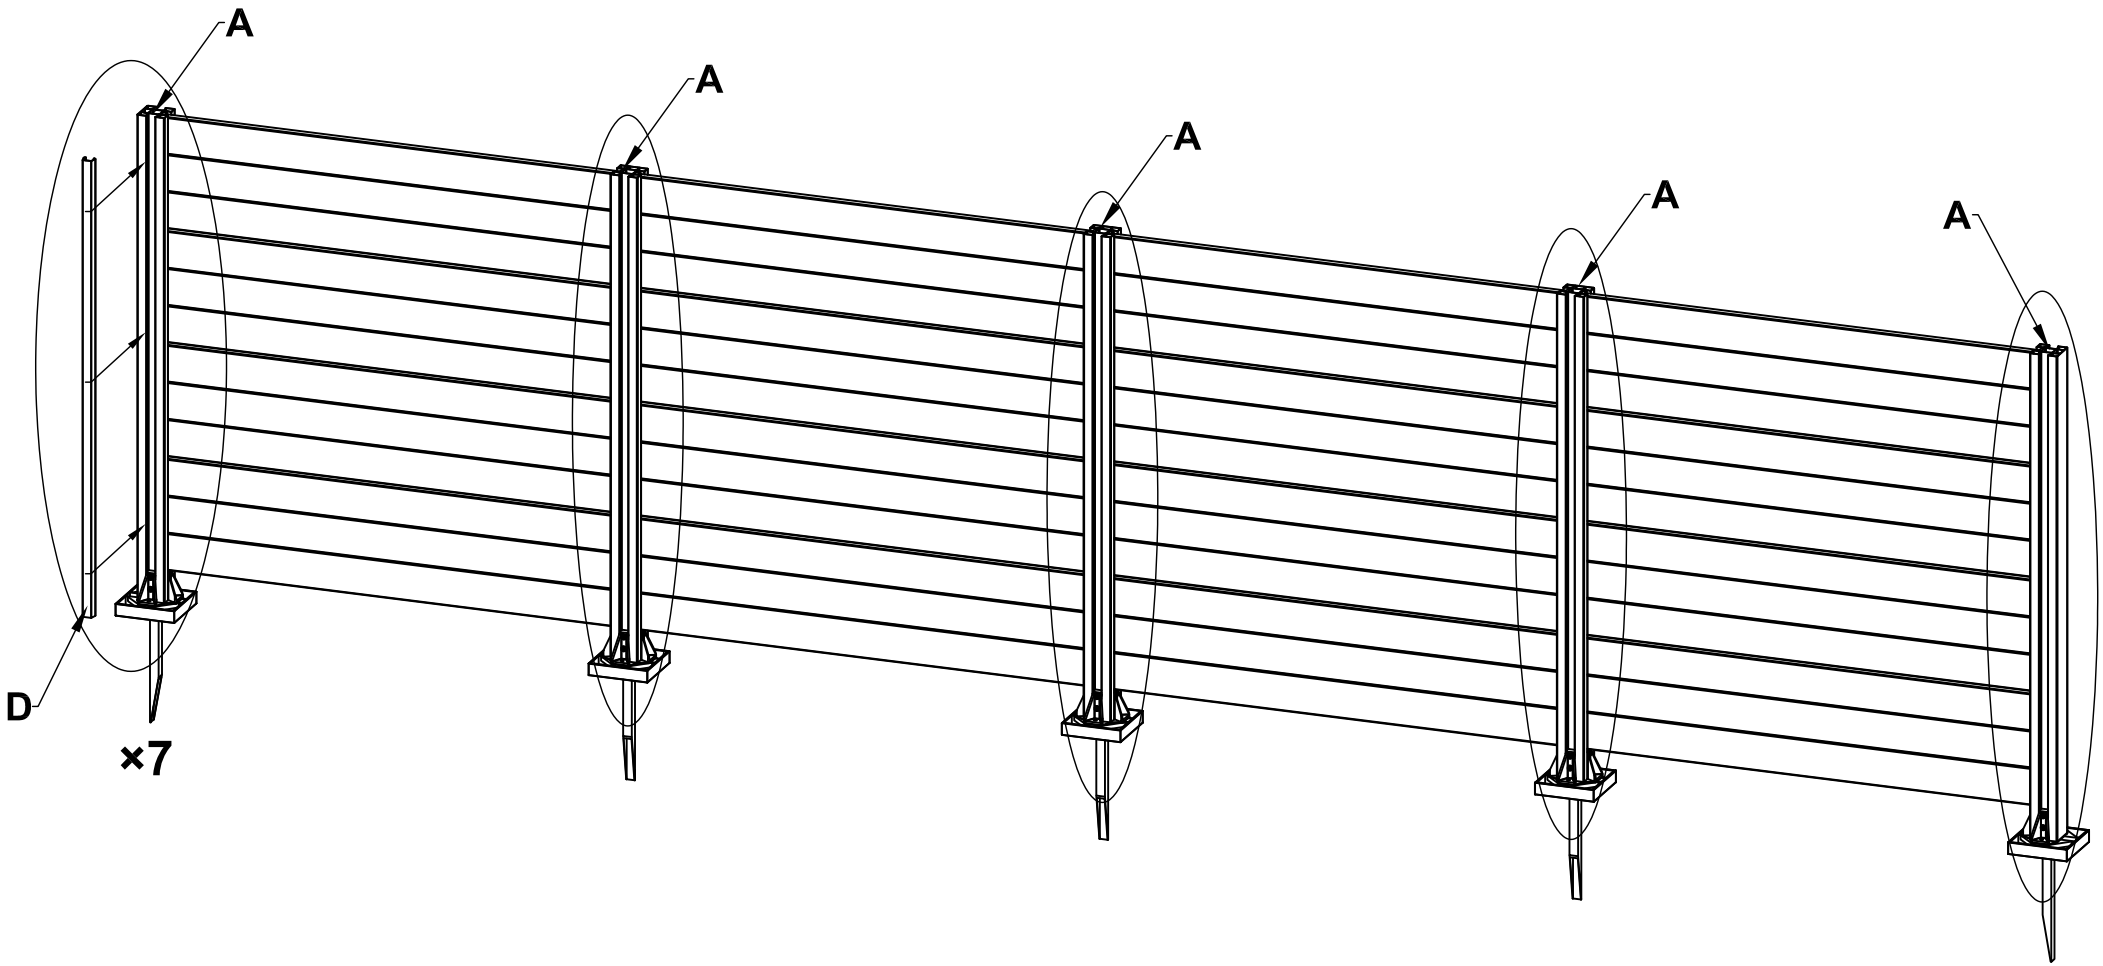


I

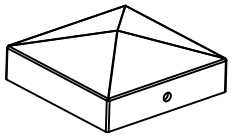


5PCS


Please orient Part #I (top cover) so that the side with holes faces the side of the post without the slot/groove.

18

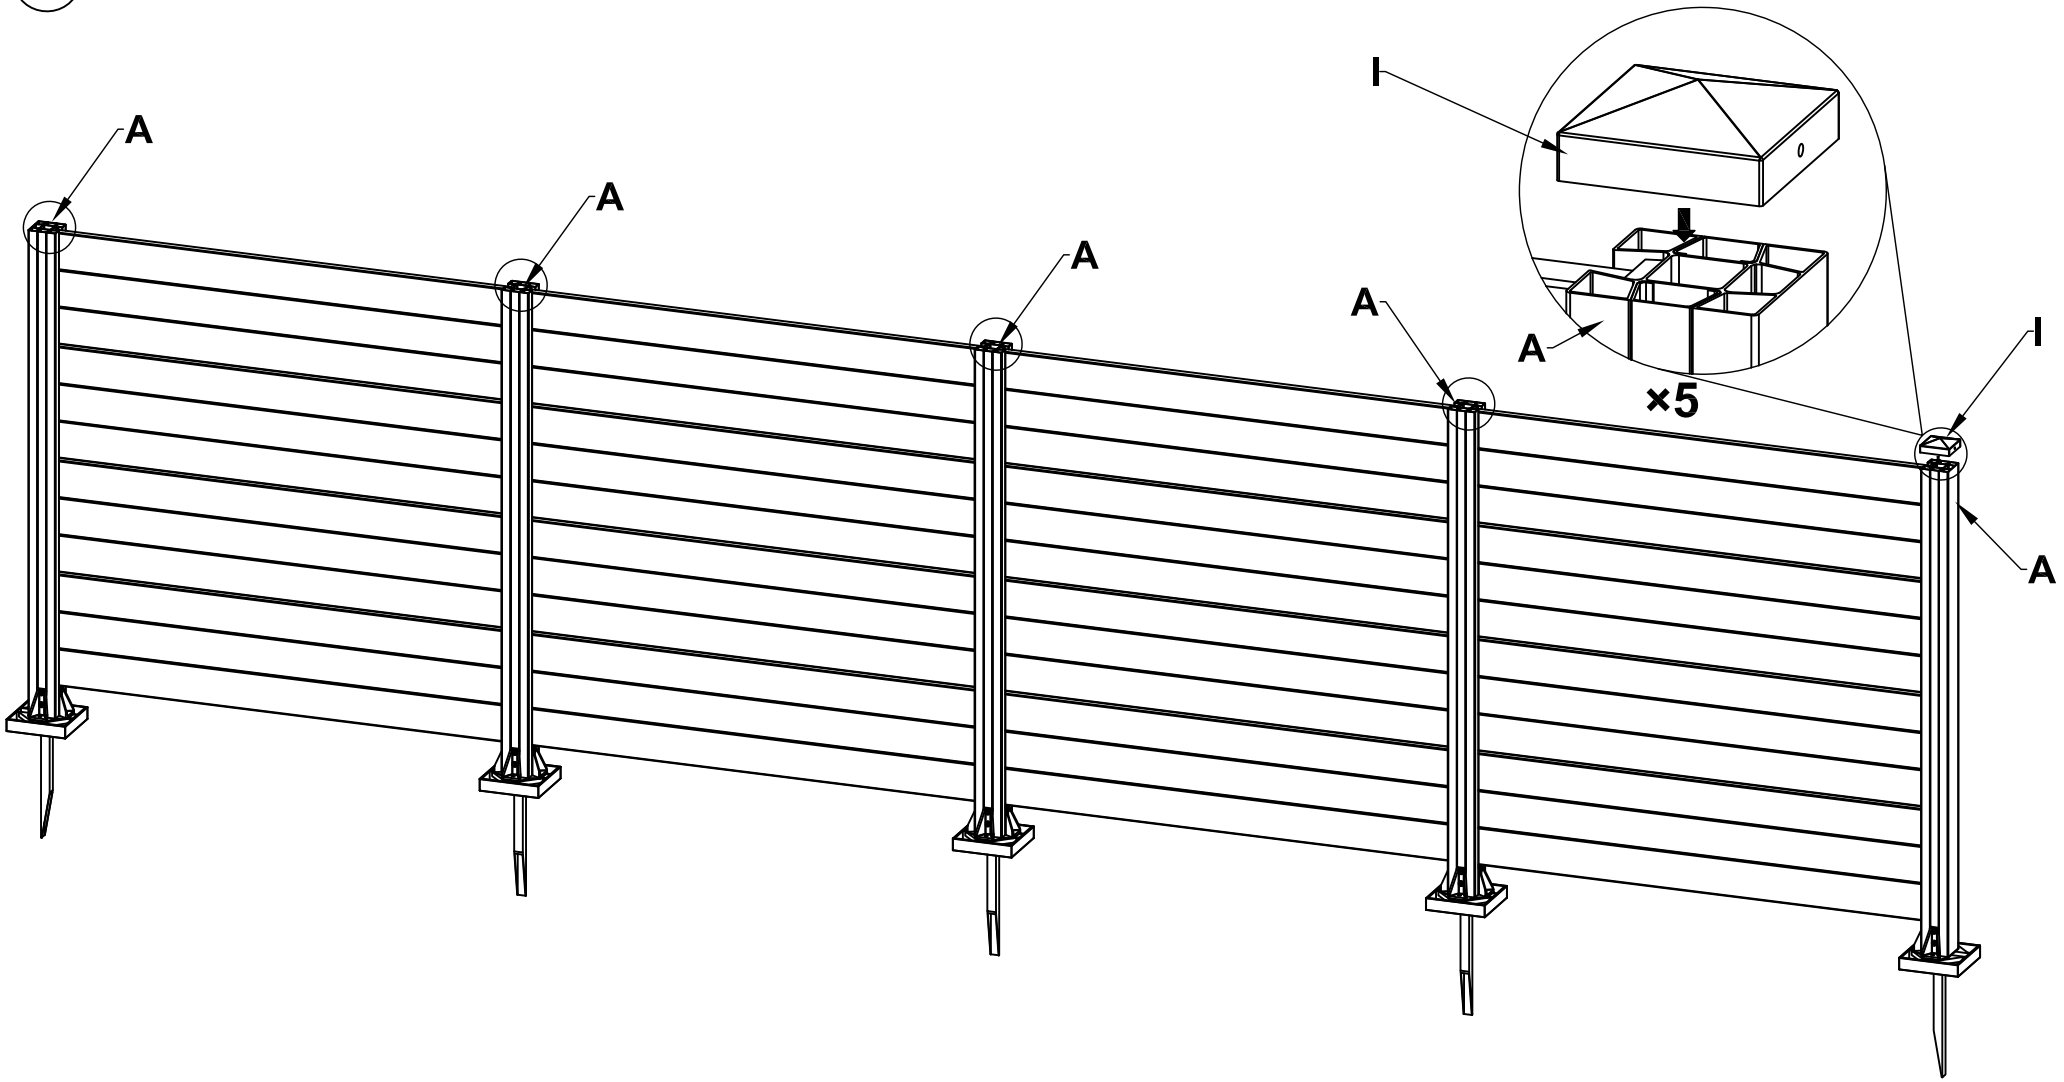

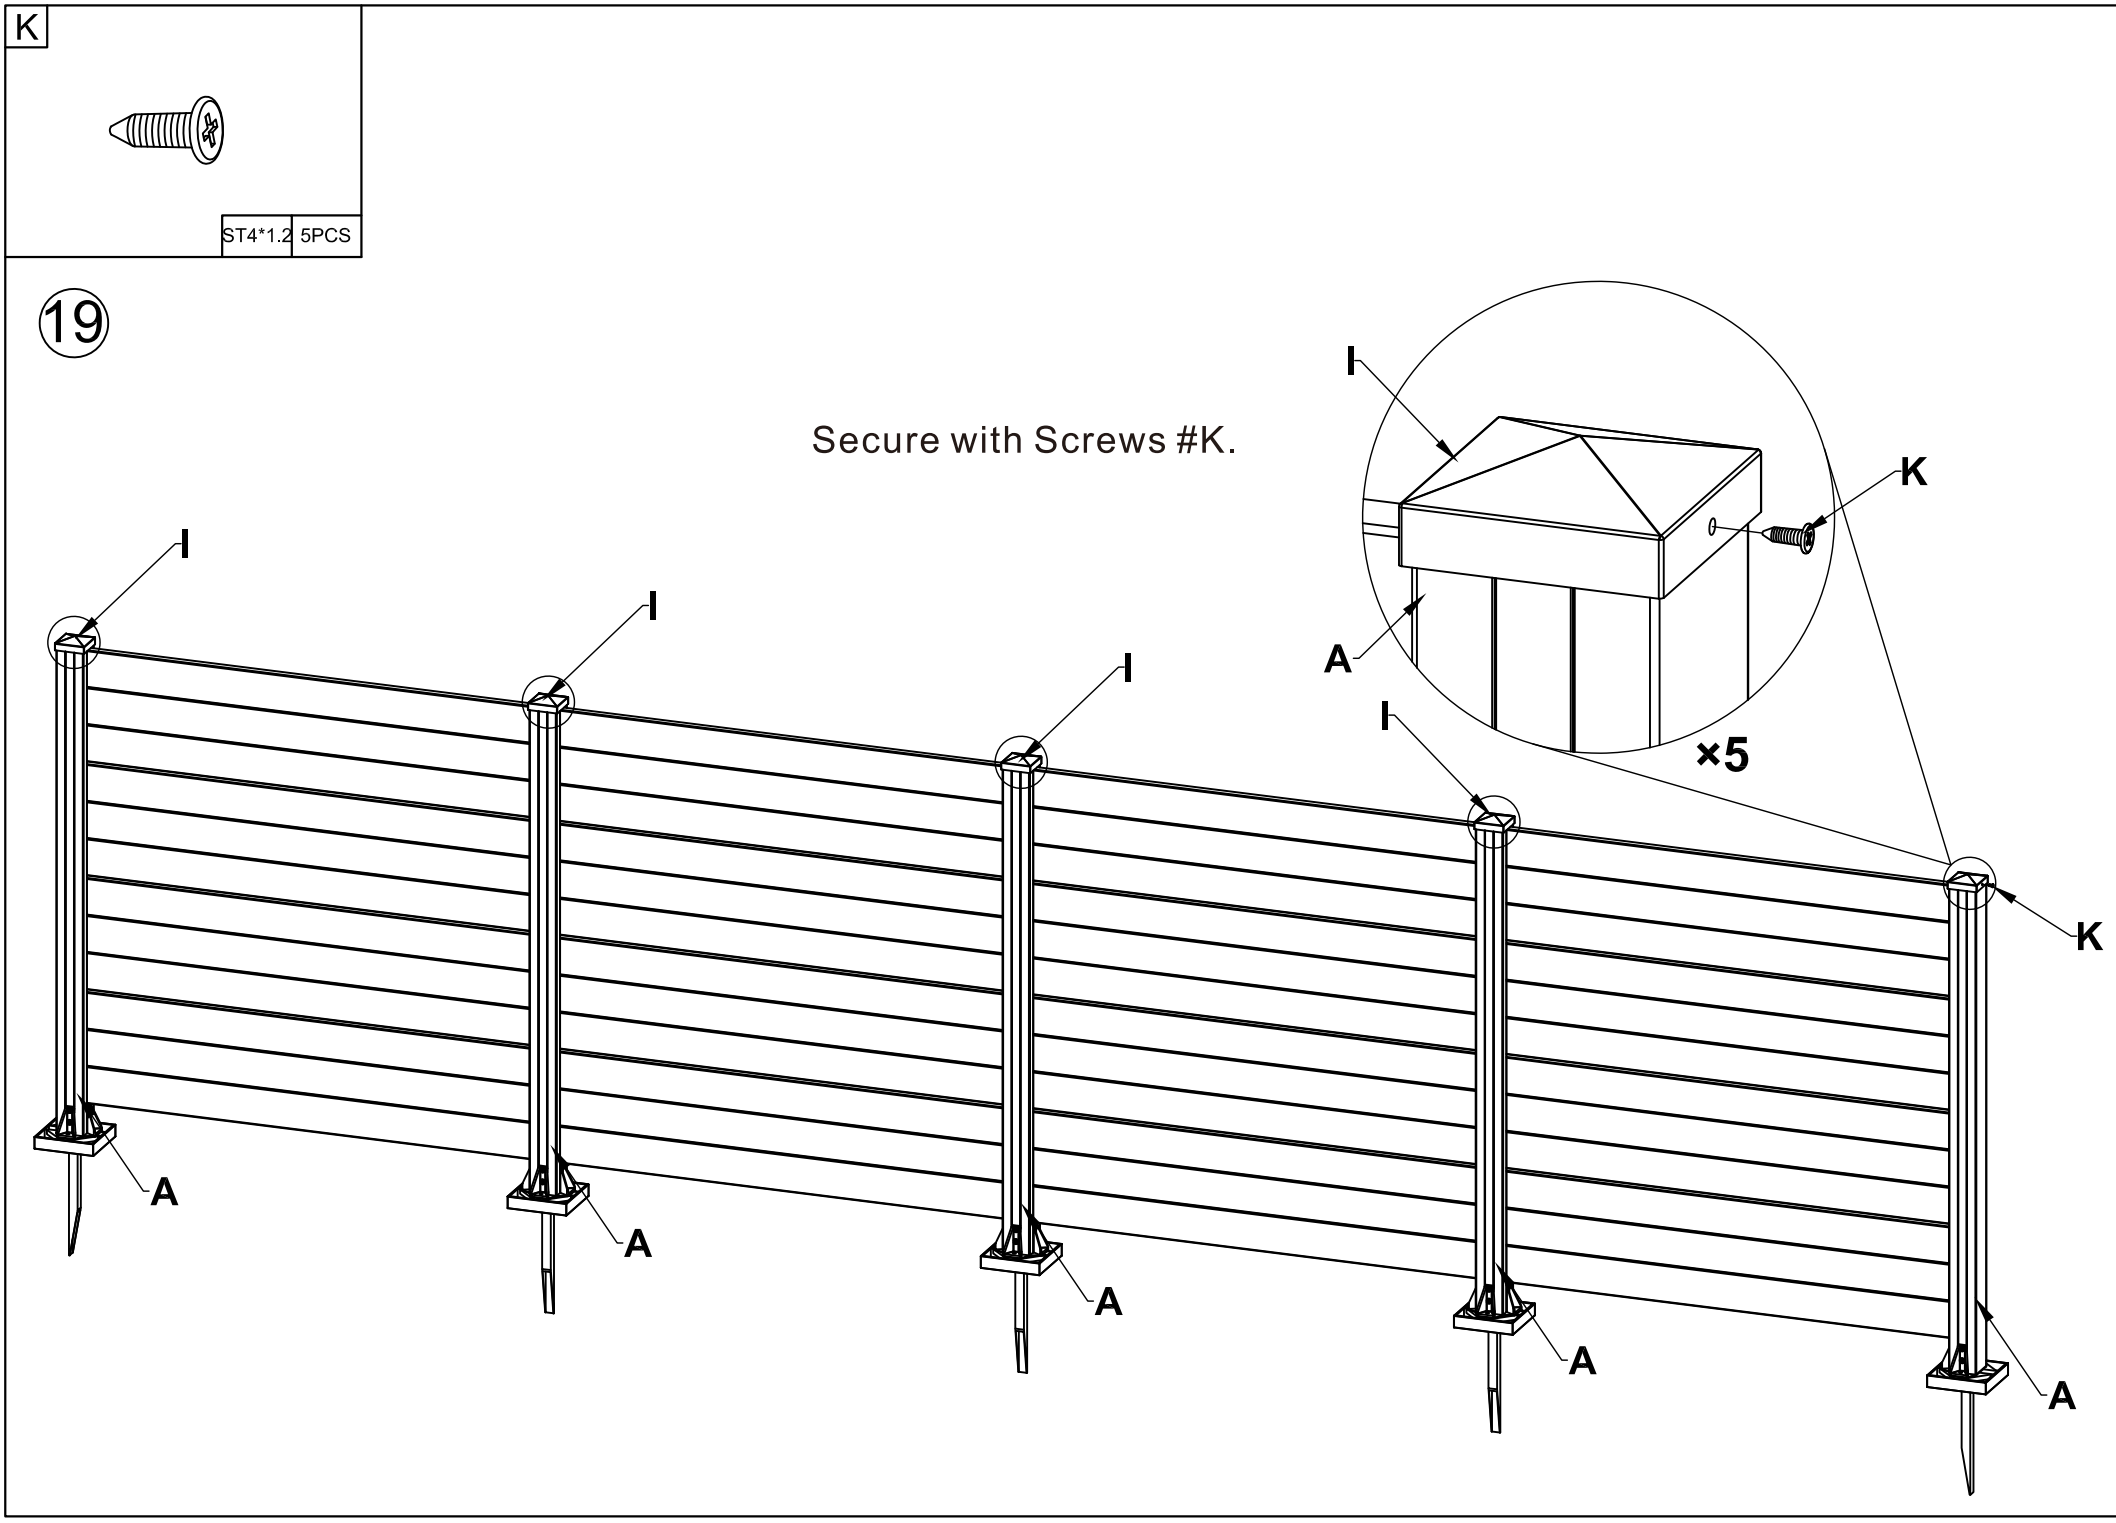
K
ST4*1.2 5PCS
19
Secure with Screws #K.
I
I
I
I
I
A
A
A
A
A
K
K
×5

F

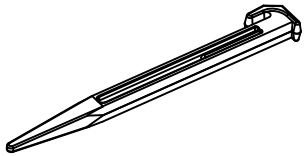

20PCS

Attach 4 Fittings #F to each #H fitting.(A total of 20 Fittings #F are required.)

20

H


H


H

H

F


H

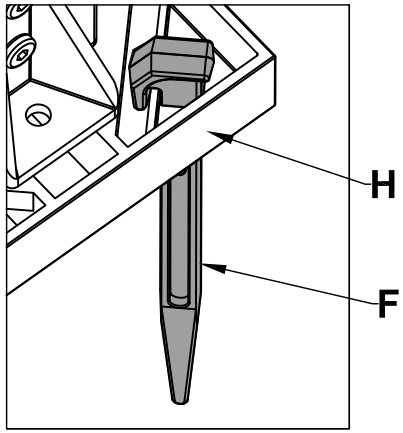

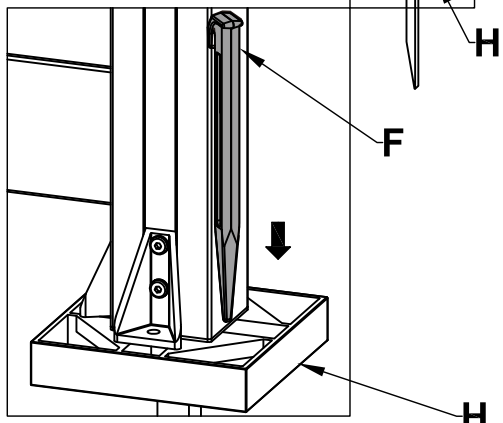

×20

21

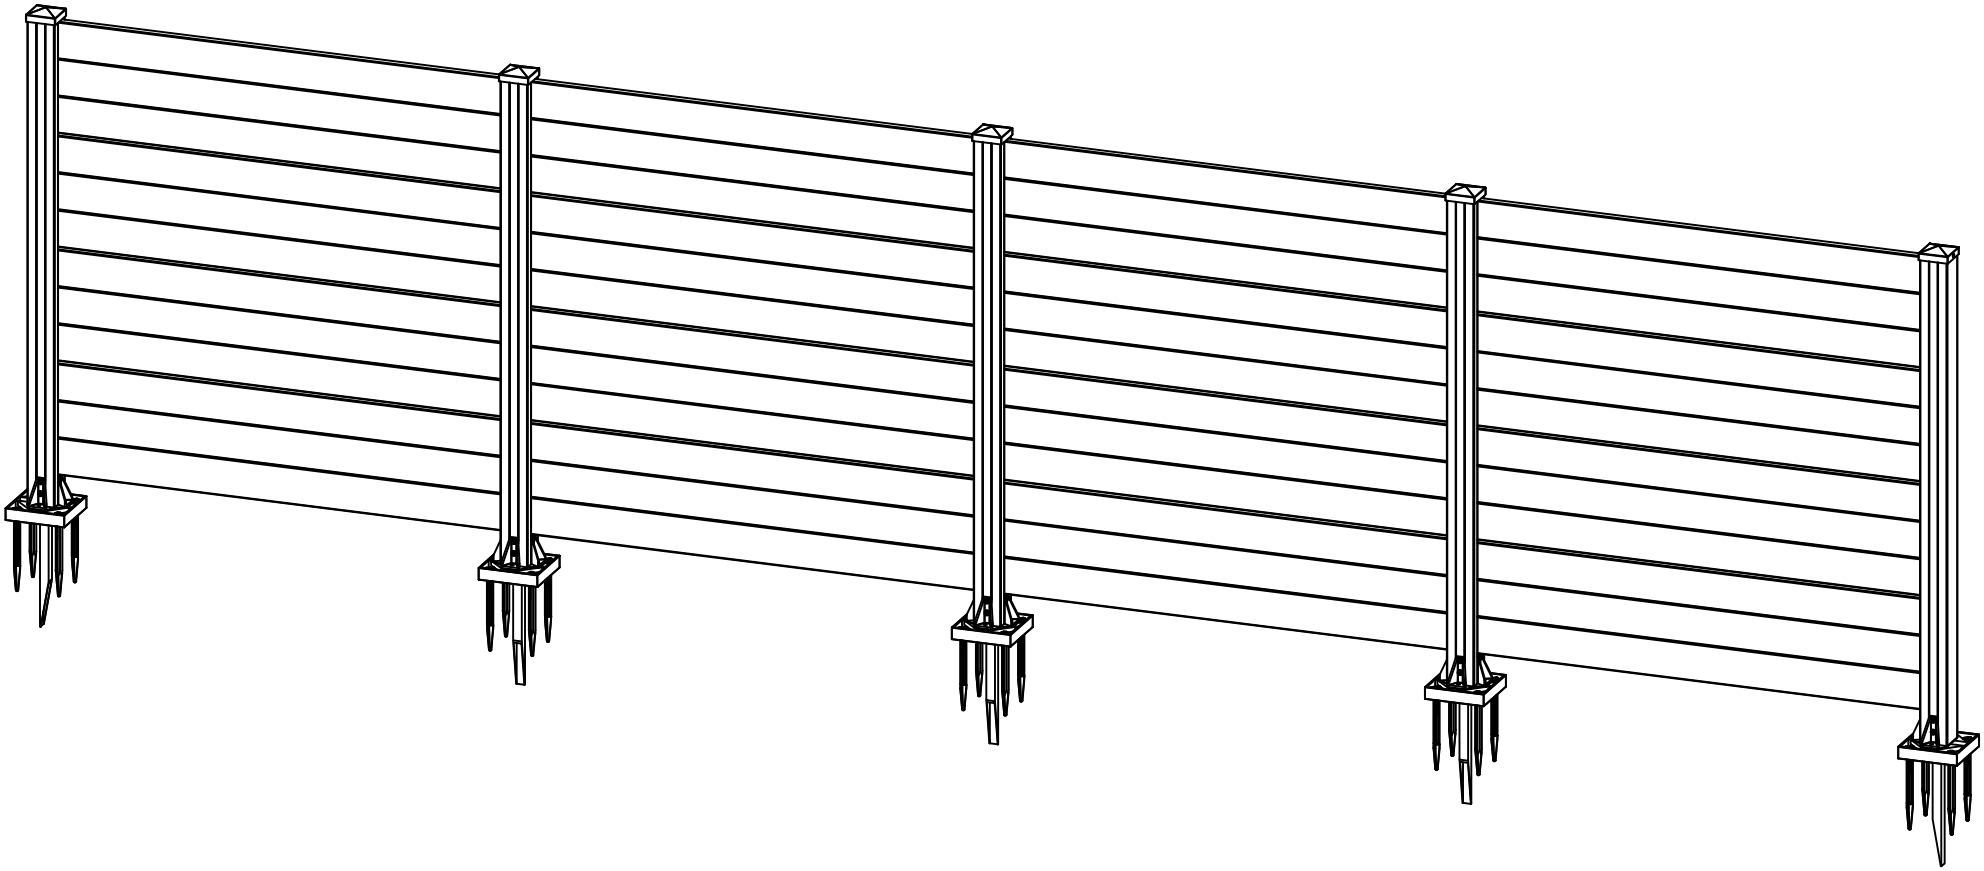

domi
outdoor living

RESORT COMFORT IN YONR

OWN BACKYARD

Support:

Business cooperation contact email:
marketing@domioutdoorliving.com

After-sales contact email:
service@domioutdoorliving.com

Please tell us your order ID when contact.

Attach photos of damaged part for instant reply.