


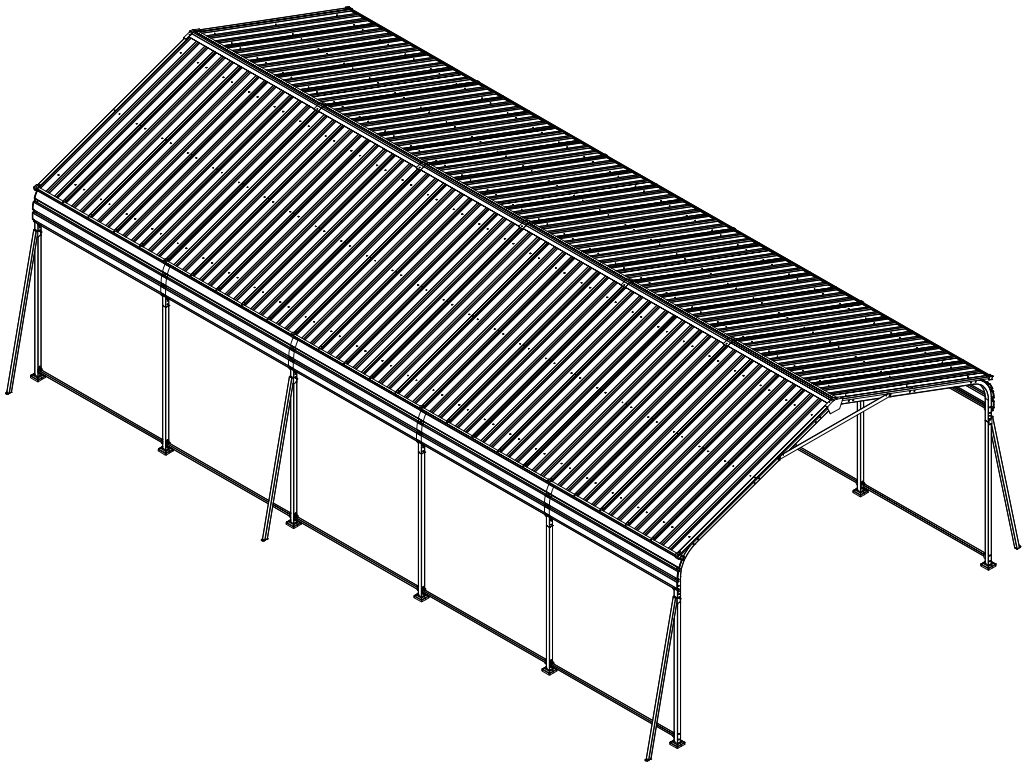
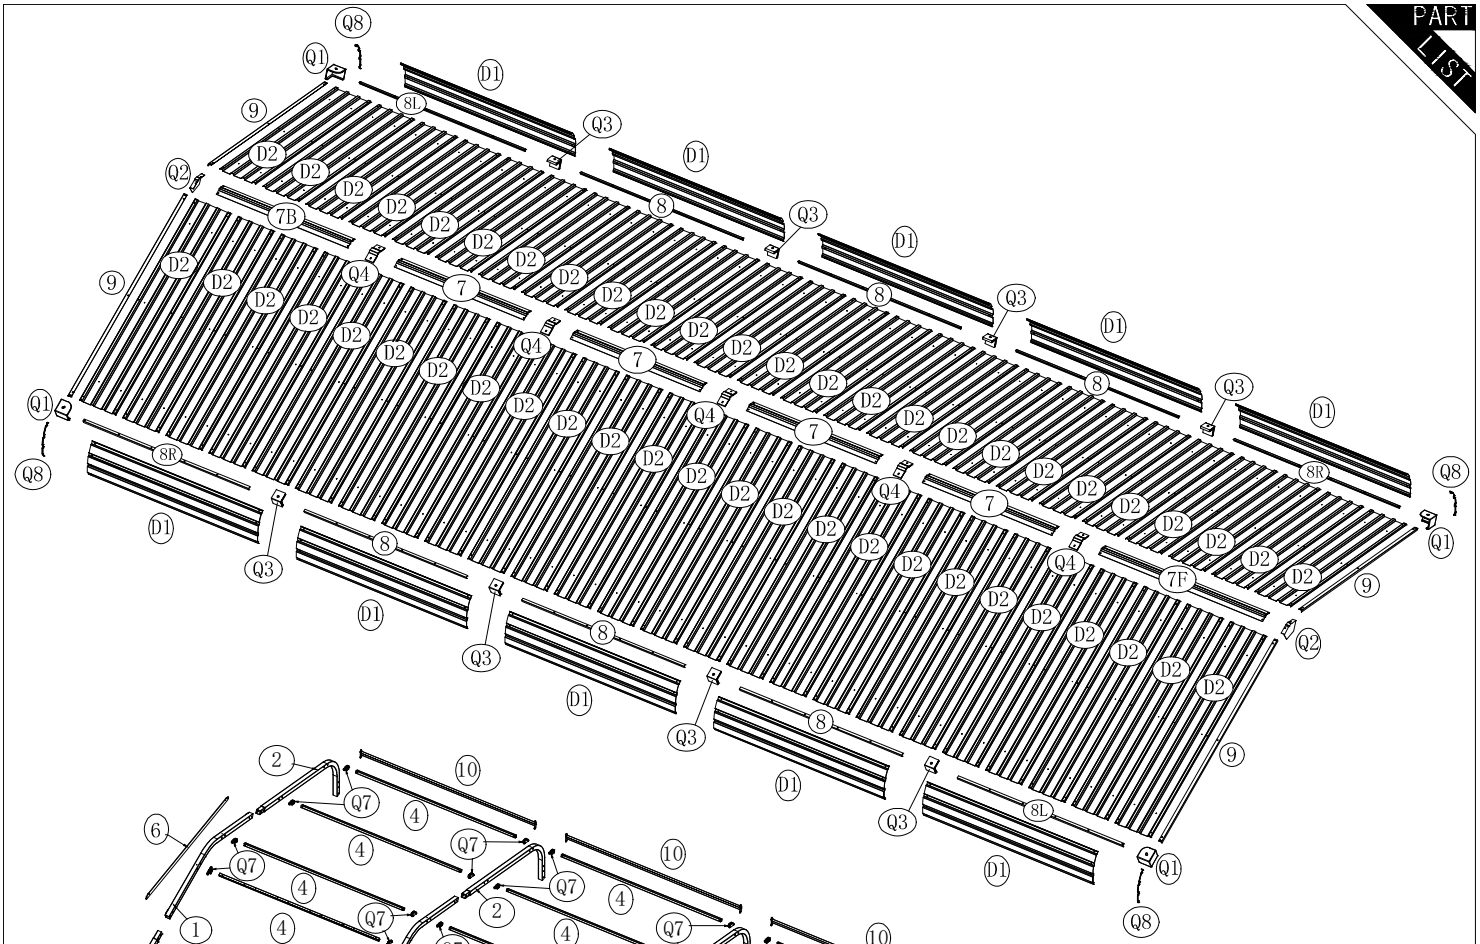
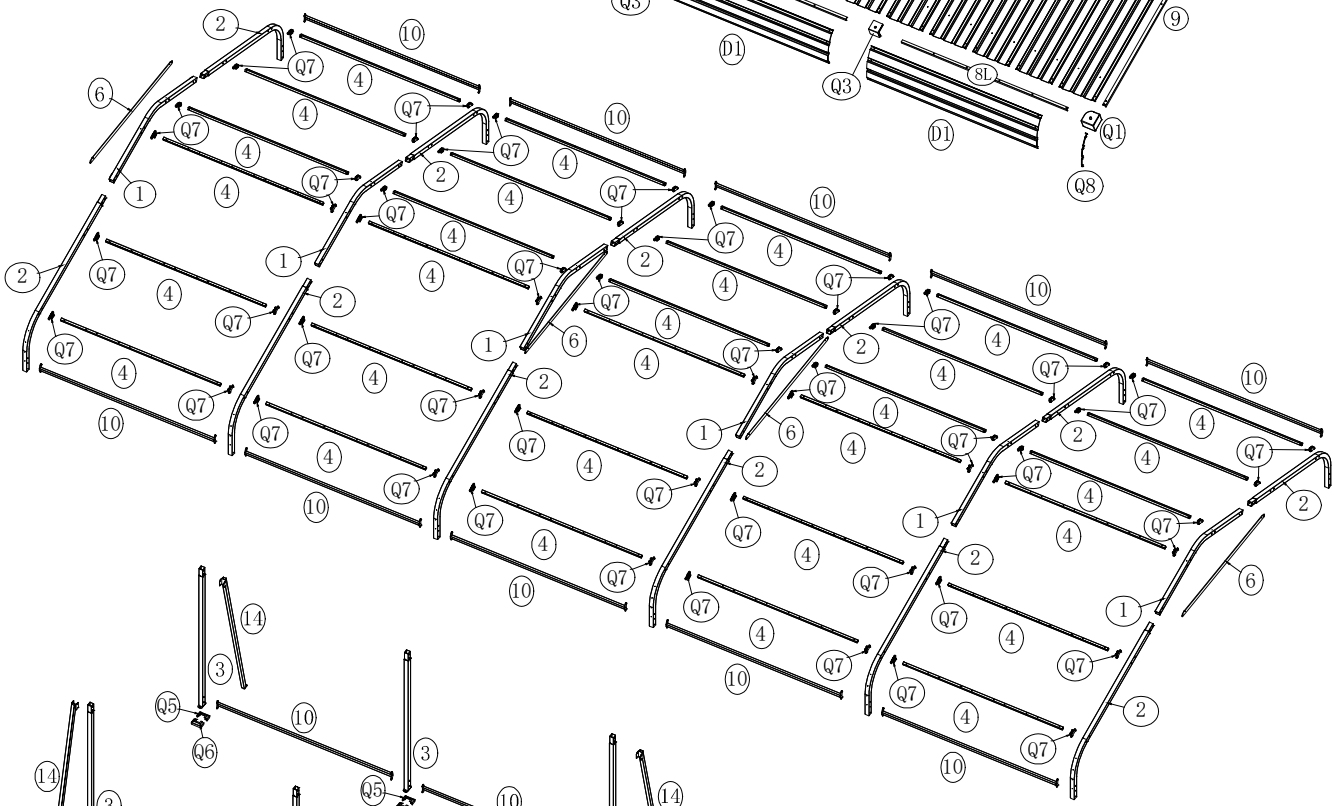
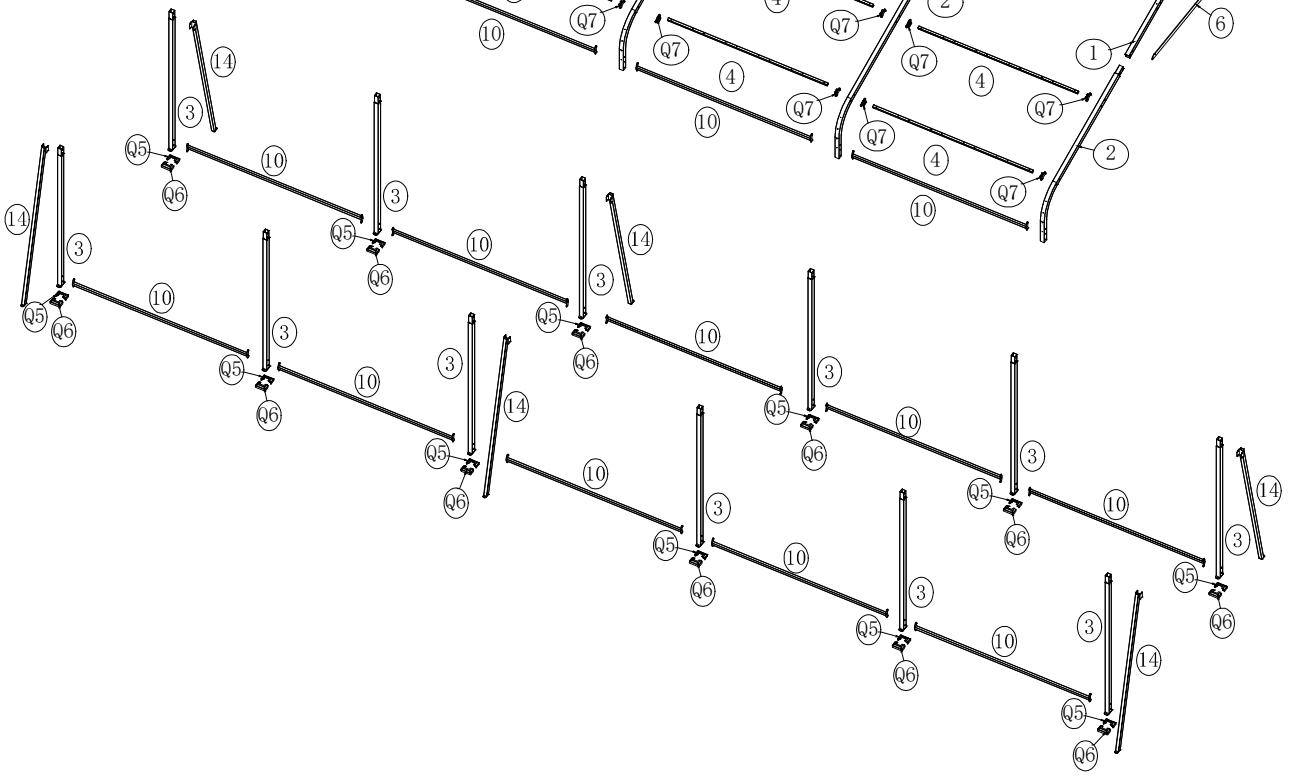









PART LIST





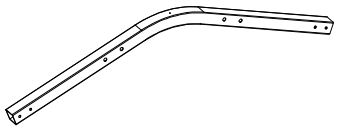
















NO.	PART.	Qty.
1		6
2		12
3	 1620mm	12
4	 1546mm	30
6	1380.5mm	4
7	 1256mm	4
7F	 1274mm	1
7B	 1592mm	1
8	 1574mm	6
8L	 1604.5mm	2
8R	 1604.5mm	2

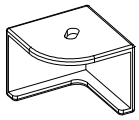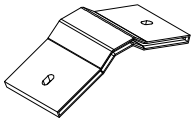
NO.	PART.	Qty.
9	 2072mm	4
10	 1546mm	20
14		6
D1	 1650mm	10
D2	 2064mm	50
Q1		4
Q2		2
Q3		8
Q4		5
Q5		12
Q6		12


NO.	PART.	Qty.
Q7		60
Q8	 420mm	4
Q9		168
Q32	 M4x14mm	260+10
Q13	 M5x16mm	300+10
Q14	 M6x38mm	60+3
Q15	 M6x55mm	108+3
Q16	 M6x65mm	48+2
Q17	 M6	216+5
Q18		260+10


NO.	PART.	Qty.
Q19		252+10
Q20		156+10
Q21	 M8x50mm	30
Q22		2
Q23		1
Q24		1
Q25		1
Q26		1
Q27		1
Q28		5


NO.	PART.	Qty.
1		2
2		4
Q15	 M6x55mm	8
Q17	 M6	8
Q20		8

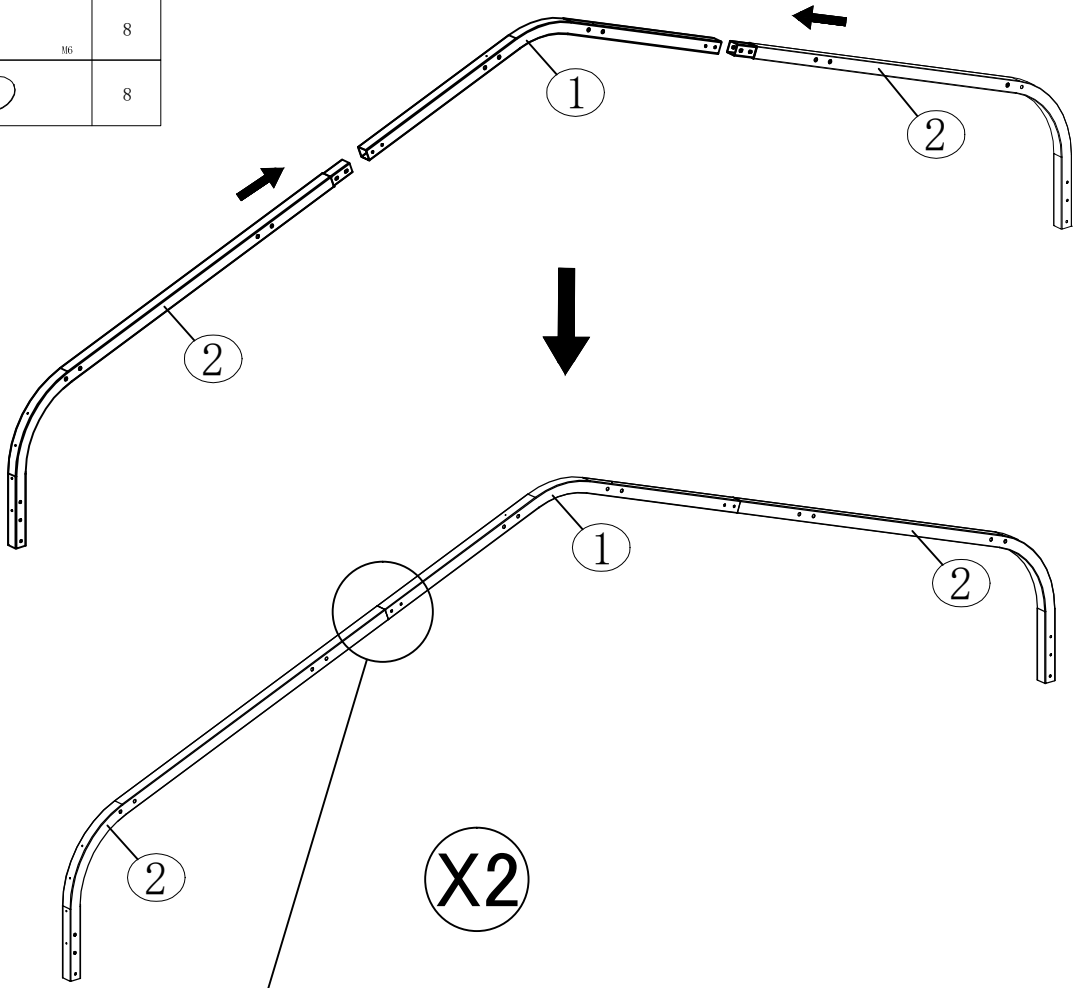


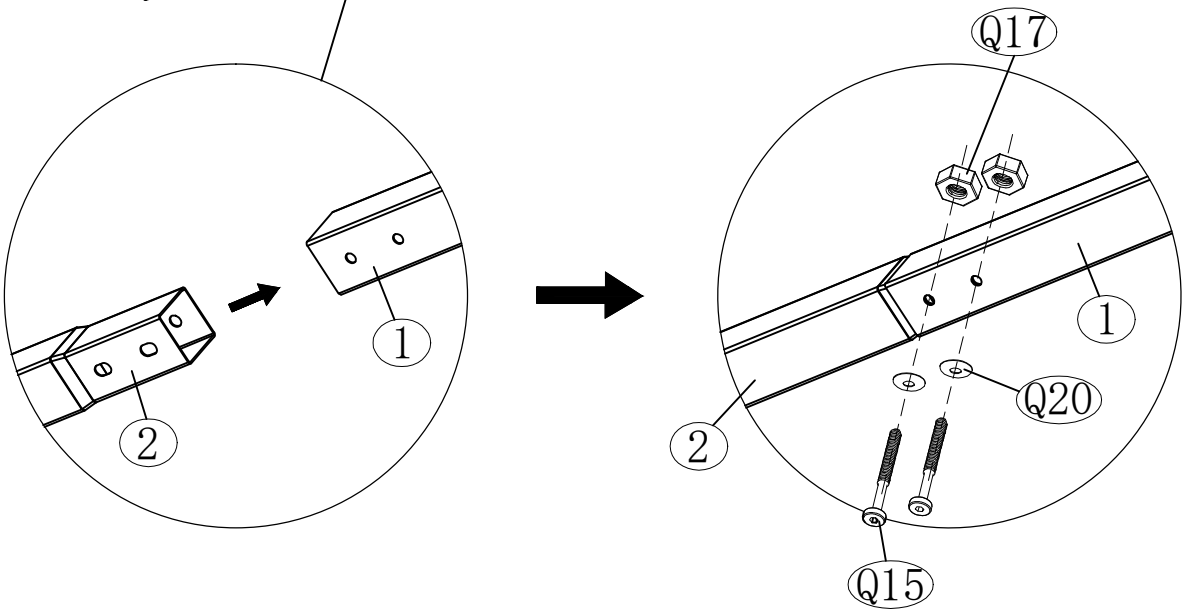



NO.	PART.	Qty.	NO.	PART.	Qty.
1		4	Q15	 M6x55mm	16
2		8	Q17	 M6	16
6	1380.5mm	4	Q20		16

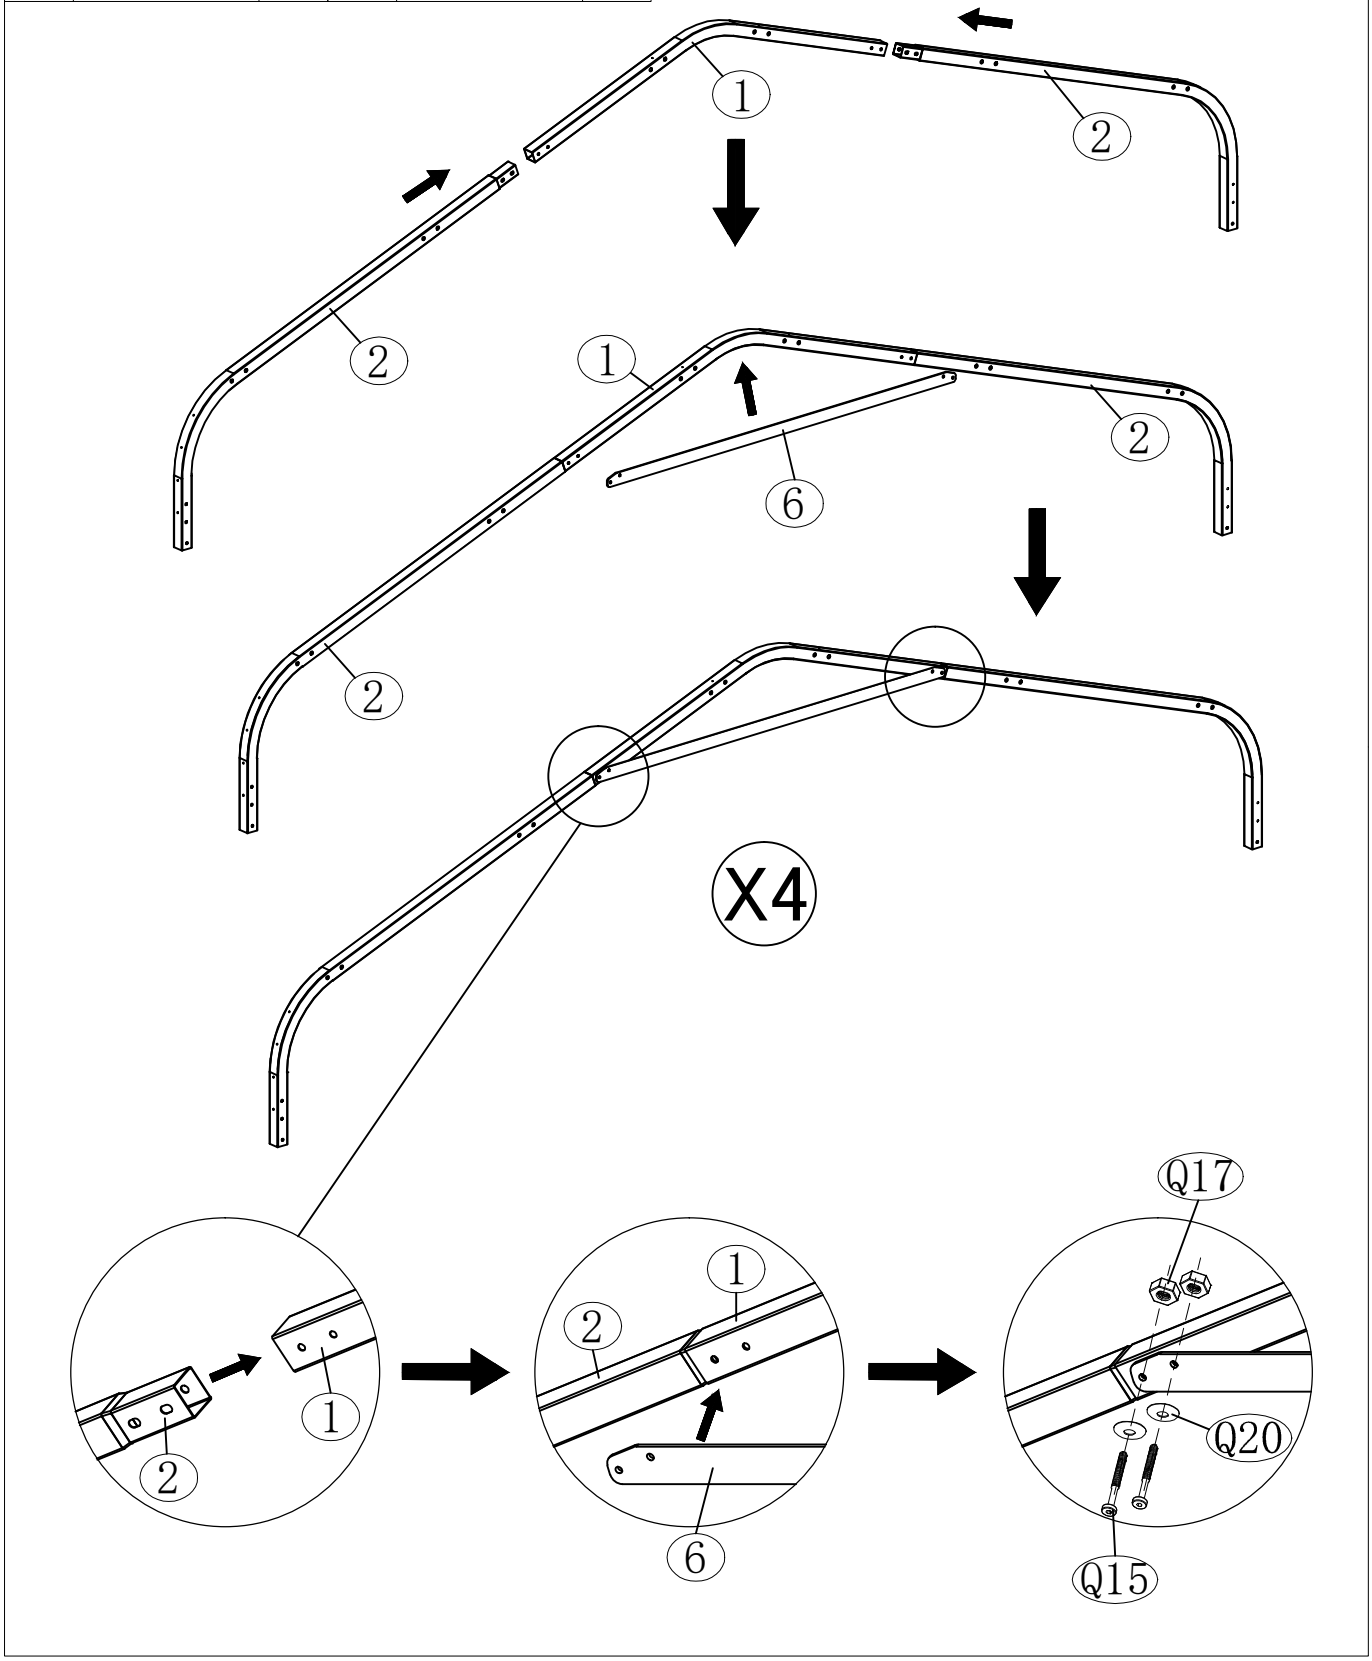


NO.	PART.	Qty.
4	 1546mm	30
Q7		60
Q14	 M6x40mm	60
Q17	 M6	60

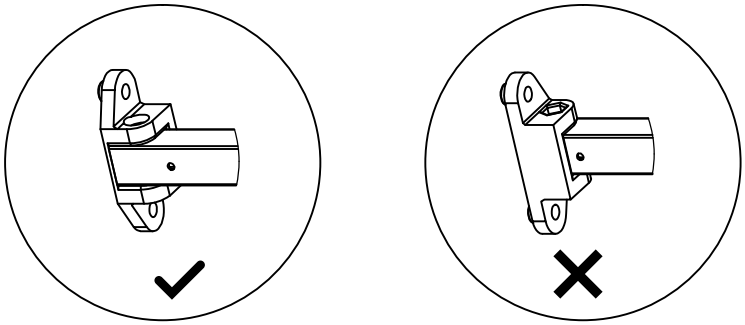

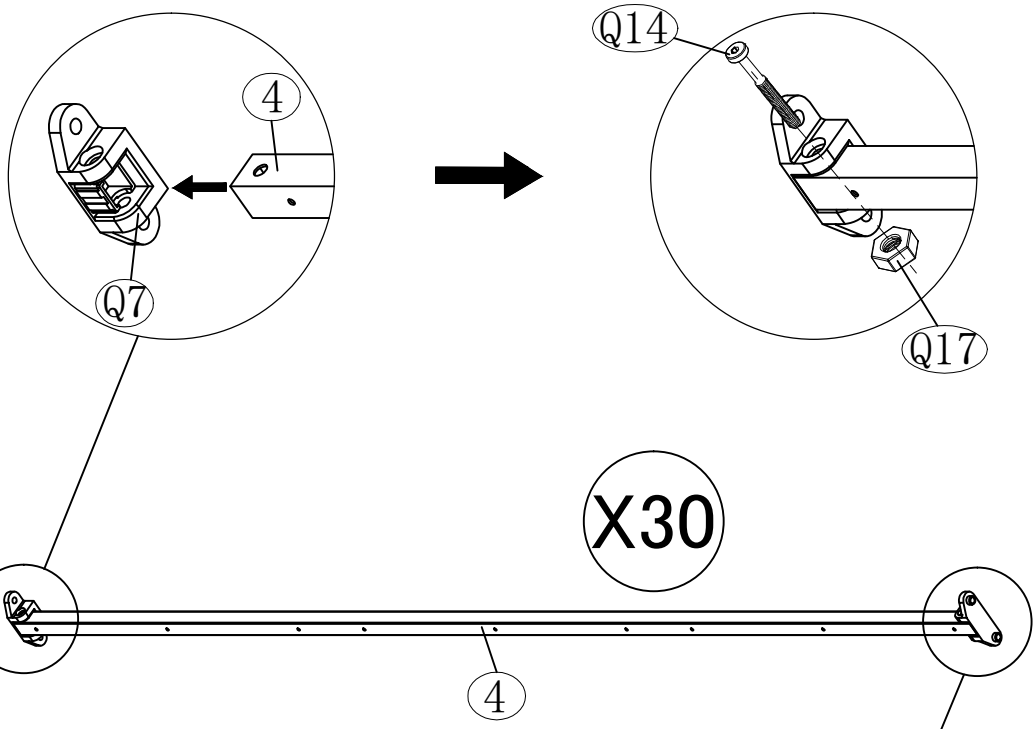


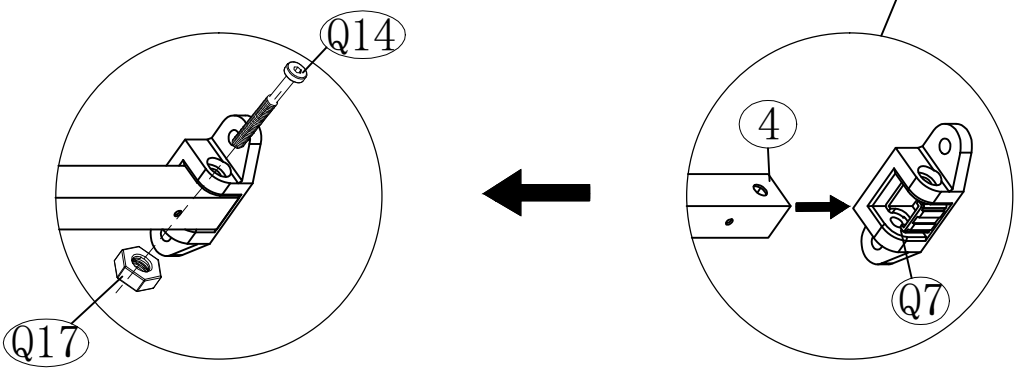


NO.	PART.	Qty.
Q15	M6x55mm	8
Q16	M6x65mm	16
Q17	M6	24
Q20		24

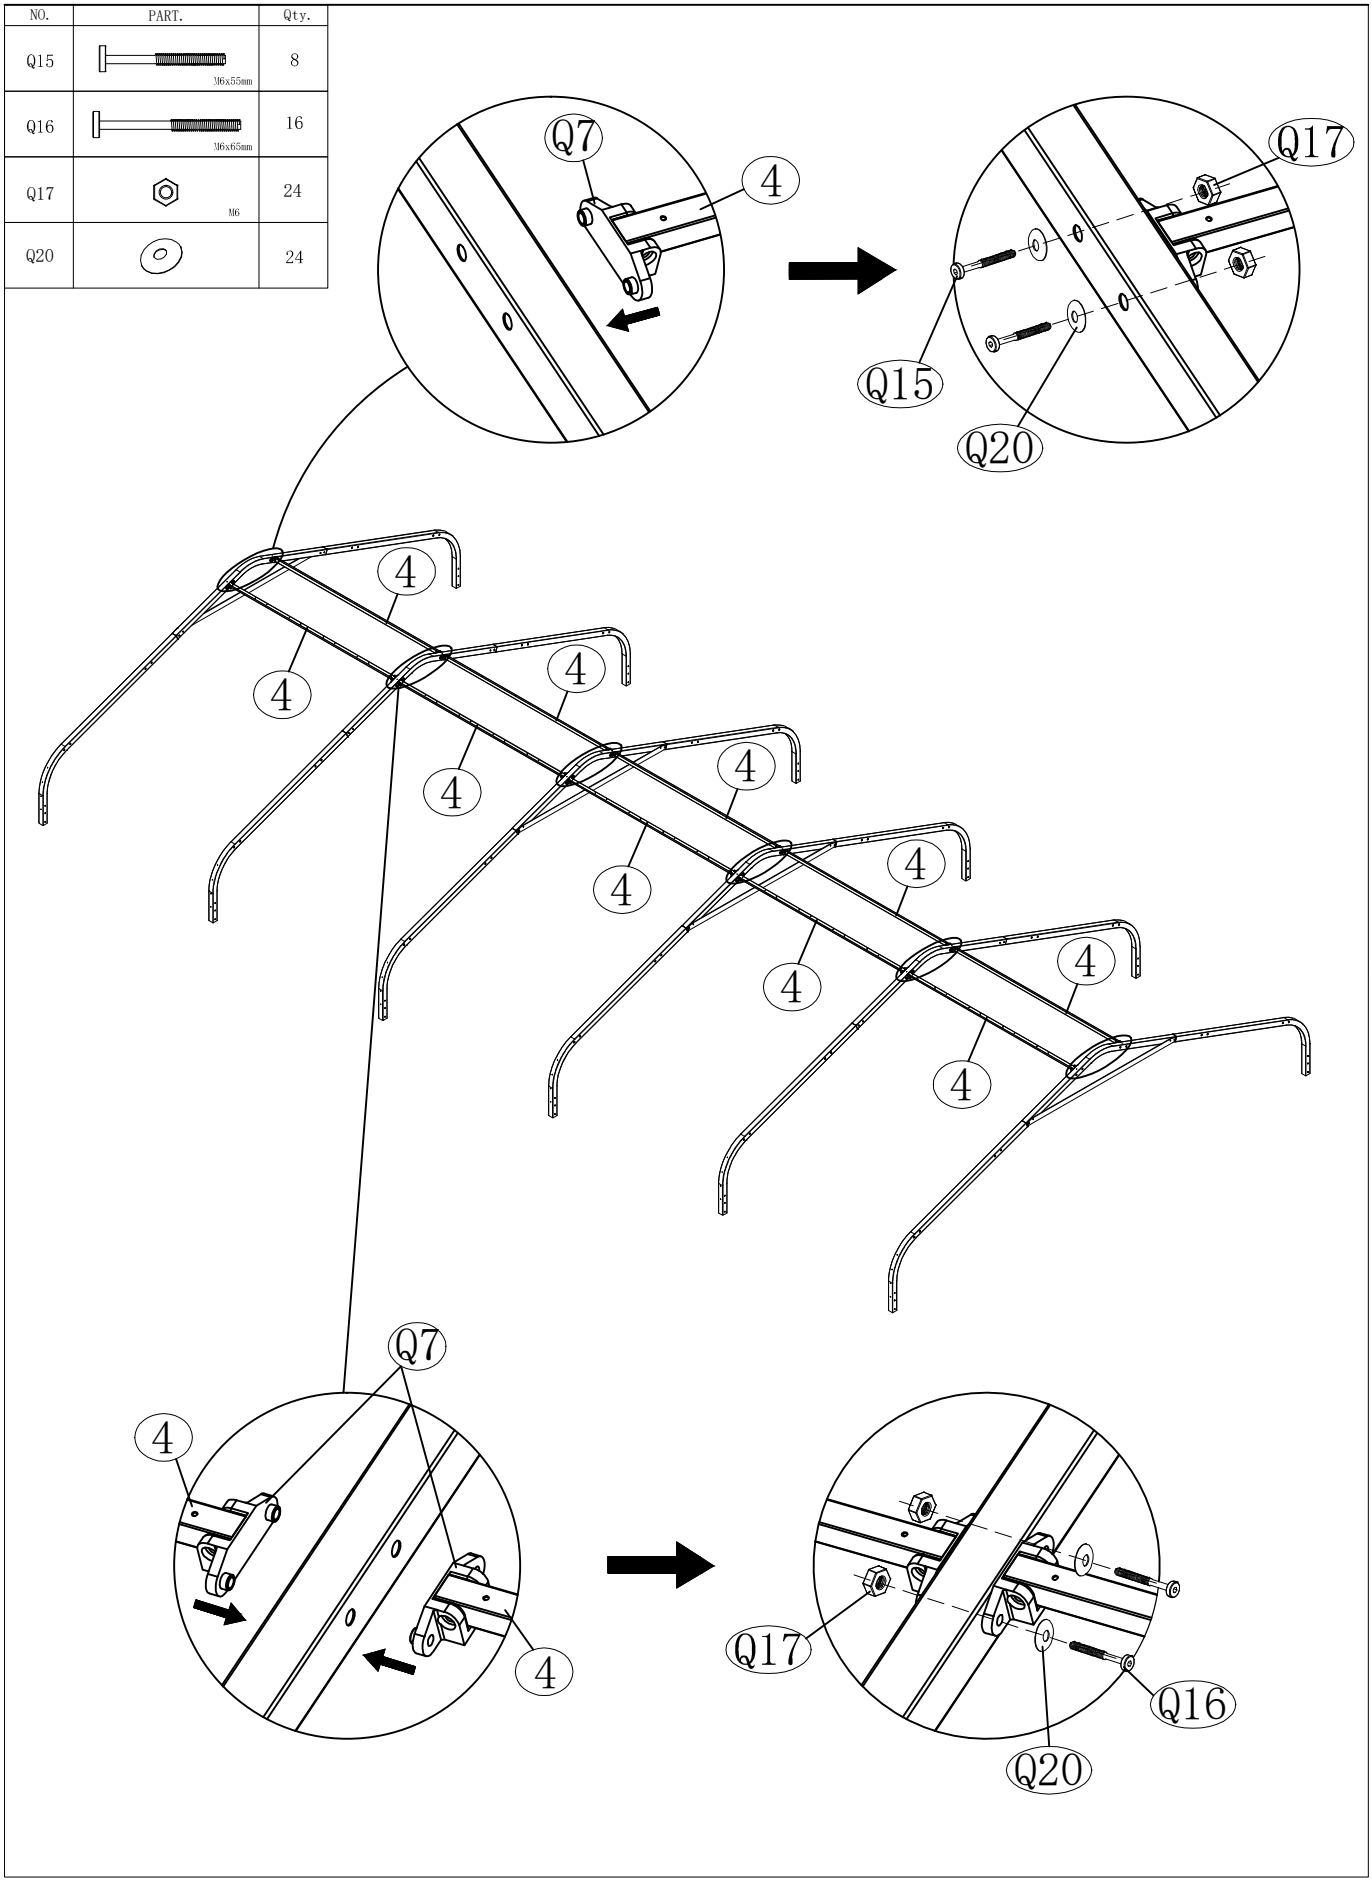


NO.	PART.	Qty.
Q15	M6x55mm	8
Q16	M6x65mm	16
Q17	M6	24
Q20		24

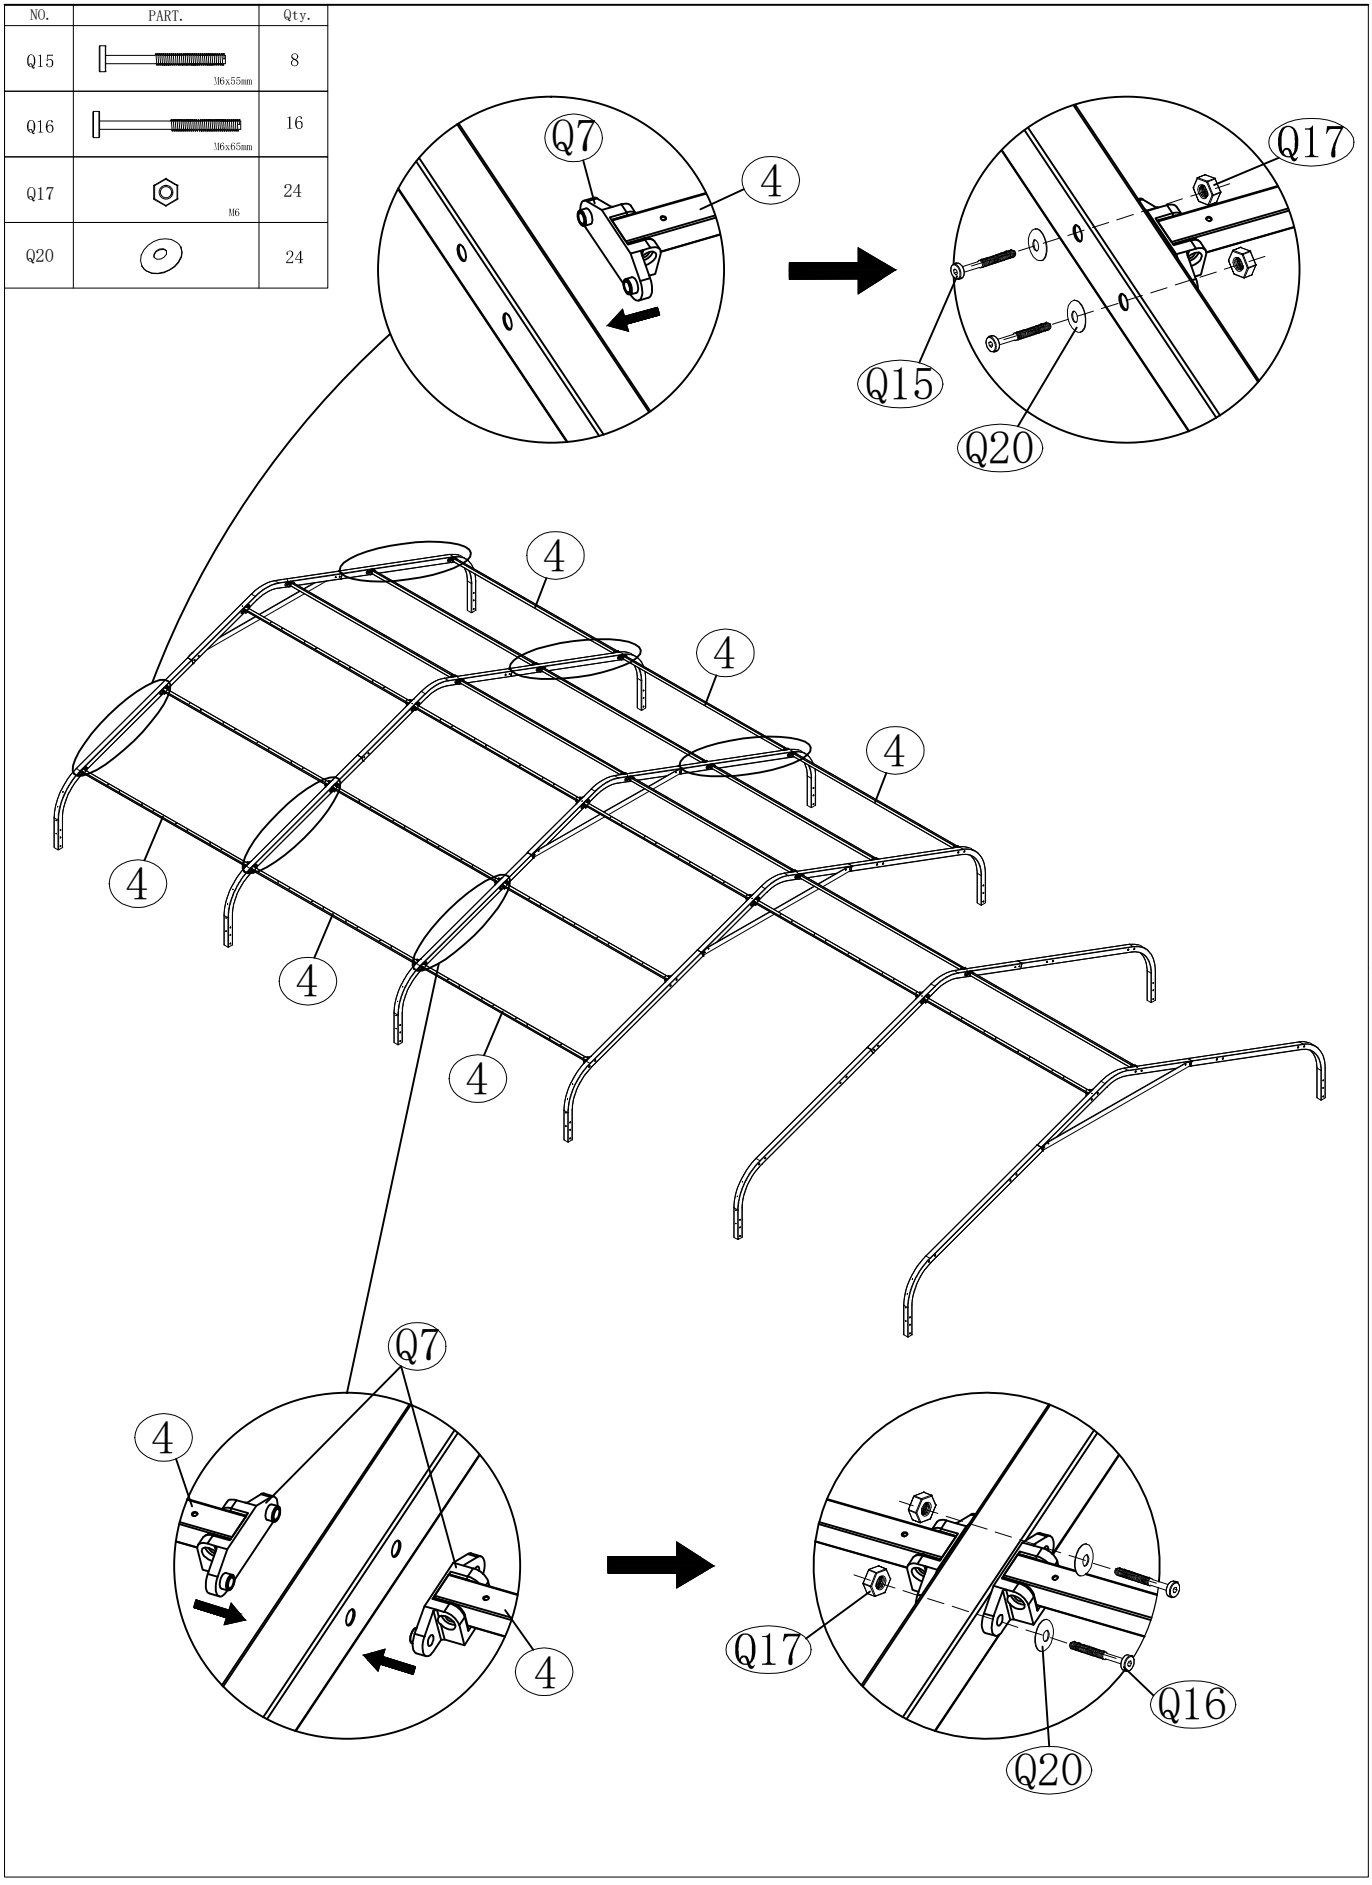

NO.	PART.	Qty.
Q15	M6x55mm	8
Q16	M6x65mm	16
Q17	M6	24
Q20		24

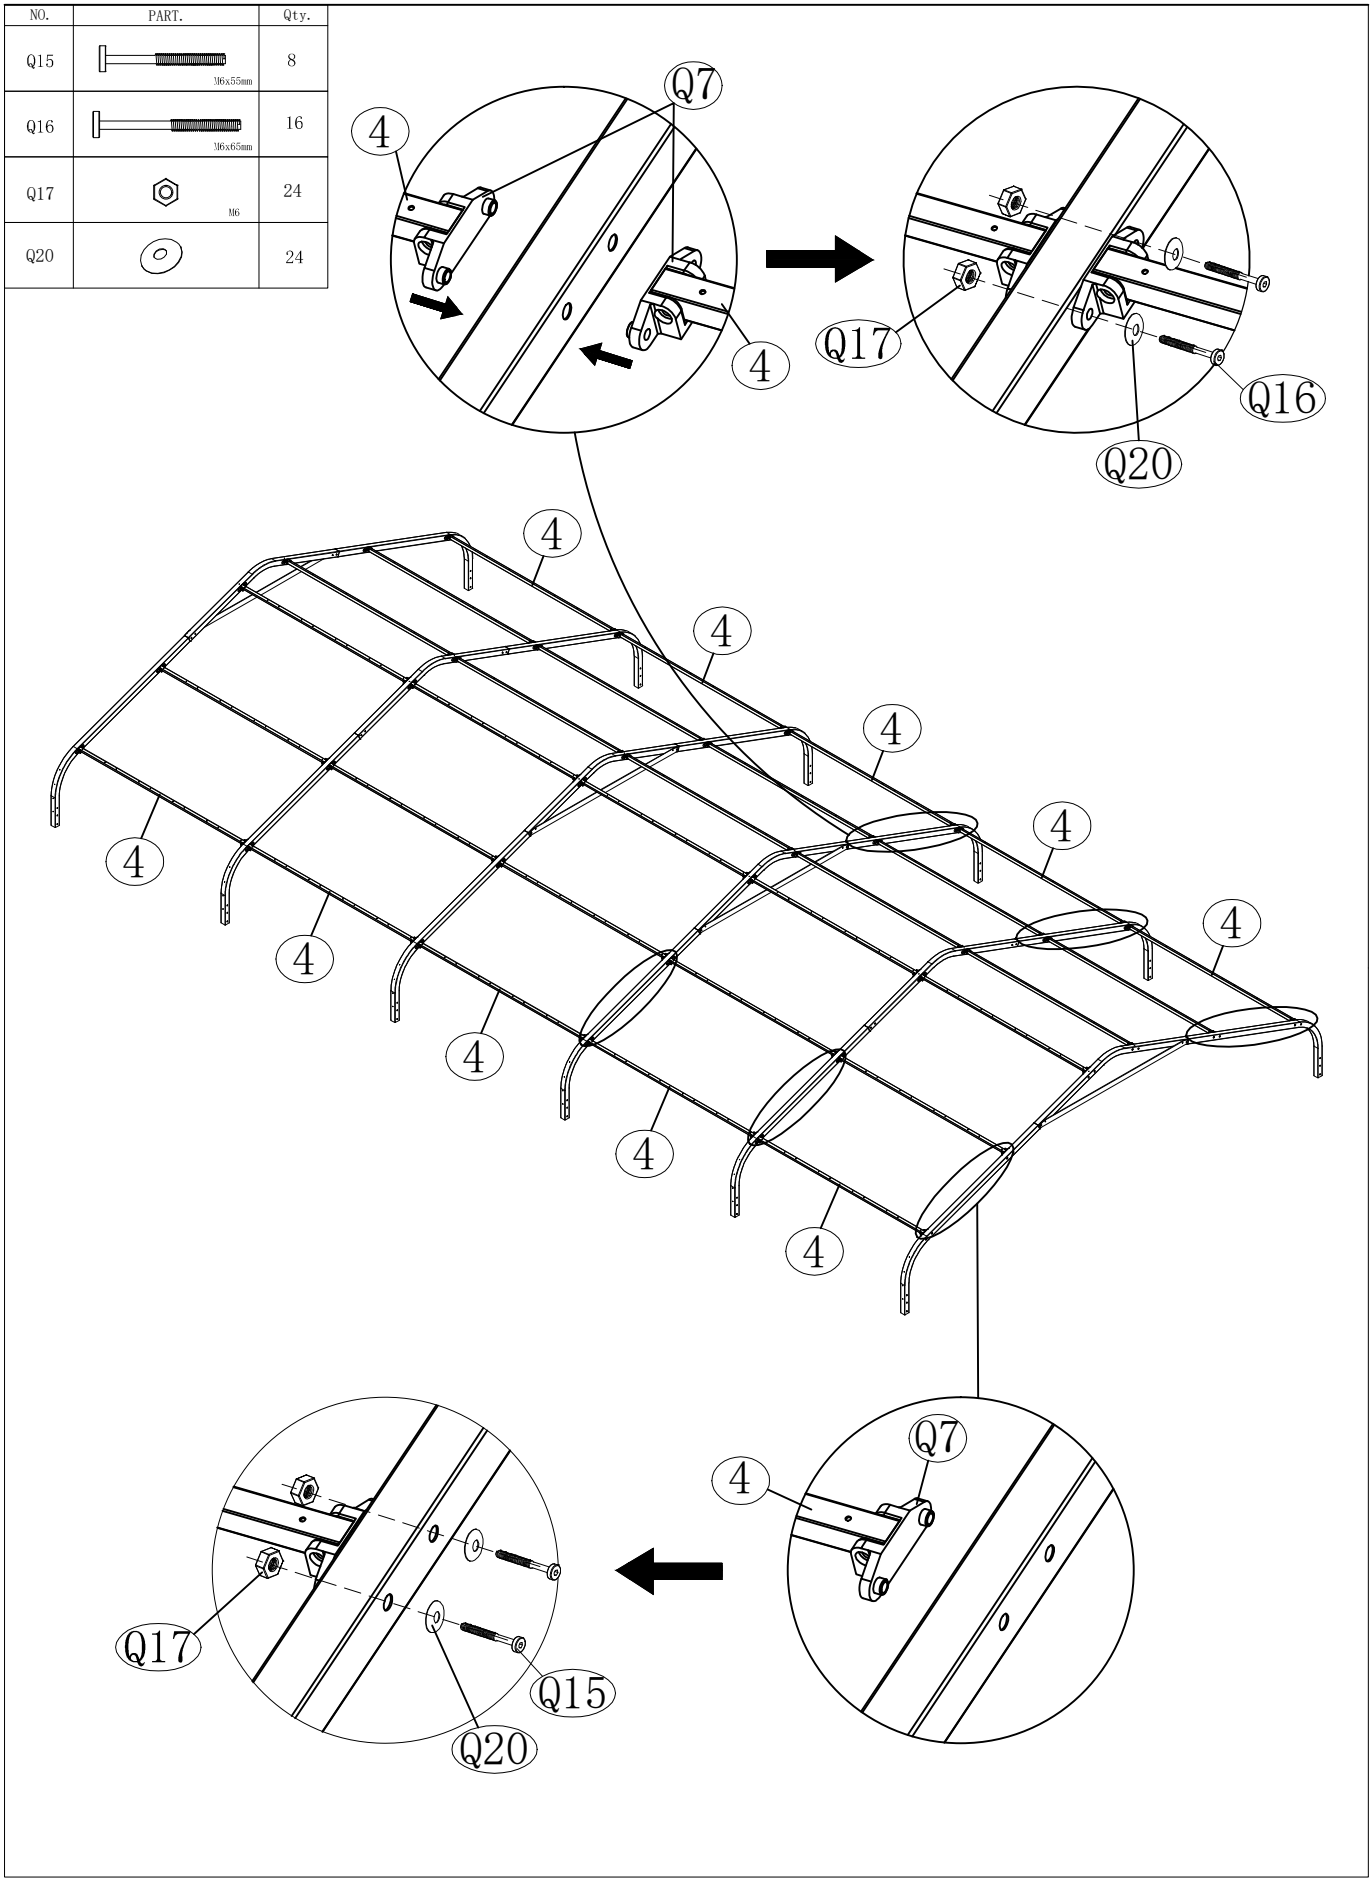


NO.	PART.	Qty.
10		10
Q15	M6x55mm	24
Q17	M6	24
Q20		24

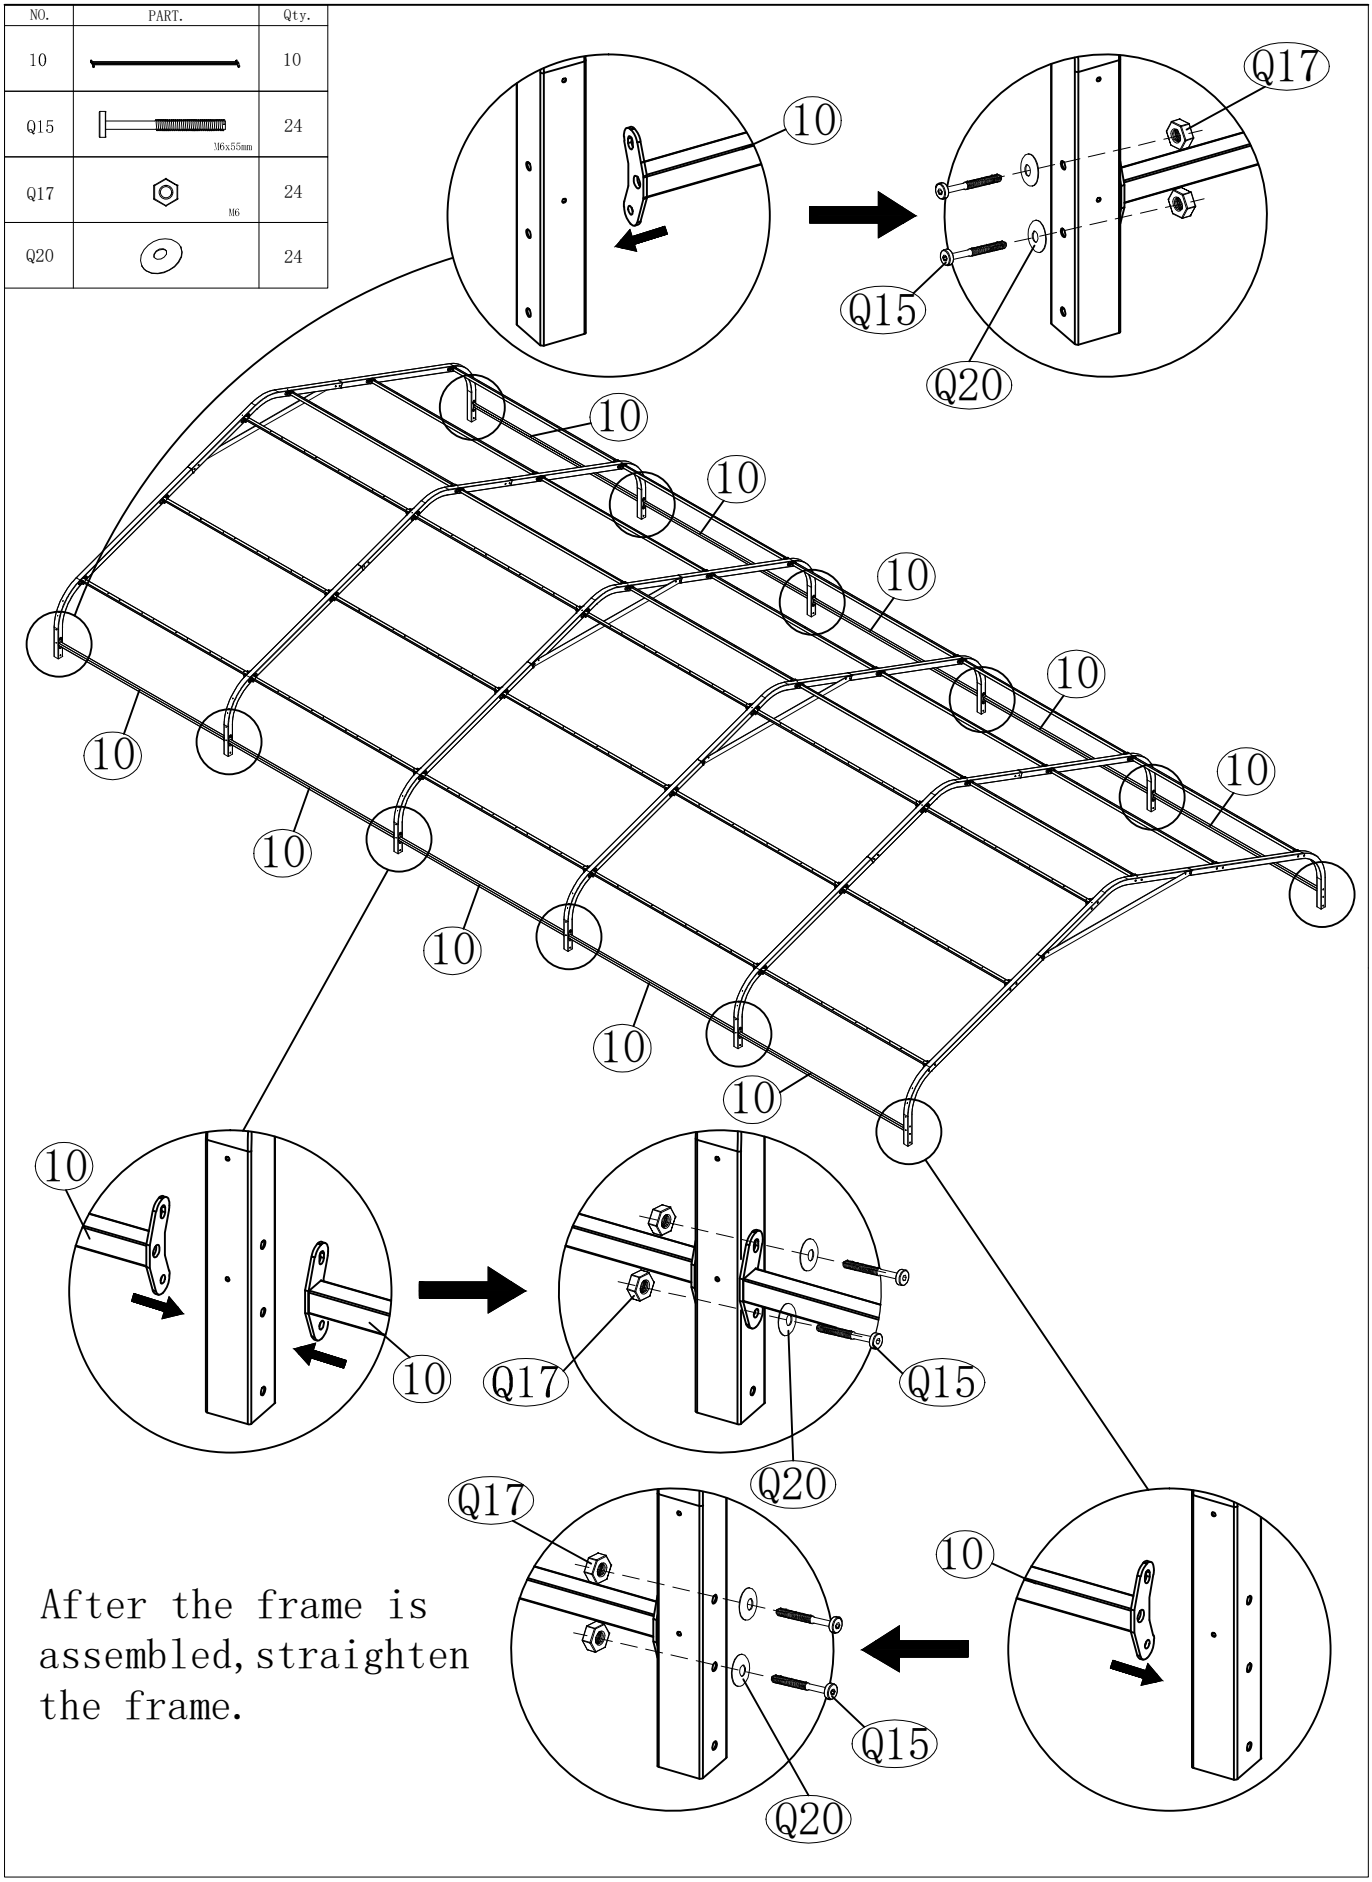


After the frame is assembled, straighten the frame.


NO.	PART.	Qty.
D1	1650mm	10
Q13	M5x16mm	48

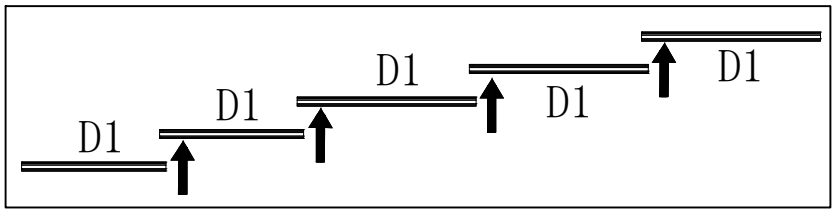

NO.	PART.	Qty.
D2	2064mm	2
Q13	M5x16mm	10
Q19		10

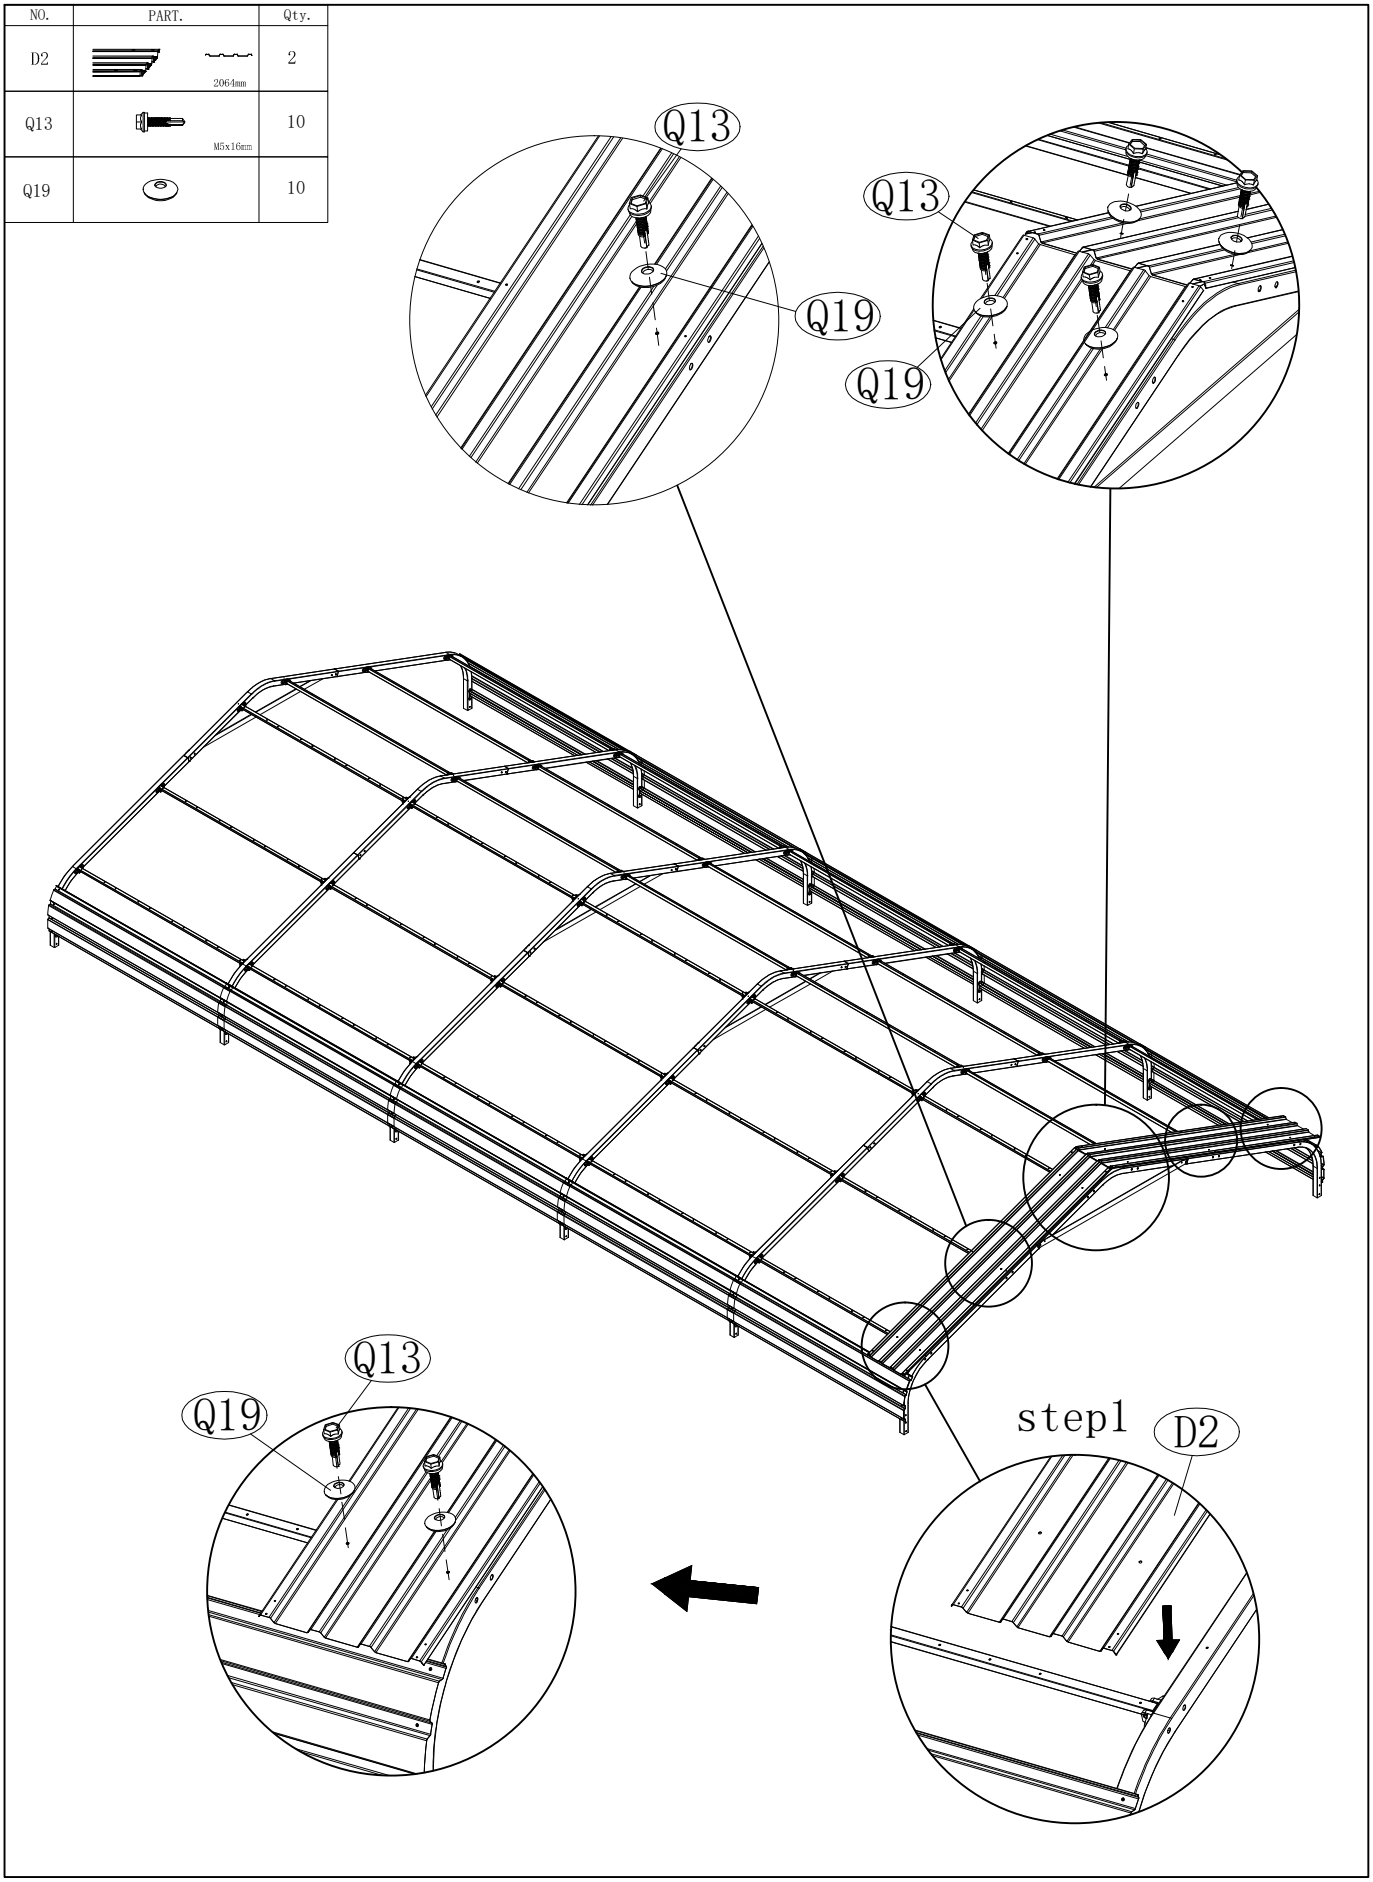



NO.	PART.	Qty.
D2	2064mm	8
Q32	M4x14mm	28
Q13	M5x16mm	40
Q18		28
Q19		40

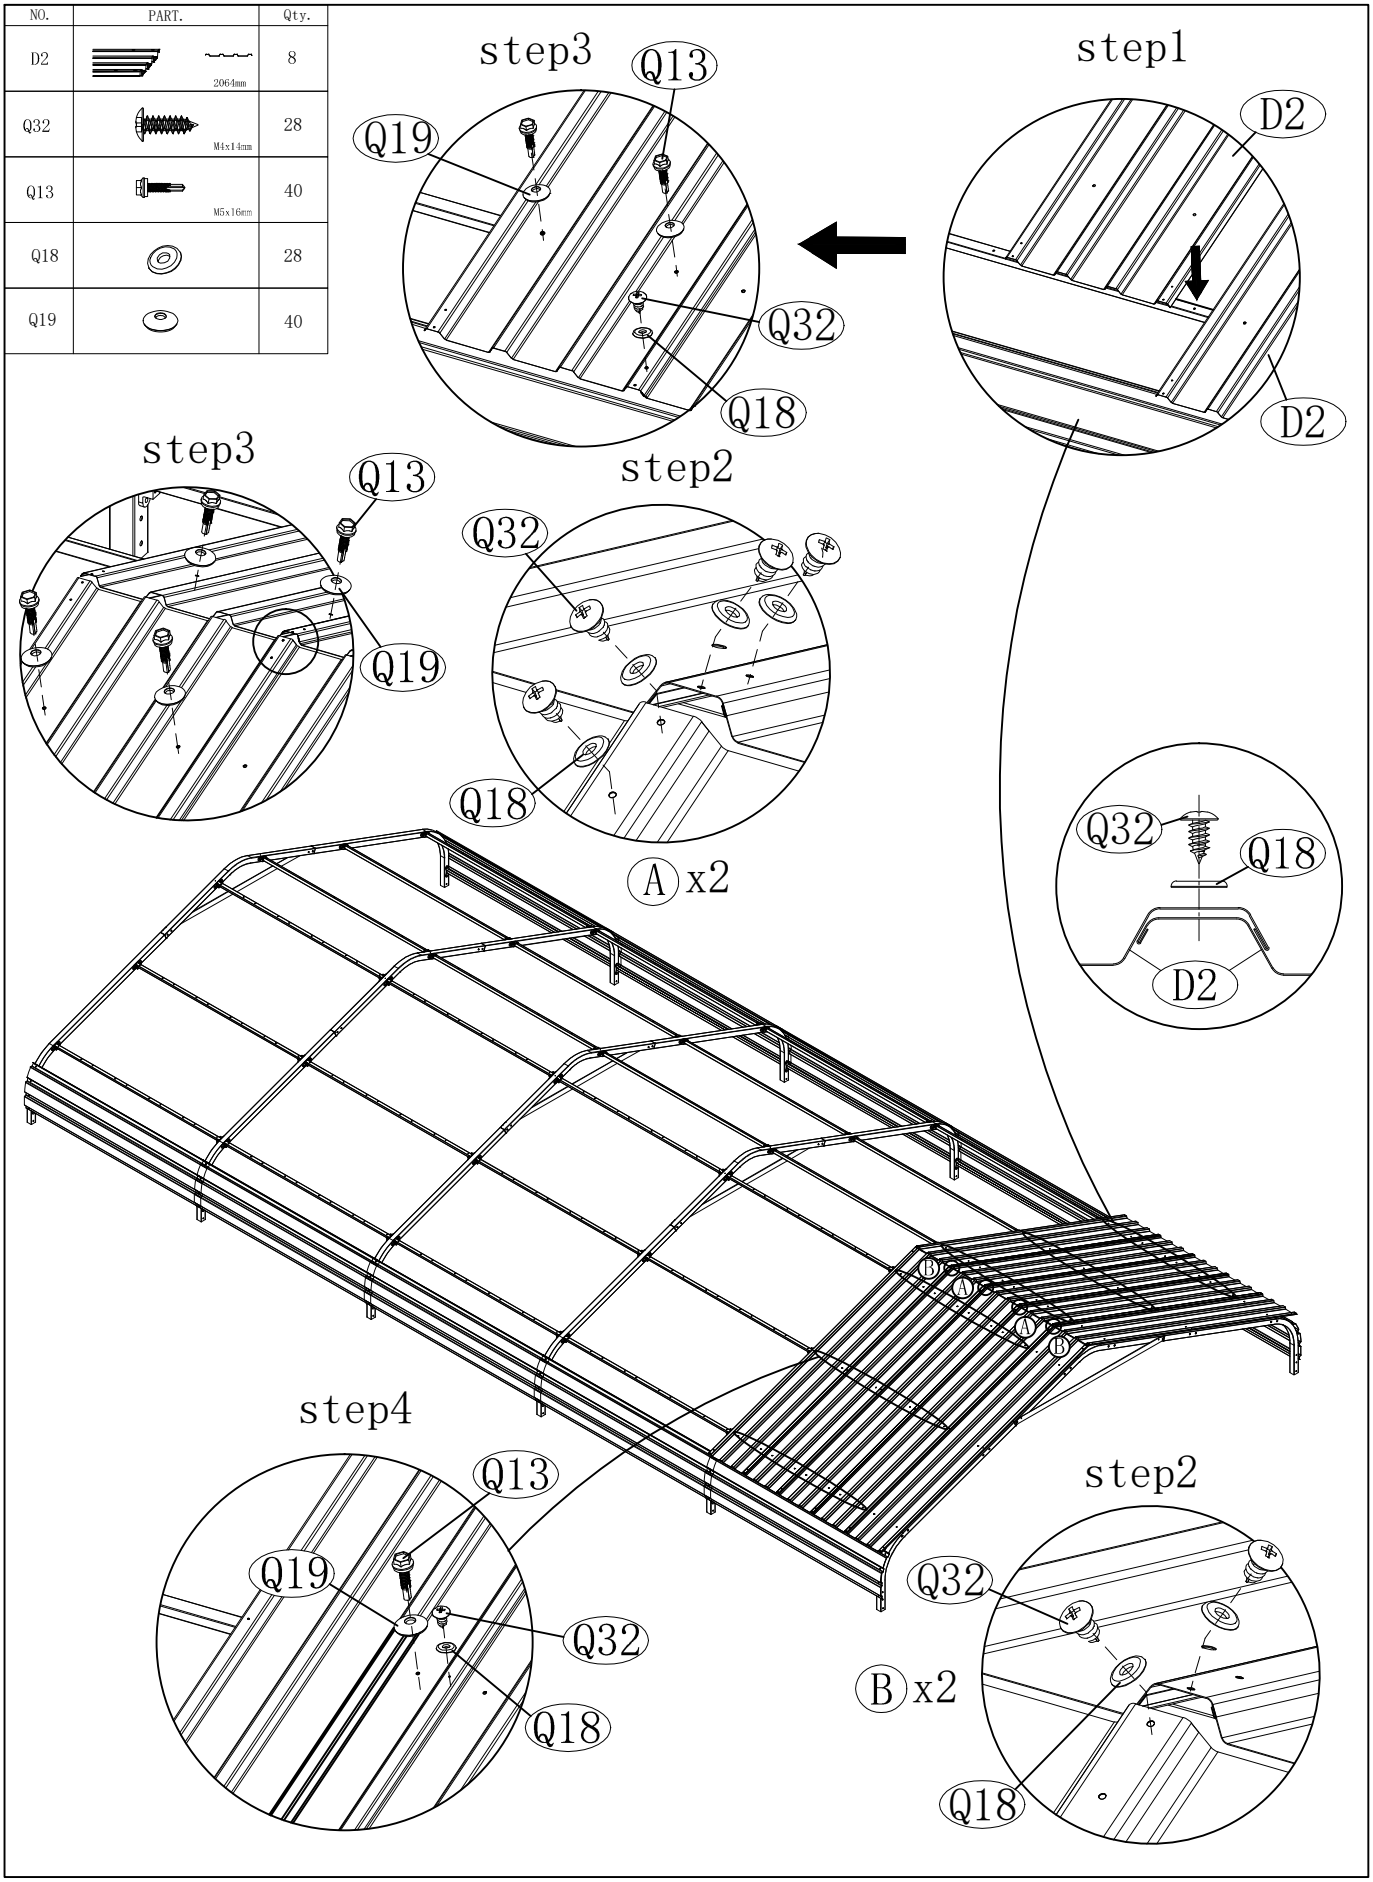


NO.	PART.	Qty.
Q32	 M4x14mm	2
Q18		2
Q4		1

Install plastic Q4 between the 4th and 5th pieces

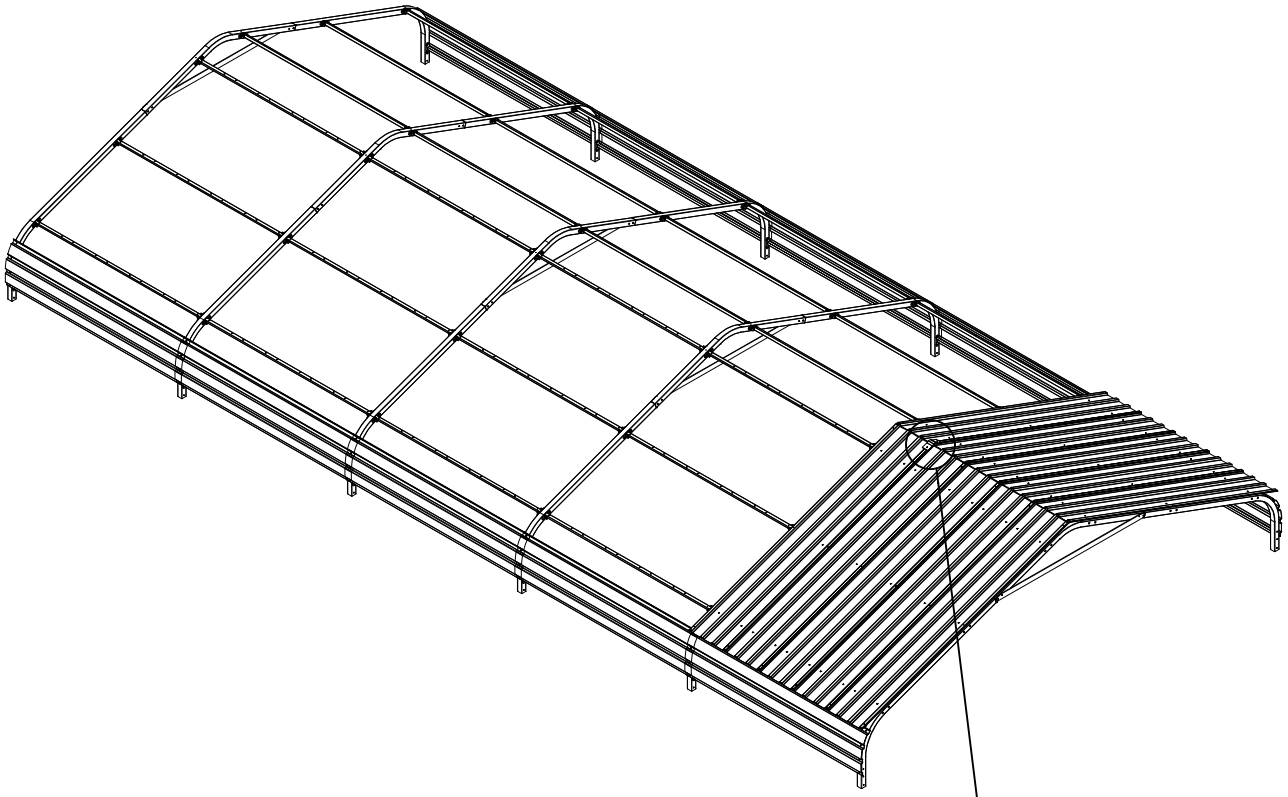


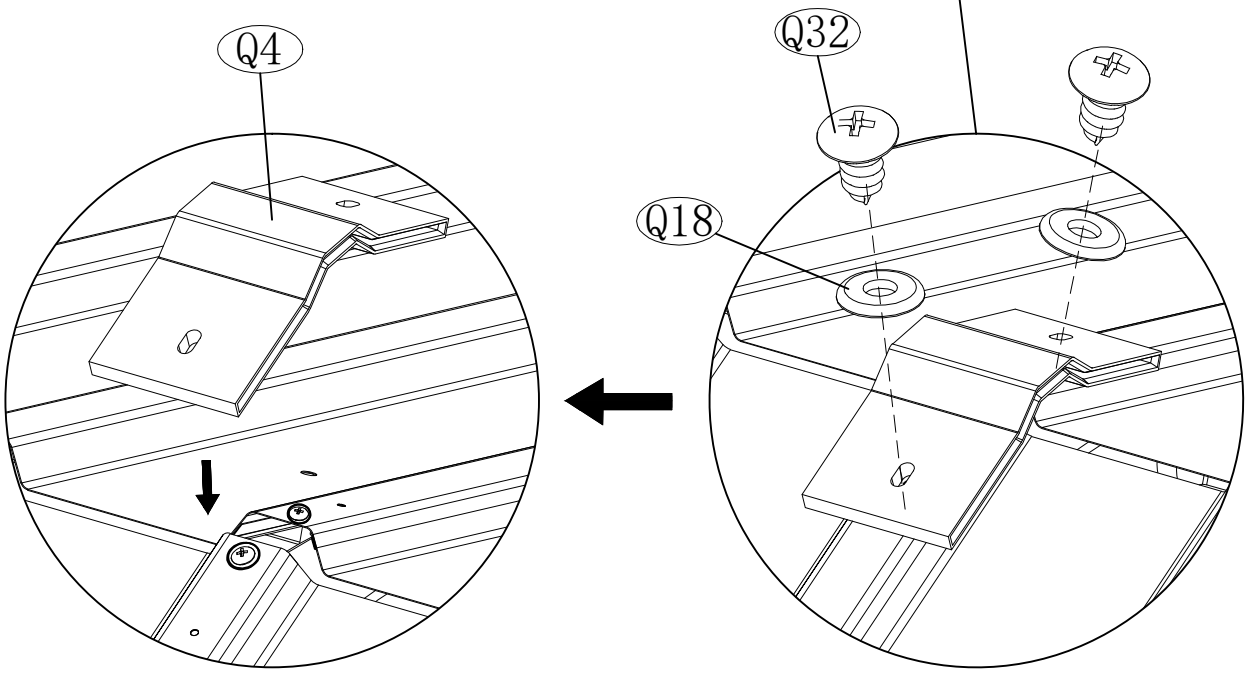


NO.	PART.	Qty.
D2	1904mm	6
Q32	M4x14mm	22
Q13	M5x16mm	30
Q18		22
Q19		30

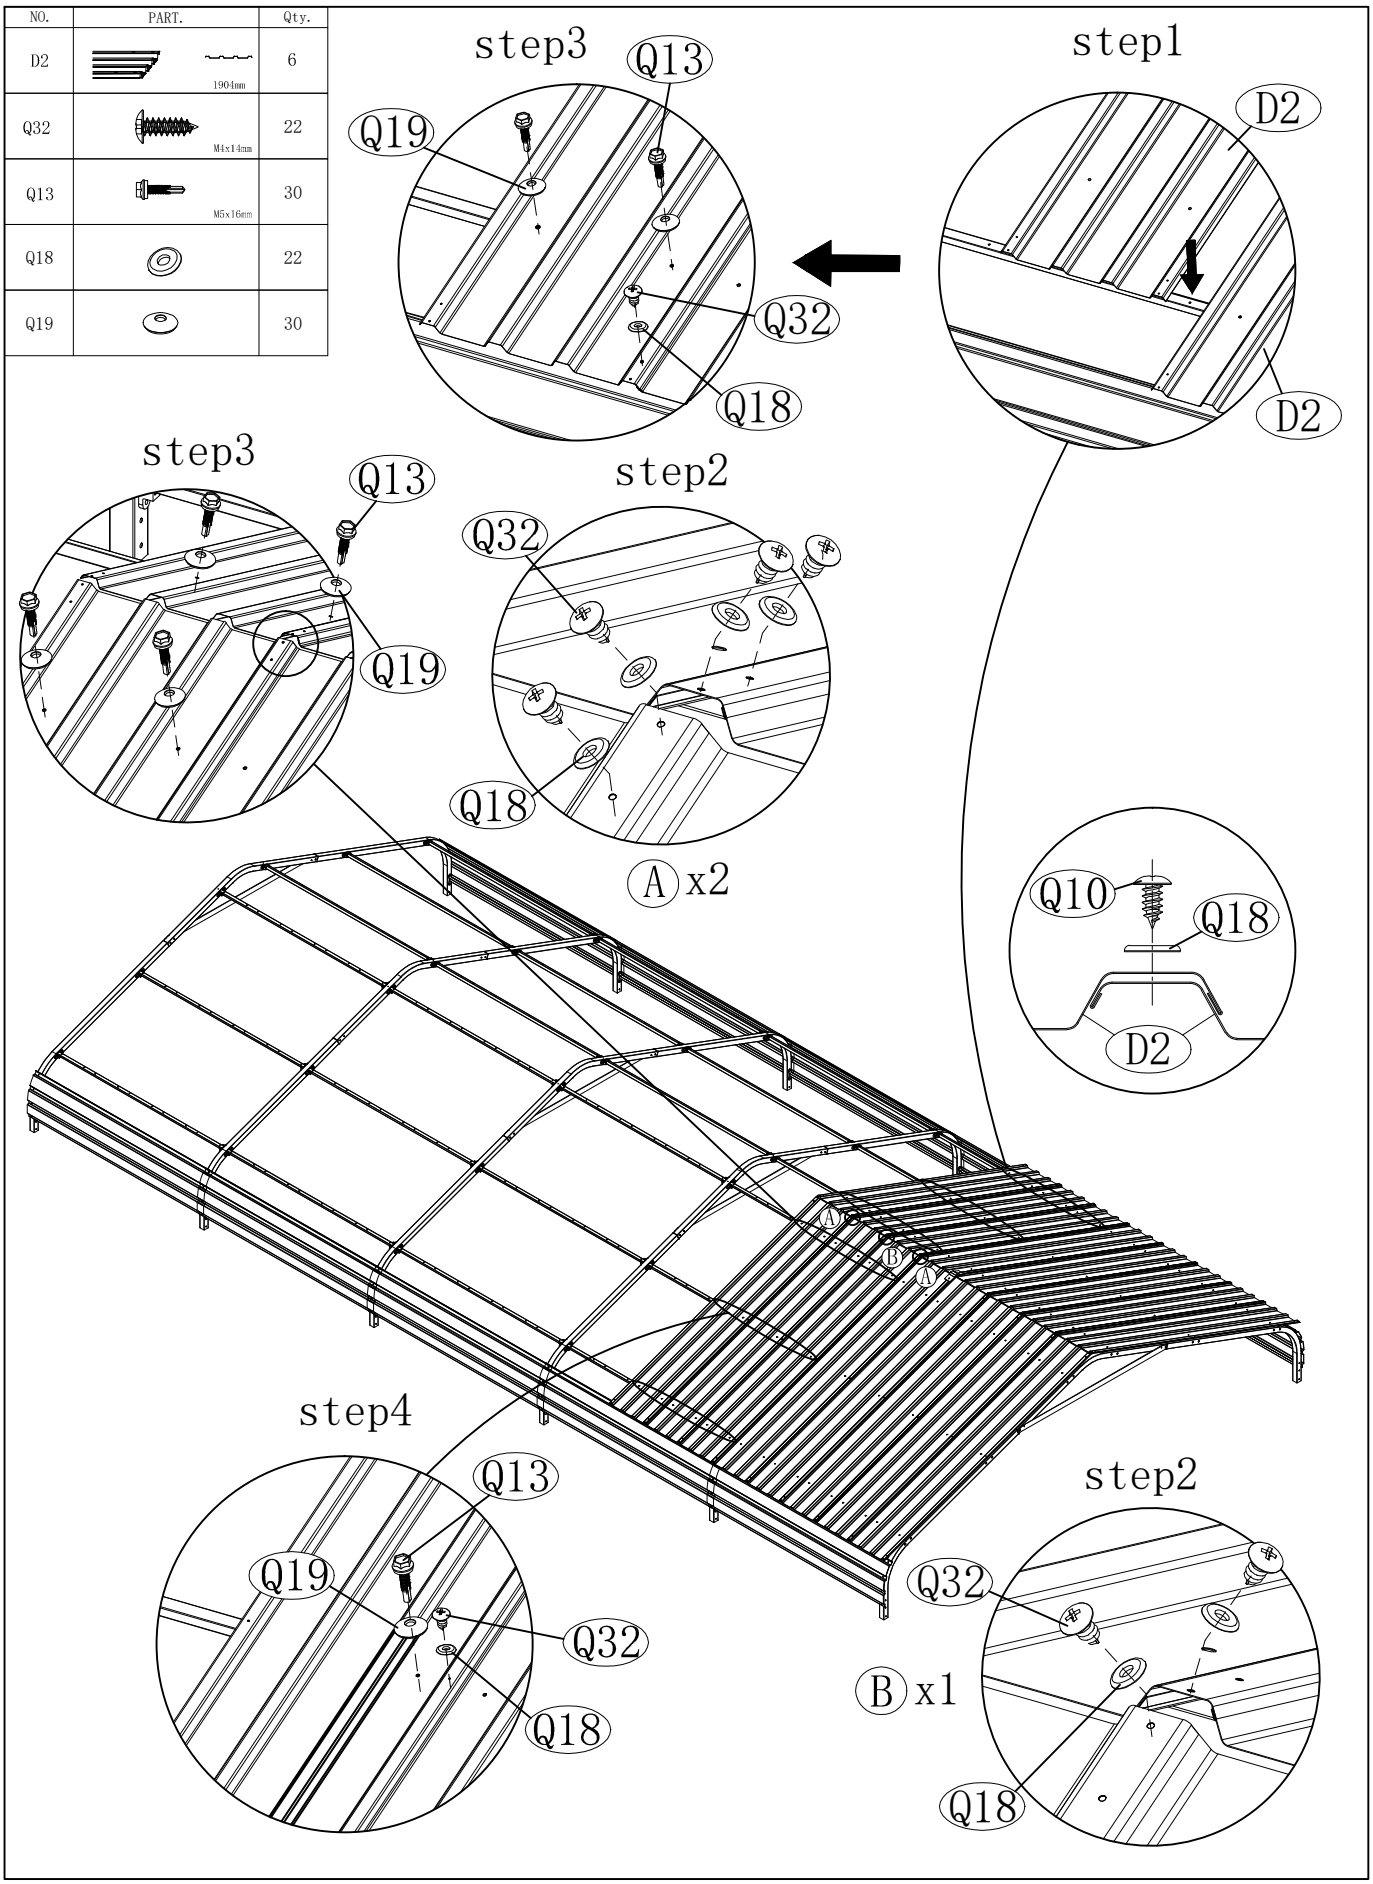


NO.	PART.	Qty.
7	 1256mm	1
Q32	 M4x14mm	2
Q18		2

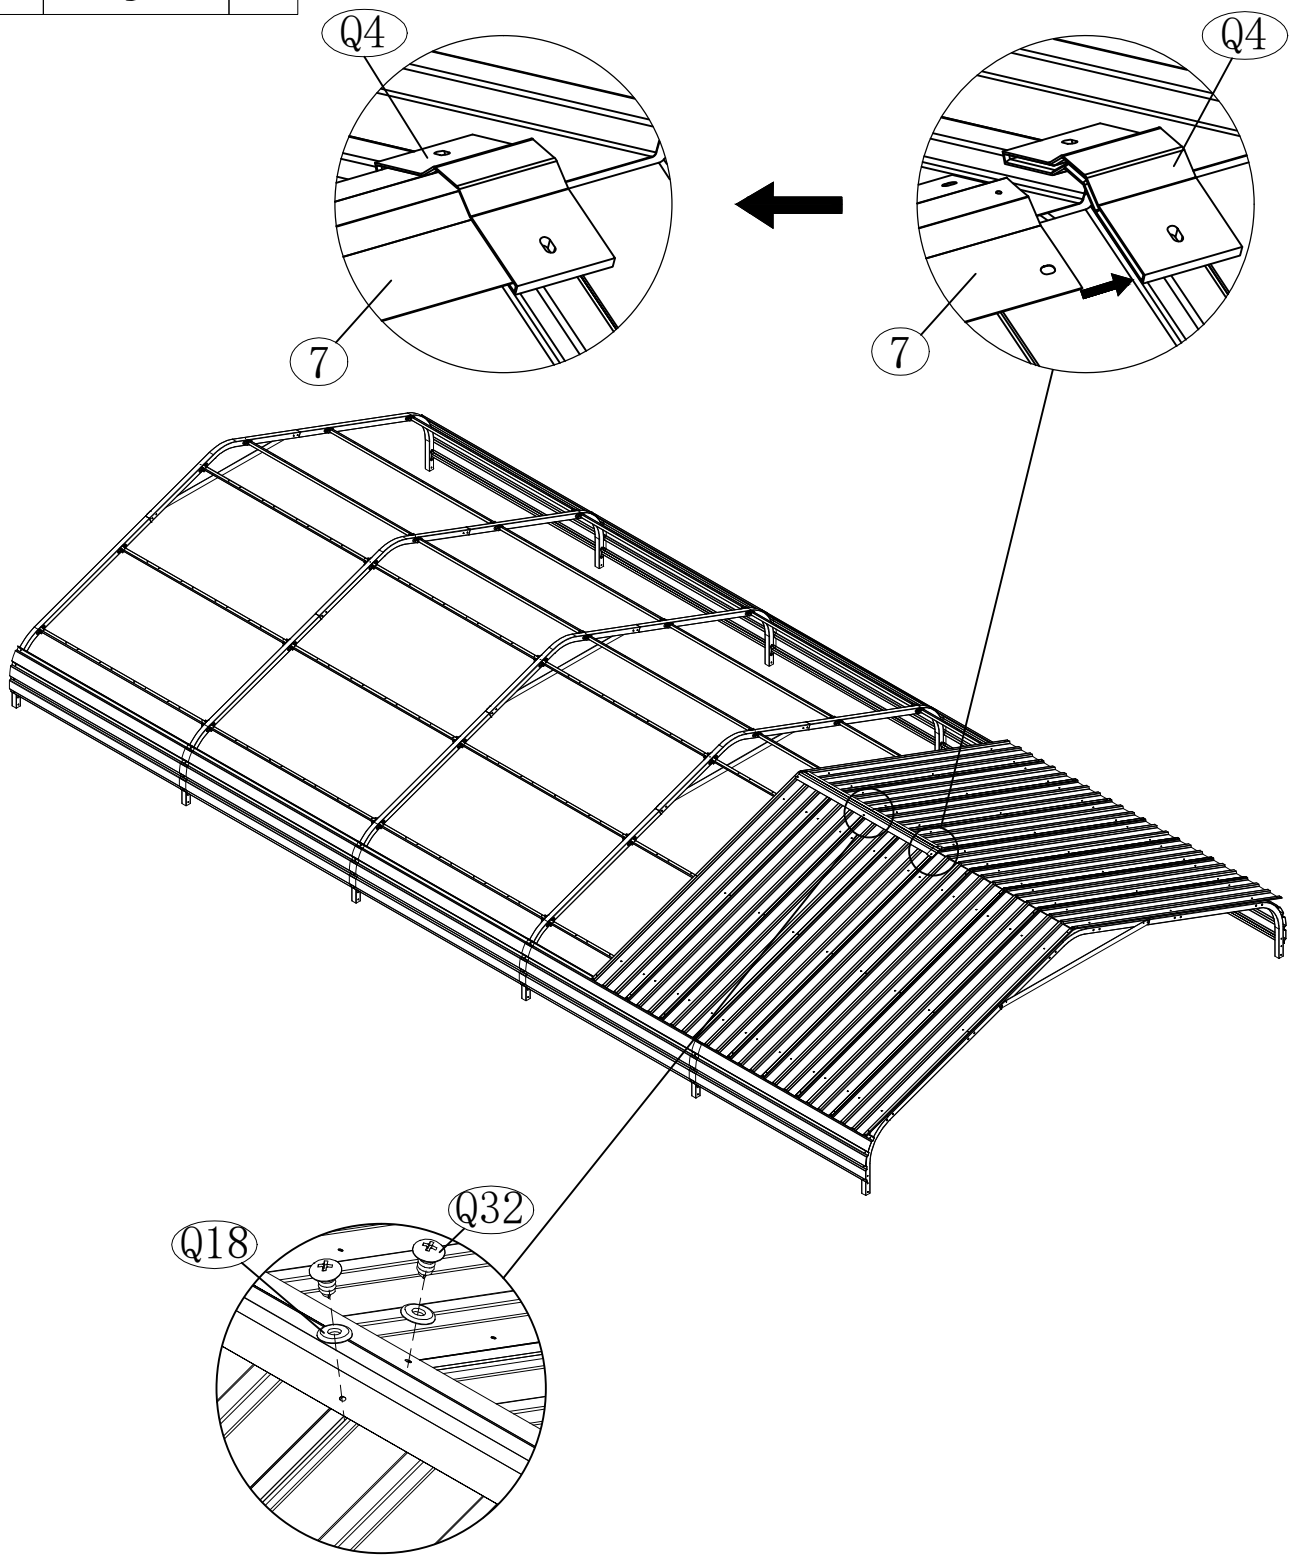


NO.	PART.	Qty.
D2	1904mm	2
Q4		1
Q32	M4x14mm	8
Q13	M5x16mm	10
Q18		8
Q19		10

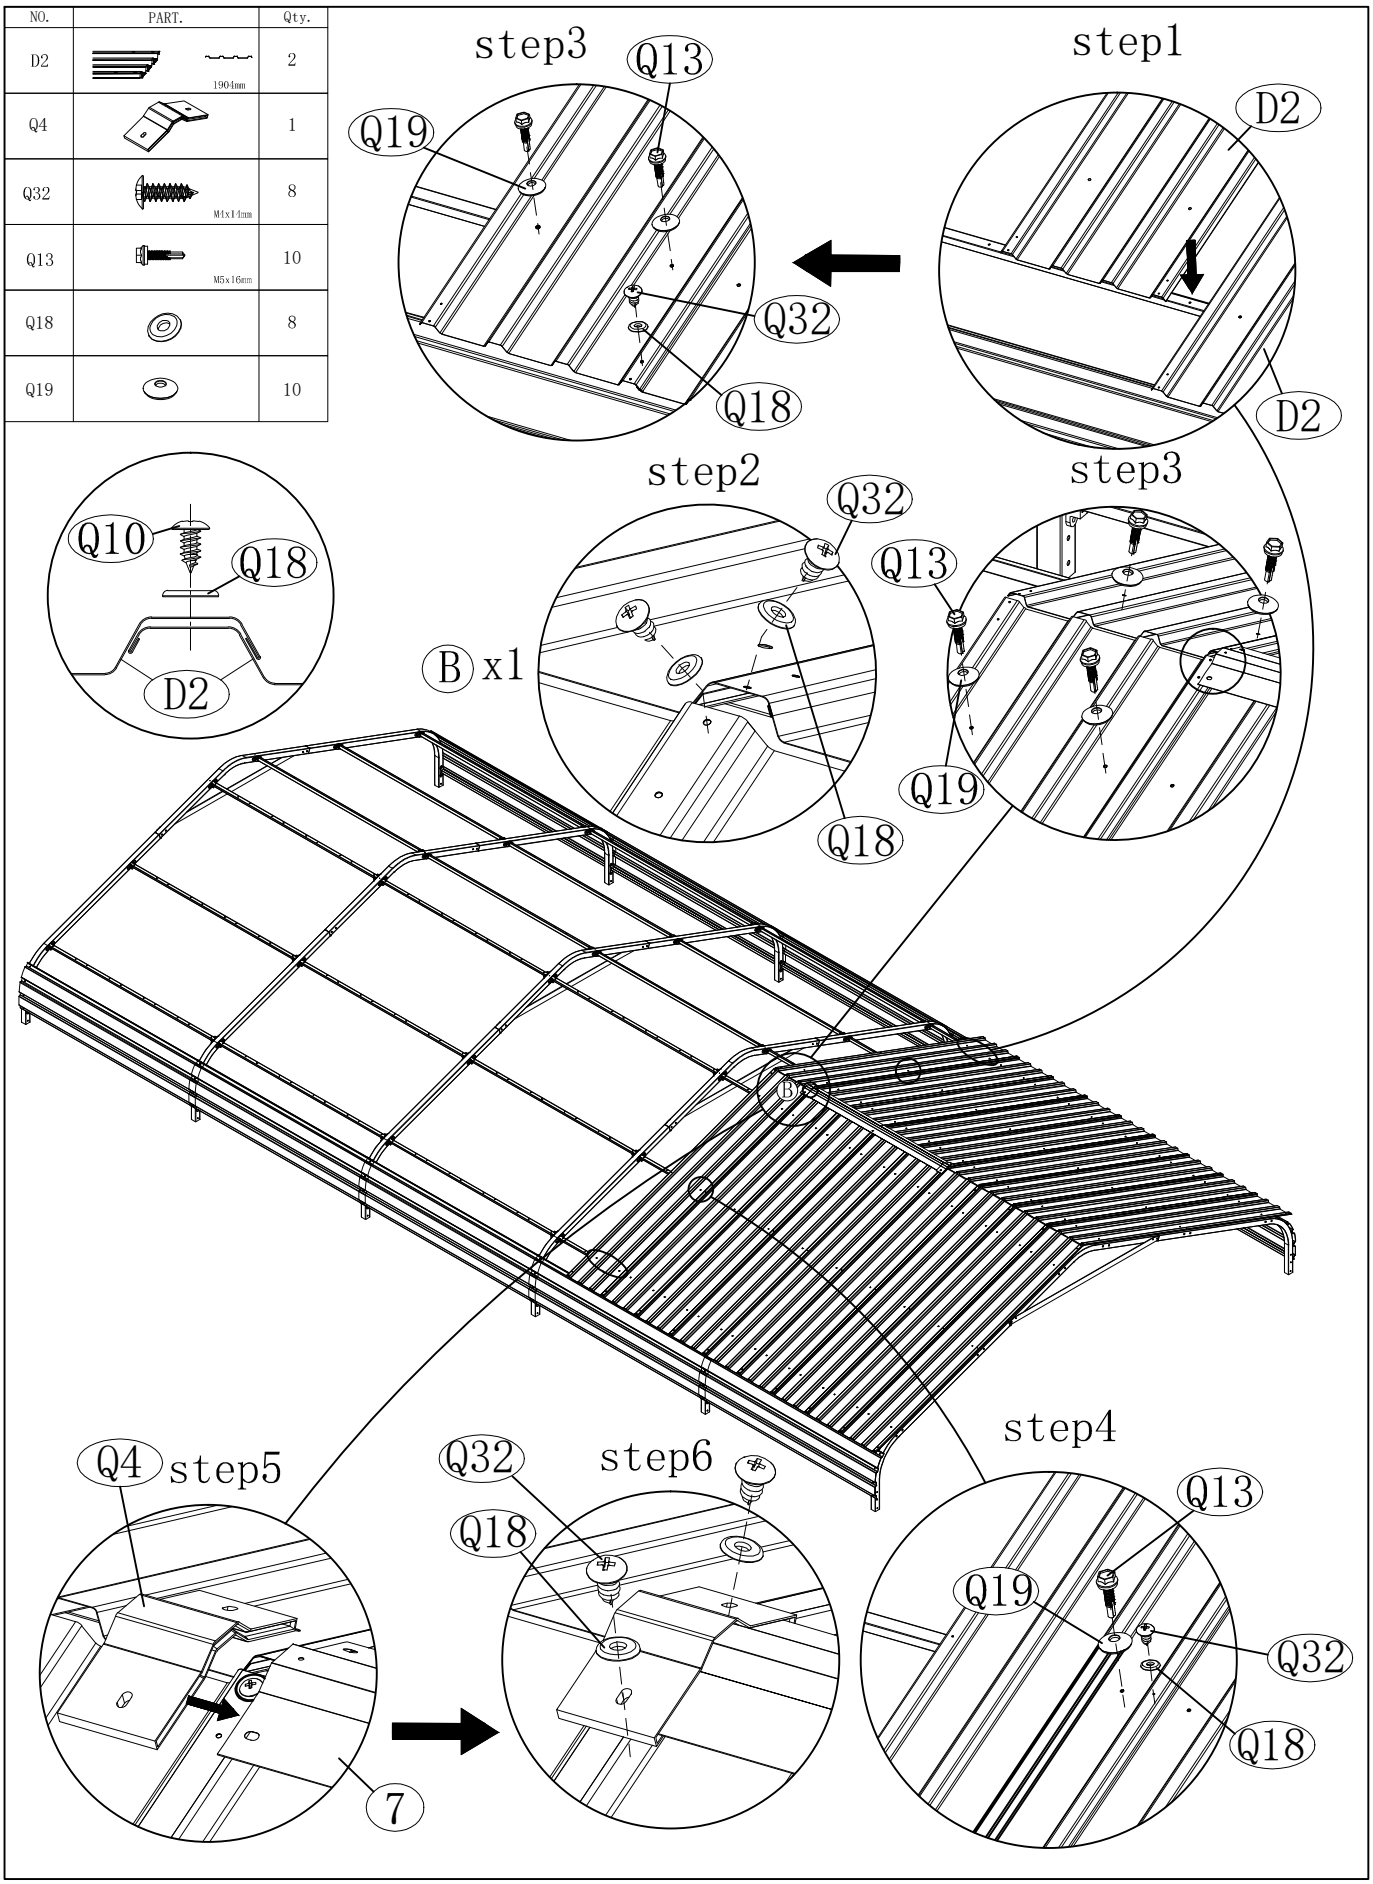


NO.	PART.	Qty.
D2	1904mm	6
Q32	M4x14mm	22
Q13	M5x16mm	30
Q18		22
Q19		30

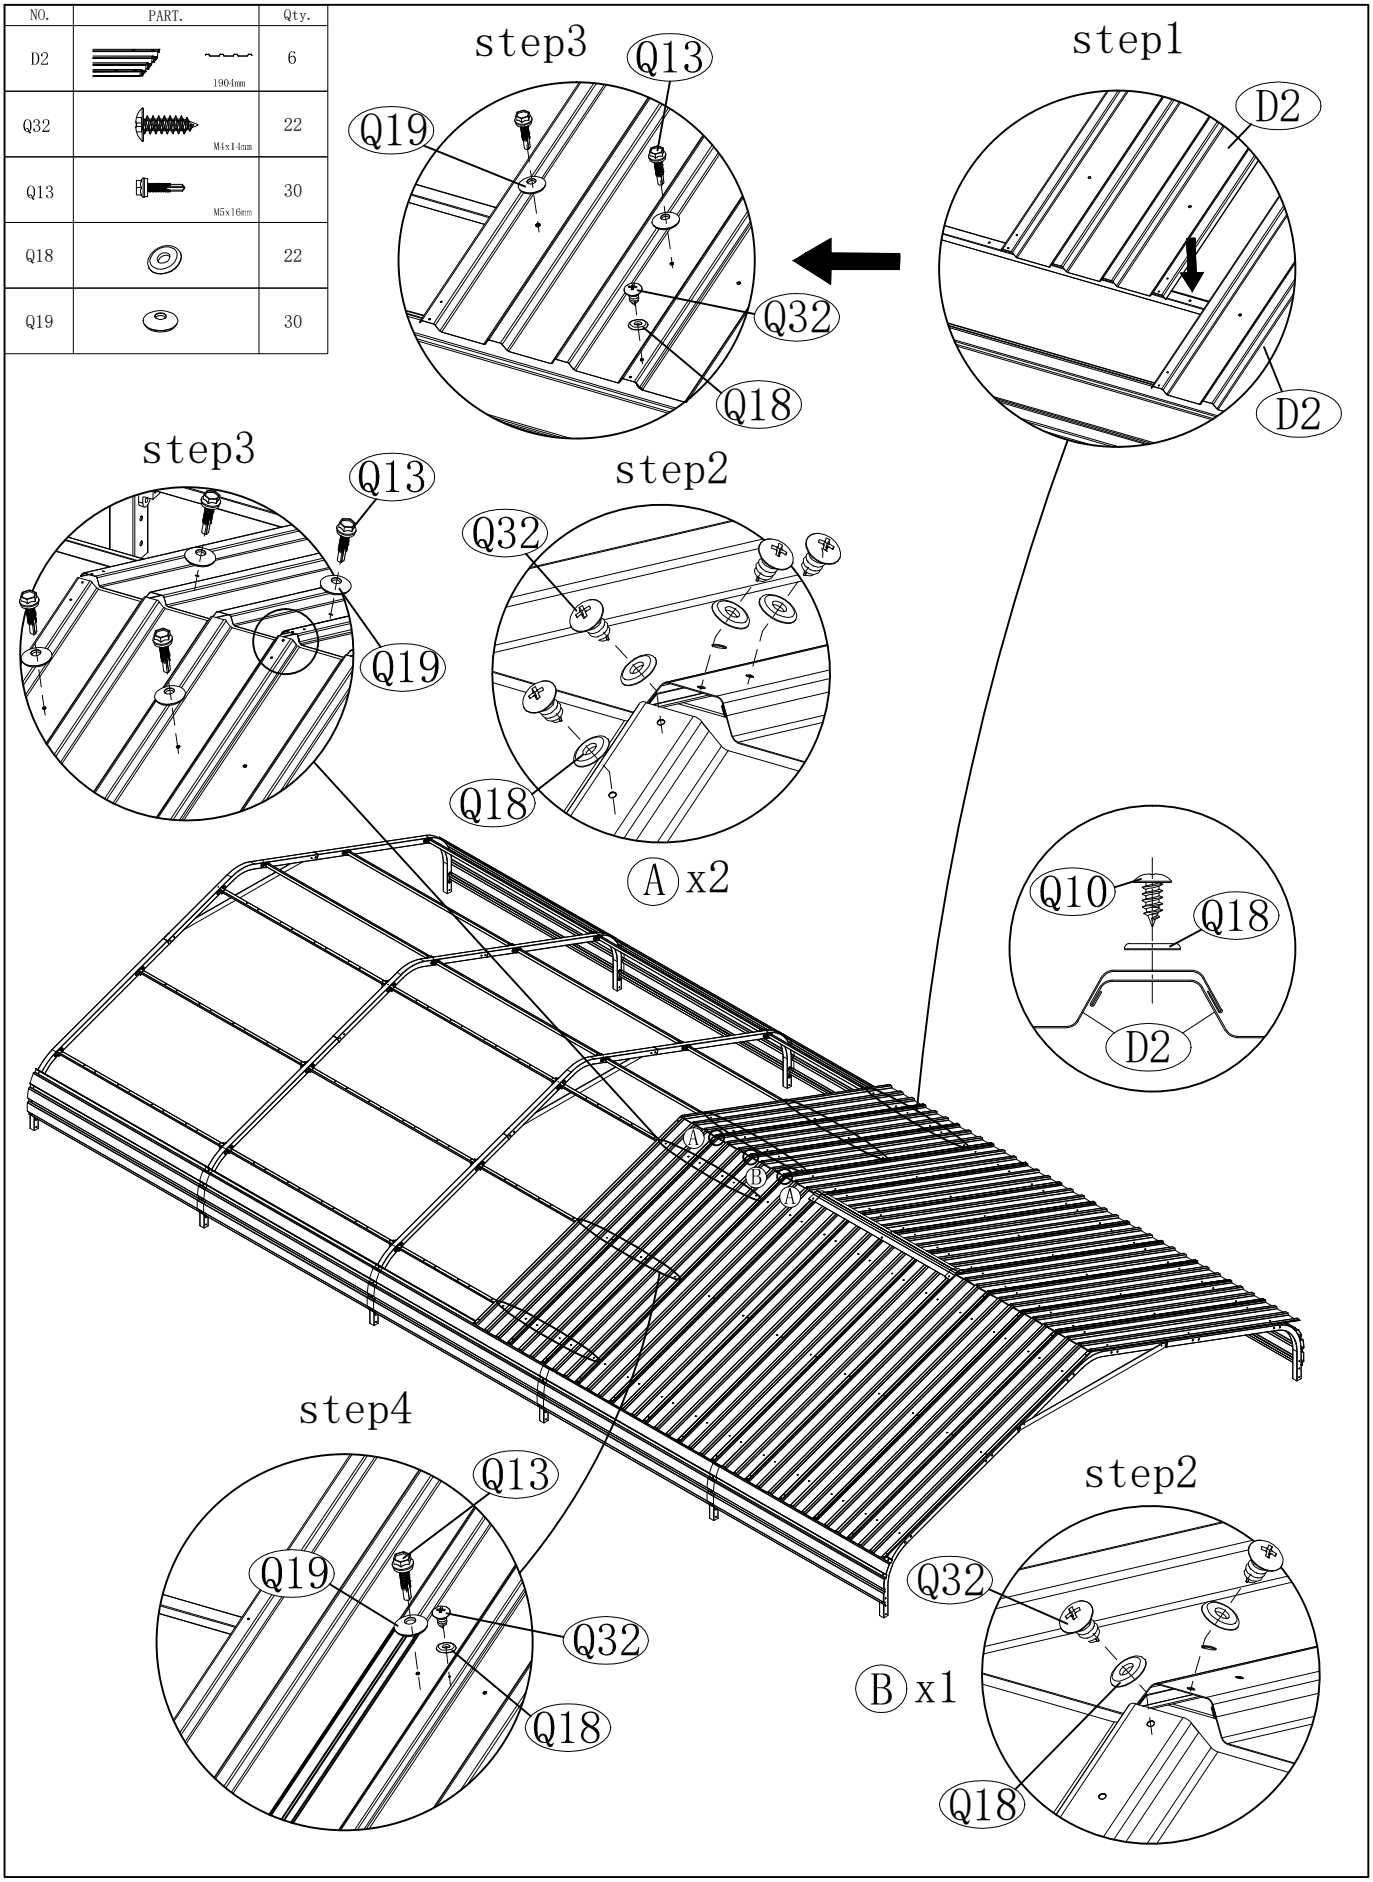


NO.	PART.	Qty.
7	 1256mm	1
Q32	 M4x14mm	2
Q18		2

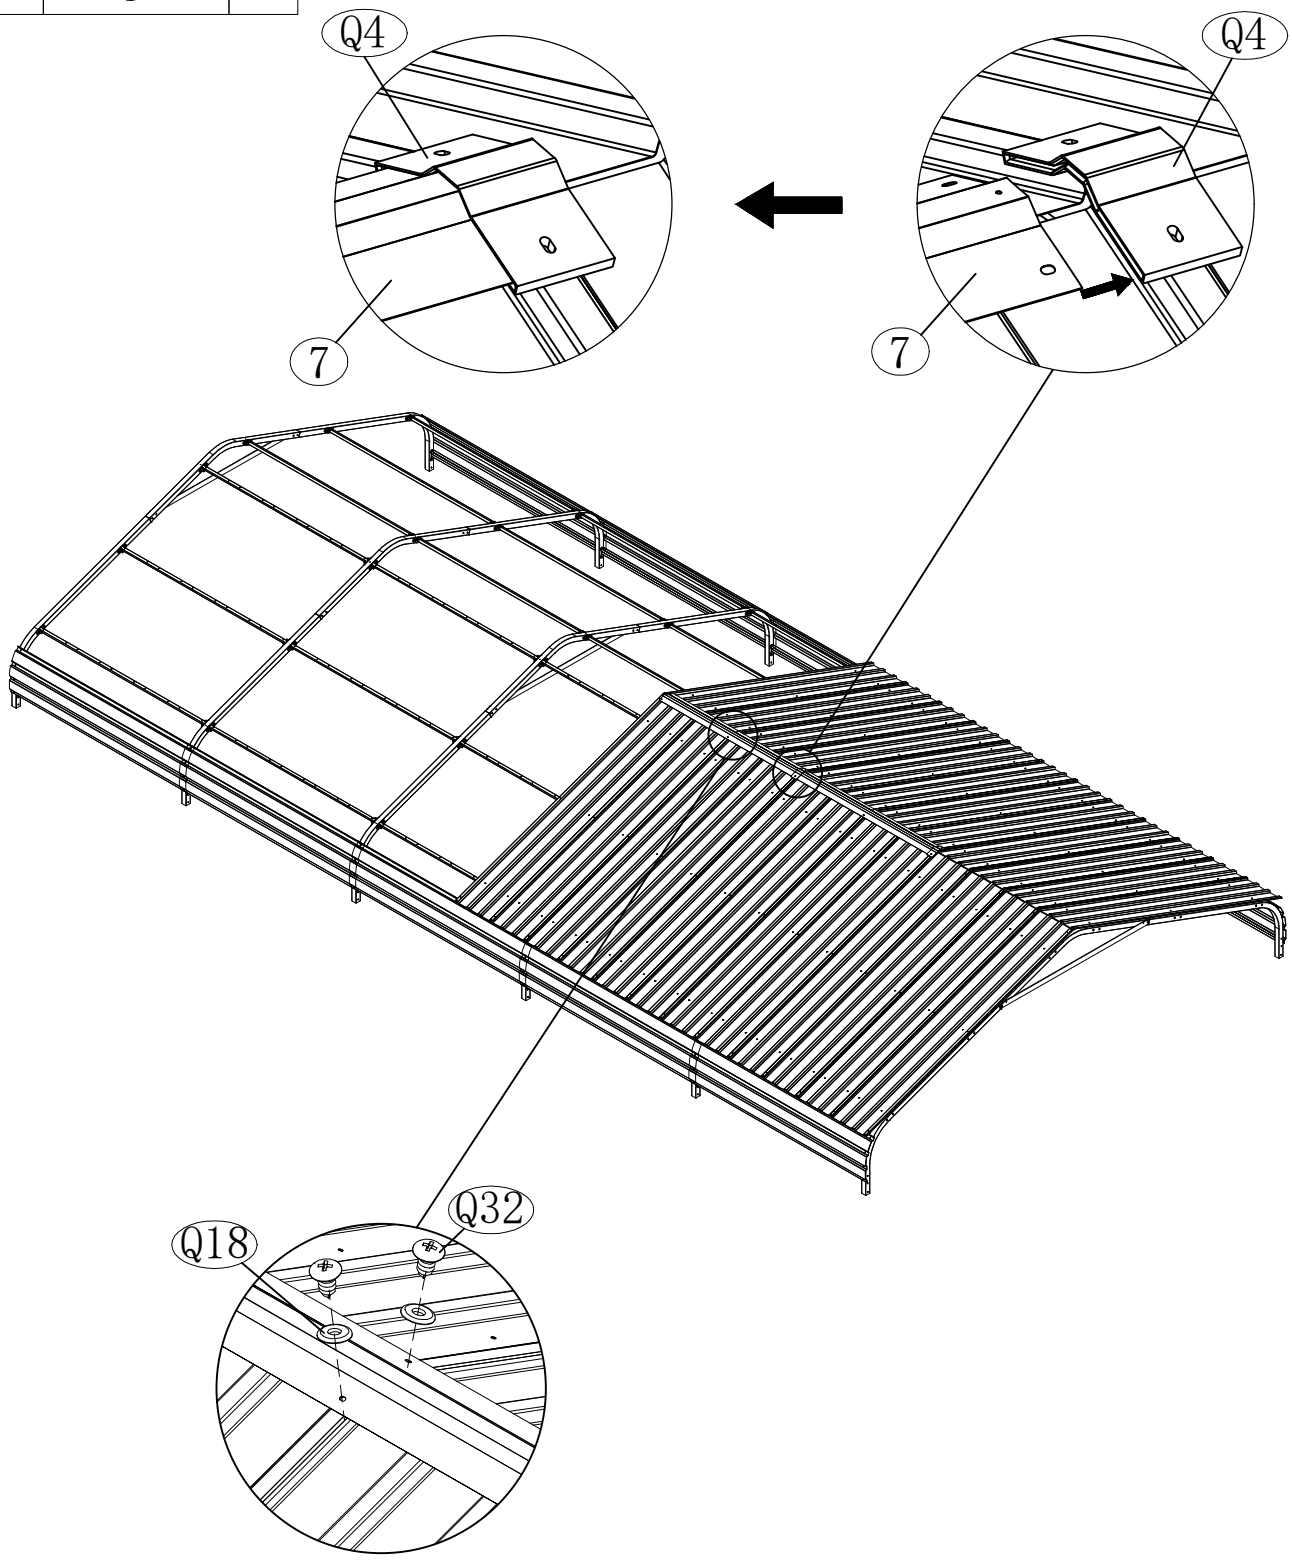


NO.	PART.	Qty.
D2	1904mm	2
Q4		1
Q32	M4x14mm	8
Q13	M5x16mm	10
Q18		8
Q19		10

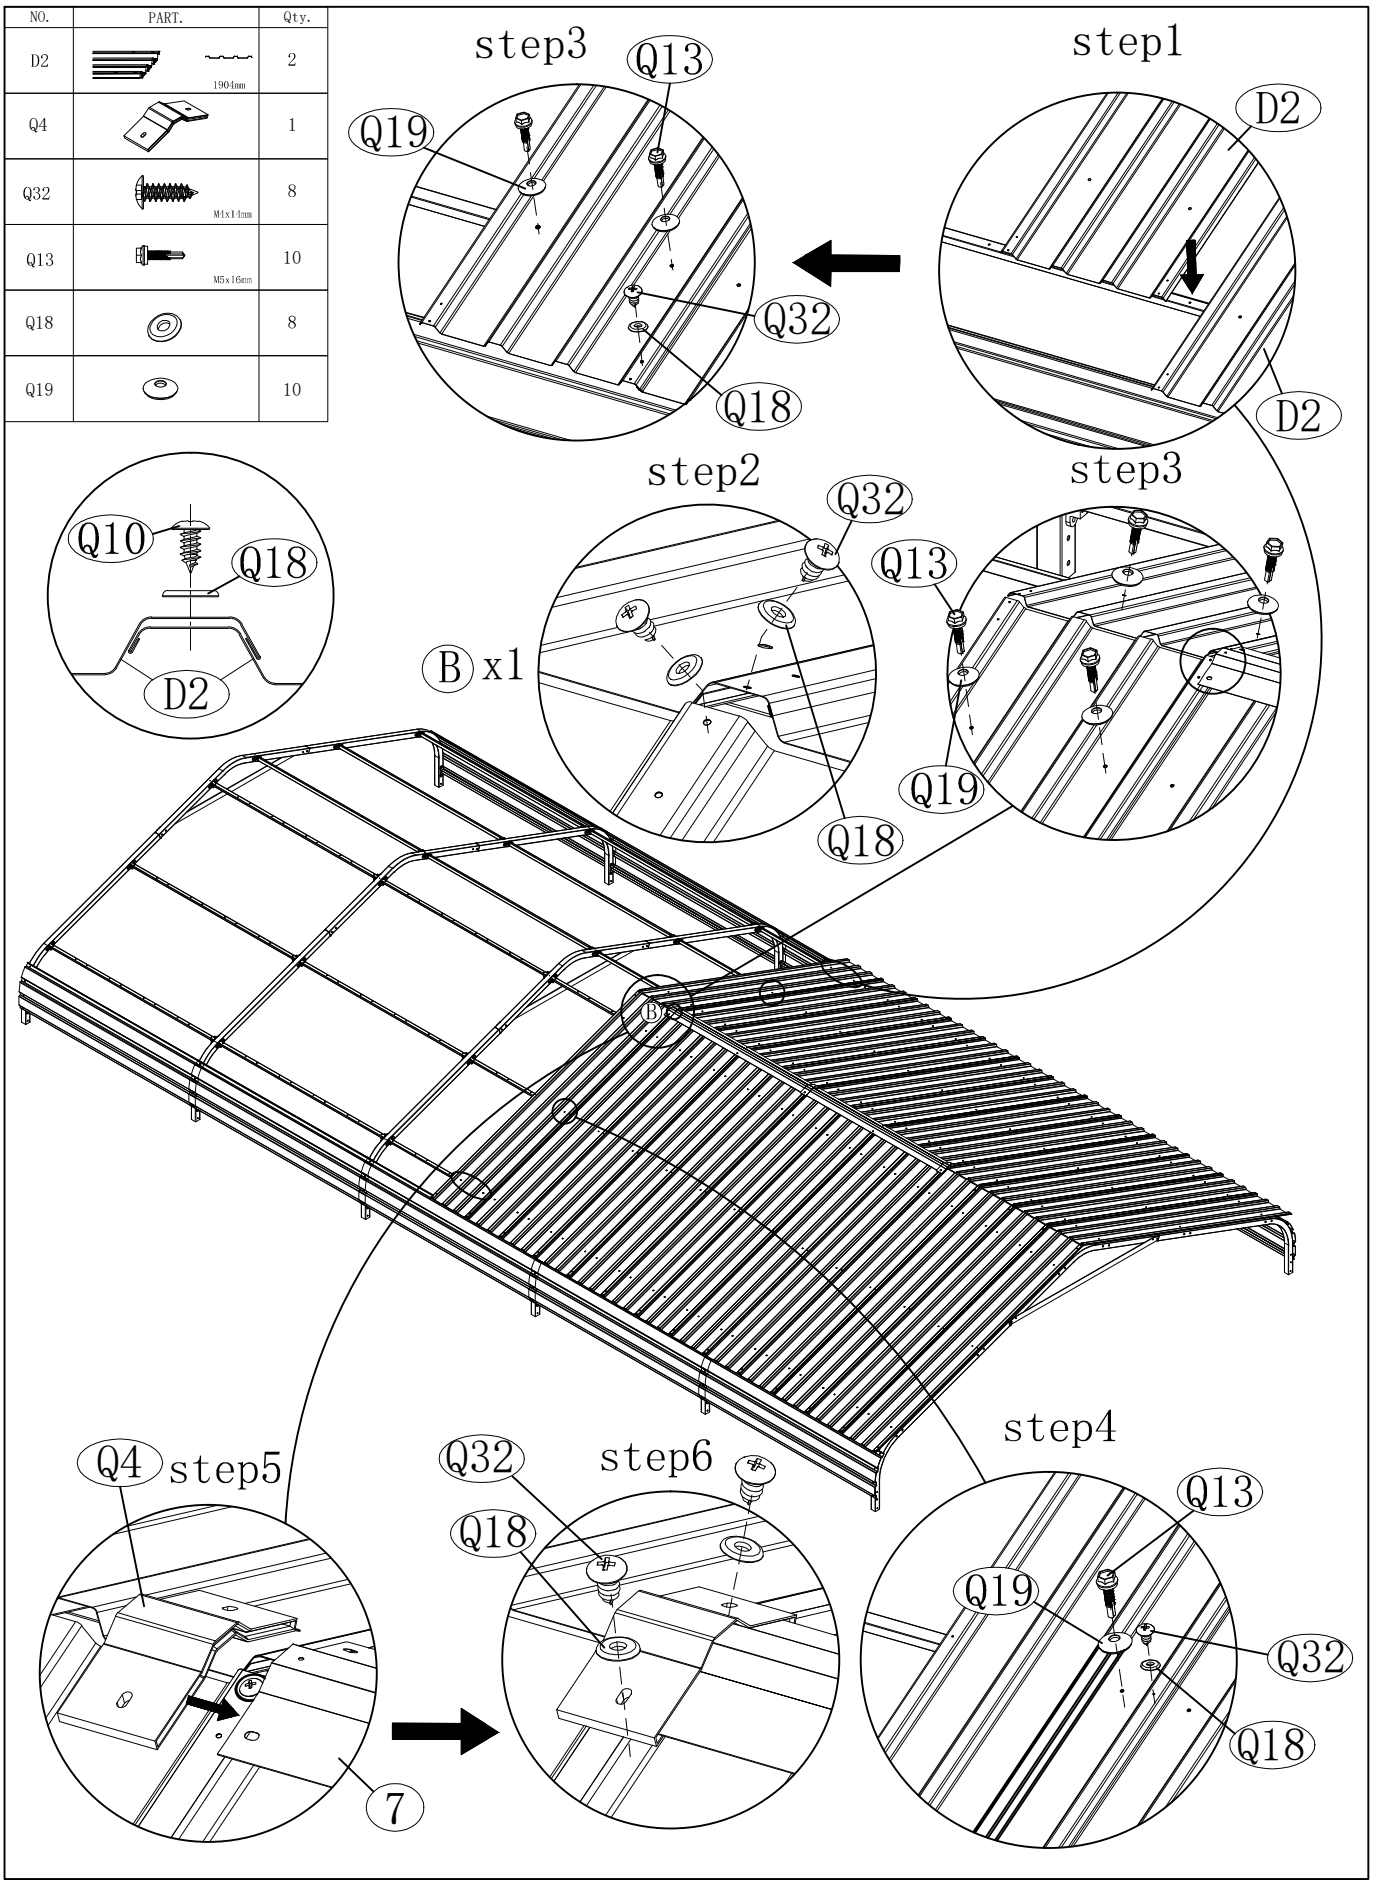


NO.	PART.	Qty.
D2	1904mm	6
Q32	M4x14mm	22
Q13	M5x16mm	30
Q18		22
Q19		30

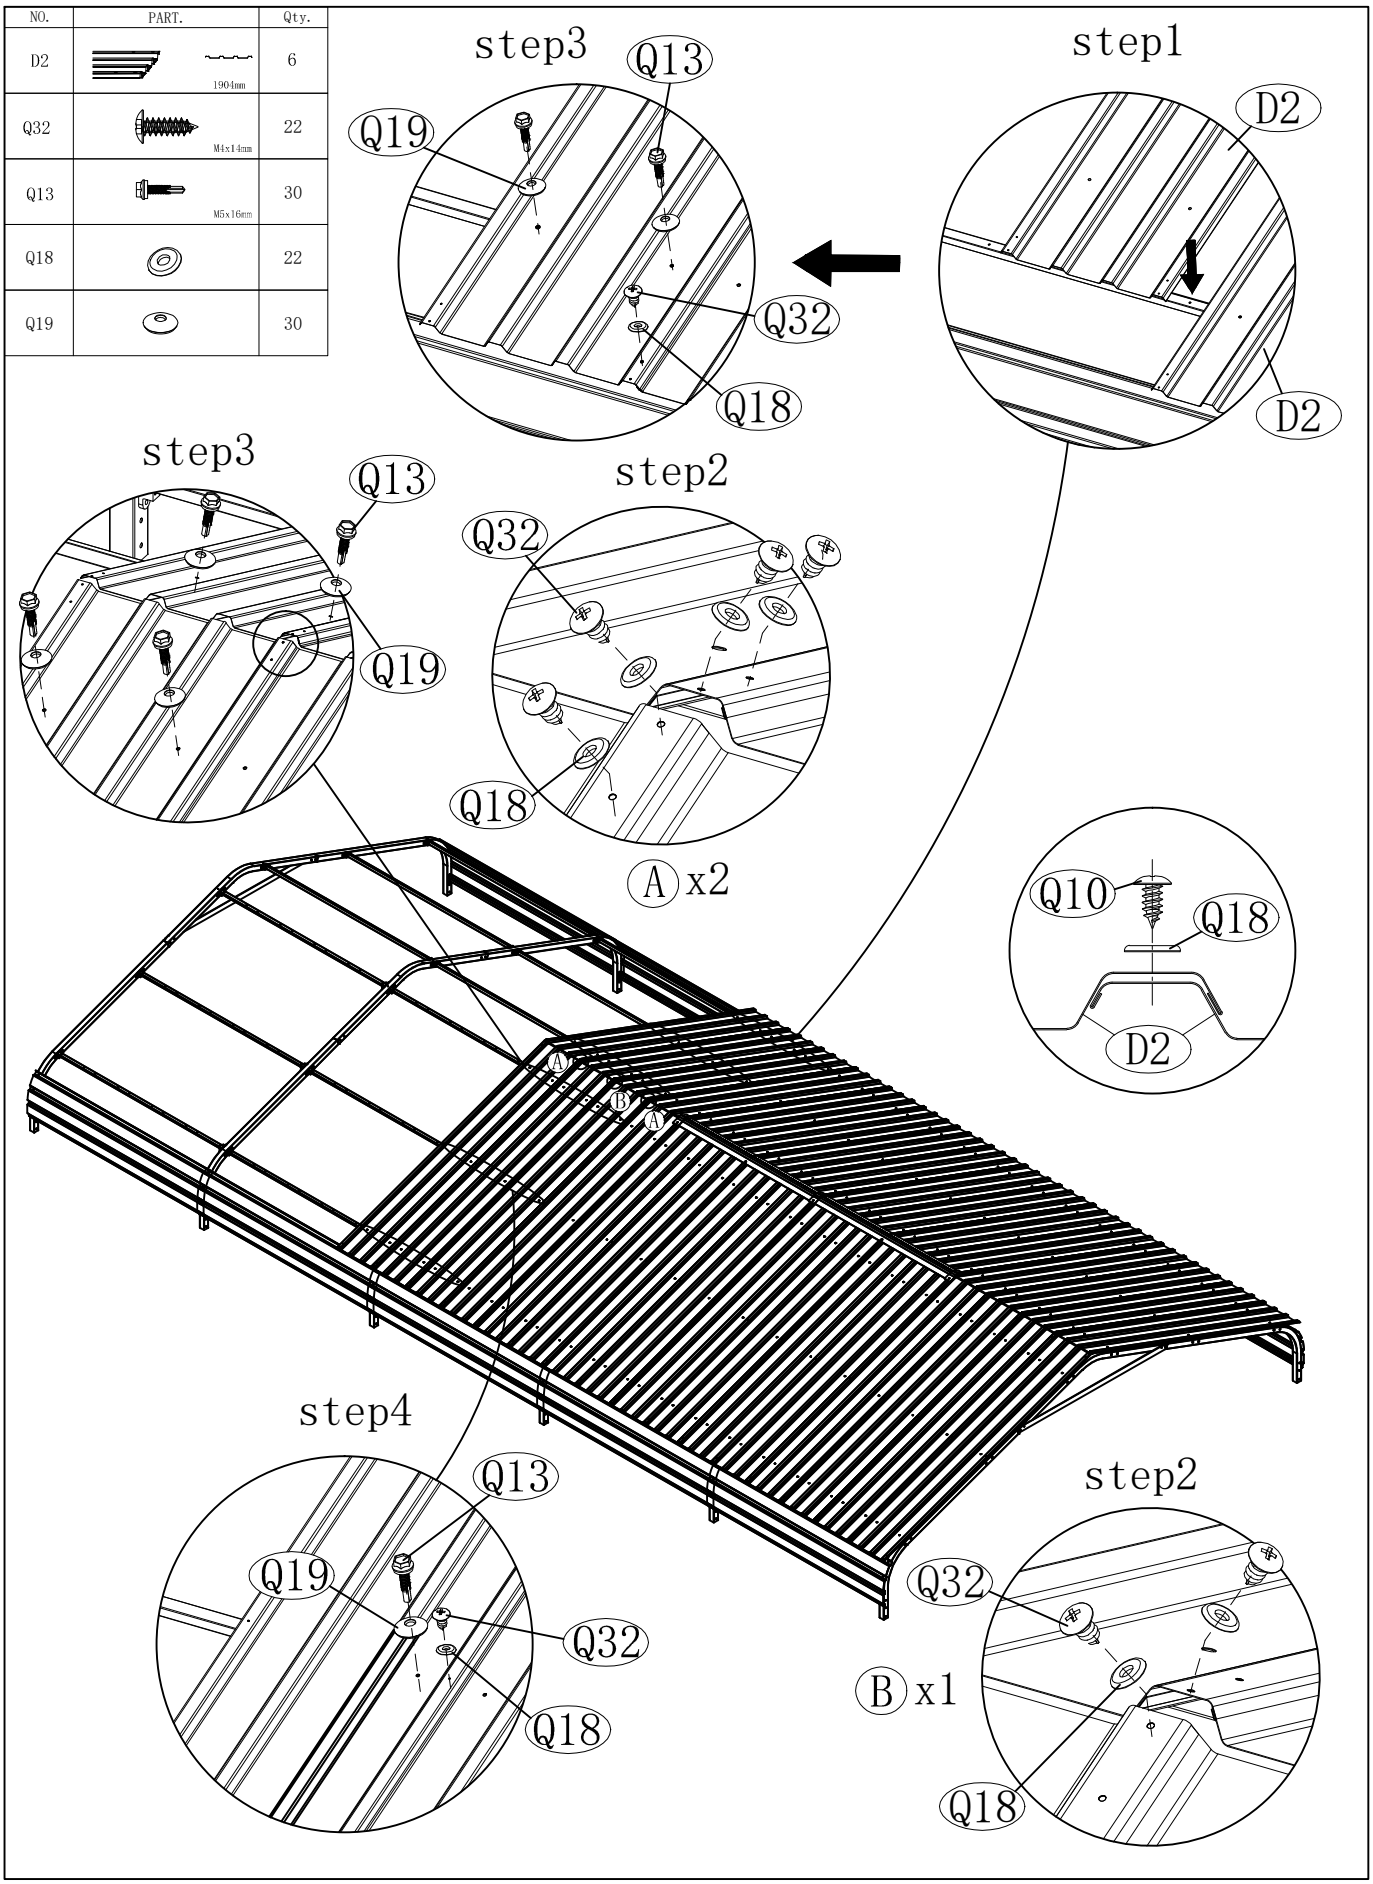


NO.	PART.	Qty.
7	 1256mm	1
Q32	 M4x14mm	2
Q18		2

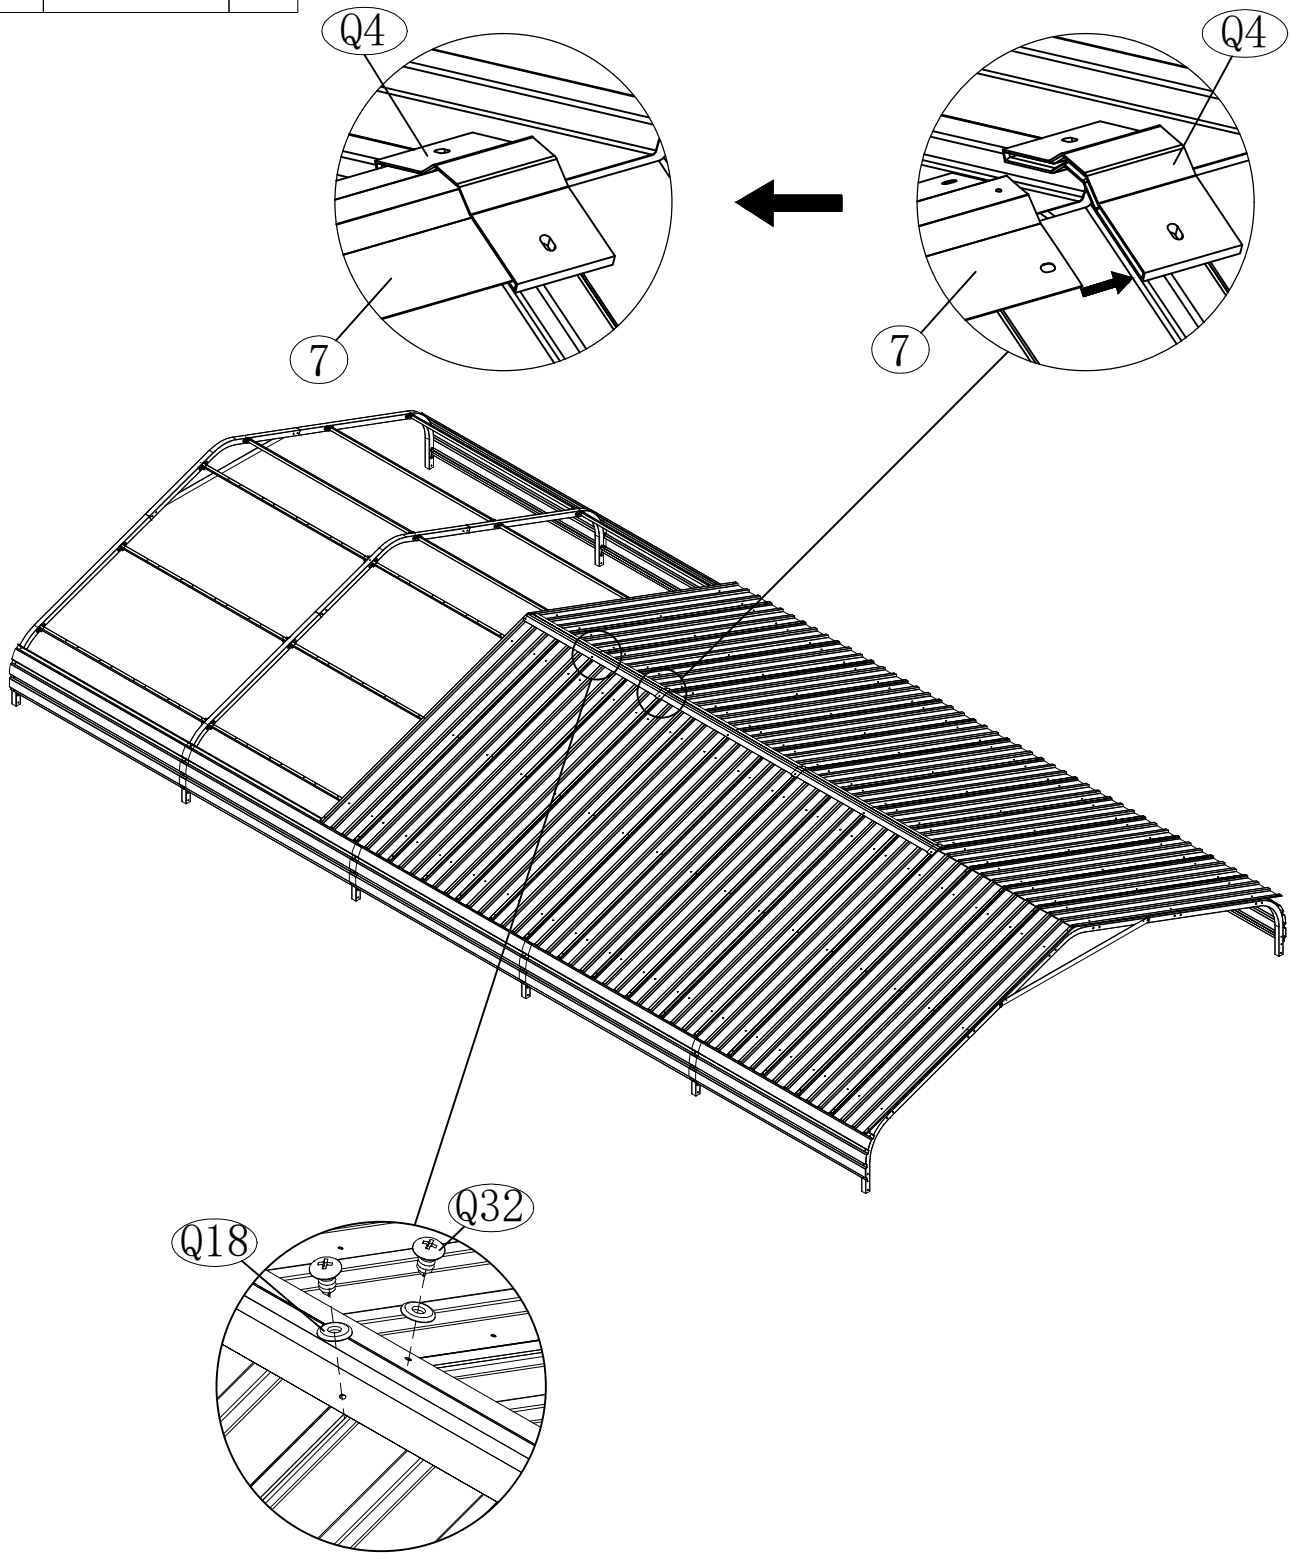


NO.	PART.	Qty.
D2	1904mm	2
Q4		1
Q32	M4x14mm	8
Q13	M5x16mm	10
Q18		8
Q19		10

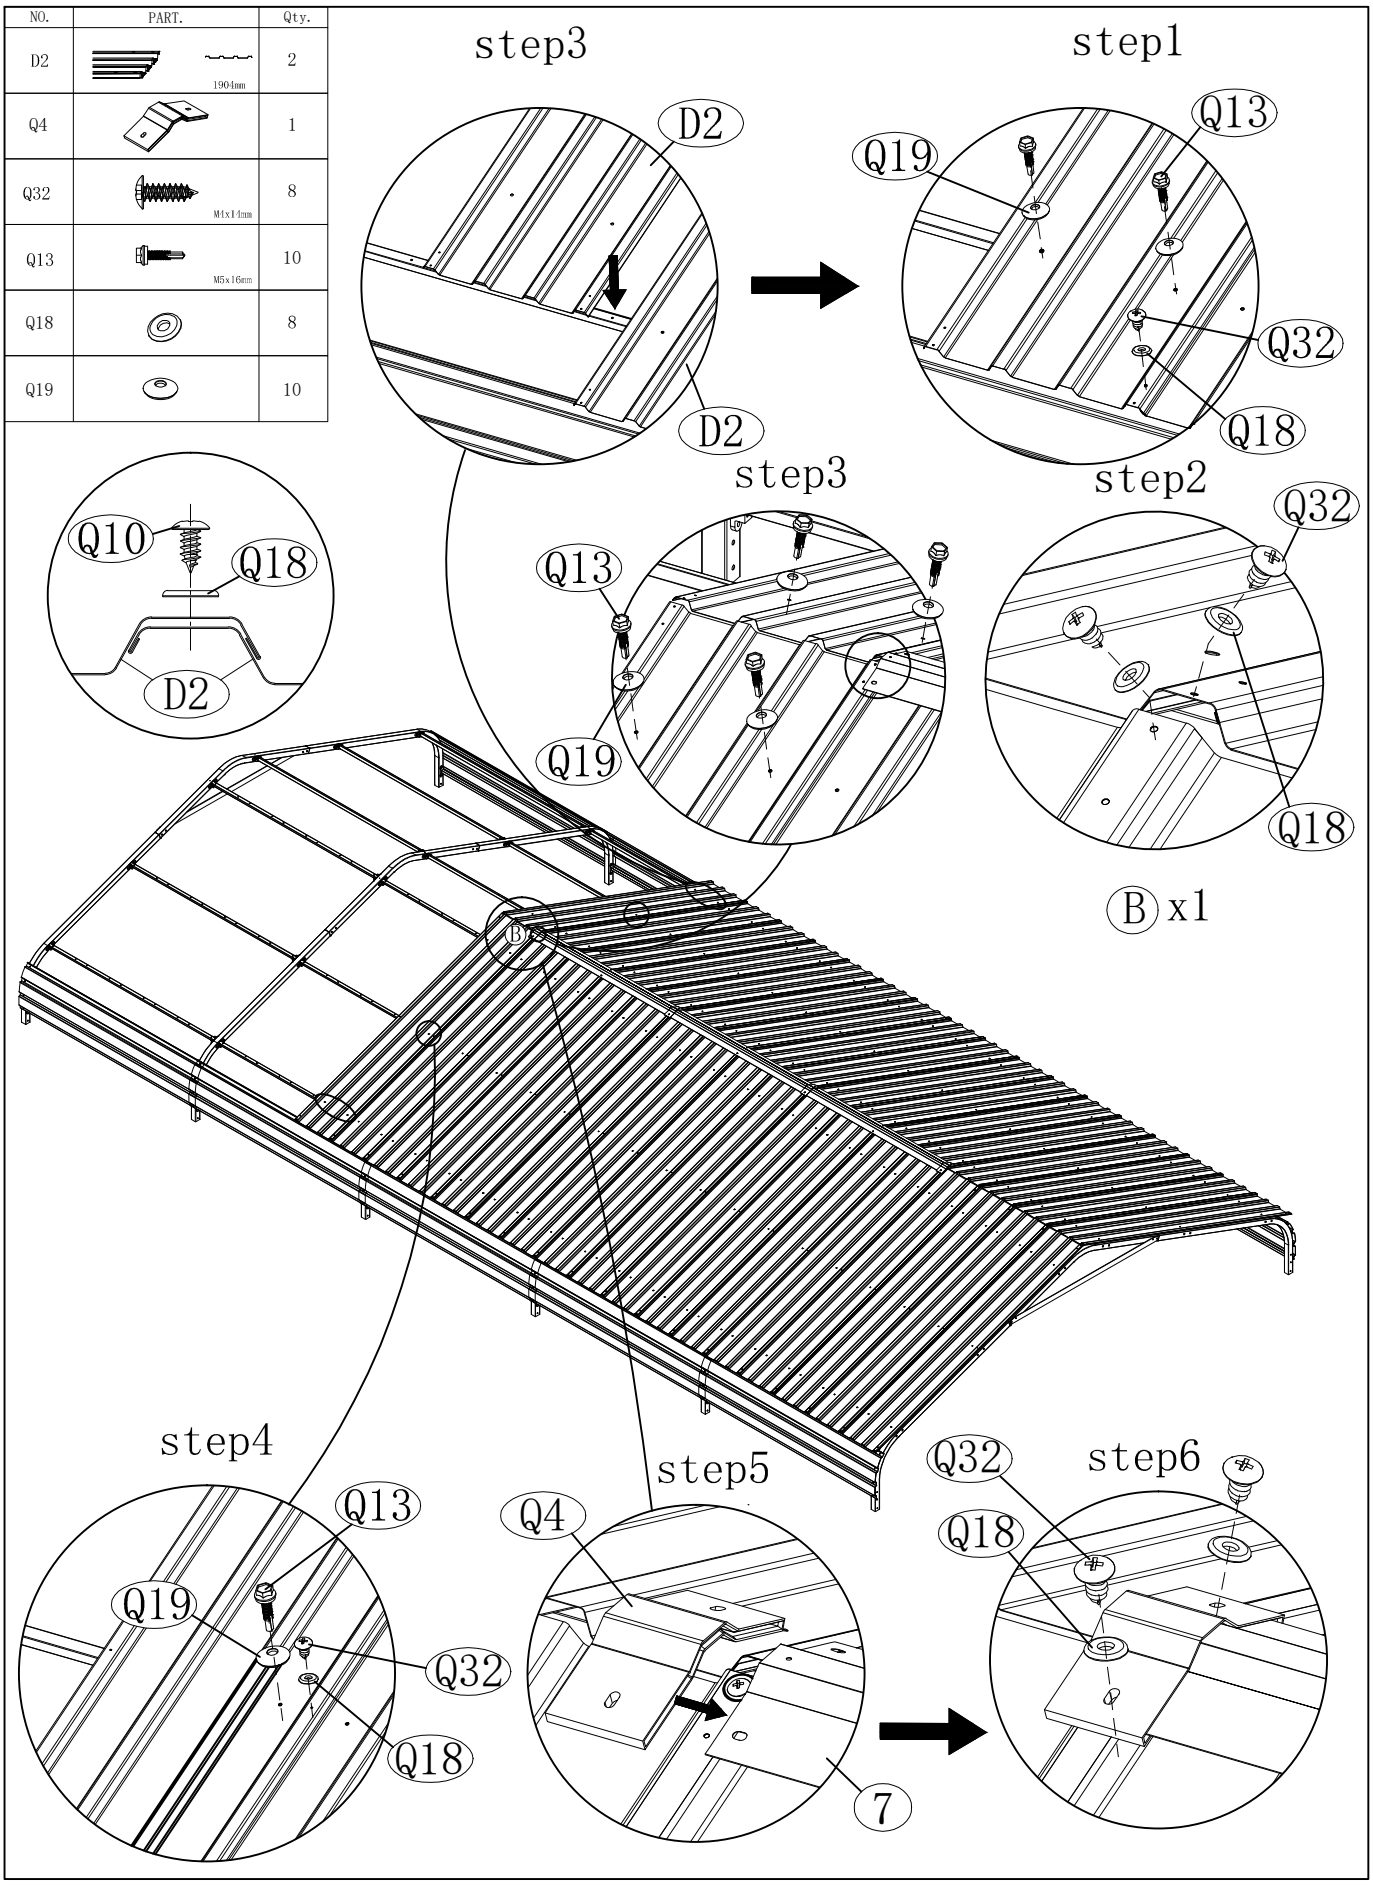


NO.	PART.	Qty.
D2	1904mm	6
Q32	M4x14mm	22
Q13	M5x16mm	30
Q18		22
Q19		30

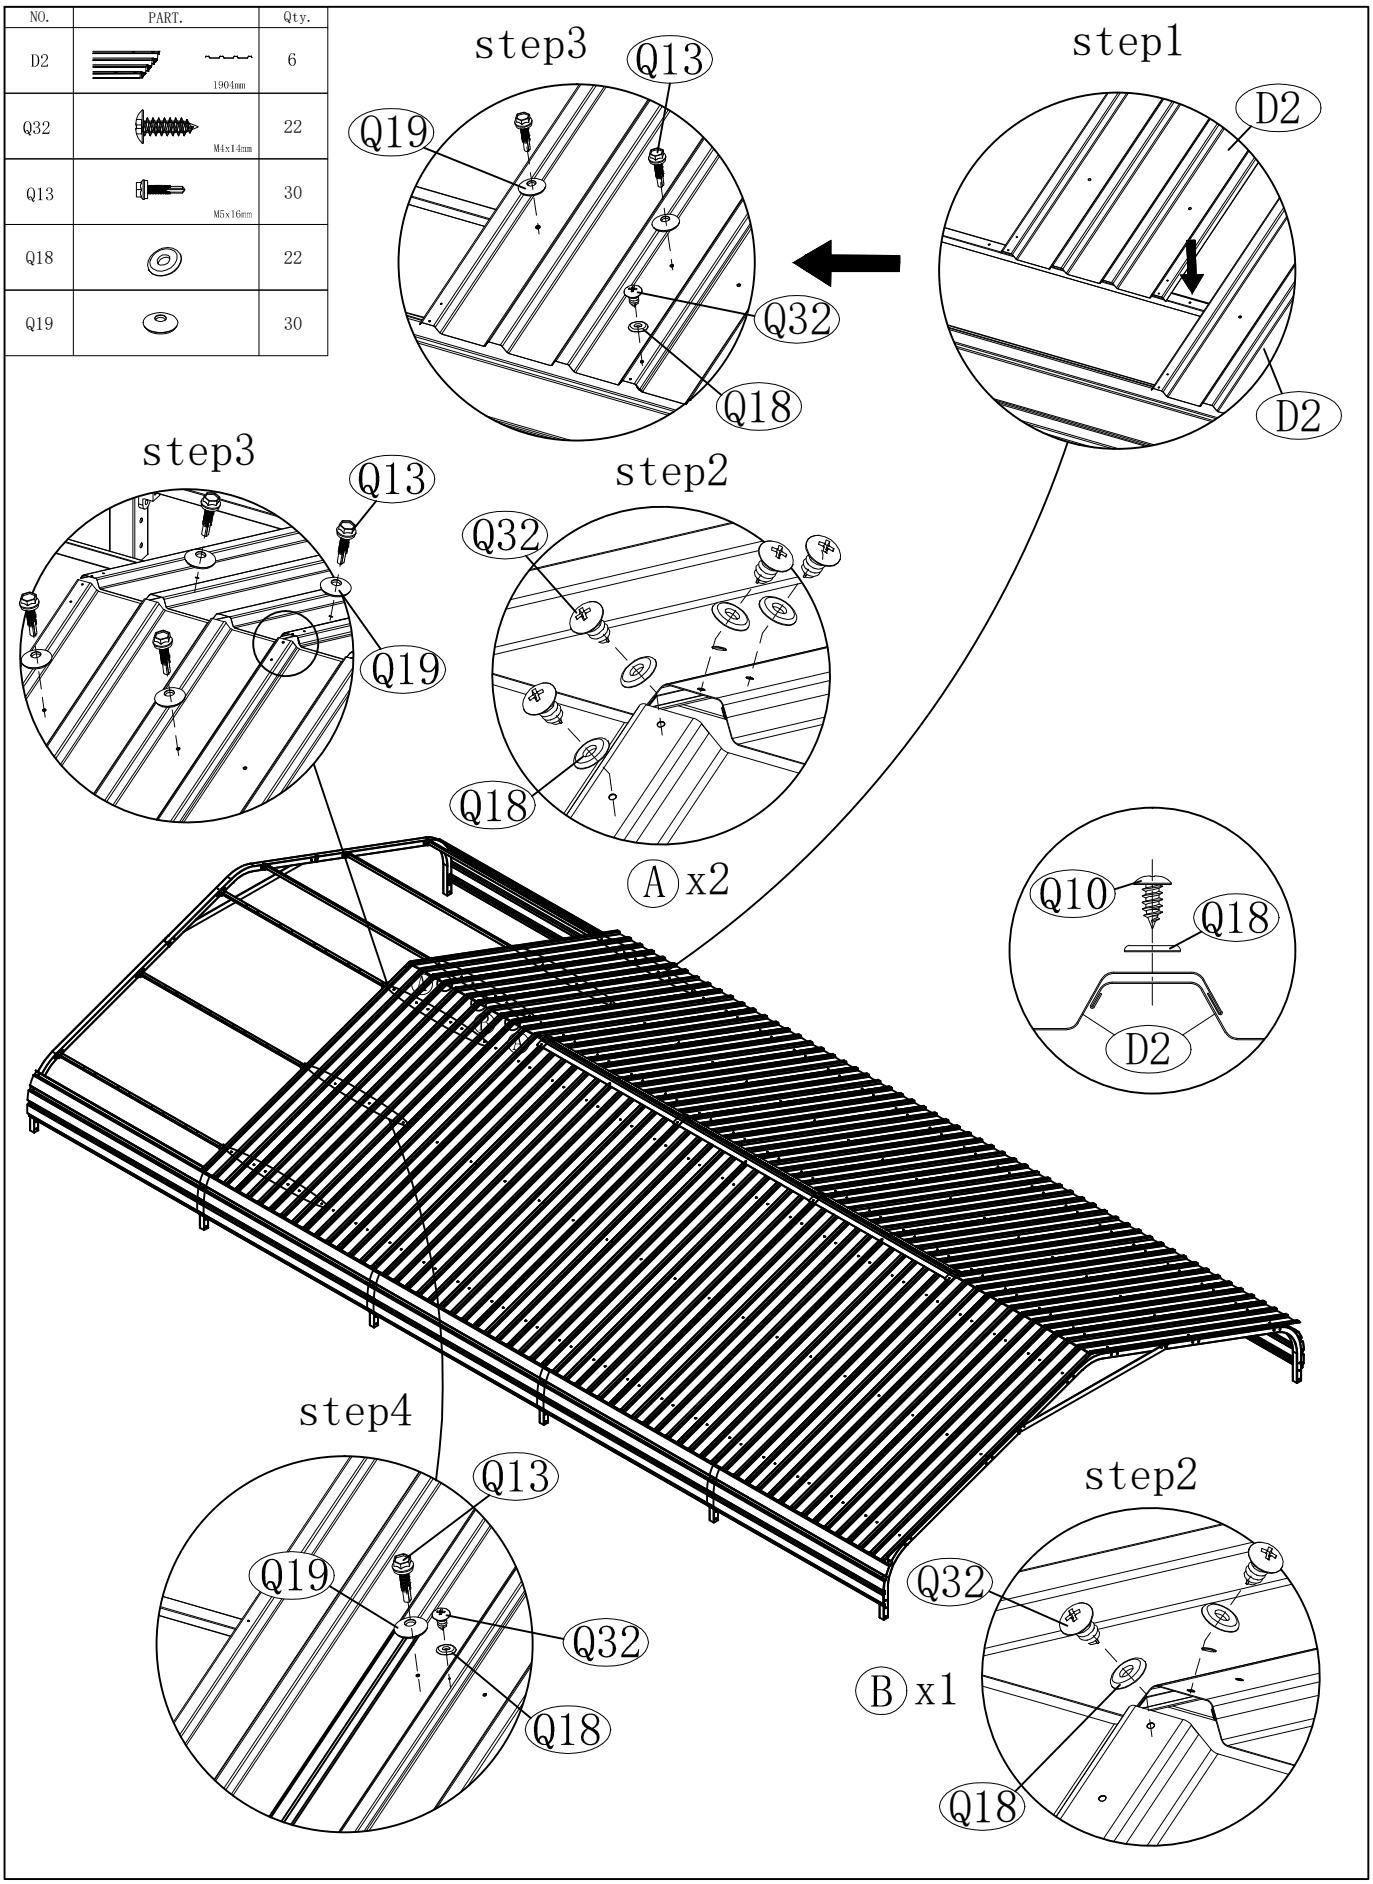


NO.	PART.	Qty.
7	 1256mm	1
Q32	 M4x14mm	2
Q18		2

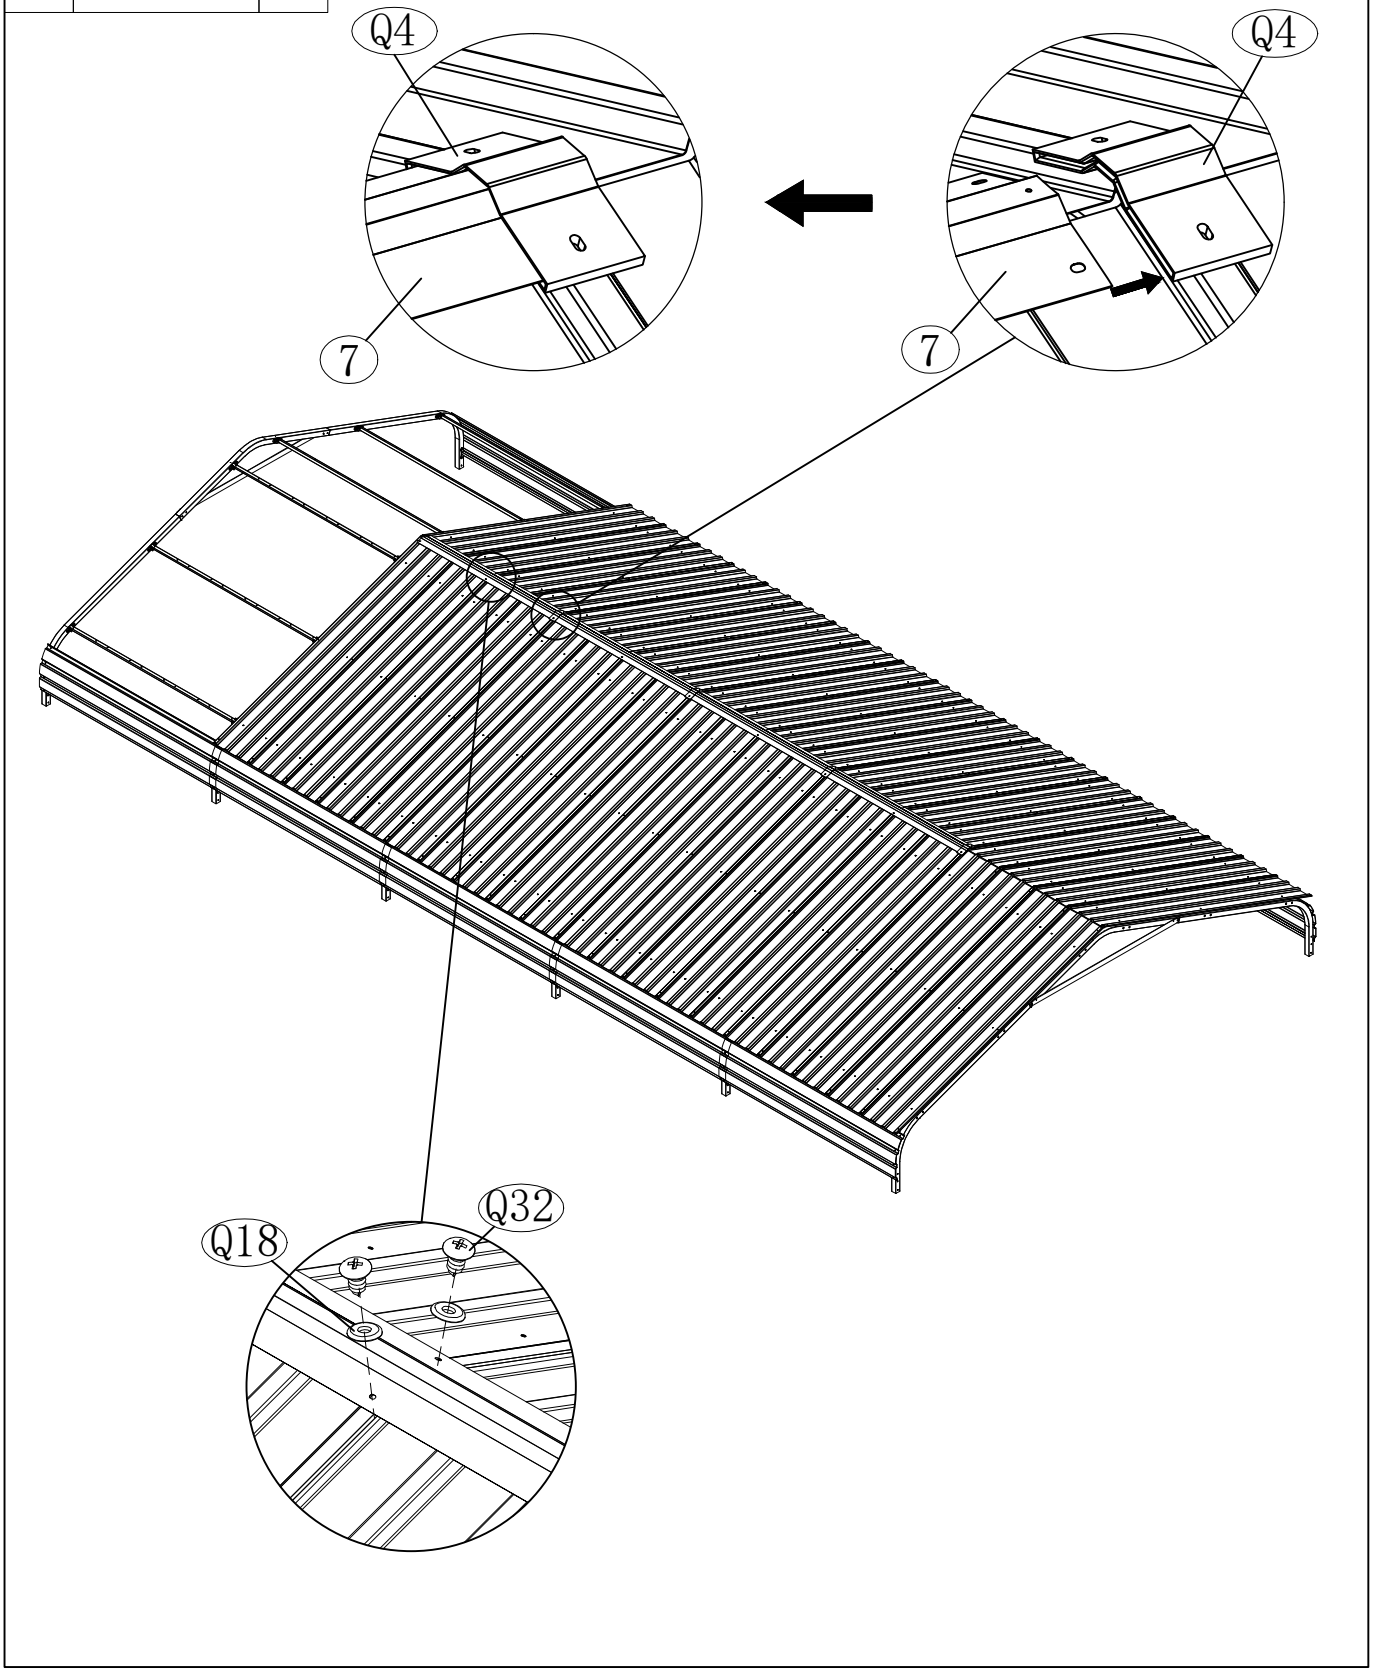


NO.	PART.	Qty.
D2	1904mm	2
Q4		1
Q32	M4x14mm	8
Q13	M5x16mm	10
Q18		8
Q19		10

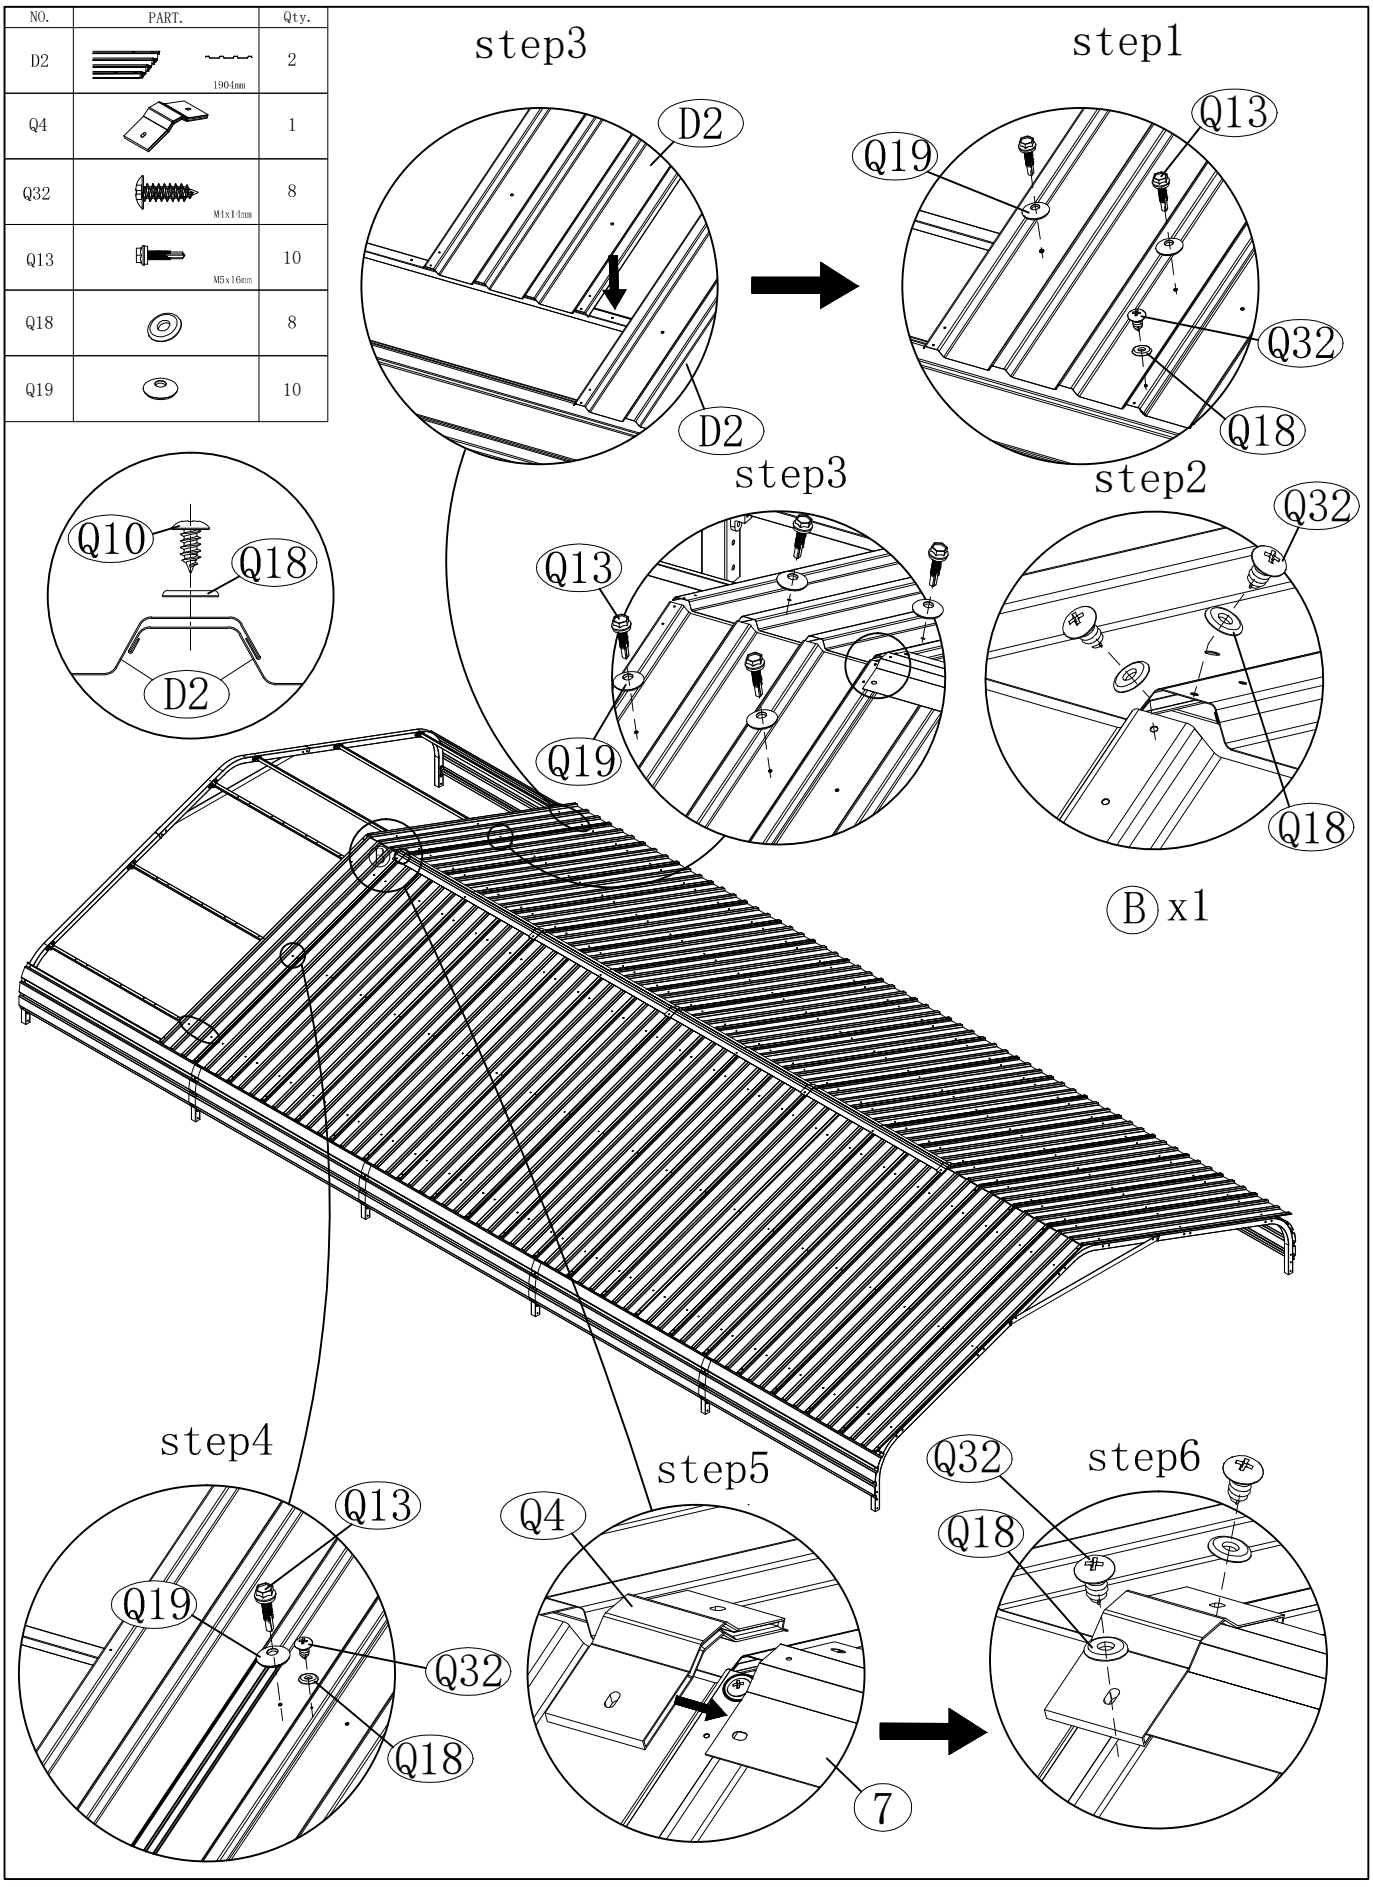


NO.	PART.	Qty.
D2	1904mm	6
Q32	M4x14mm	22
Q13	M5x16mm	30
Q18		20
Q19		30

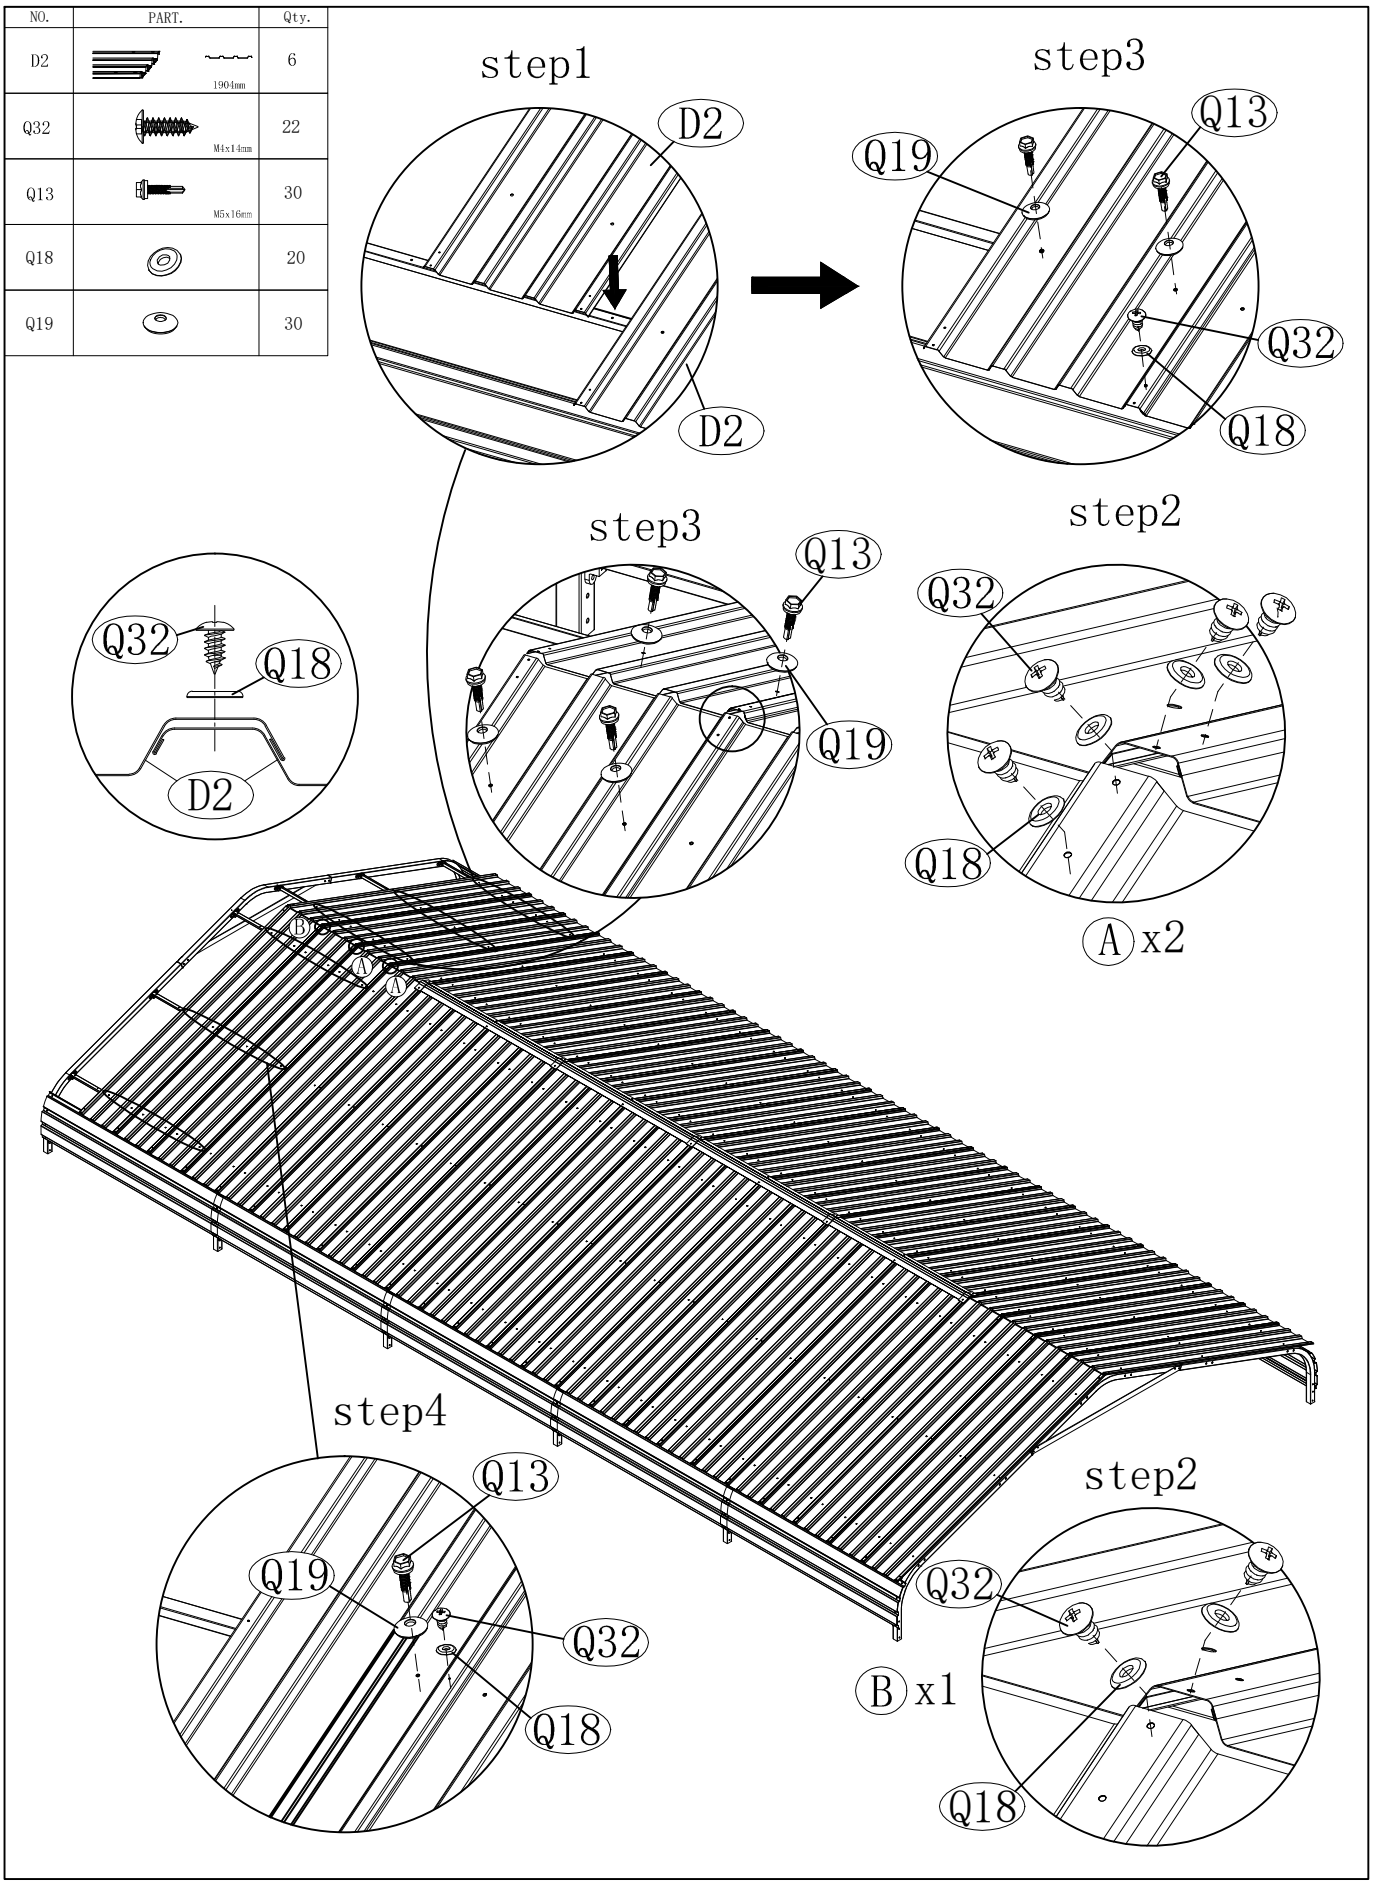


NO.	PART.	Qty.
D2	1904mm	2
Q32	M4x14mm	8
Q13	M5x16mm	10
Q18		8
Q19		10

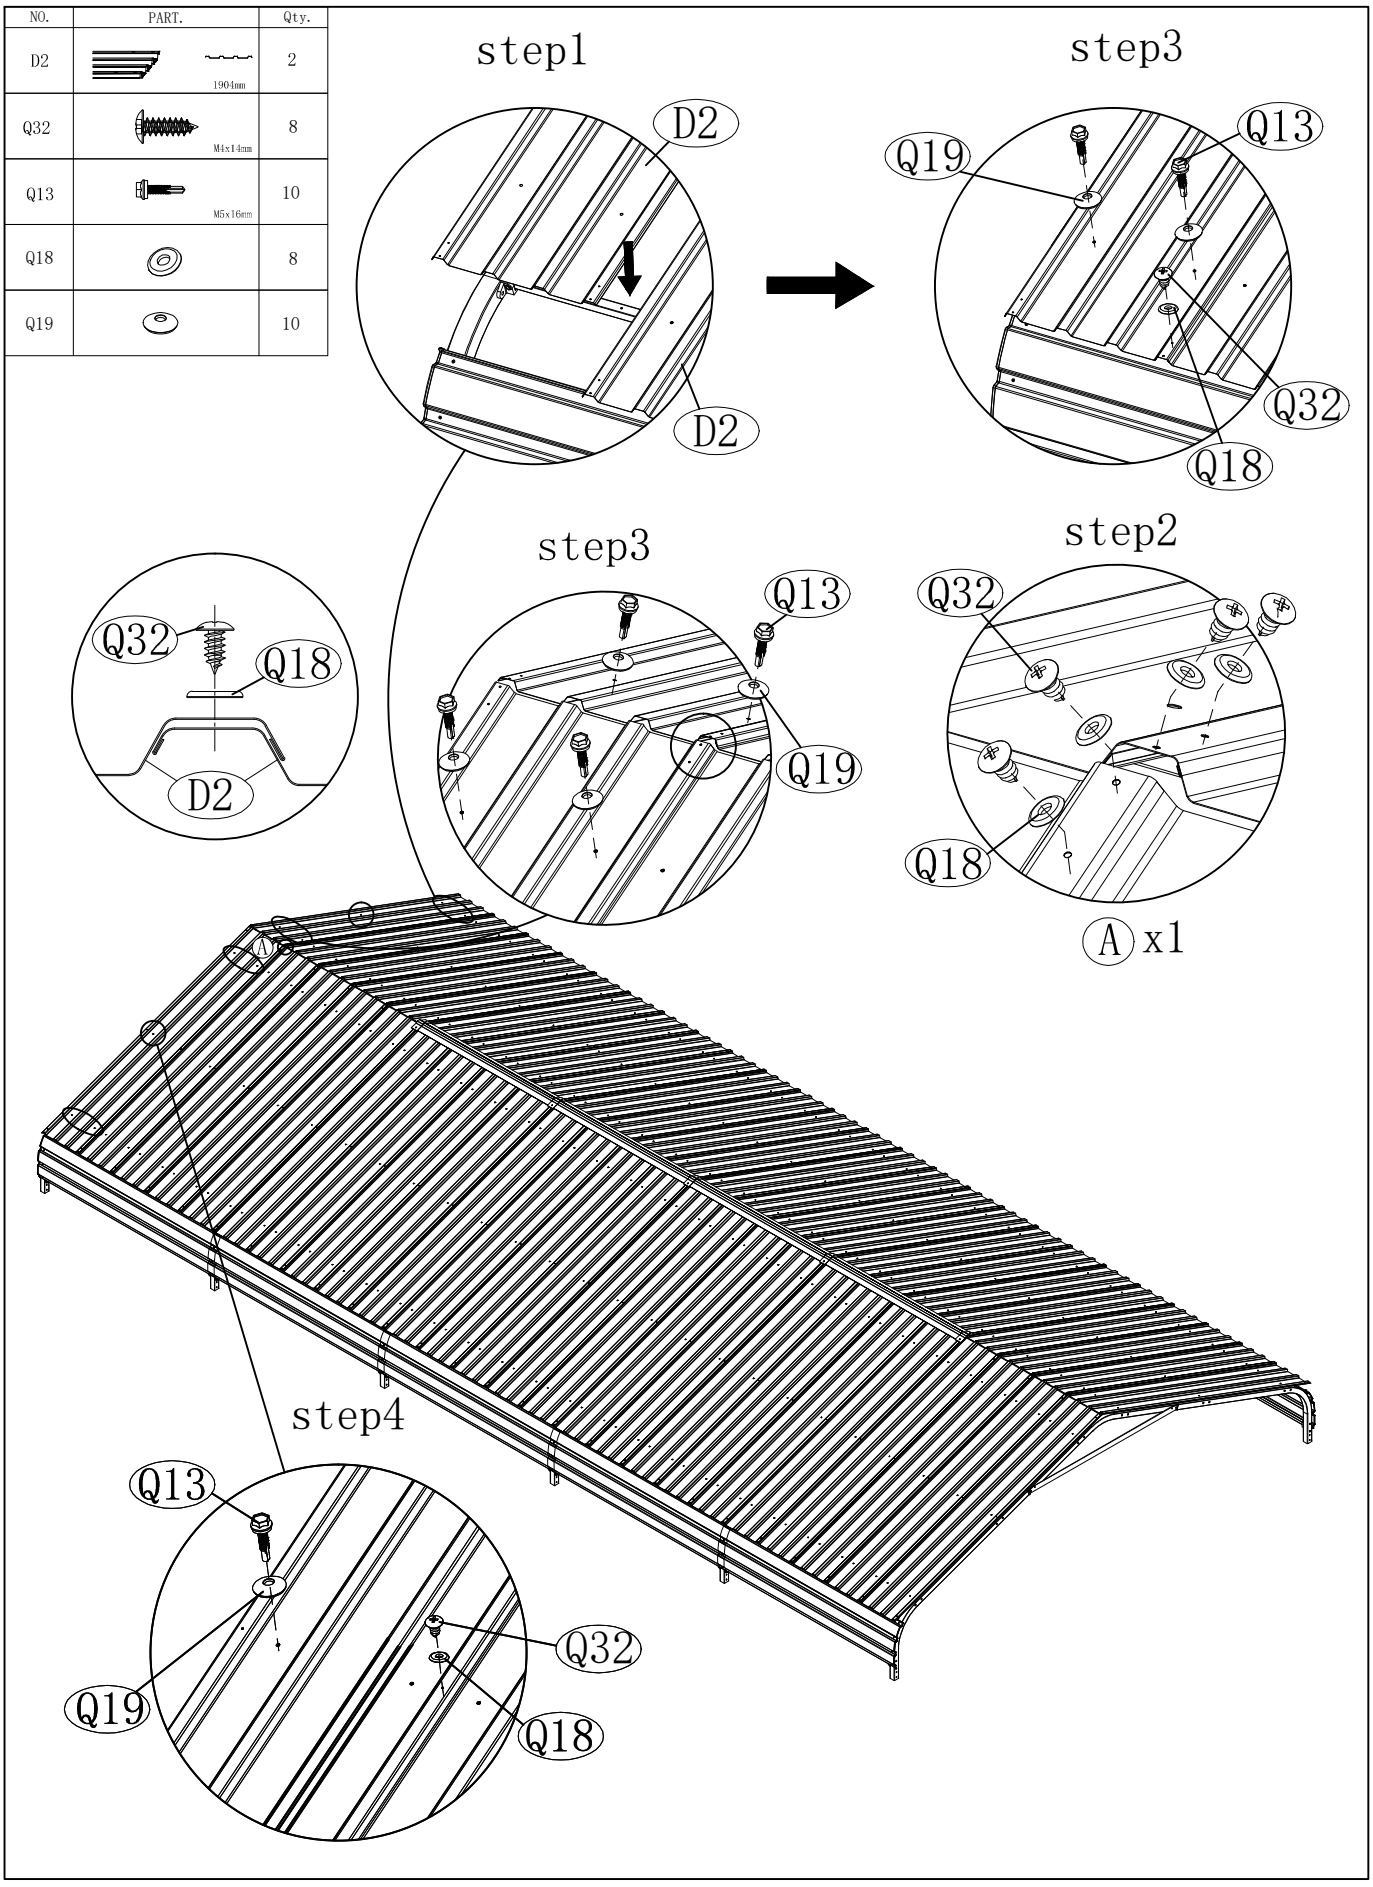

NO.	PART.	Qty.
9	1912mm	4
Q32	M4x14mm	12
Q18		12

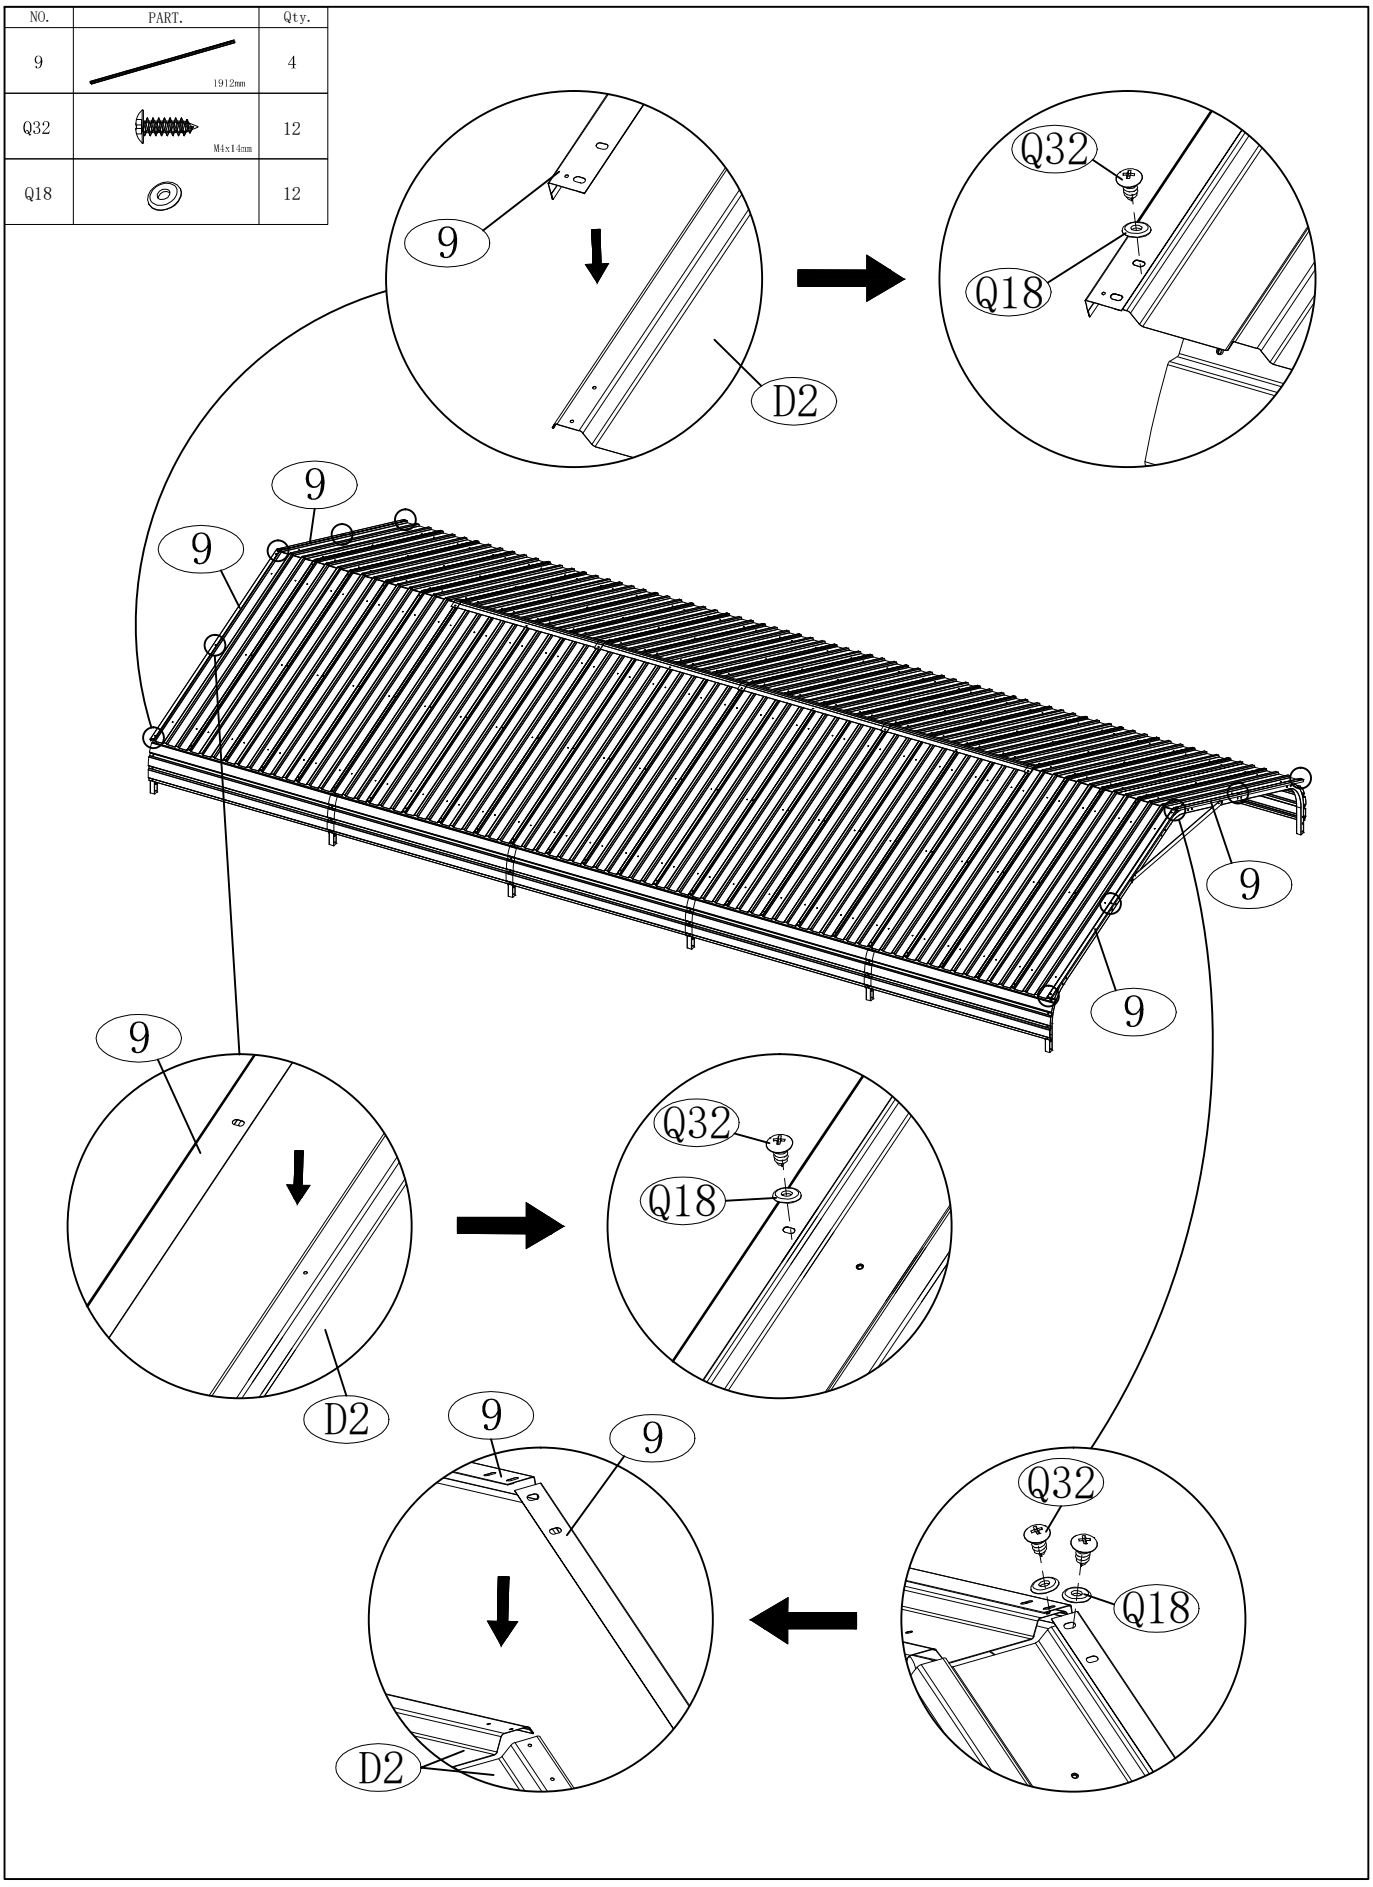


NO.	PART.	Qty.
7F	1274mm	1
7B	1592mm	1
Q32	M4x14mm	4
Q18		4

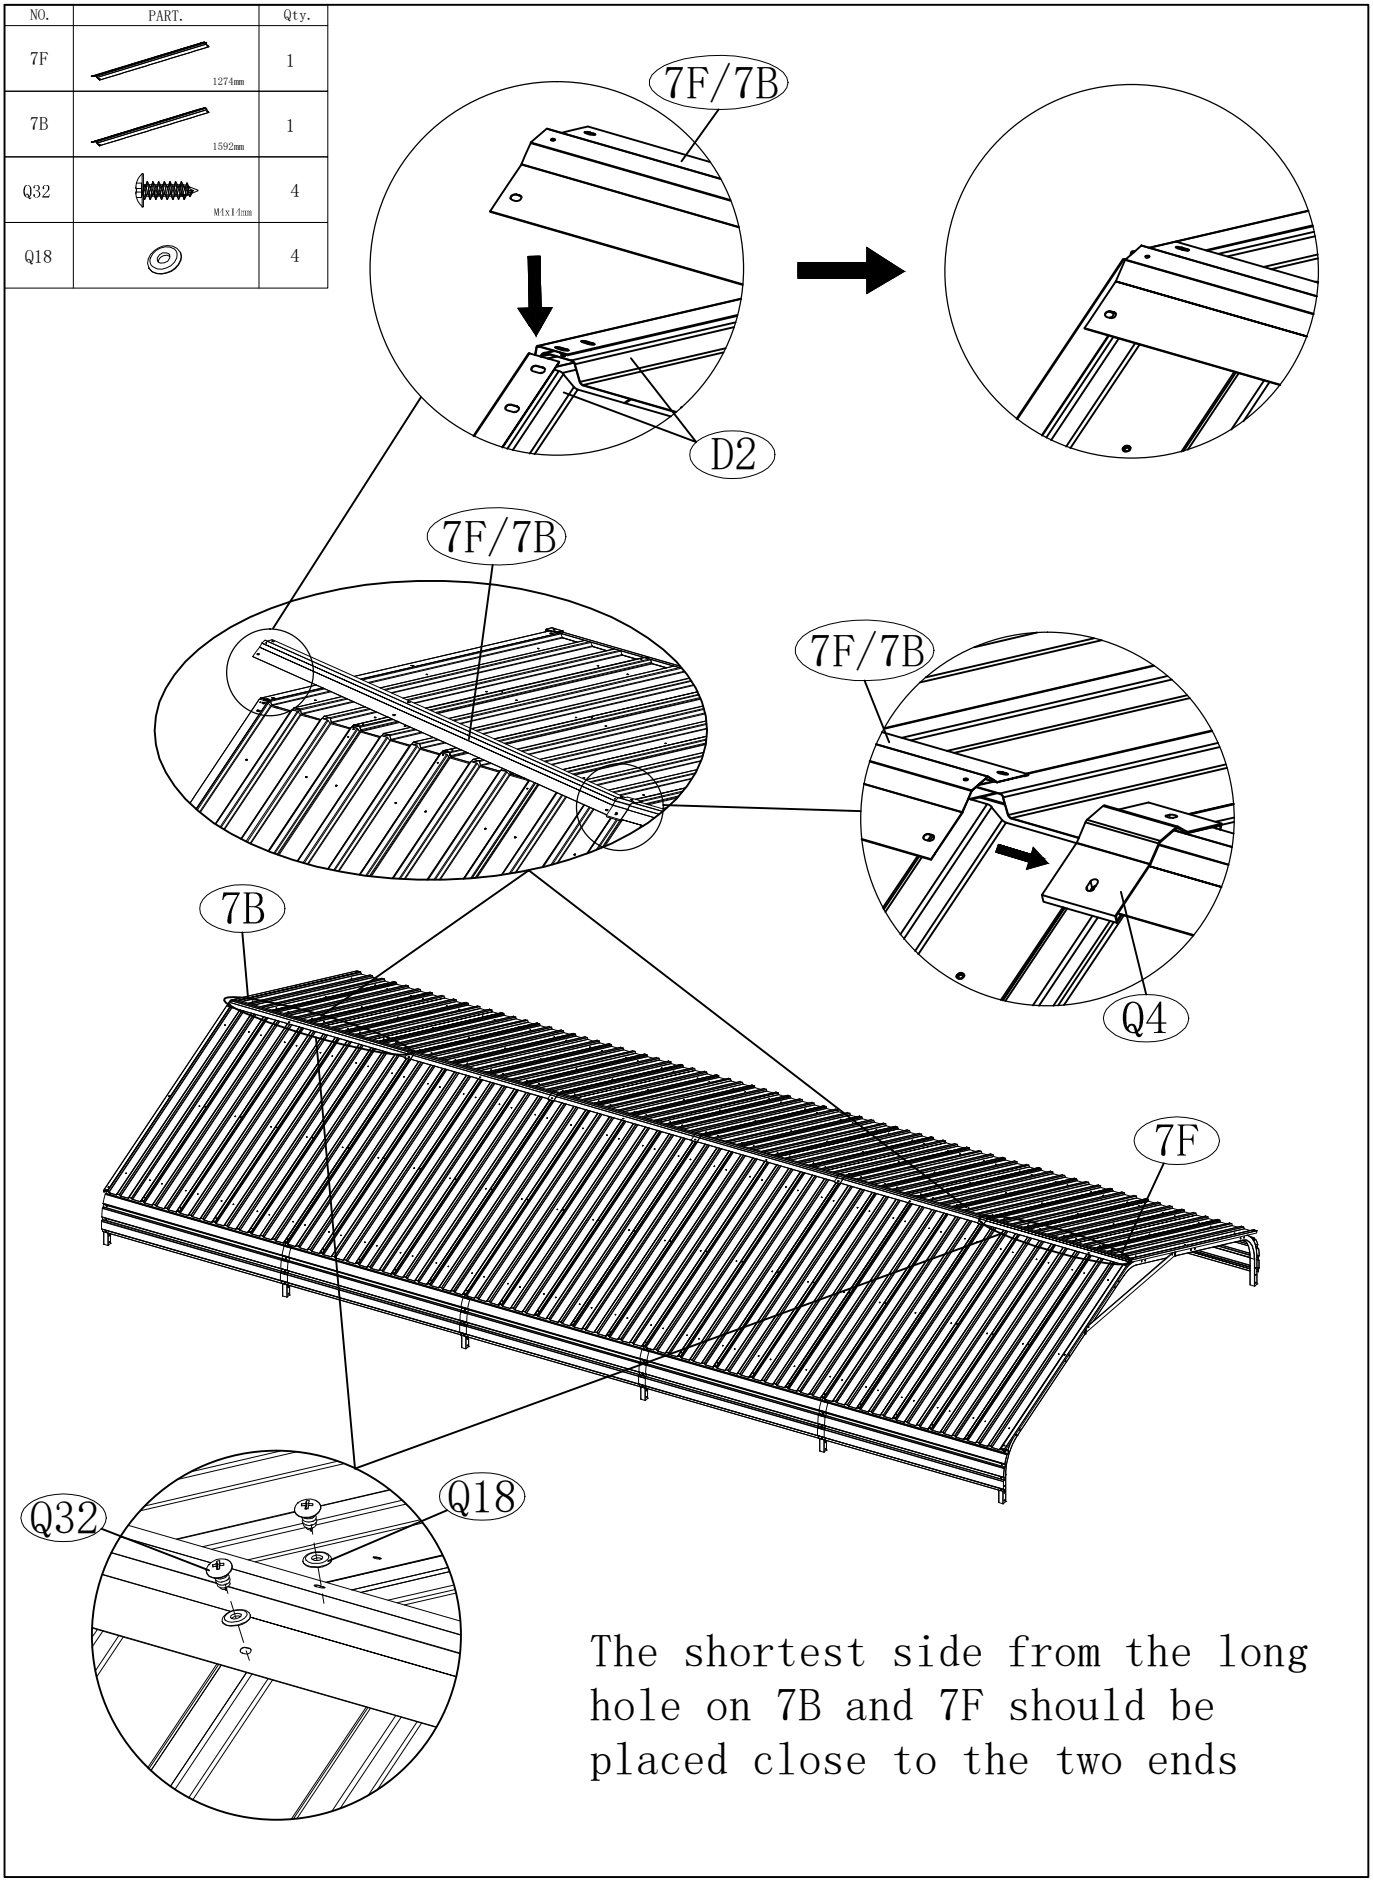


The shortest side from the long hole on 7B and 7F should be placed close to the two ends

NO.	PART.	Qty.
Q2		2
Q32	M4x14mm	4
Q18		4
Q8	420mm	4

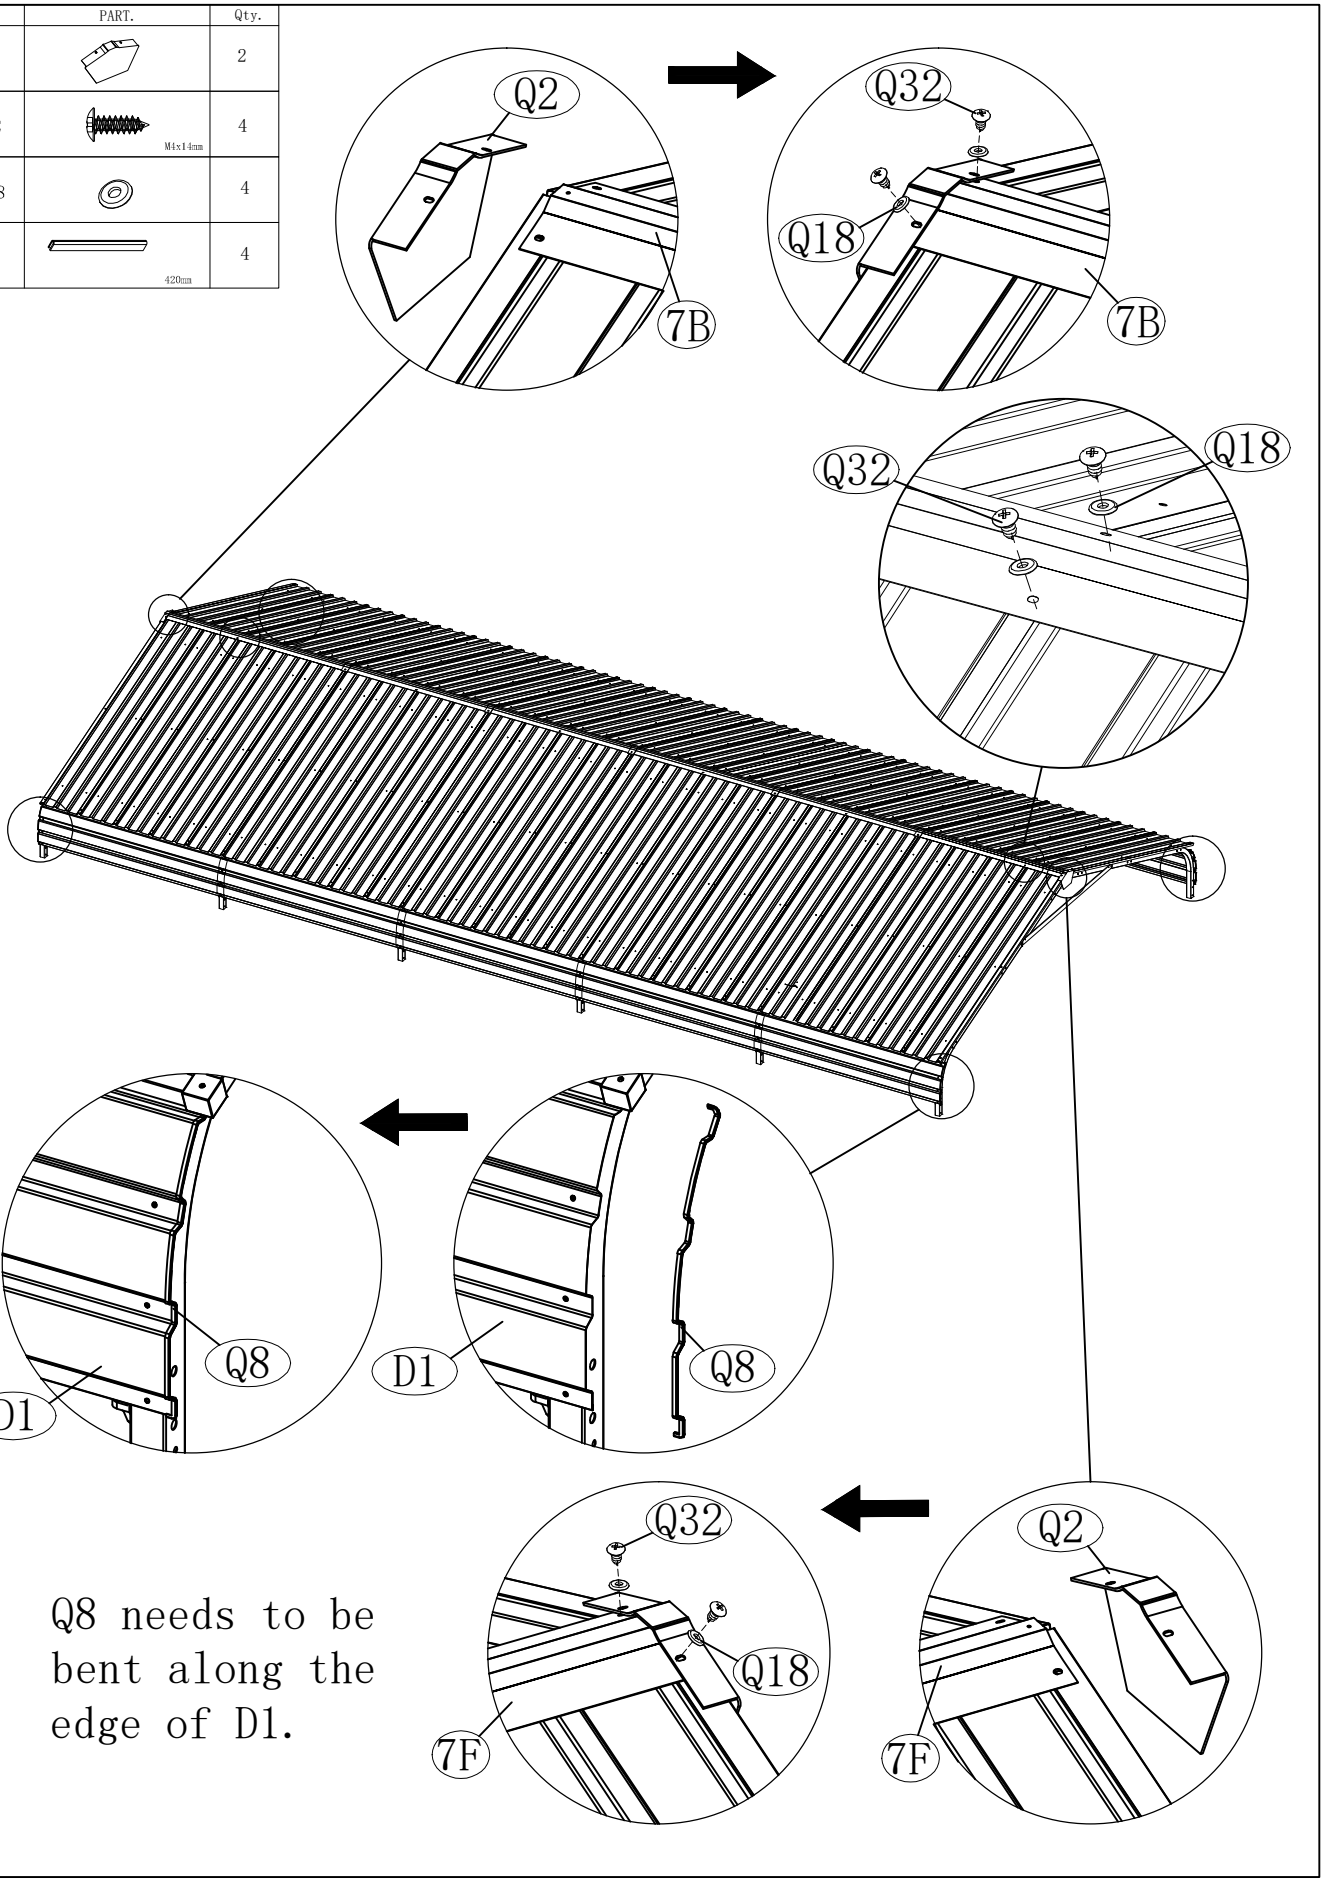


Q8 needs to be bent along the edge of D1.

NO.	PART.	Qty.
8	1574mm	6
Q3		8
Q32	M4x14mm	32
Q18		32

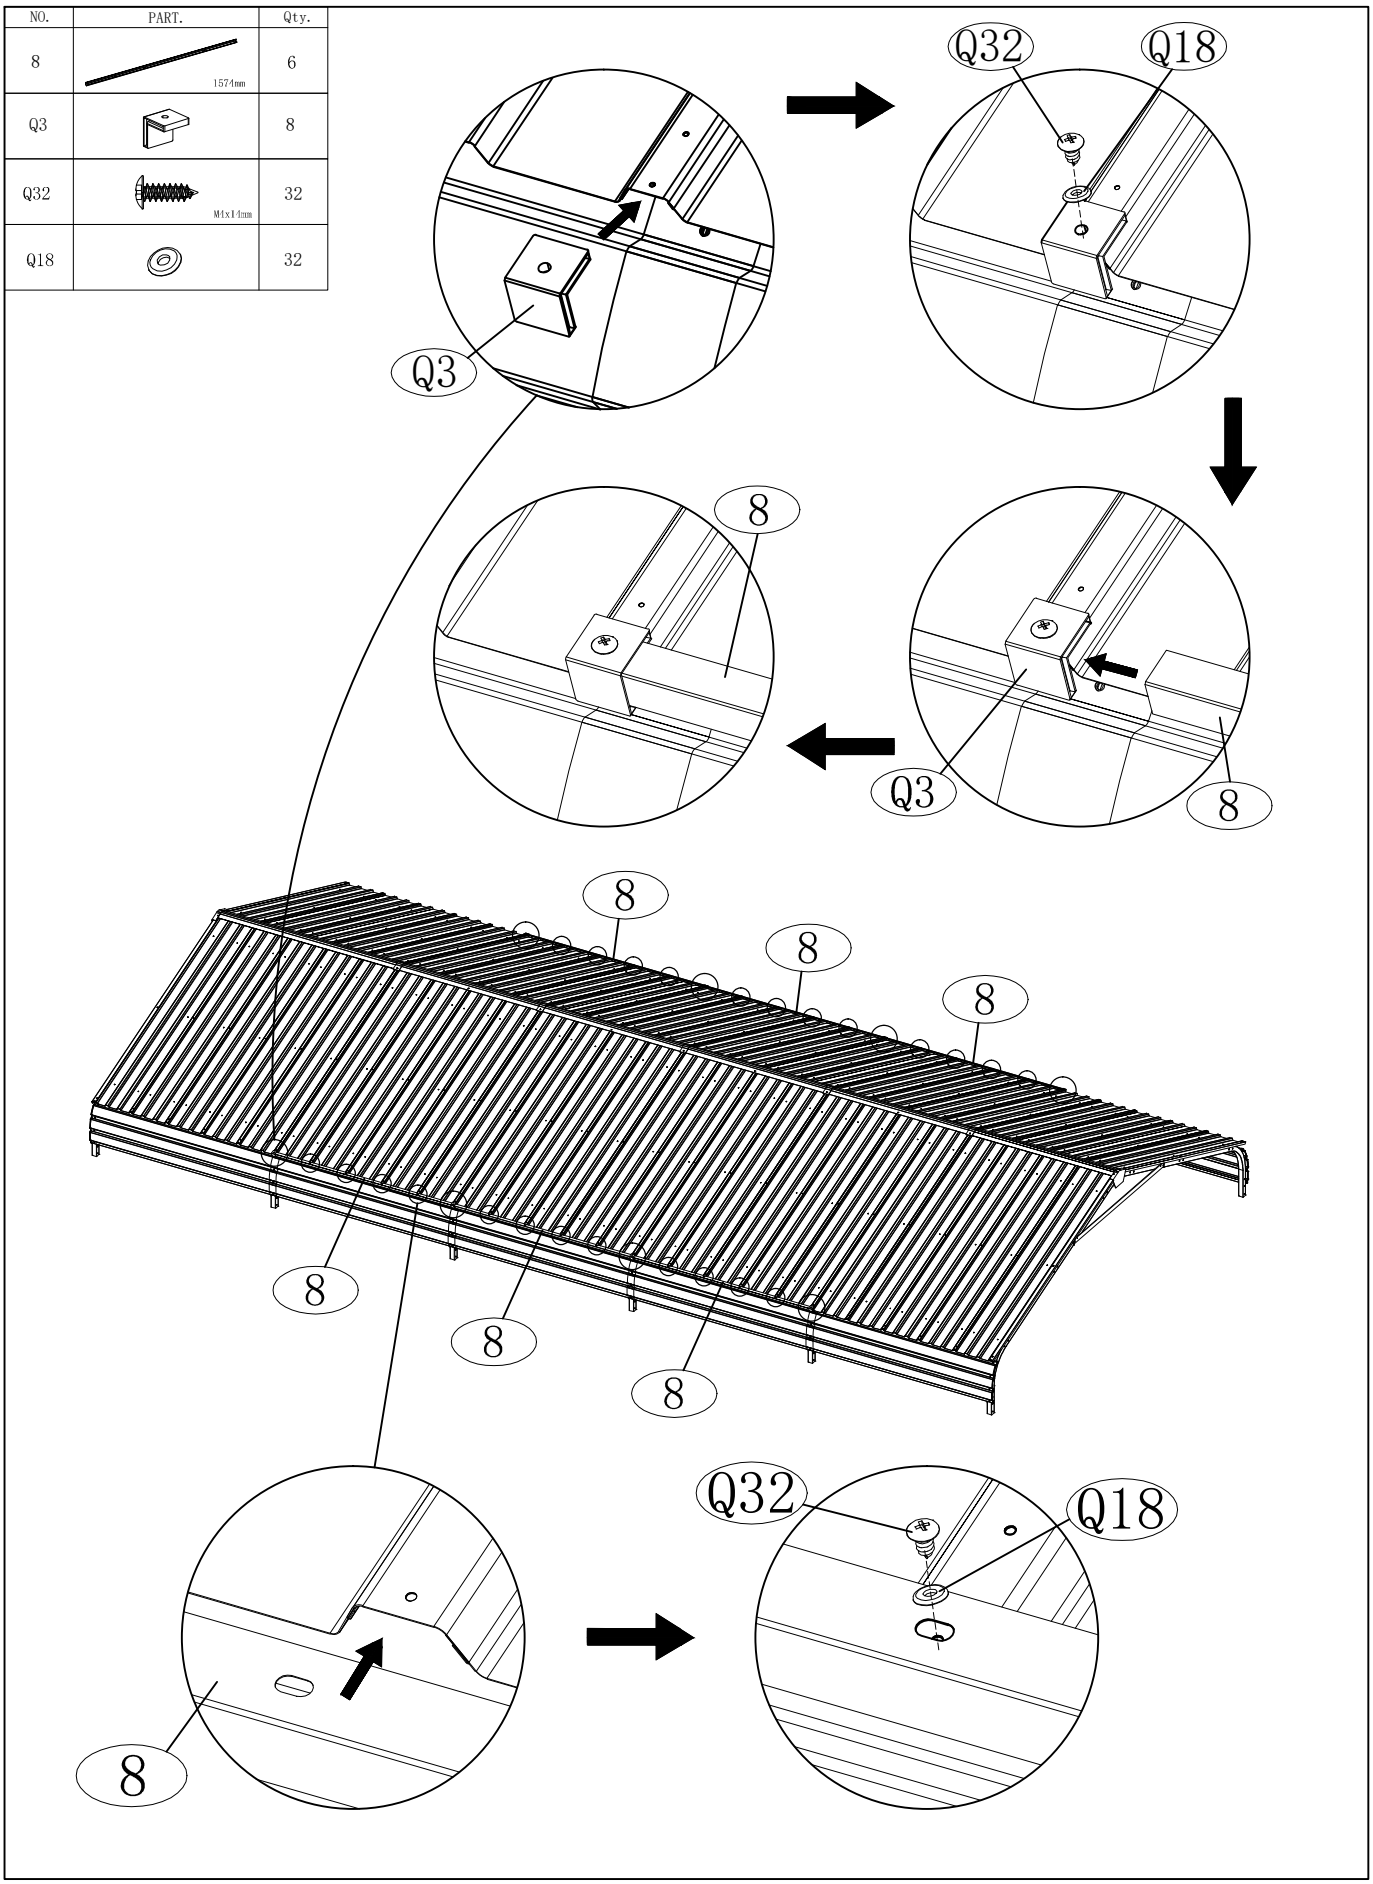



NO.	PART.	Qty.
8L	1604.5mm	2
8R	1604.5mm	2
Q1		4
Q32	M4x14mm	20
Q18		20

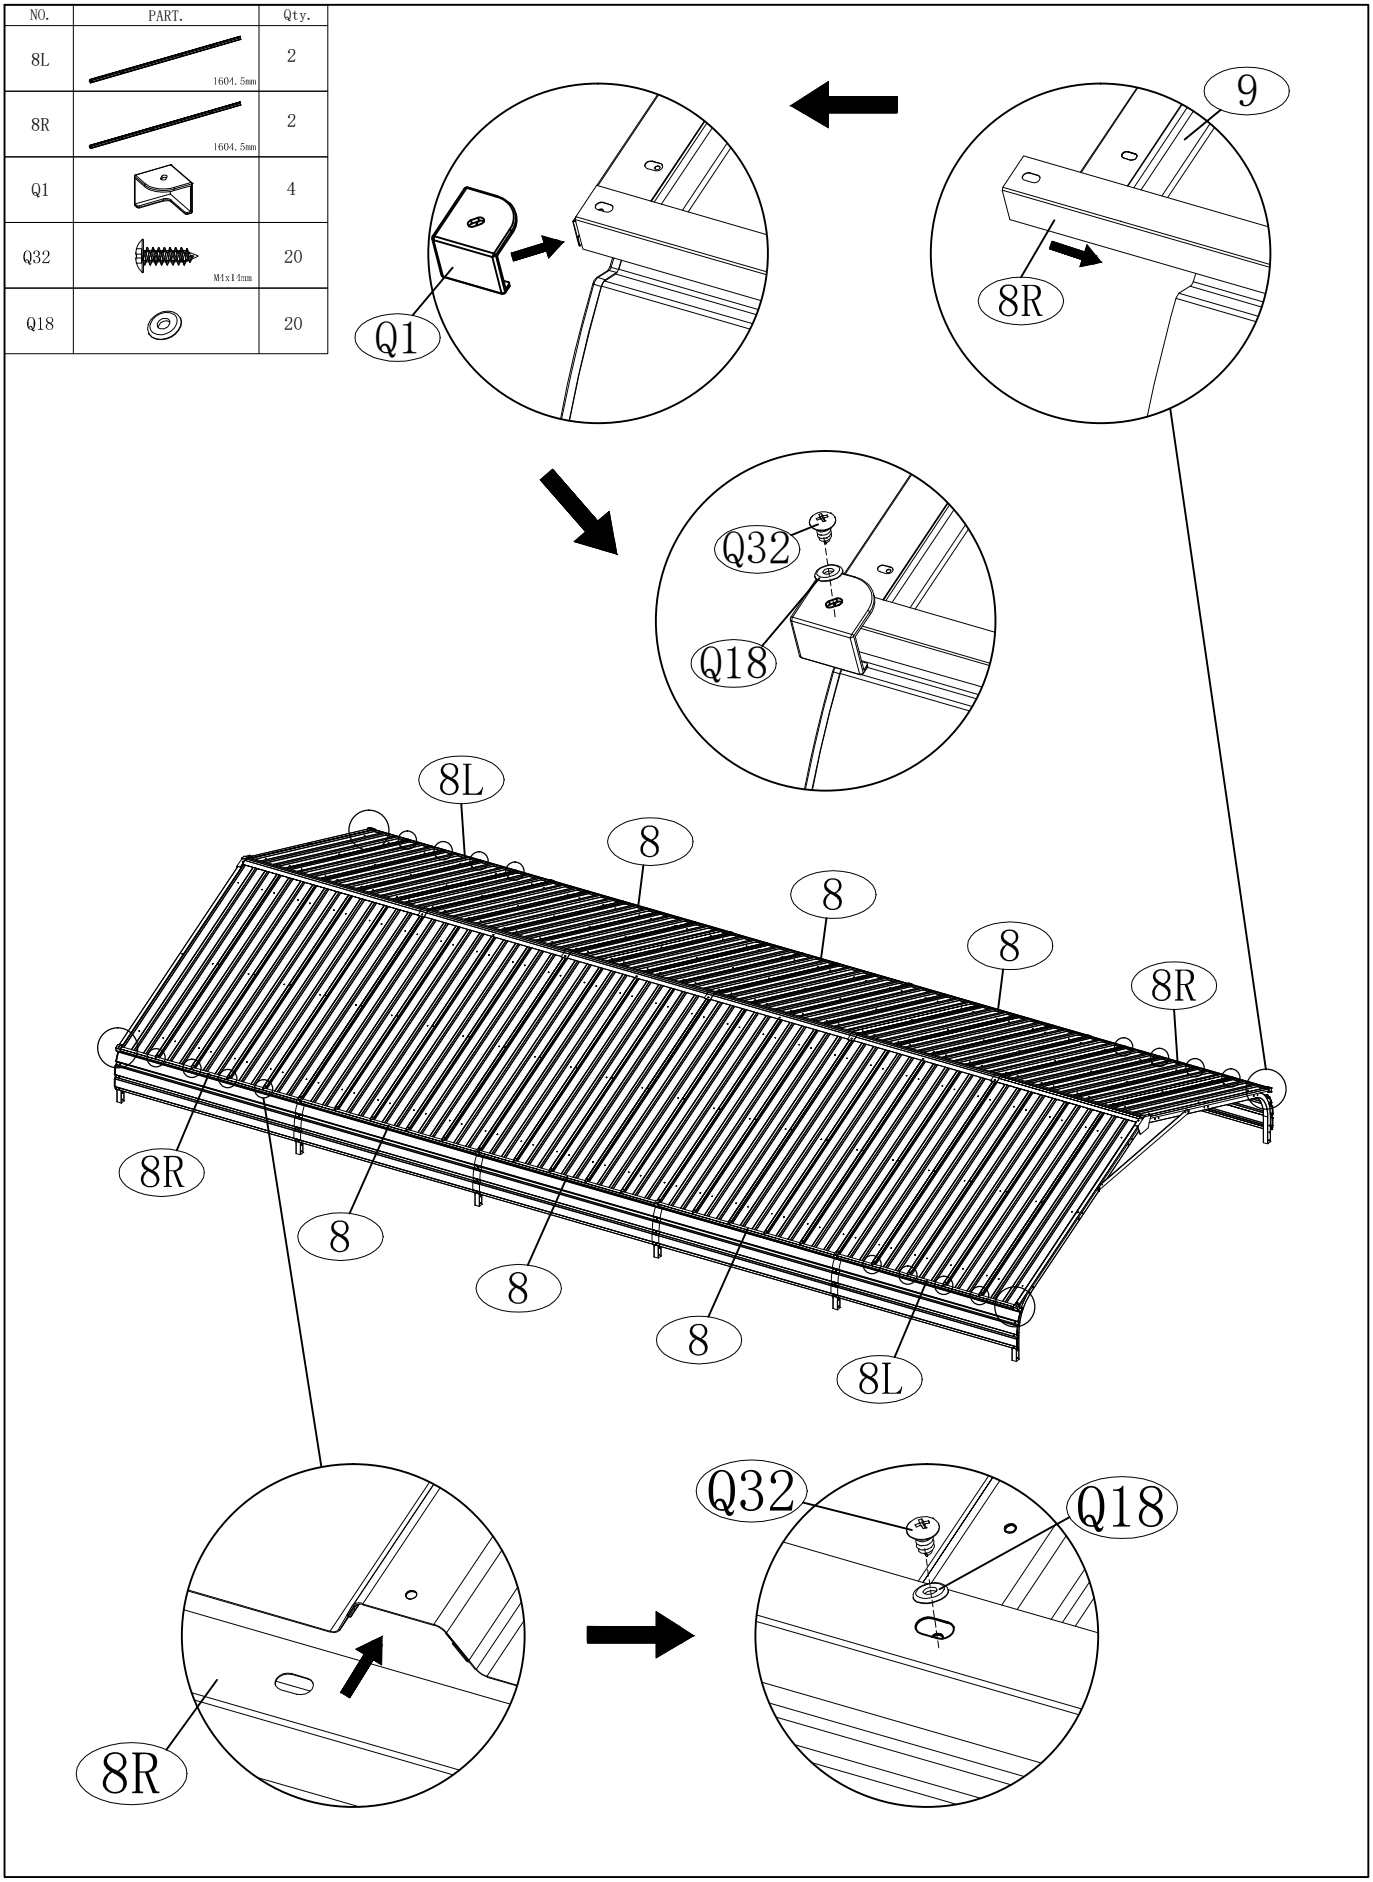



NO.	PART.	Qty.
3	 1620mm	12


Five people are needed to lift the roof and put 3 in.

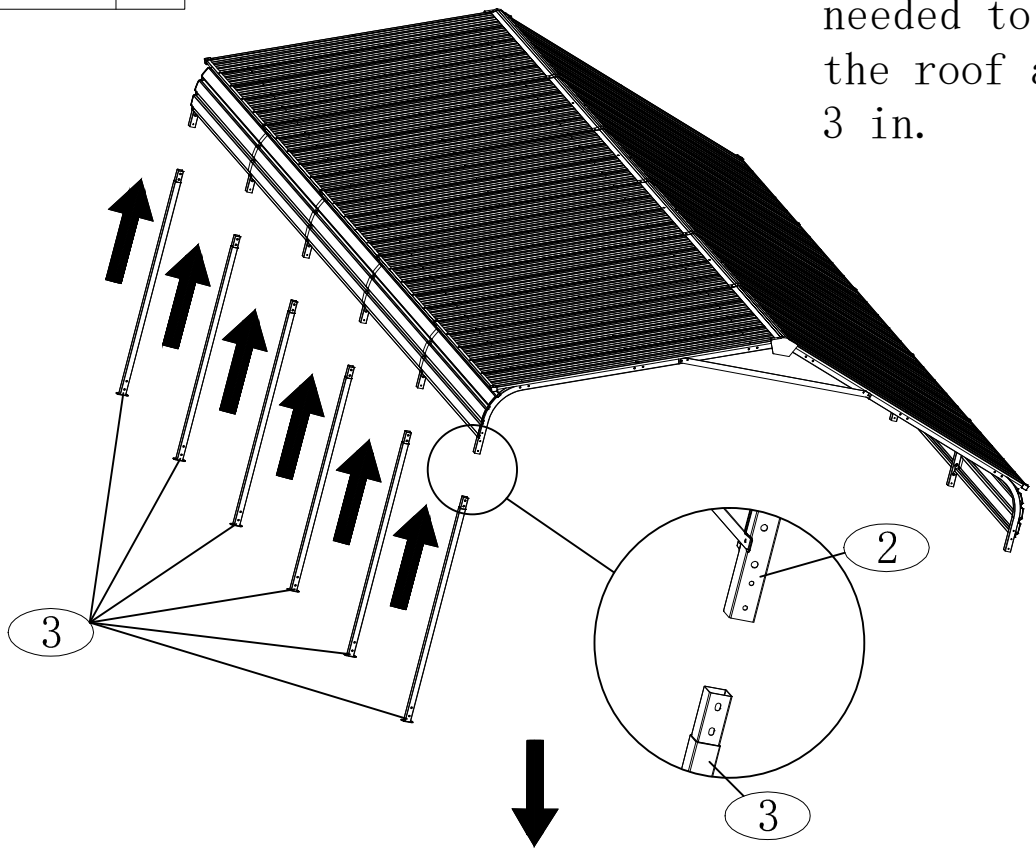

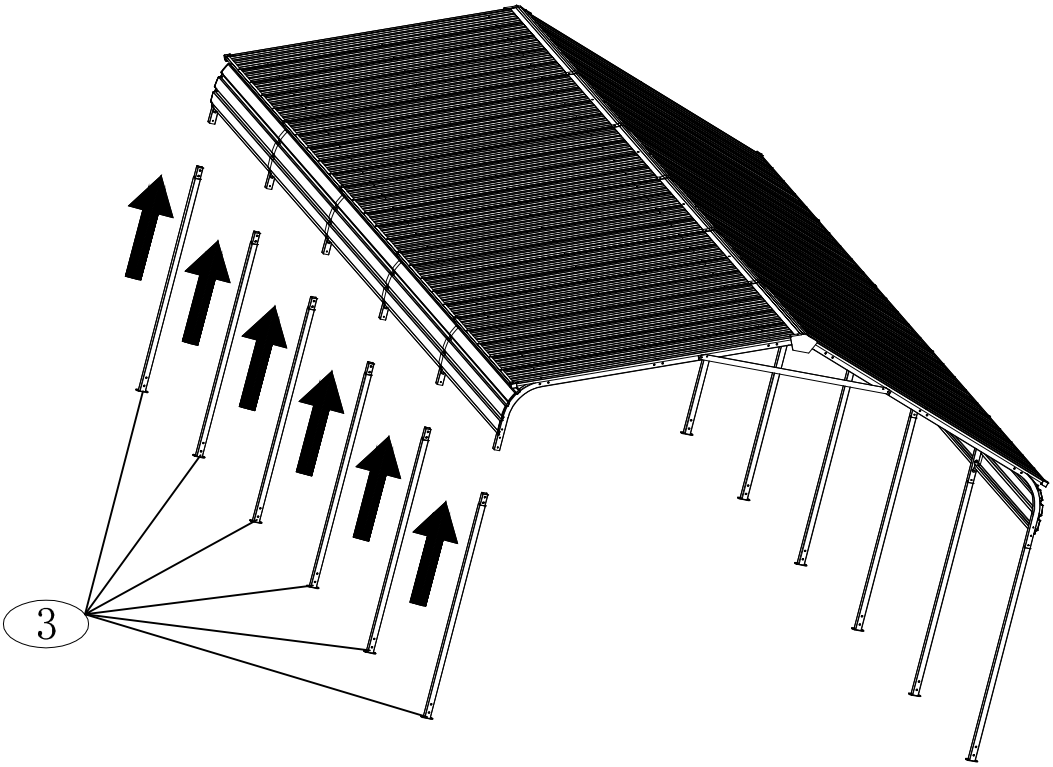


NO.	PART.	Qty.
Q15	 M6x55mm	6
Q17	 M6	6
Q20		6

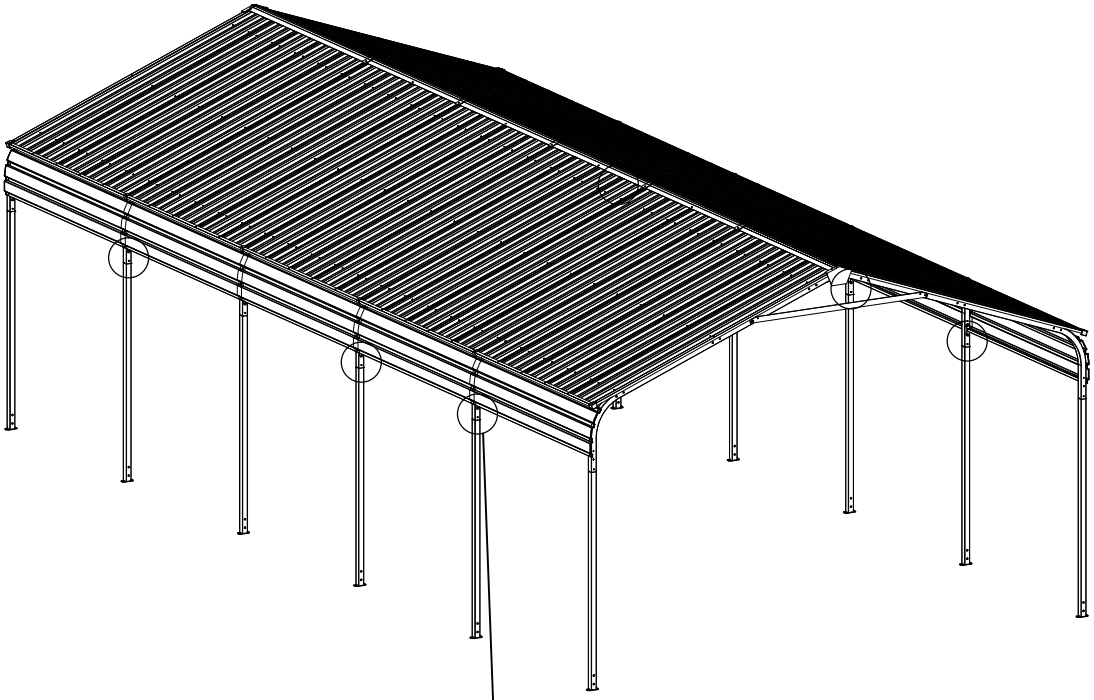


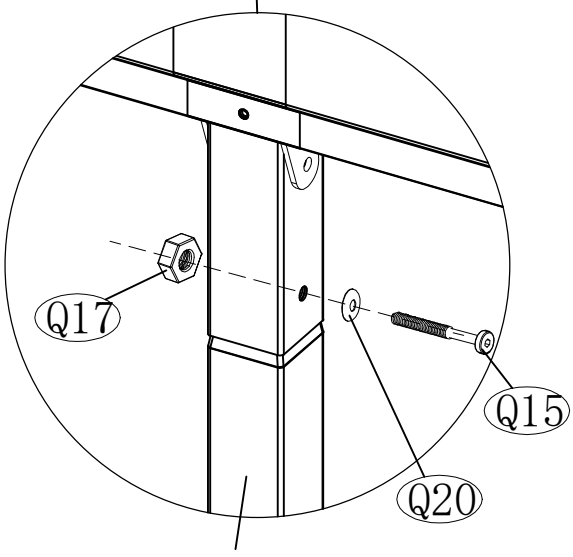


NO.	PART.	Qty.
10	1546mm	10
Q15	M6x55mm	24
Q17	M6	24
Q20		24

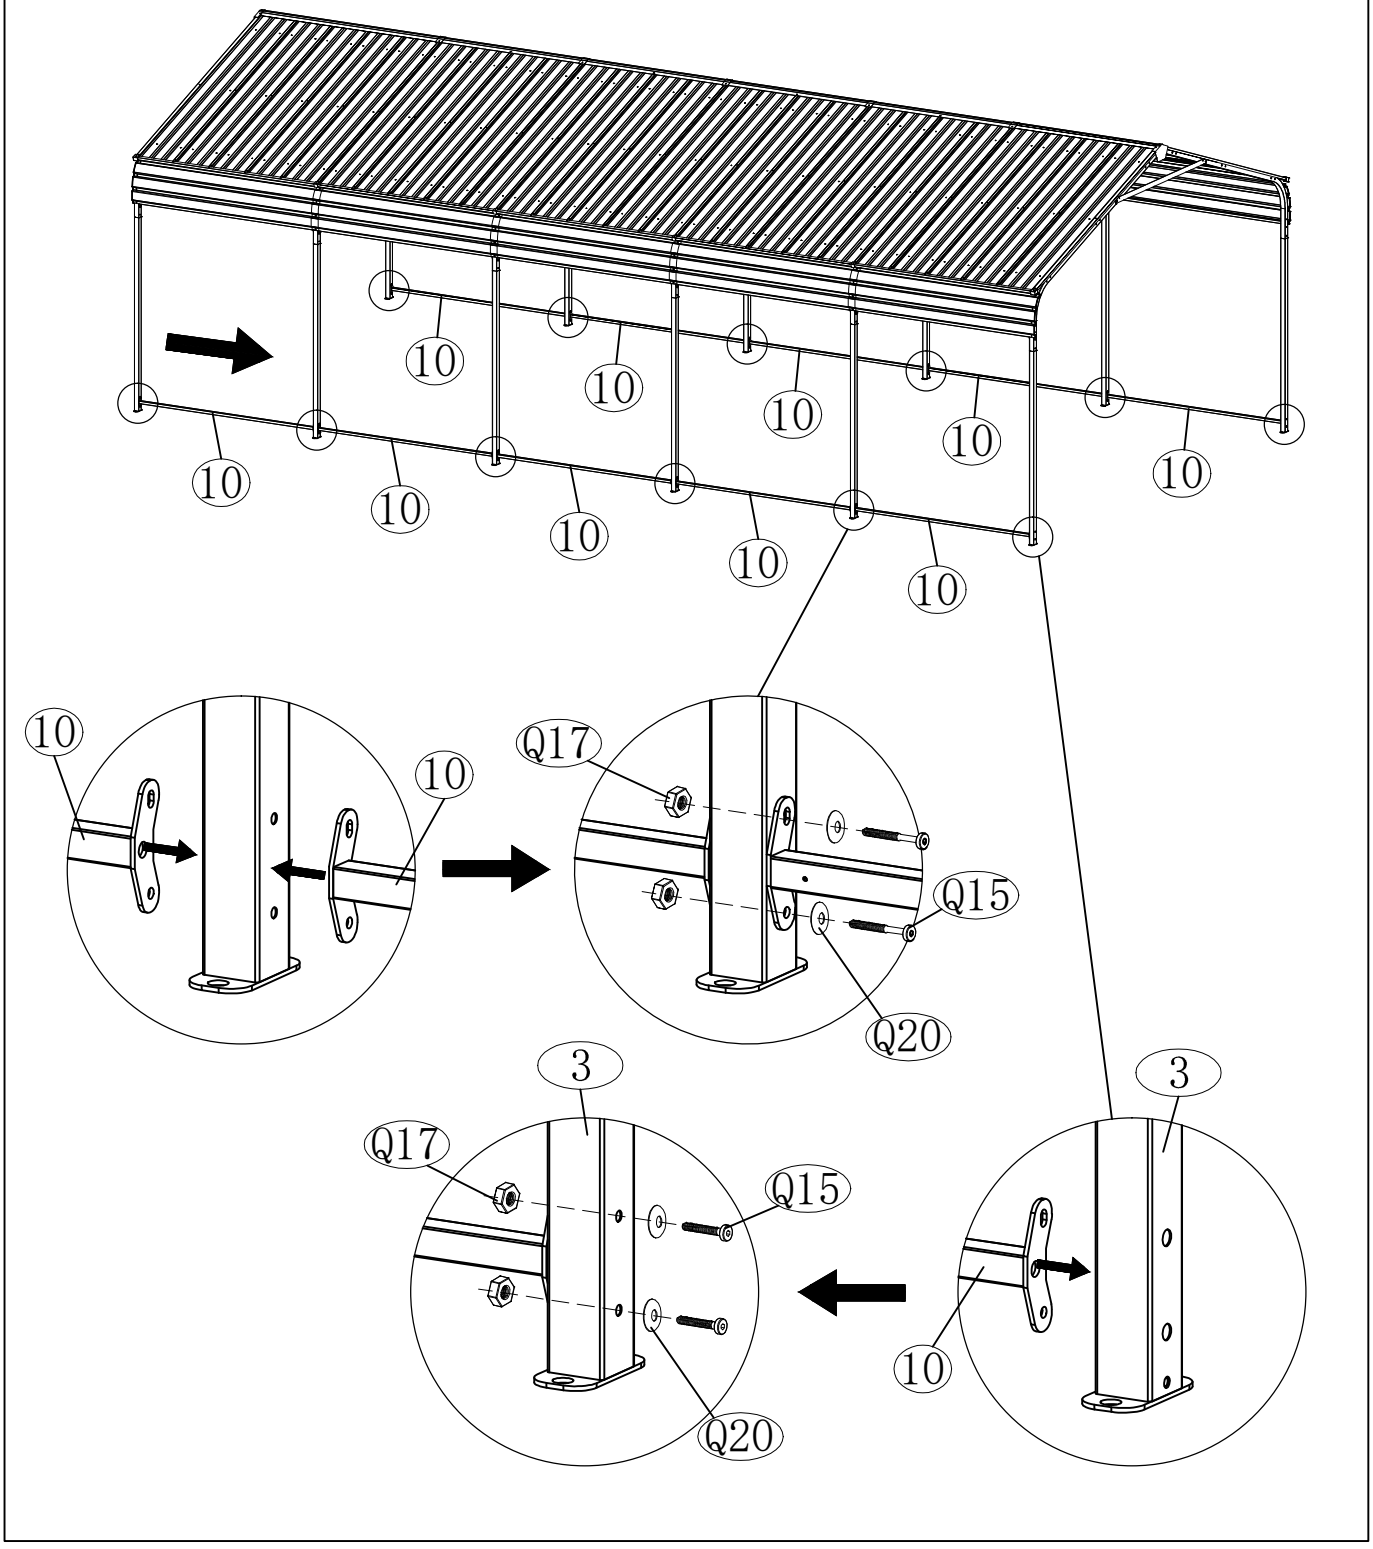


NO.	PART.	Qty.
14		6
Q15	M6x55mm	6
Q17	M6	6
Q20		6

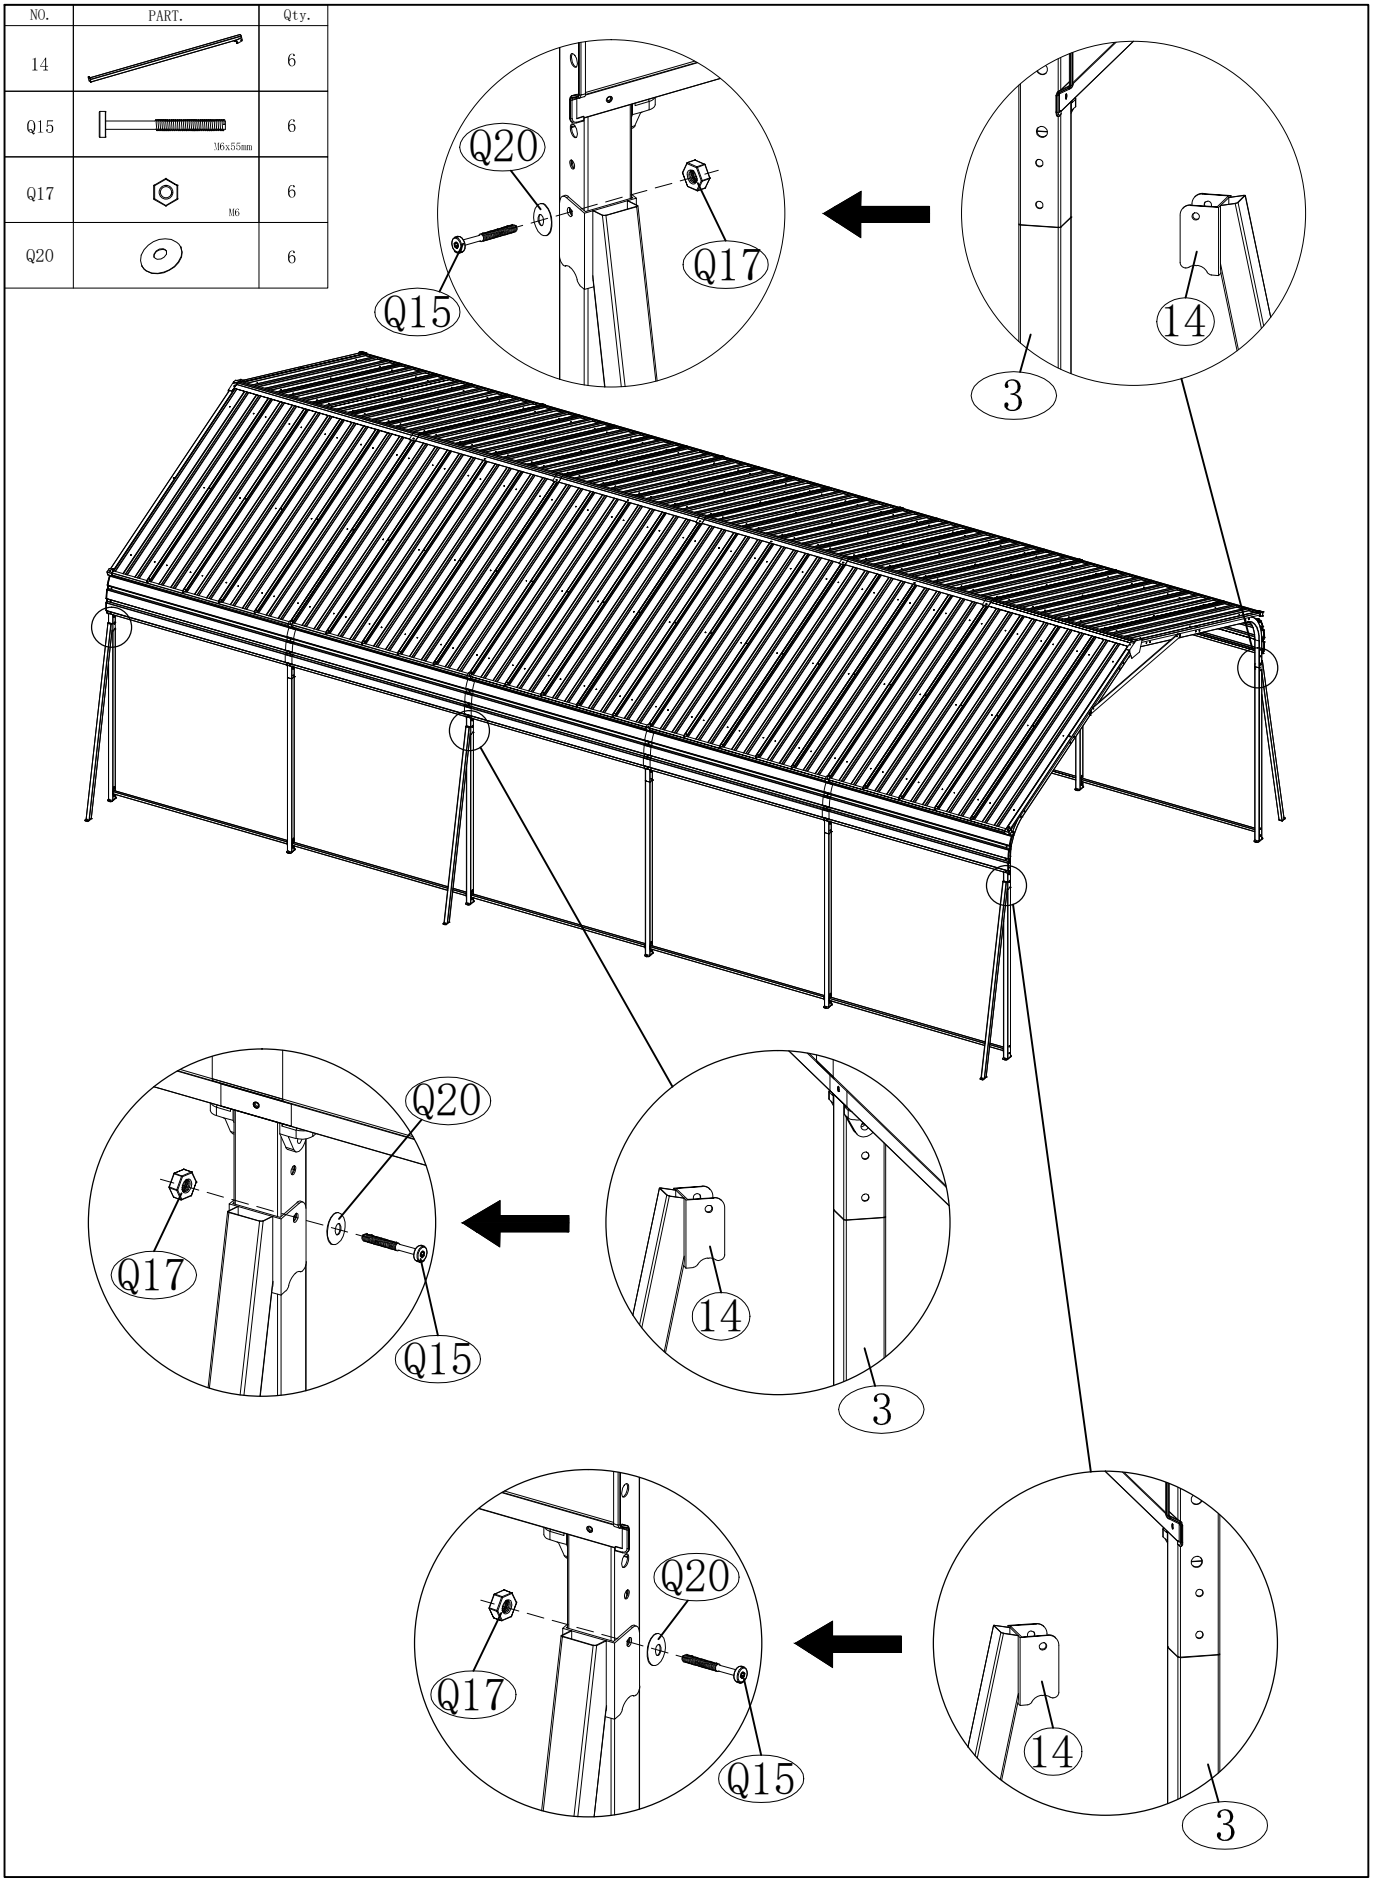



NO.	PART.	Qty.
Q5		12
Q6		12
Q21	 M8x50mm	24

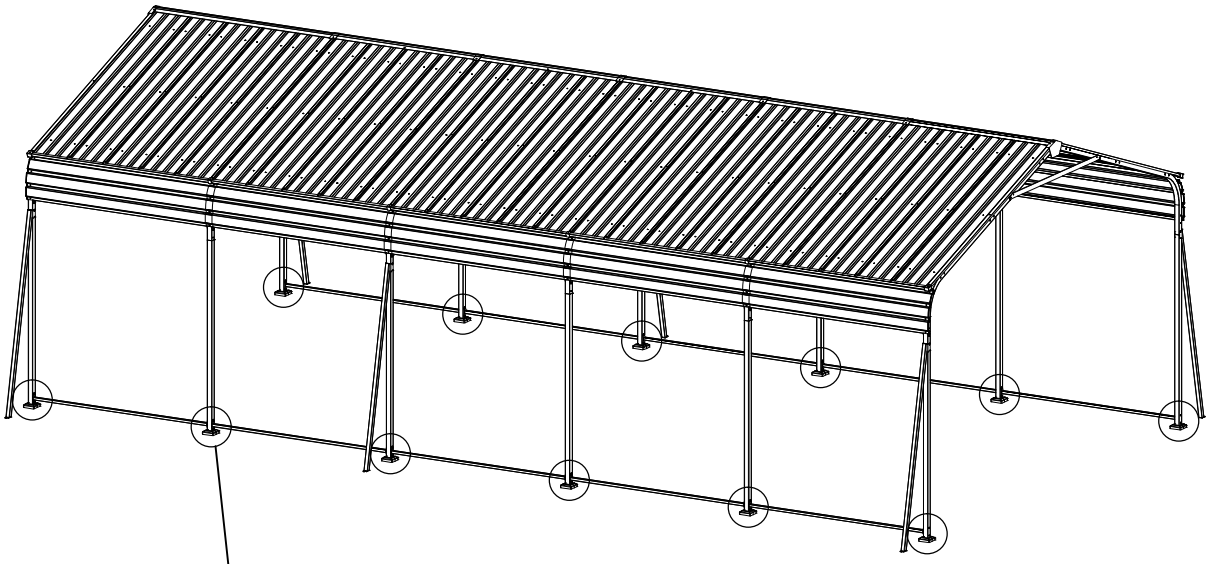

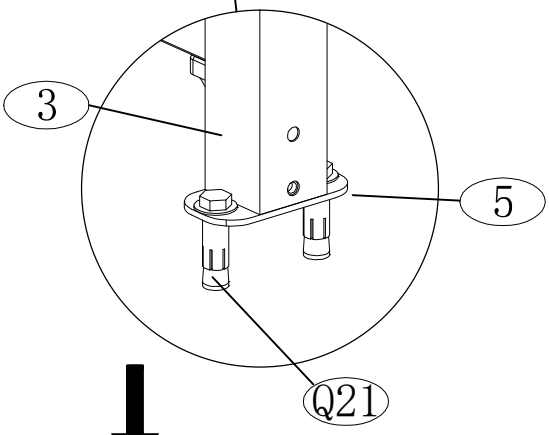


1. It is necessary to use ground nails and expansion screws, whether installed on stable ground, to avoid the collapse of the car shed to the inside or nearby personnel causing devastating injuries and property losses.

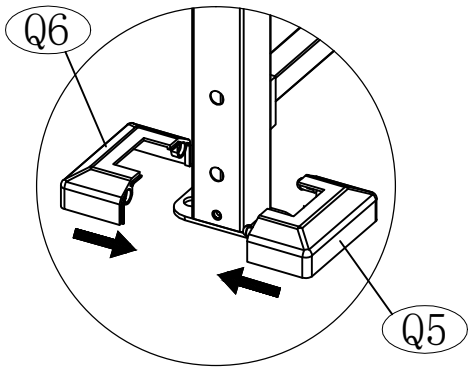


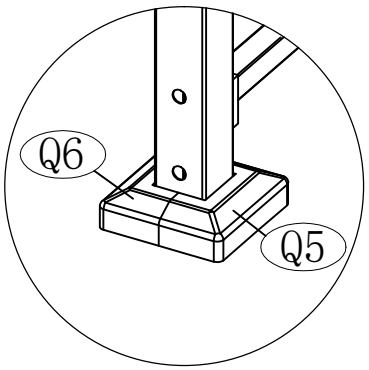

NO.	PART.	Qty.
Q21	M8x50mm	6
Q9		168

Plastic screw cap is used to prevent the sharp end of the screw from scratching people .

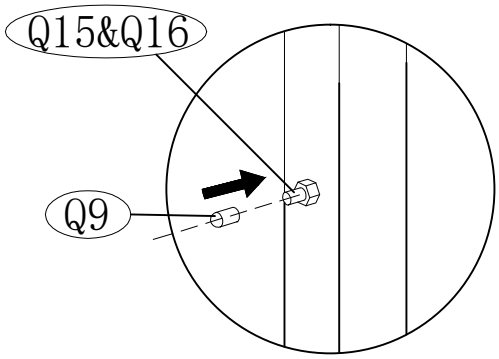

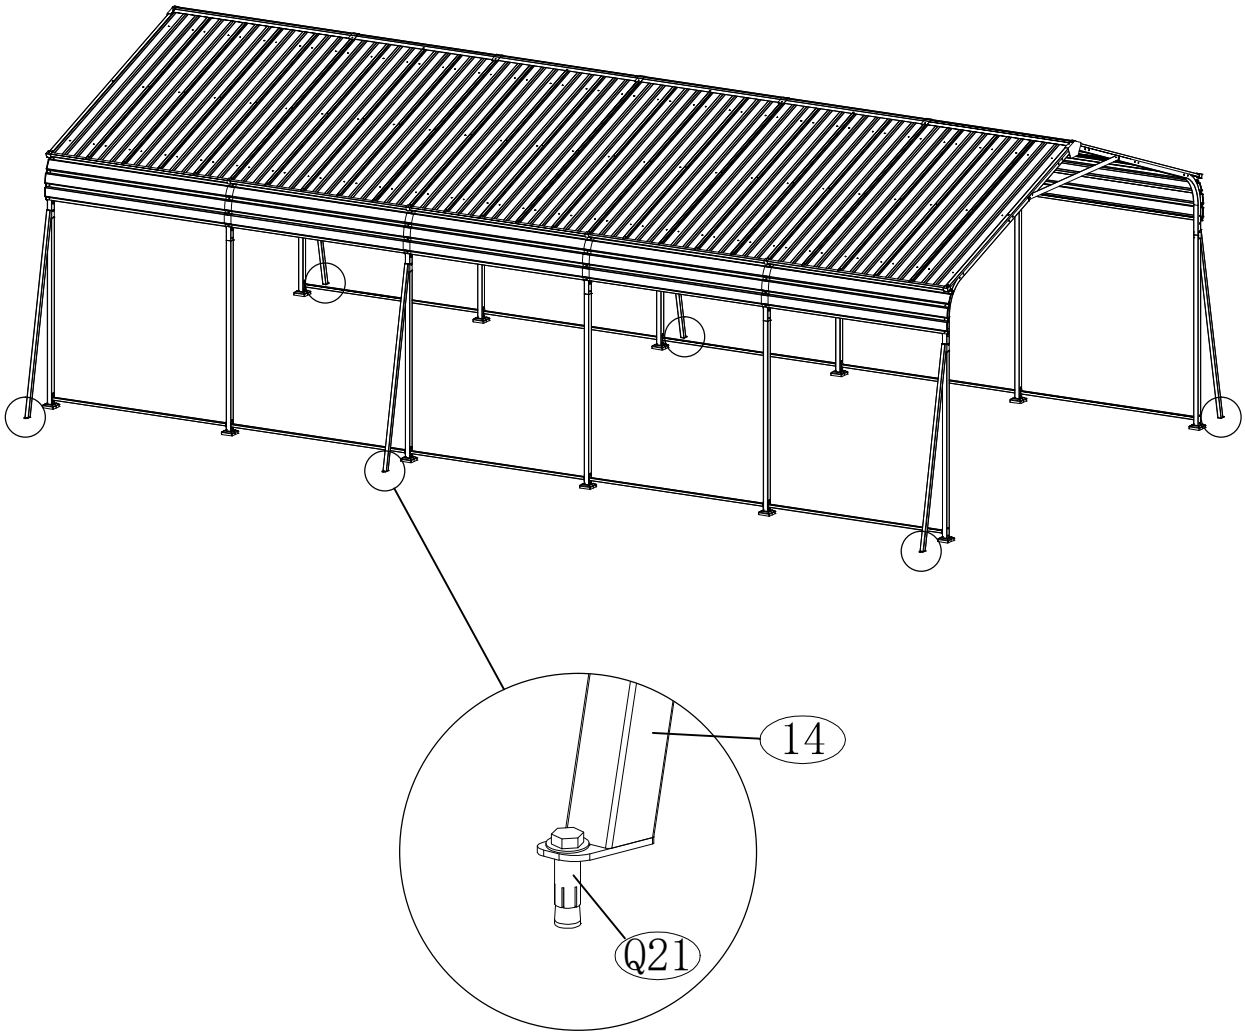

1.It is necessary to use ground nails and expansion screws,whether installed on stable ground, to avoid the collapse of the car shed to the inside or nearby personnel causingdevastating injuries andproperty losses.