







































SZZ032 ASSEMBLY INSTRUCTION

Thanks for buying our products, read it carefully before installation.
Please contact us in case of any problem, regarding assembly or the product itself, a smile on your face is our top priority.
(Attention: Don't tighten the screw before all screws are in place)

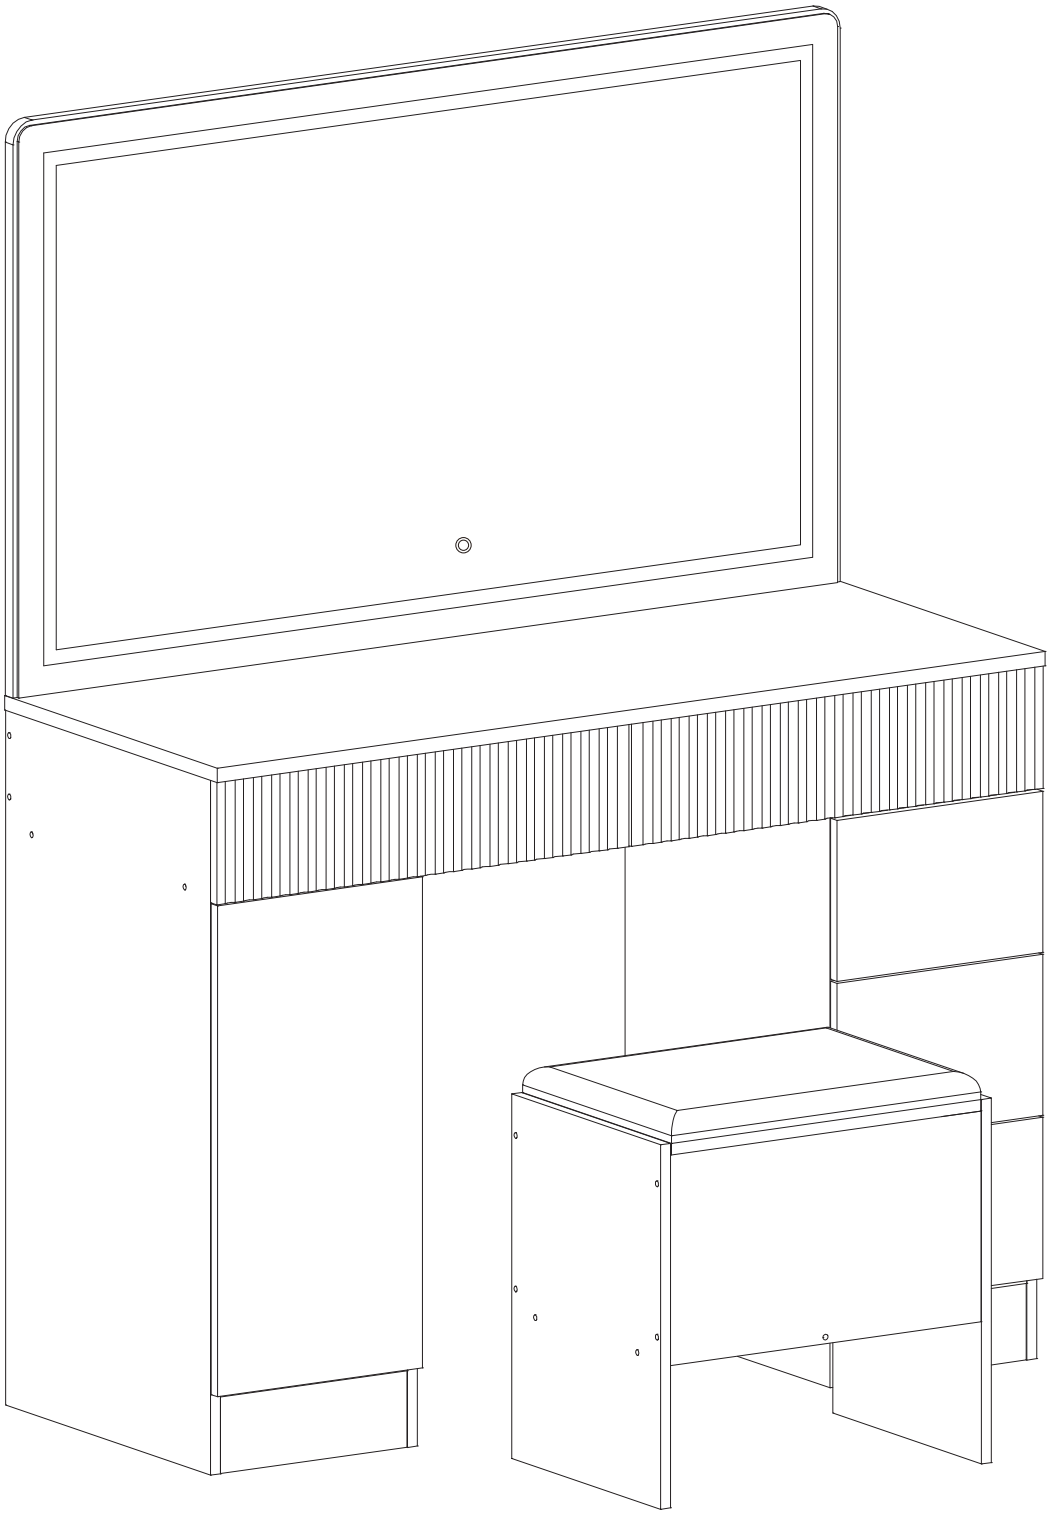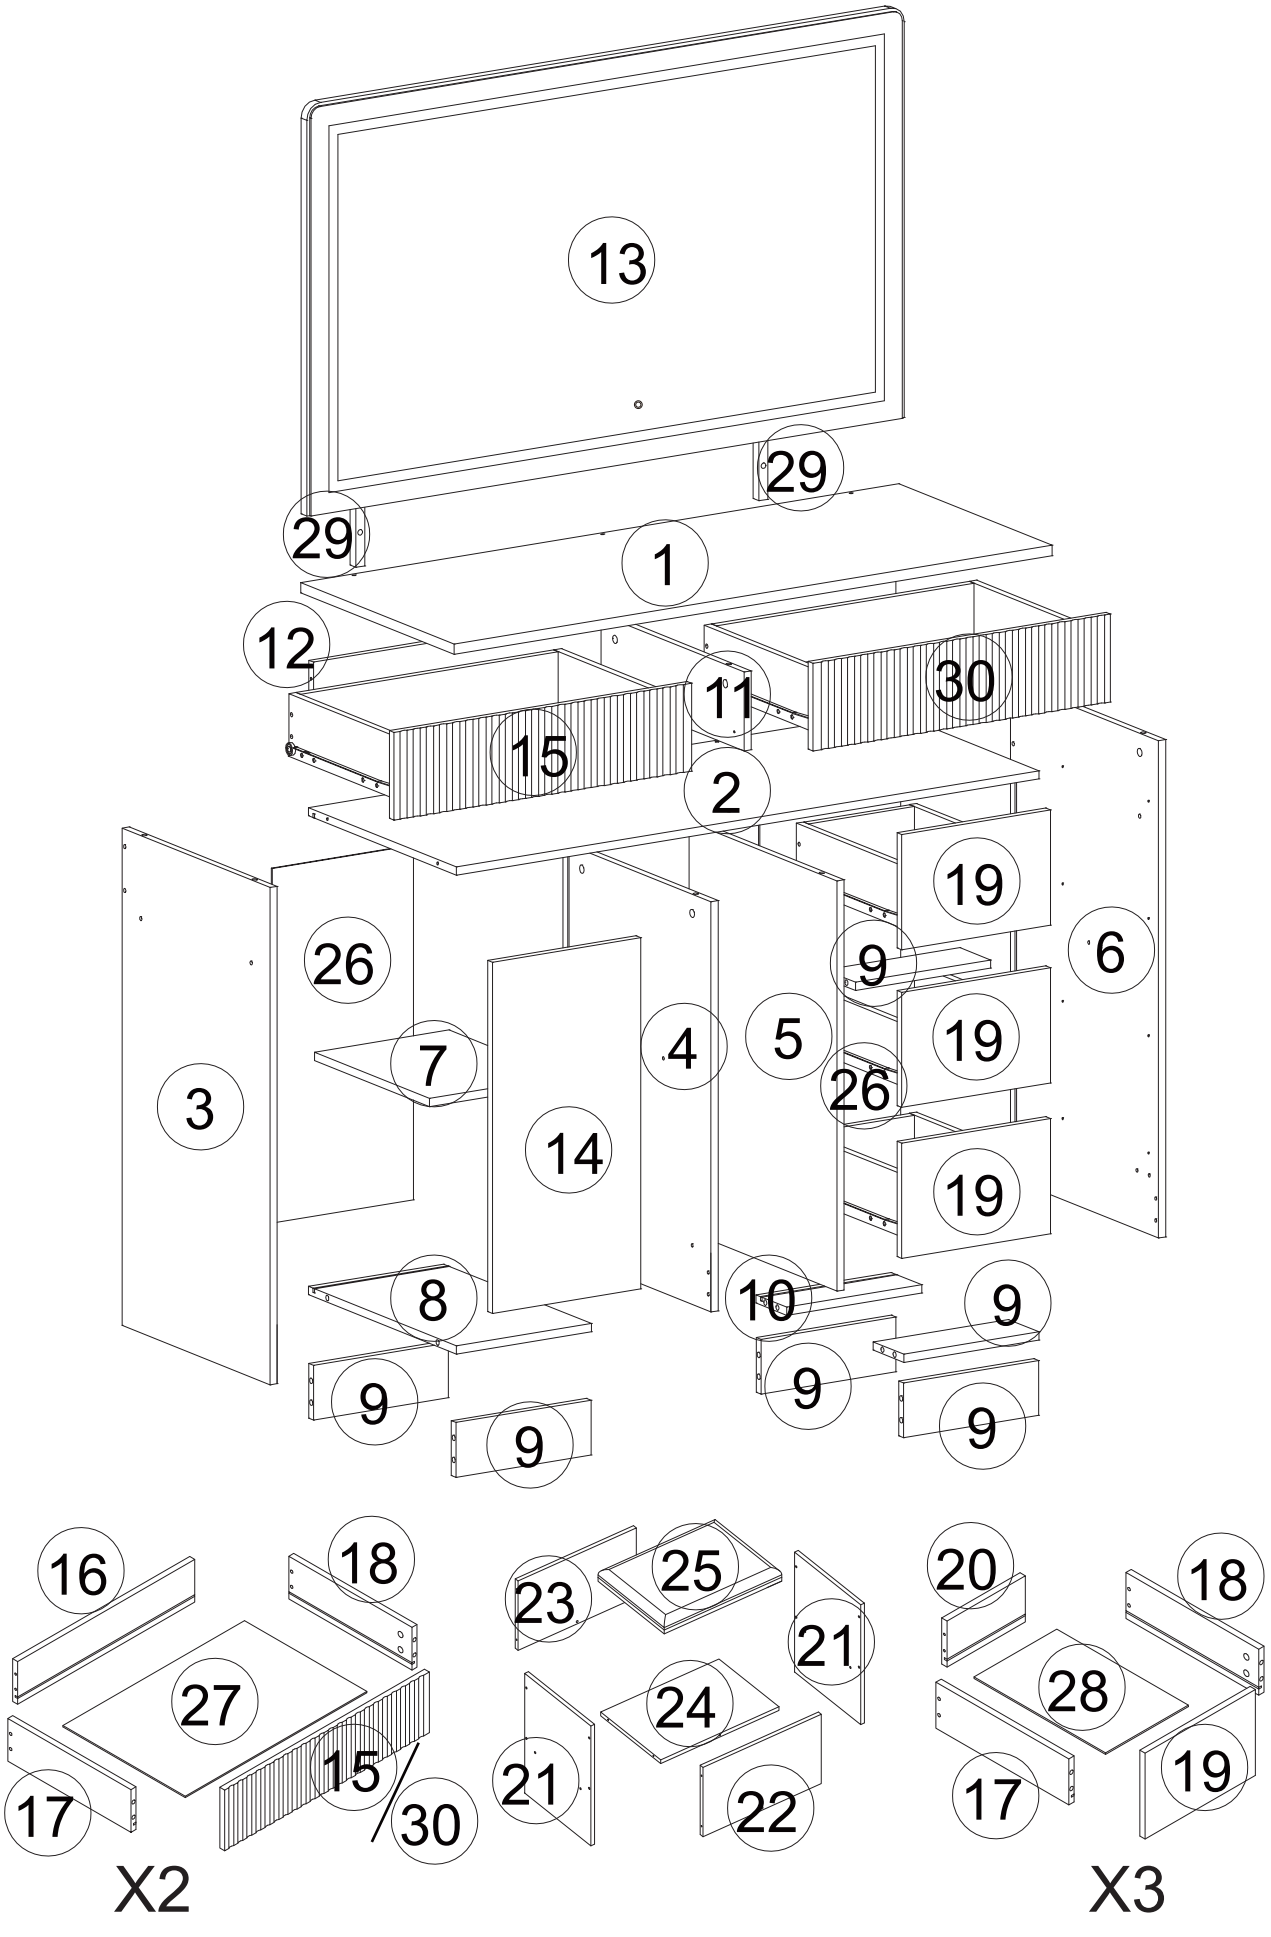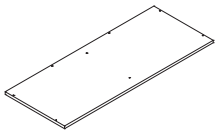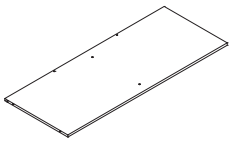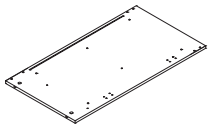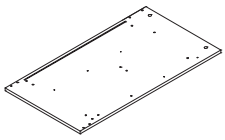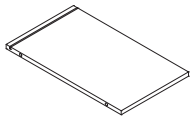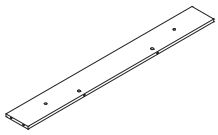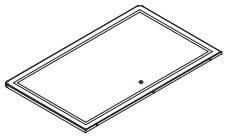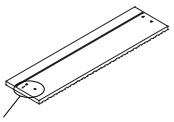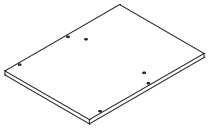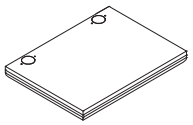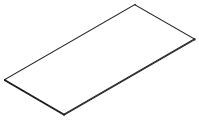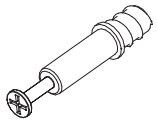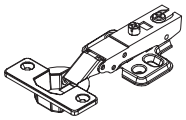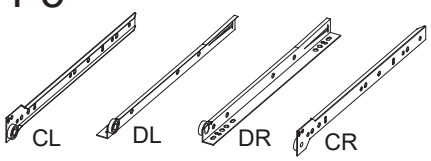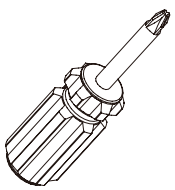




13
29
29
1
12
11
30
15
2
19
26
9
6
7
4
5
19
3
26
14
19
8
10
9
9
9
9
16
18
27
15
17
30
X2
23
25
21
24
21
22
20
18
28
19
17
X3

1 *1 	2 *1 	3 *1 	4 *1 	5 *1 
6 *1 	7 *1 	8 *1 	9 *6 	10 *1 
11 *1 	12 *1 	13 *1 	14 *1 	15 *1  Long
16 *2 	17 *5 	18 *5 	19 *3 	20 *3 
21 *2 	22 *1 	23 *1 	24 *1 	25 *1 
26 *2 	27 *2 	28 *3 	29 *2  30 *1  Long	A*67  M6*28
B*67  M12	C*46  M5*40	D*64  M3.5*12	E*6  M6*23	F*4 
G*4 	H*5  CL DL DR CR 300MM	J*1 	K*1  M3	M*1 N*1 M4

S1


D*6	J

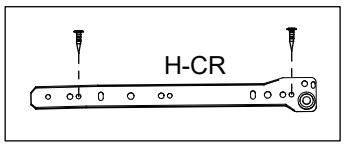

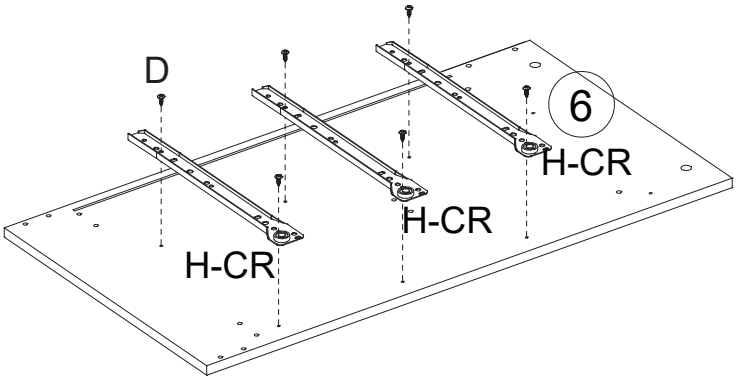


S2

A*10	J

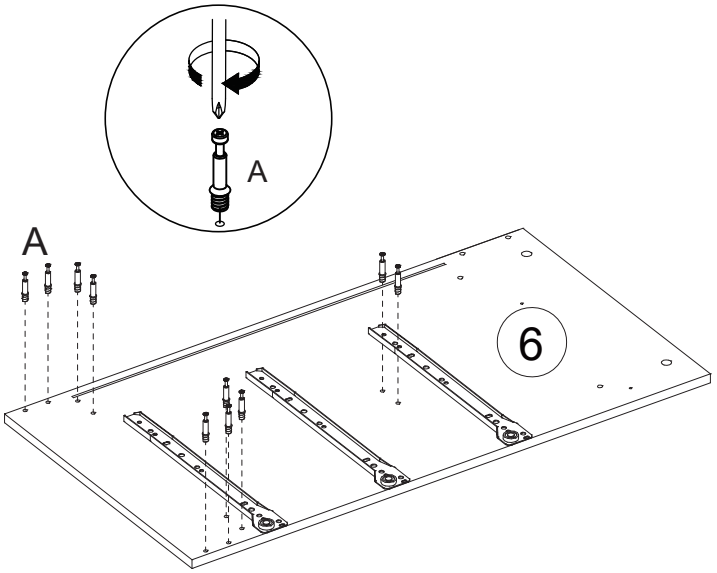


S3

B*10	J




Insert the minifix (B)with the cross arrow mark facing up ward and aim to the panel's top thru holes. then tighten clockwise

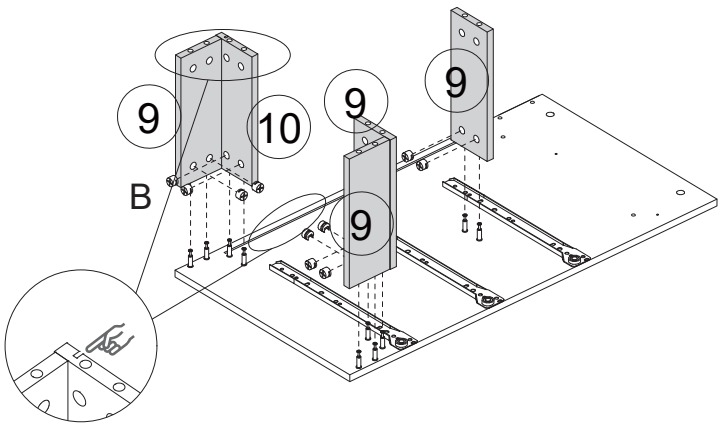


Pay attention to the position of the card slot during installation.


S4

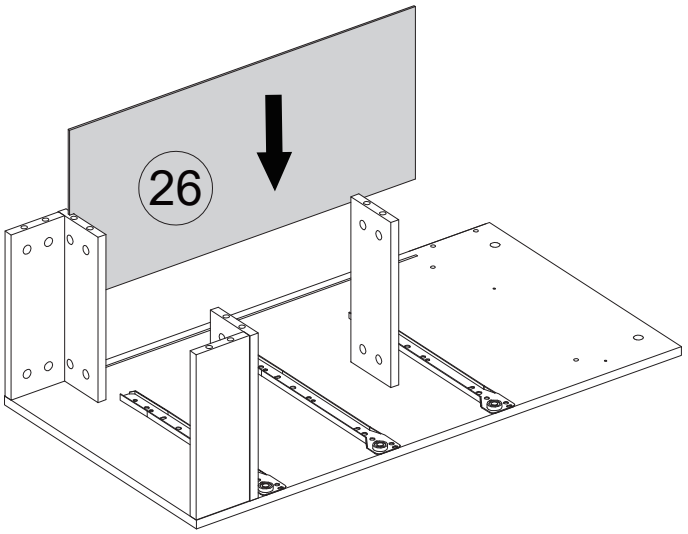

S5

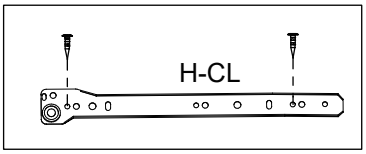



D*6	J

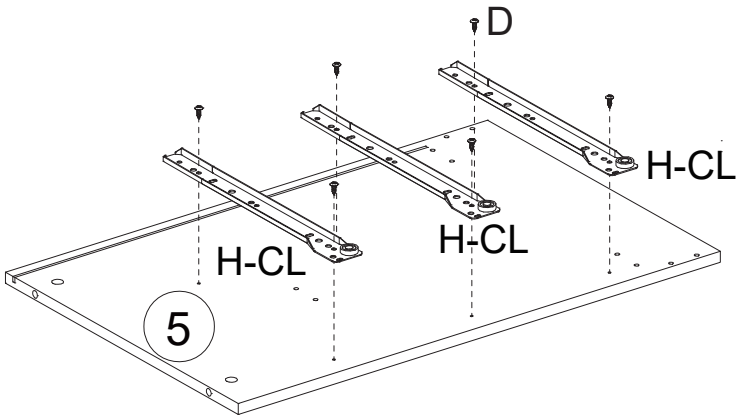

S6


A*10	J

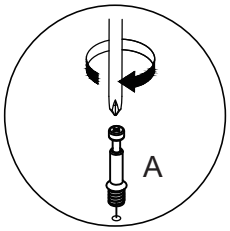

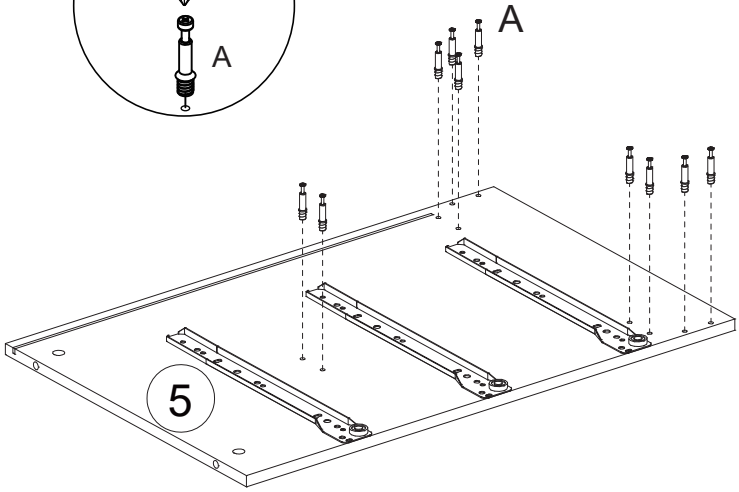


S7

B*10	J





Insert the minifix (B)with the cross arrow mark facing up ward and aim to the panel's top thru holes. then tighten clockwise

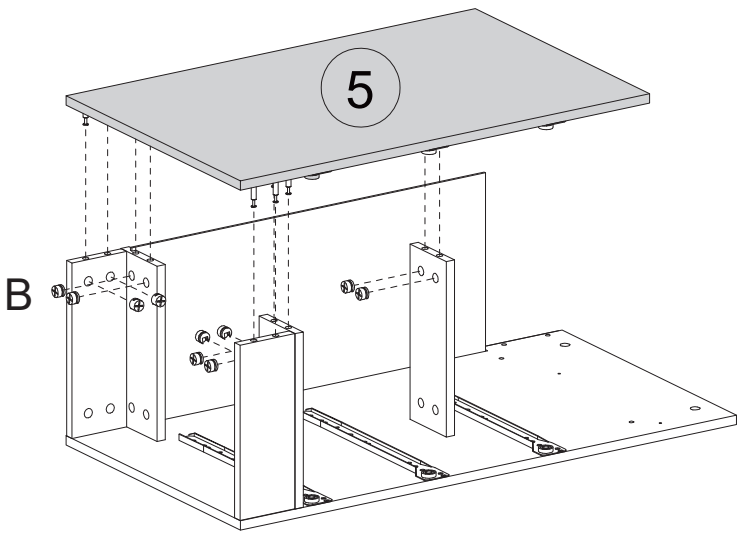


S8

A*6	J

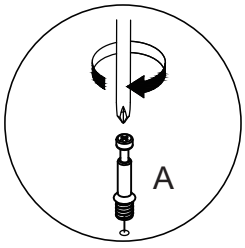

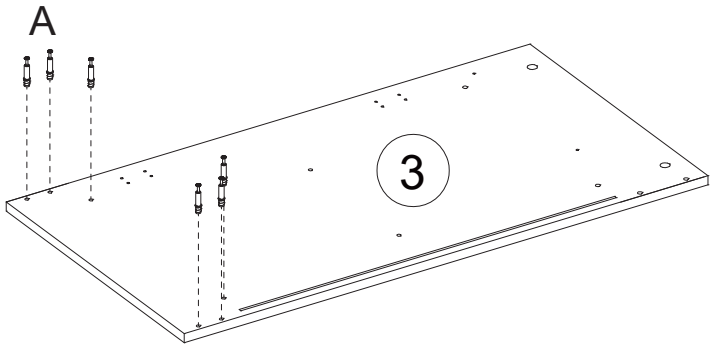


S9




B*6	J

Insert the minifix (B)with the cross arrow mark facing up ward and aim to the panel's top thru holes. then tighten clockwise

Pay attention to the position of the card slot during installation.

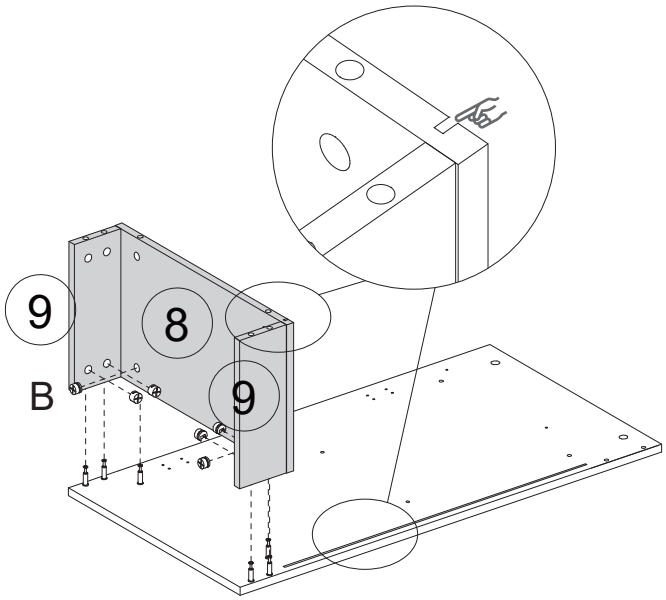



S10

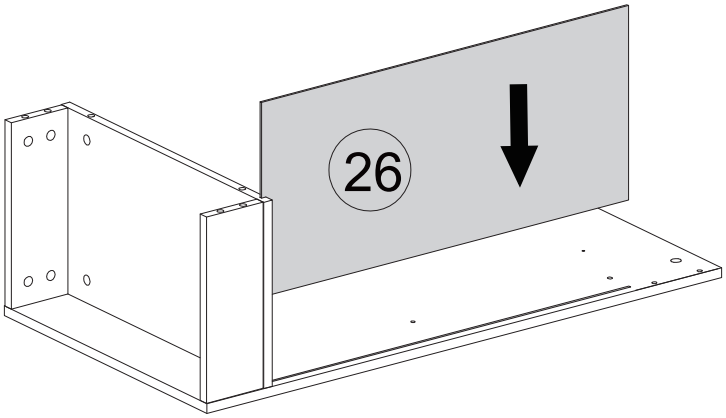

S11


A*6	J

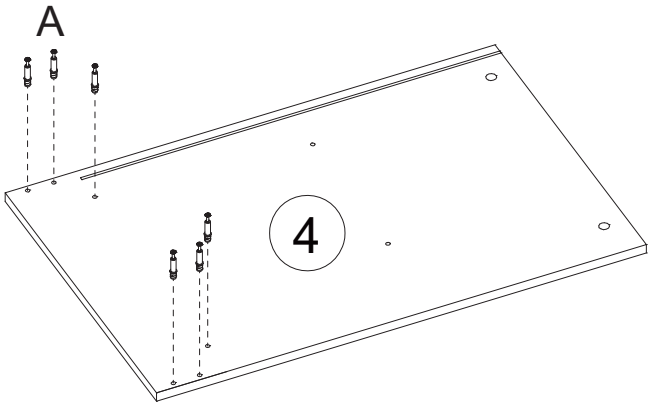


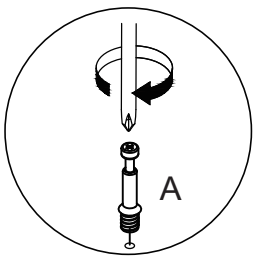

S12

B*6	J

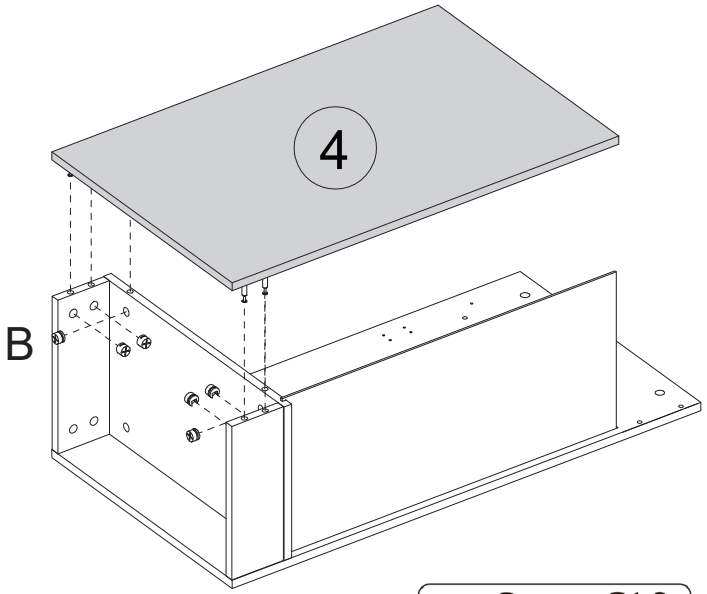


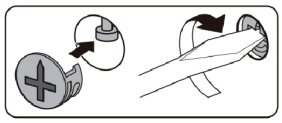

Insert the minifix (B)with the cross arrow mark facing up ward and aim to the panel's top thru holes. then tighten clockwise

S13


A*4	J

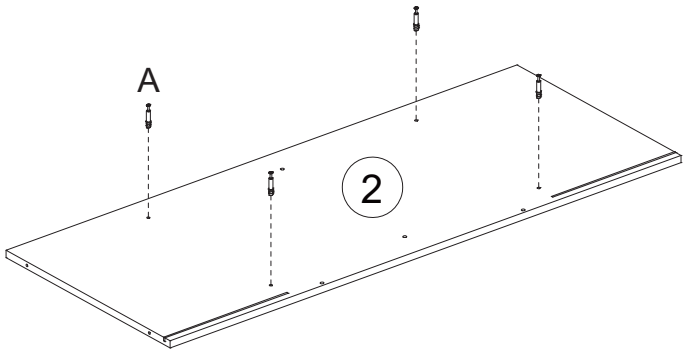


S14

B*4	J

Pay attention to the hole positions during installation.

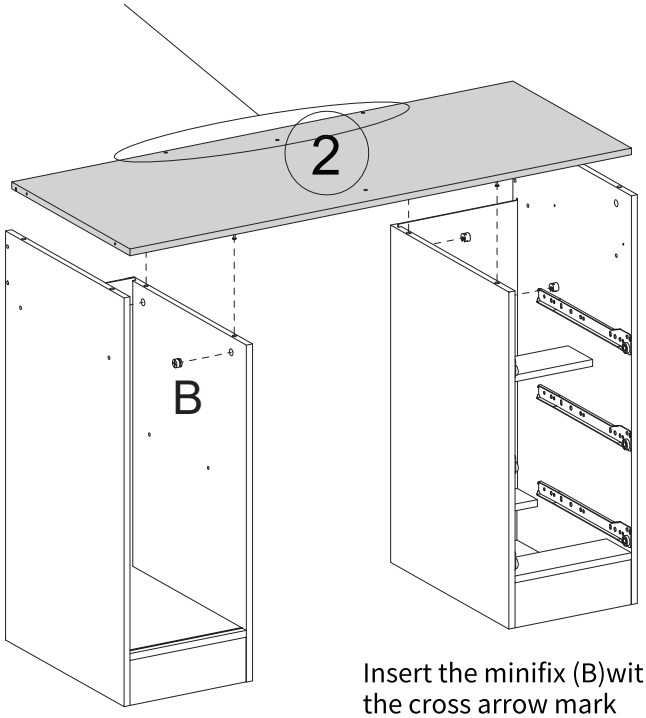


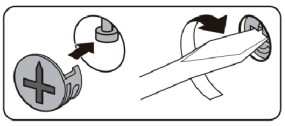


Insert the minifix (B)with the cross arrow mark facing up ward and aim to the panel's top thru holes. then tighten clockwise

S15


D*4	J
C*4	K

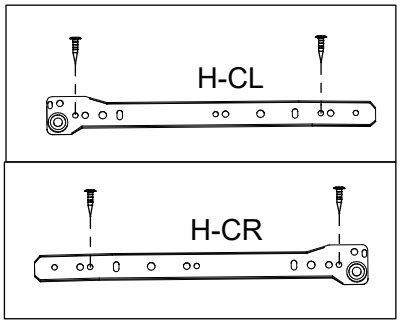


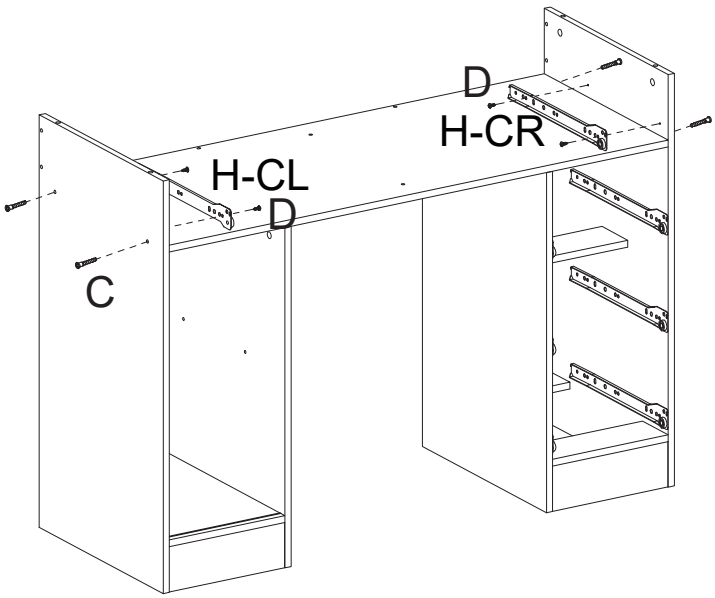


S16


D*4	J

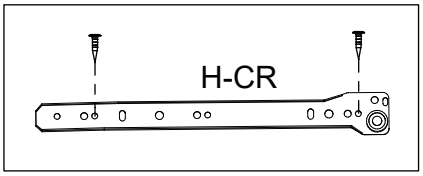

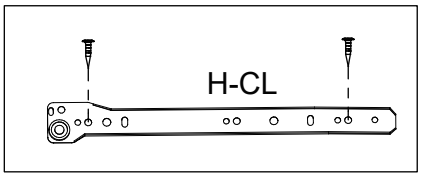


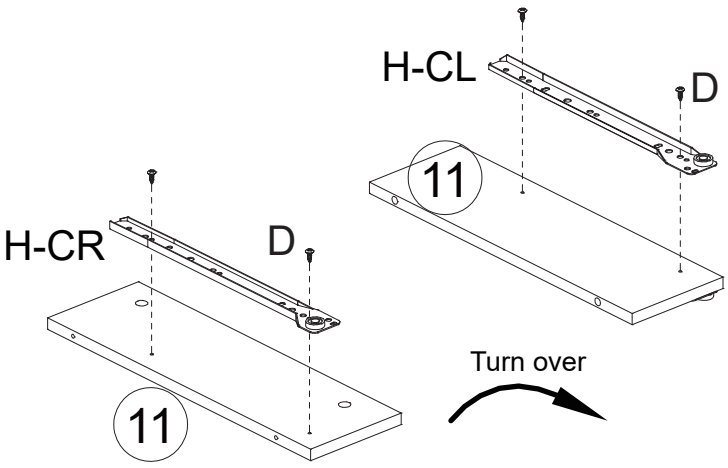


S17

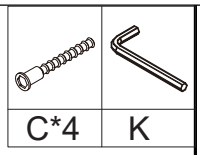


C*4 | K

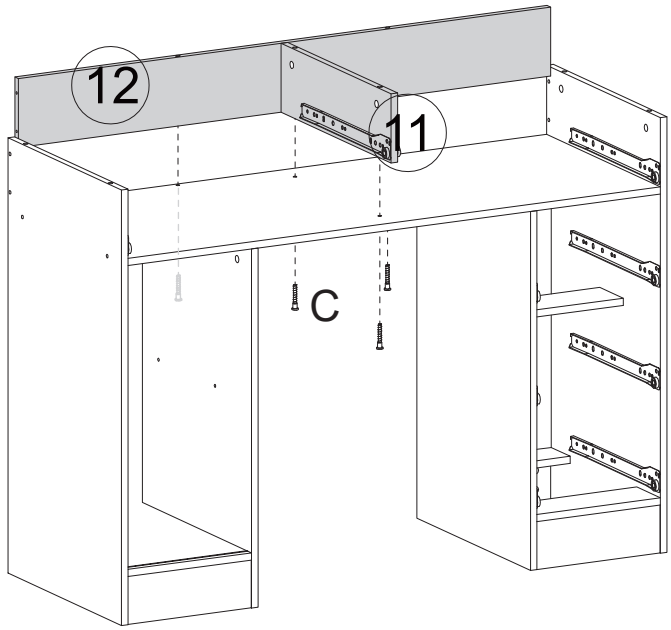


S18

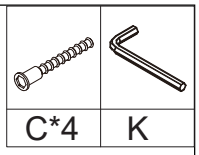


C*4 | K

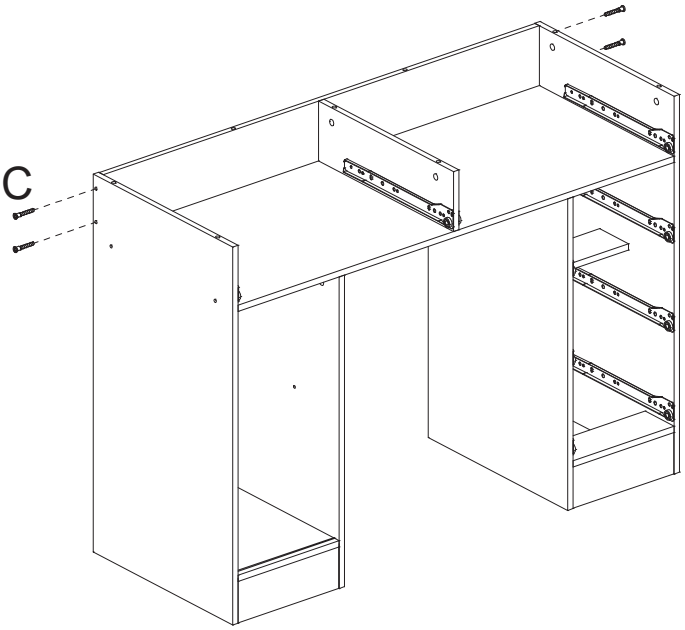


S19

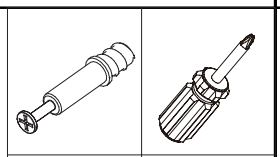


A*8 | J

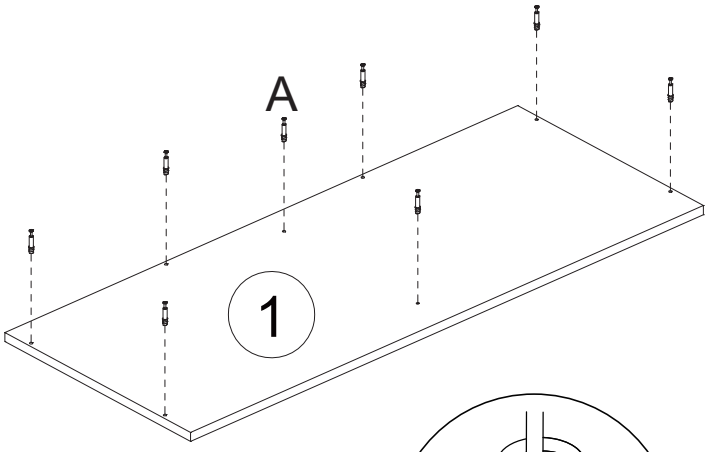

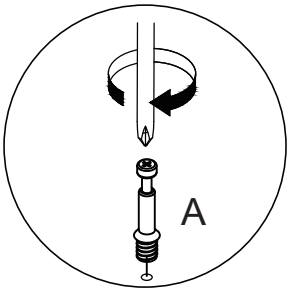



S20

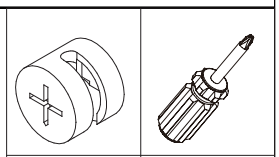


B*8 | J

Insert the minifix (B)with the cross arrow mark facing up ward and aim to the panel's top thru holes. then tighten clockwise

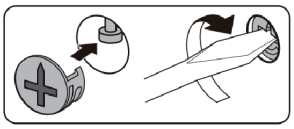


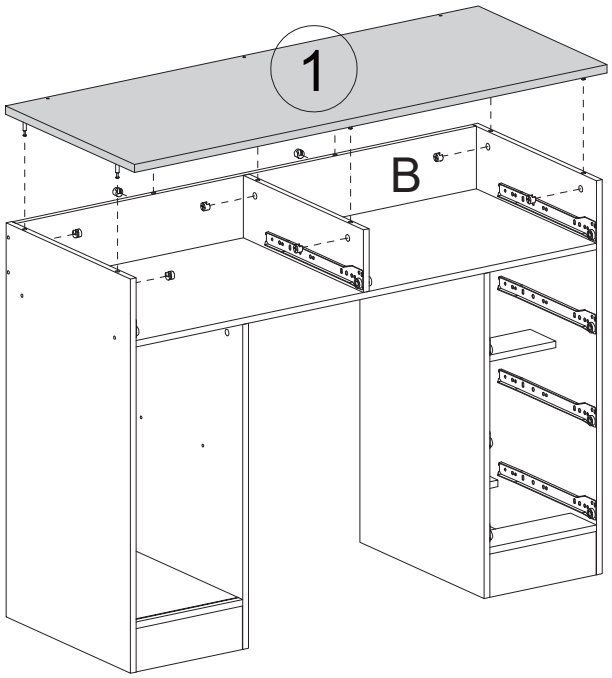


S21

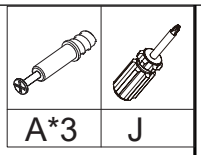


A*3 | J

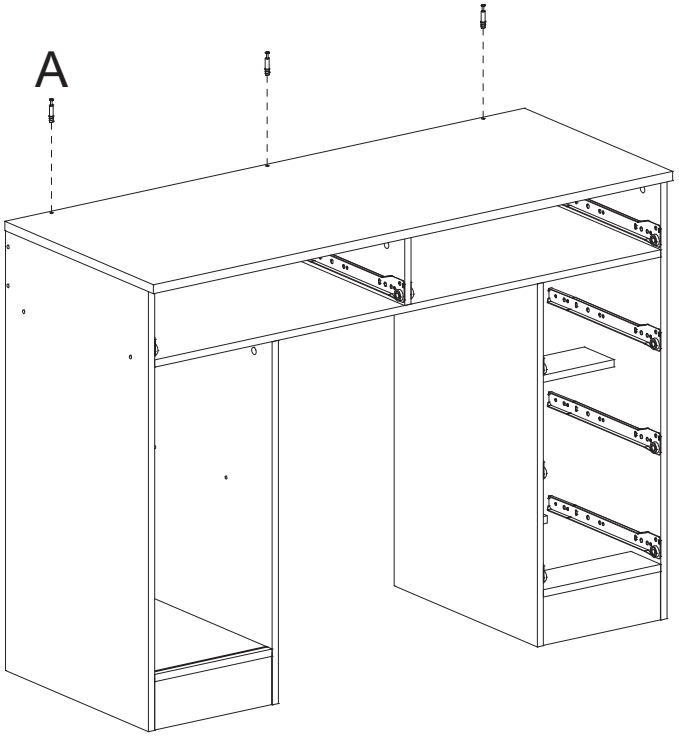


S22

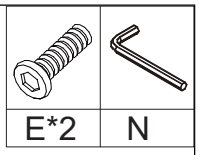


E*2 | N

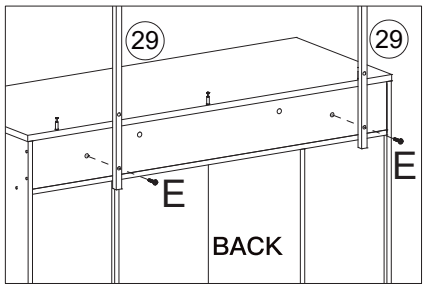


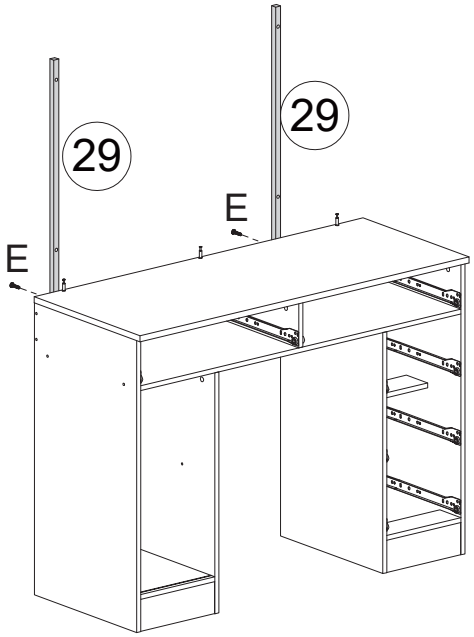


S23

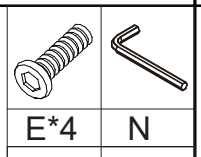



E*4 | N



B*3 | J

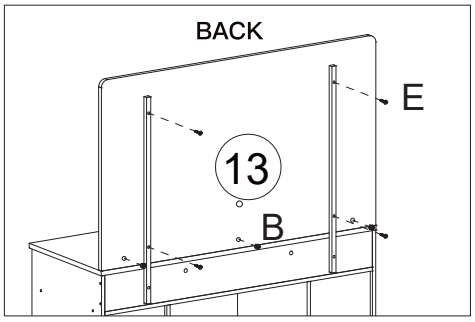

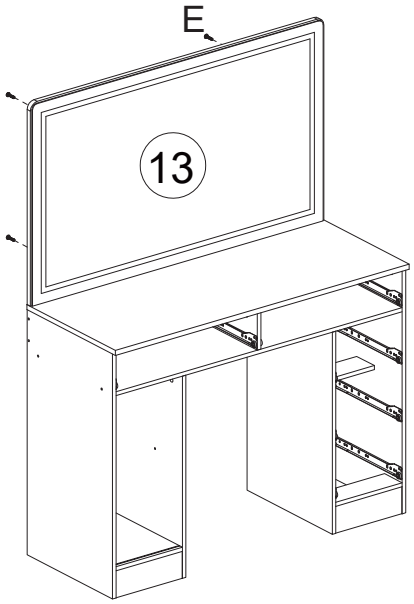





Insert the minifix (B)with the cross arrow mark facing up ward and aim to the panel's top thru holes. then tighten clockwise


S24

X2

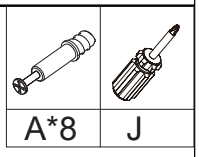


A*8 | J

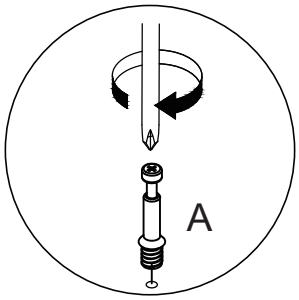

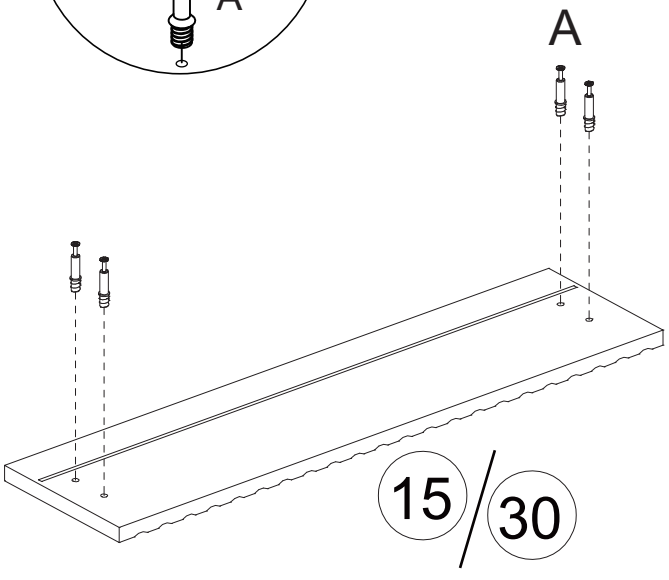


S25


X2



B*8 | J

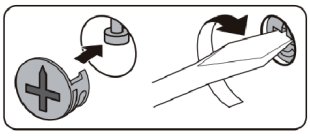


Insert the minifix (B)with the cross arrow mark facing up ward and aim to the panel's top thru holes. then tighten clockwise

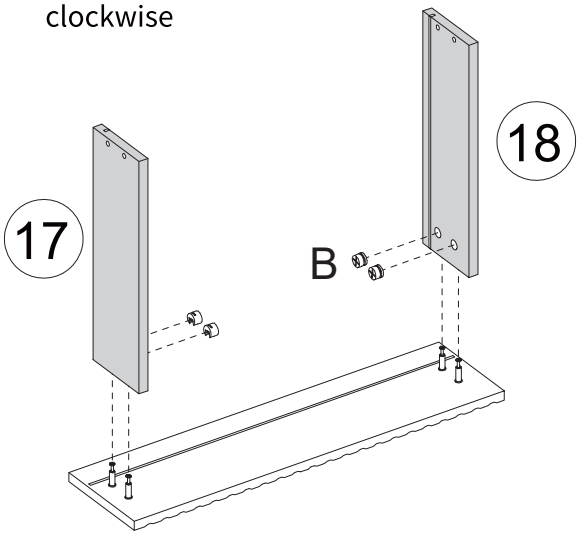


S26

X2

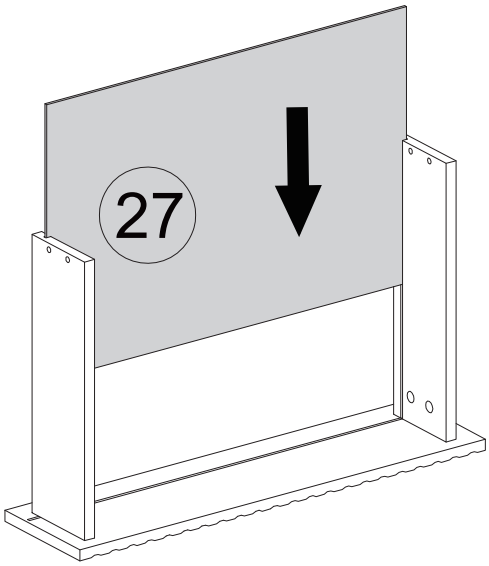


S27




C*8 | K

X2

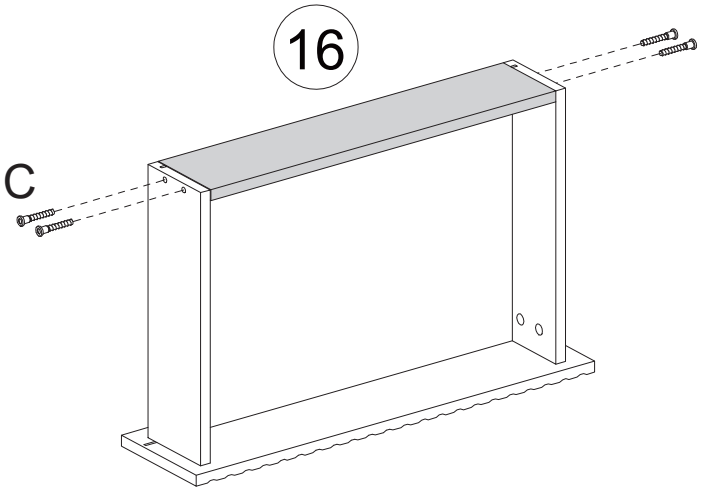

S28




D*8 | J




X2



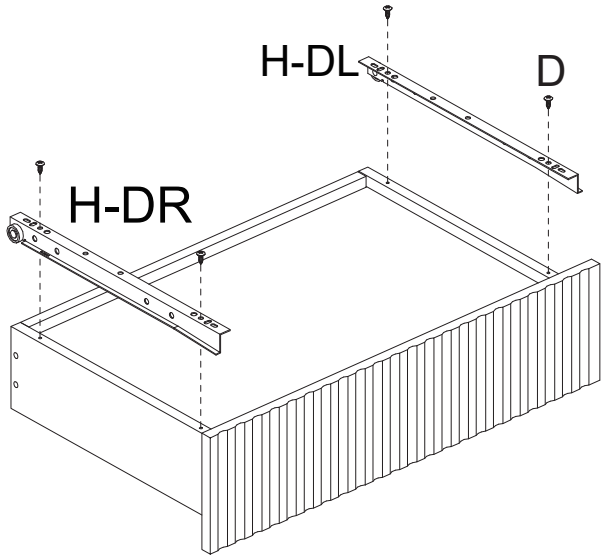


S29





A*12 | J

X3

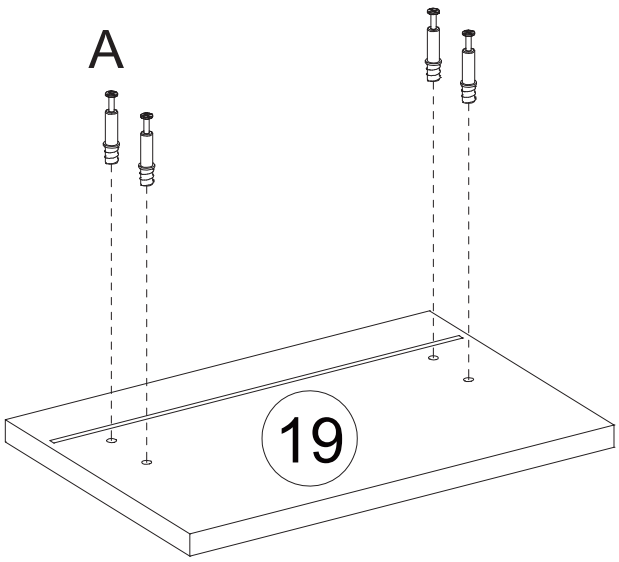

S30

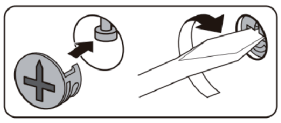




B*12 | J


Insert the minifix (B)with the cross arrow mark facing up ward and aim to the panel's top thru holes. then tighten clockwise

X3

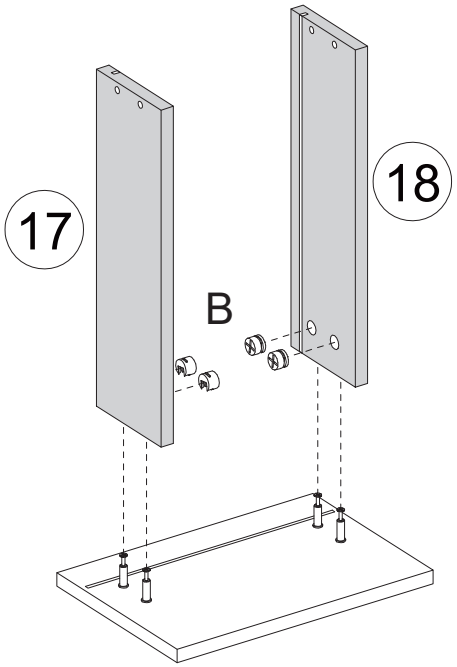


S31

X3

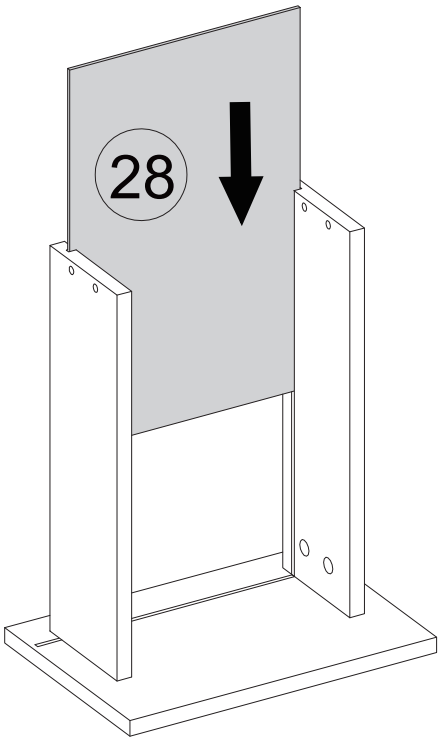


S32

X3




C*12 | K

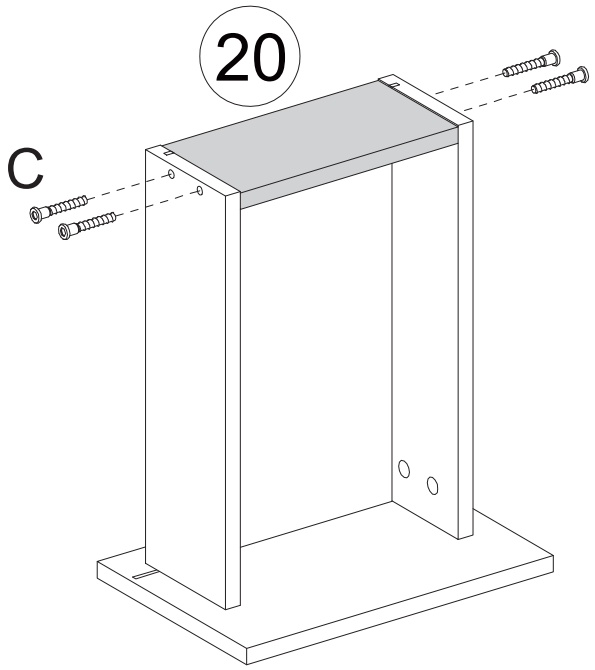


S33









X3

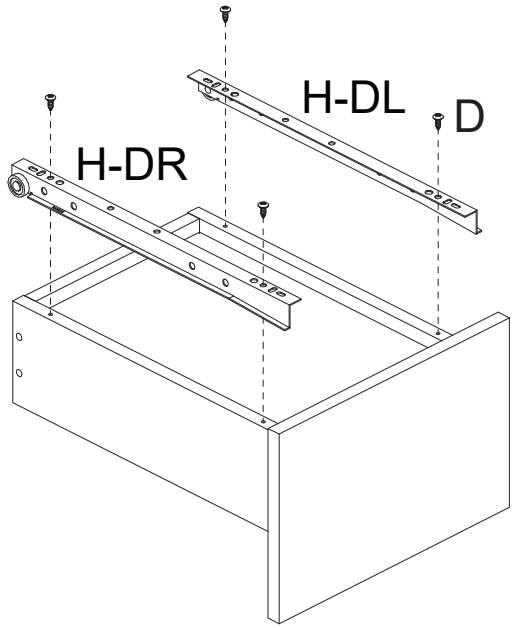


S34

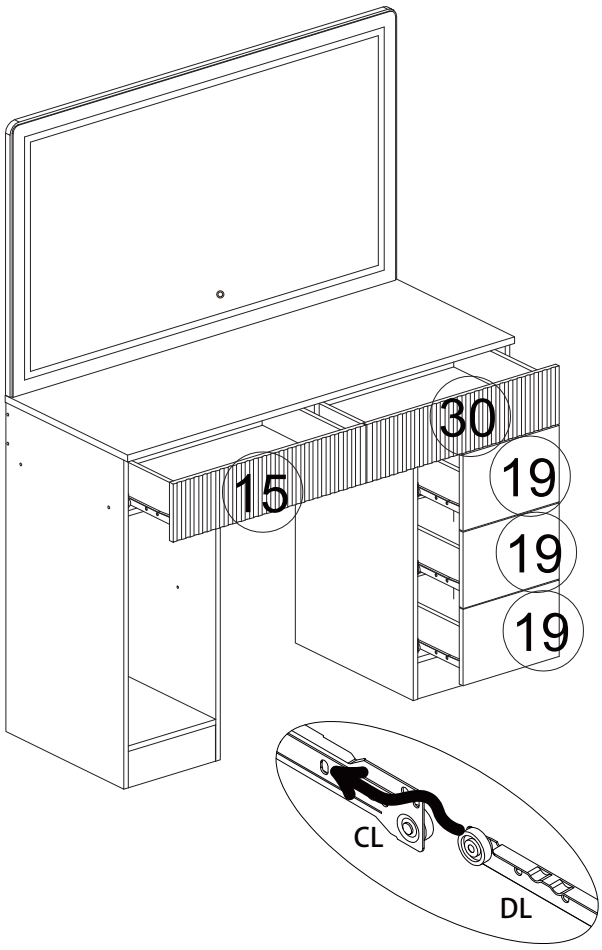


S35



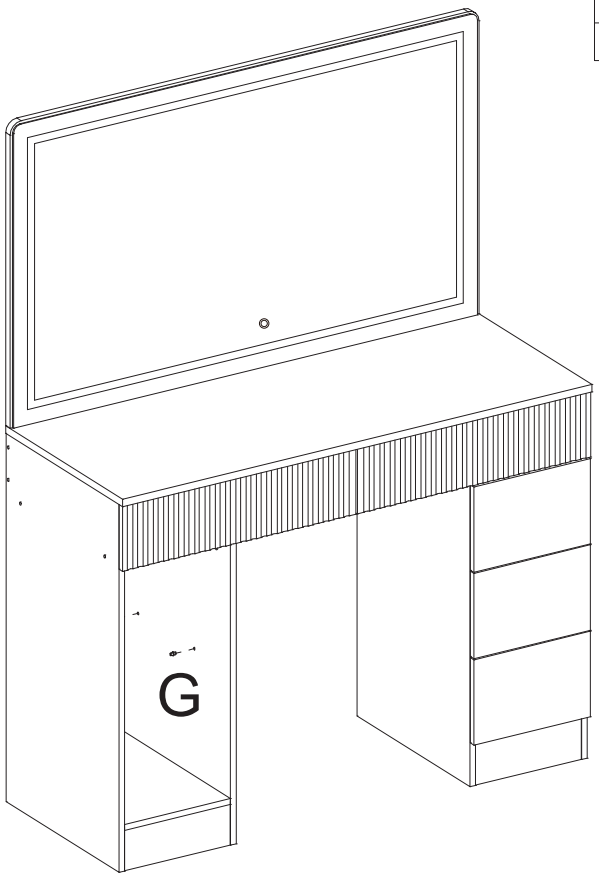


S36

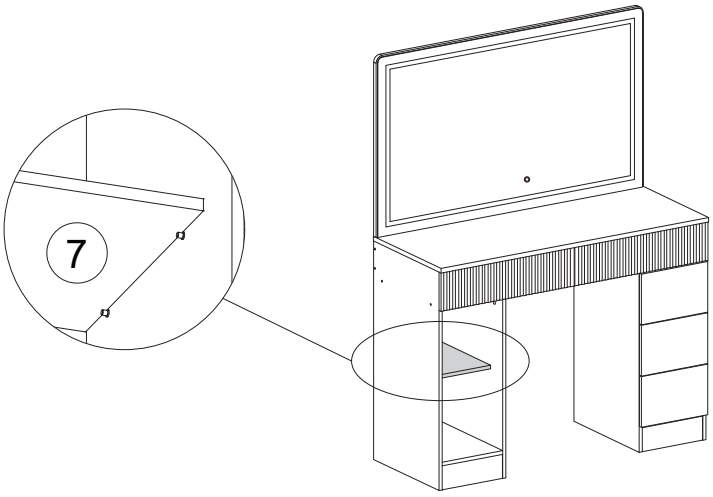



S37

F*2	D*4	J

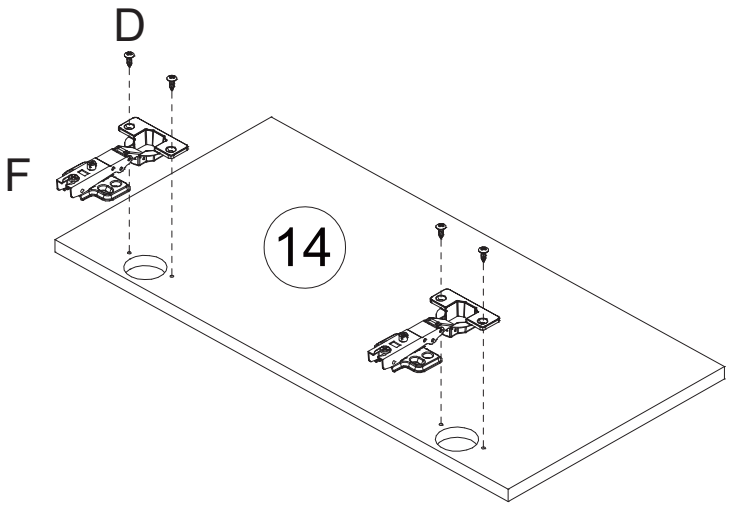


S38

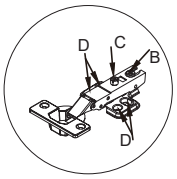


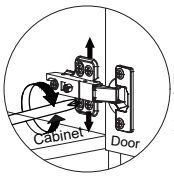


To adjust the vertical height.
Loosen the four screws "D" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

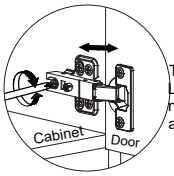

To adjust depth.
Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

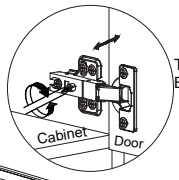


To adjust side ways.Turning the screw "C" on BOTH hinges on each door.

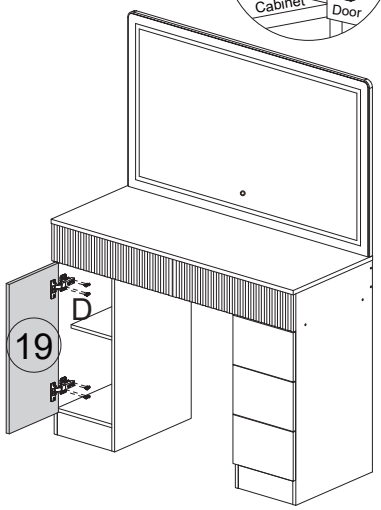

D*8	J

S39


C*4	K

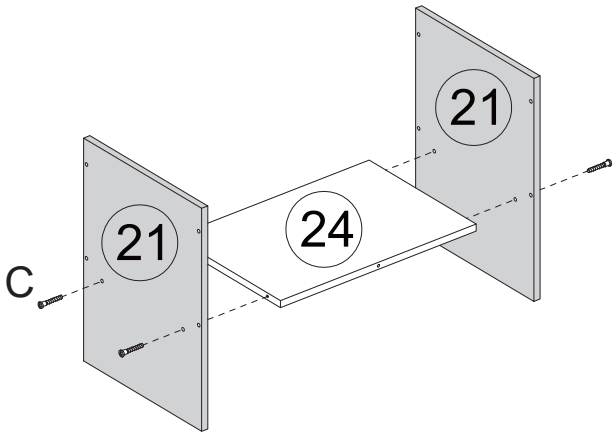


S40


C*10	K

Pay attention to the hole positions during installation.

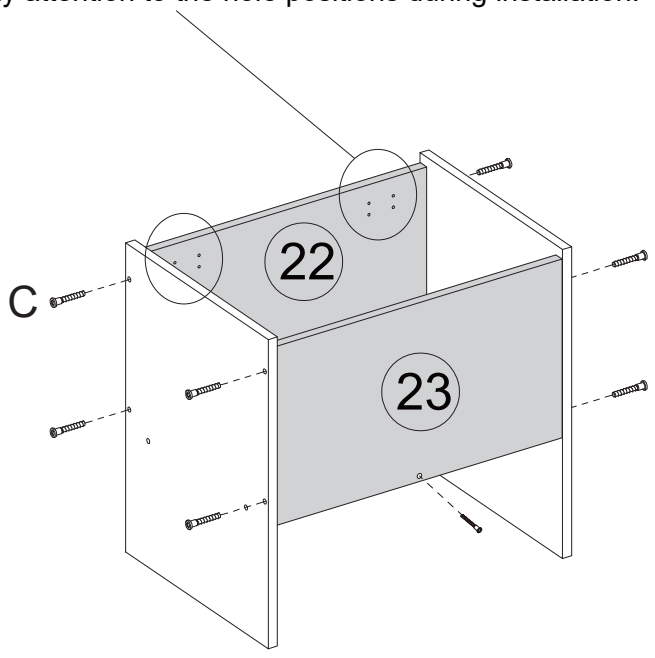



S41

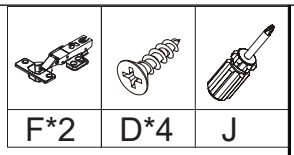

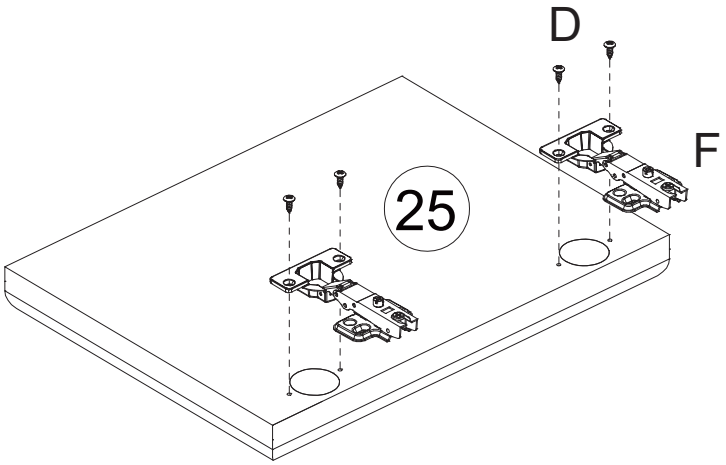


S42

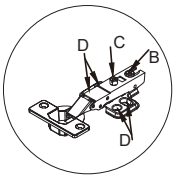


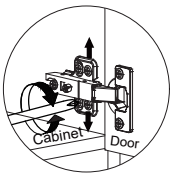


To adjust the vertical height.
Loosen the four screws "D" on both hinges.
Two of them are usually in slotted holes which allows you to adjust up or down by a few mm.
Then tighten back up.

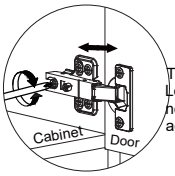


To adjust depth.
Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

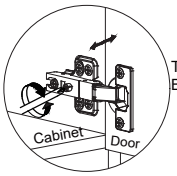


To adjust side ways.Turning the screw "C" on BOTH hinges on each door.

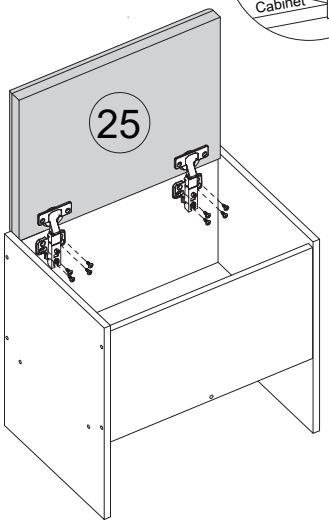

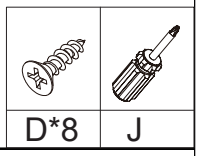


S43



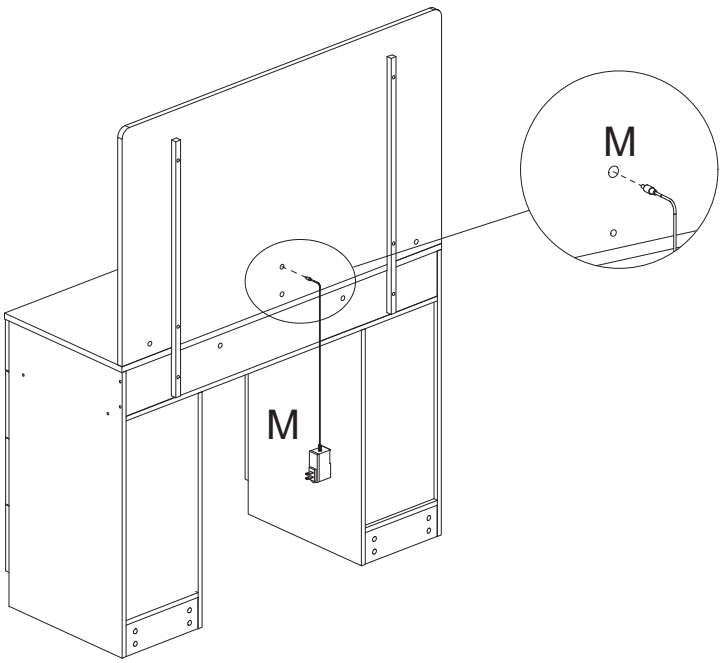

S44

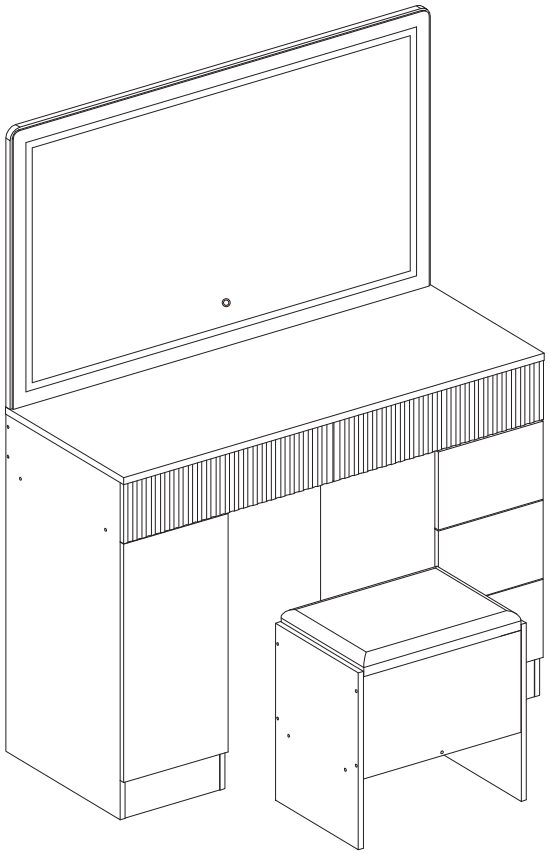

V20260609