
ASSEMBLY INSTRUCTIONS

N708P503552 - N708P503553 - N708P503554 - N708P503555

INSTRUCTIONS DE MONTAGE

N708P503552 - N708P503553 - N708P503554 - N708P503555

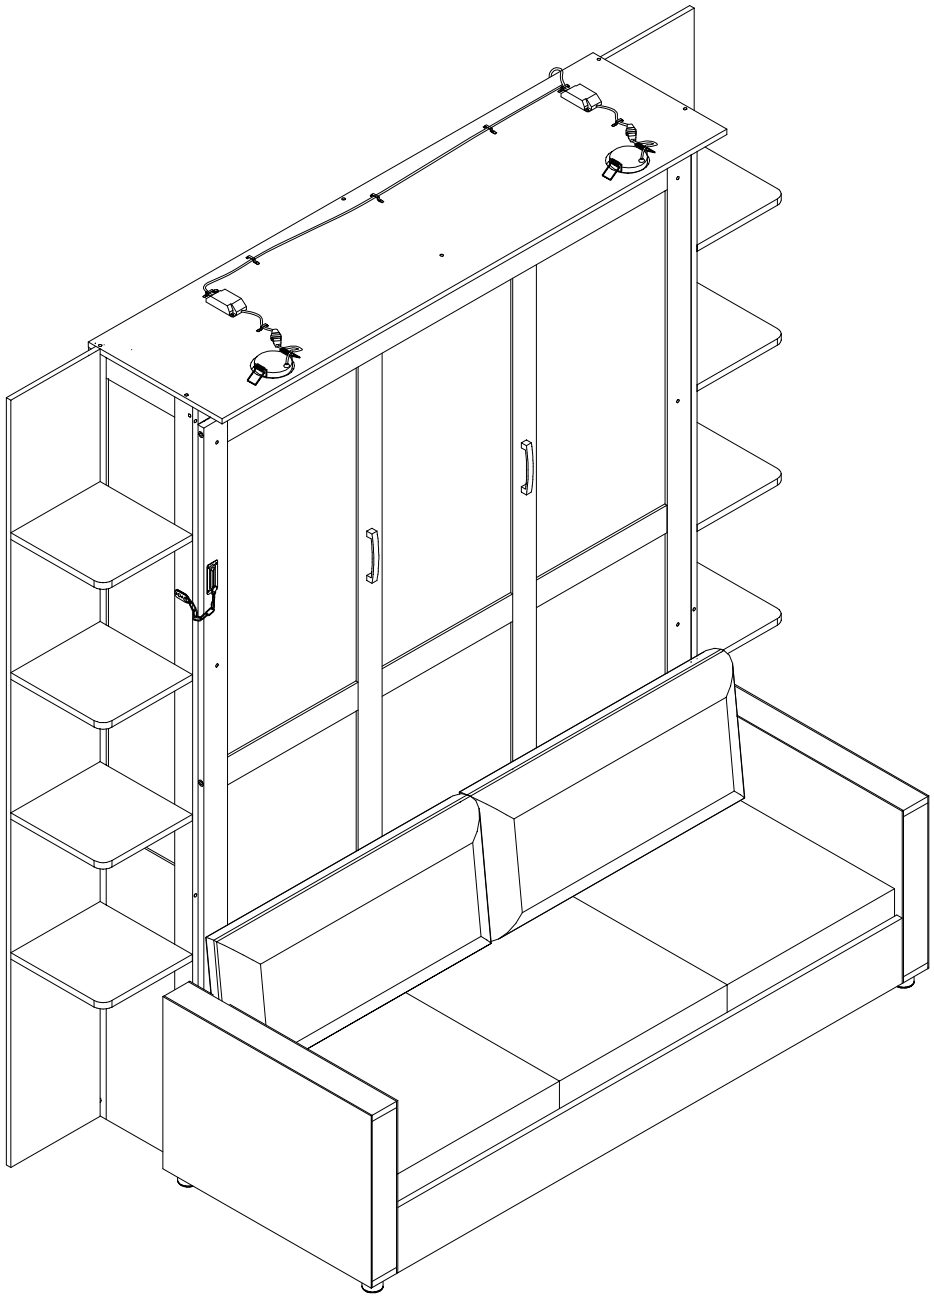



Four people are required to assemble and move this model.



Quatre personnes sont nécessaires pour Assemblez et déplacez ce modèle.


Note: This bed must be equipped with a mattress e quivalent to 44 lbs

Remarque : Ce lit doit être équipé d'un matelas équivalent à 44 livres

⚠ SAFETY FIRST: WALL ANCHORING IS NON-NEGOTIABLE

MURPHY BEDS MUST BE SECURELY ANCHORED TO STRUCTURAL MEMBERS. NEVER MOUNT SOLELY TO DRYWALL. IMPROPER INSTALLATION CAN CAUSE SERIOUS INJURY OR DEATH.

⃠ ABSOLUTELY FORBIDDEN HARDWARE

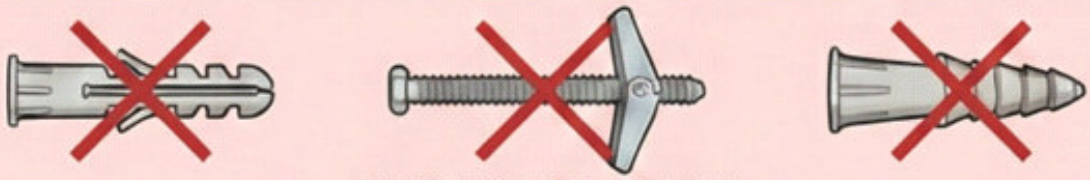

PLASTIC ANCHORS - WILL FAIL

A. WOOD STUD WALL


HOW TO IDENTIFY



KNOCK ON A HOLLOW WALL



STUD FINDER TOOL

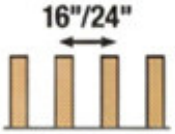


STUDS SPACED IS 16" STUD

REQUIRED HARDWARE




HEAVY-DUTY SCREWS (MIN. 5/32" DIA., 2.5" LONG)

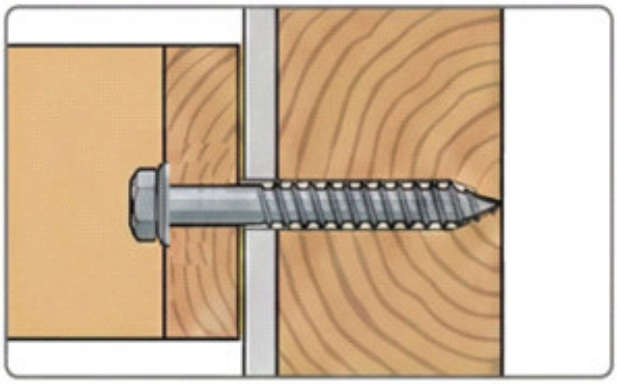

MUST PENETRATE WOOD STUD CENTER AT LEAST 2.5"

B. MASONRY/CONCRETE WALL

HOW TO IDENTIFY

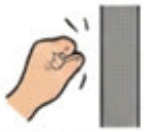

KNOCK ON A SOLID WALL




DRILL BIT CREATES GREY/RED DUST

REQUIRED HARDWARE



ALL-METAL EXPANSION BOLTS (MIN. 5/32" DIA., 2.5" LONG)

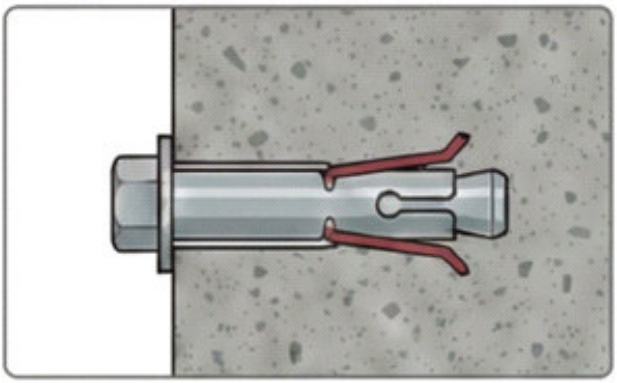

CLEAN HOLE OF DUST. DO NOT USE PLASTIC.

☑ FINAL SAFETY CHECKLIST

- ☑ VERIFY STUD CENTER BEFORE DRILLING
- ☑ ENSURE FLUSH WALL FIT (ADJUST BASEBOARD)
- ☑ PERFORM PULL TEST BEFORE MATTRESS LOAD
- ☑ AVOID HIDDEN WIRES/PIPES BEFORE DRILLING
- ☑ REGULARLY INSPECT AND MAINTAIN WALL ANCHORS
- ☑ CONSULT A PROFESSIONAL FOR WALL ASSESSMENT AND OPTIMAL HARDWARE; CUSTOMER ASSUMES ALL INSTALLATION LIABILITY

IMPORTANT INFORMATION PACKAGE.

THIS INFORMATION PACKAGE CONTAINS WARNING AND PRODUCT SAFETY INFORMATION. DO NOT PROCEED WITHOUT REVIEWING THOROUGHLY.

A. WARNING LABELS.

Your purchased Murphy Bed is delivered to you with WARNING LABELS to constantly remind you to take and adopt Safety Measure throughout the entire assembly and mounting points of the Bed to the walls.

DO NOT REMOVE these labels.

These Warning Labels serve as a Reminder Tool for visiting friends and relatives when using the Murphy Bed to ensure Safety Precautions are taken.

WARNING.

IMPORTANT SAFETY REQUIREMENTS - Bed Attachment to Wall.
For Your Safety, the Murphy Bed MUST BE ATTACHED to the Wall.

Seek Certified Professional Consultant / Contractors for their Services to:
1.) DETERMINE the WALL Type in Your Home;
2.) PRECISE HARDWARE that suits to the Wall Type in Your Home;
3.) INSTALL / ATTACH of the Murphy Bed to the Wall in Your Home;
4.) VALIDATE the Murphy Bed is appropriately and securely installed/attached.


The choice of wall anchoring hardware depends on the type of wall. This Murphy Bed is delivered with HARDWARE SCREWS suited for attachment to WOOD STUDS in walls. Any STUDS type detected with your Consultant-Contractors to be NOT WOOD STUDS - DISCARD and DO NOT USE these SCREWS. Use the hardware suitable for your wall material.


Seek the professional advice of your Consultant-Contractor and procure the appropriate hardware and brackets for the attchment of the Murphy Bed to the Wall.

FAILURE TO ADHERE TO THE ABOVE INSTRUCTIONS MAY RESULT IN SERIOUS and/or SEVERE INJURIES or Death caused by the detachment of the Murphy Bed from the Wall.


SAFETY PRECAUTION :

1.) **MAXIMUM Mattress Weight** suited to your Murphy Bed : **44**lbs (**20**kg);
MAXIMUM mattress thickness: 8 inches (**20**cm);
2.) **ENSURE ADULTS ONLY** throughout the entire assembly and attachment.
3.) **KEEP ALL Children, Non-Ambulatory persons and Pets** at bay during the entire assembly and attachment.

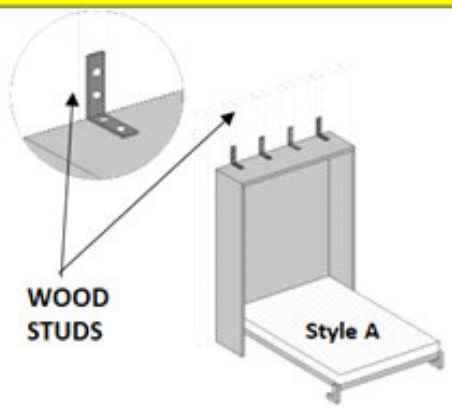

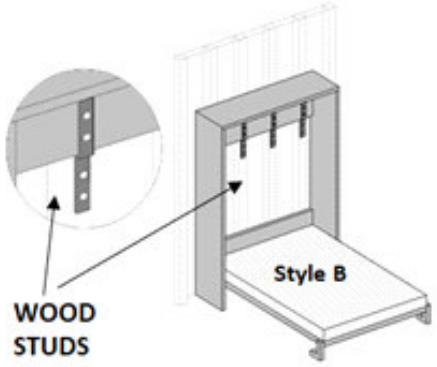

LINE ART for Reference only and **NOT DRAWN TO SCALE.**

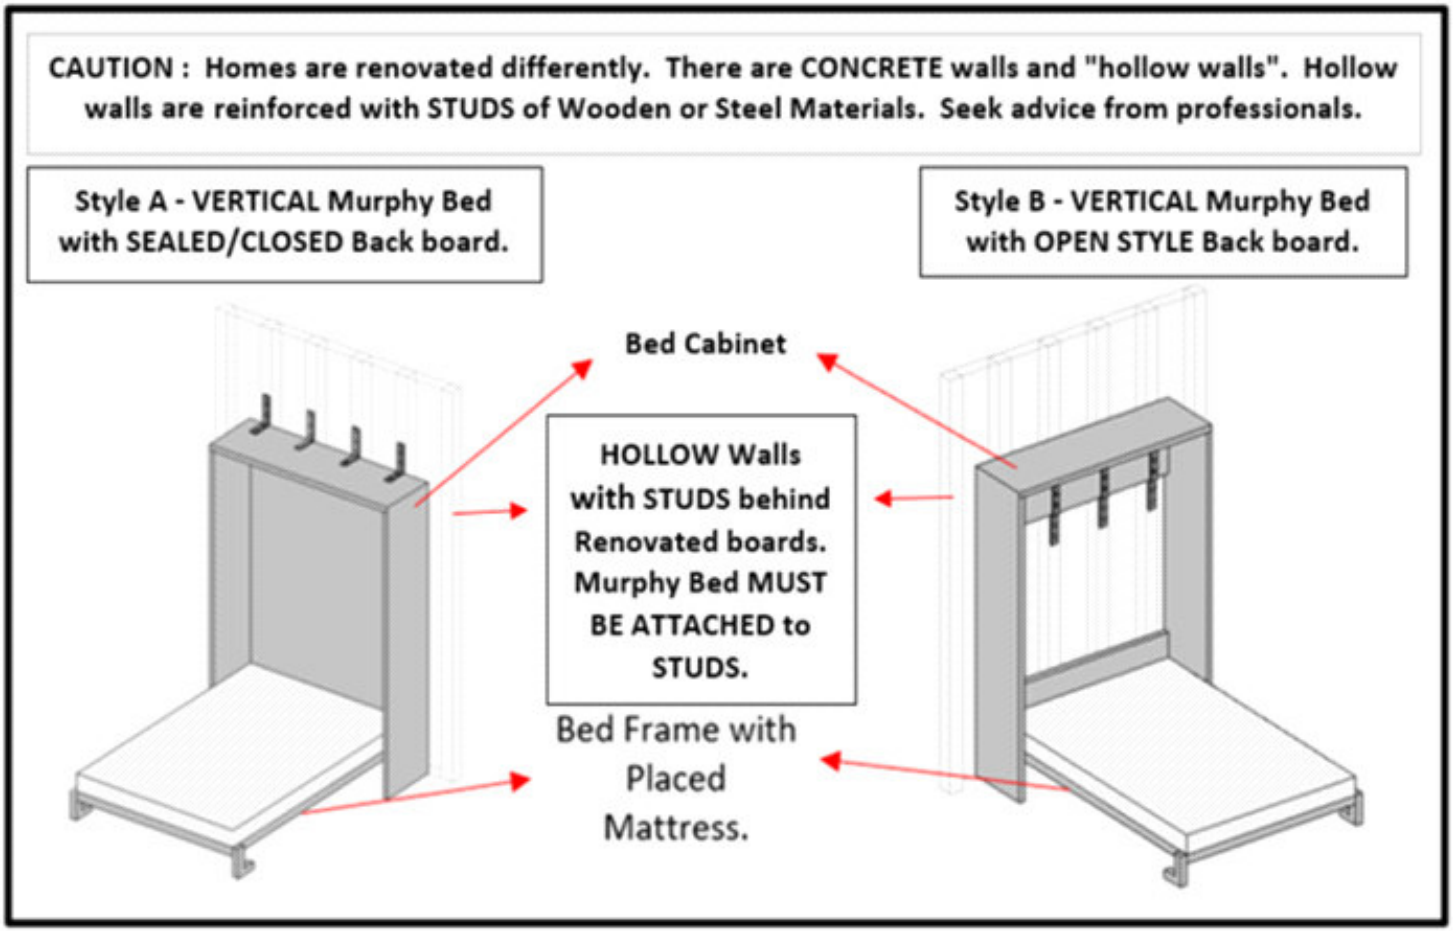

B. SAFETY REMINDERS.
MARKINGS in WALL – WHERE TO ATTACH the MURPHY BED.

Irrespective of the wall type, whether **Solid Concrete Walls** OR **Decorative Walls** with **WOODEN Studs** OR **Decorative Walls with Metal Studs**, ensure that

a.) you choose a professional installer who has a good understanding of the wall structure where the Murphy Bed is anchored, including the position of the wall studs and structural components in the case of a wood or metal structure.
b.) precise markings of the positions of the anchor points are to be made on the wall for easy identification during the Murphy Bed attachment to the wall.
c.) the relevant and appropriate Hardware with Metal Brackets are READY for this attachment and are within easy access for prompt and efficient attachment.

This product requires Professional Consultation and Installation*.

* When you choose the professional installer, make sure to comply with all applicable laws, regulations and rules in the city, state or country where the Murphy Bed is installed.

To have your Murphy Bed fully assembled and to achieve its intended functionality – you **MUST READ** through this entire Assembly Instructions Manual before you start the assembly of the bed

1.) There are numerous Safety Issues and Safety Precautionary Actions that you MUST KNOW before you start the Assembly.

2.) CAUTION - Failure to FOLLOW / ADHERE to the GUIDE, WARNING AND REMINDERS here, may result in serious / severe injuries or death.

3.) PRECAUTION : For the assembly, Adult Partners only, to assist in the entire assembly. Ensure NO LESS THAN 2 ABLE BODIED PERSONS ONLY in the entire assembly and attachment of this Murphy Bed to the walls of your home.

4.) CAUTION : During the entire assembly process and attachment of the Murphy Bed to the walls of your home, Keep ALL Children, Non-Ambulatory Persons and Pets completely away.

5.) SAFETY REMINDER on / to : Personal, Family Members and Pets. The Murphy Bed may be shipped to you in 3 to 5 packages and are HEAVY. Each carton holds many parts and components. Some of these components eg., bolts and screws are relatively small* in size.

***. During the assembly process, ensure that any misplaced bolts and nuts are picked up so that Children and or Pets do not play or ingest these.**

***. During the assembly process, ensure that any misplaced bolts and nuts are picked up so that Children and or Pets do not play or ingest these.**

6.) This Murphy Bed is intended for ADULT USE ONLY.

7.) This Murphy bed is delivered with pre-installed hardware for the wood studs and the concrete solid wall - please choose the appropriate hardware according to the type of the wall.

8.) Your Home's Wall Type - Every home is renovated differently with different wall(s) type / finishes. Before you proceed to assemble your Murphy Bed :

a.) **SEEK and CONSULT Professional Services** to ascertain the wall type in the designated location where you intend to attach the Murphy Bed;


b.) **ENSURE** the Consultant-Contractor specifically **INFORMS** you of the **WALL TYPE** in the designated spot where you intend to attach the Murphy Bed.

c.) **ENSURE** the Consultant **INFORMS** you specifically on the matching and relevant Hardware / Brackets to secure and attach the Murphy Bed to the wall.

9.) **WARNING – YOU MUST HEED THE INSTRUCTIONS** given by your appointed Consultant-Contractor on the :

a.) Mounting Hardware Type that suits the wall(s) type - where / when it is NOT WOOD STUDS or NOT CONCRETE SOLID WALL, the **pre-packed hardware not match/ not fit.**

b.) Number of Mounting Points for the Murphy Bed to the Wall.

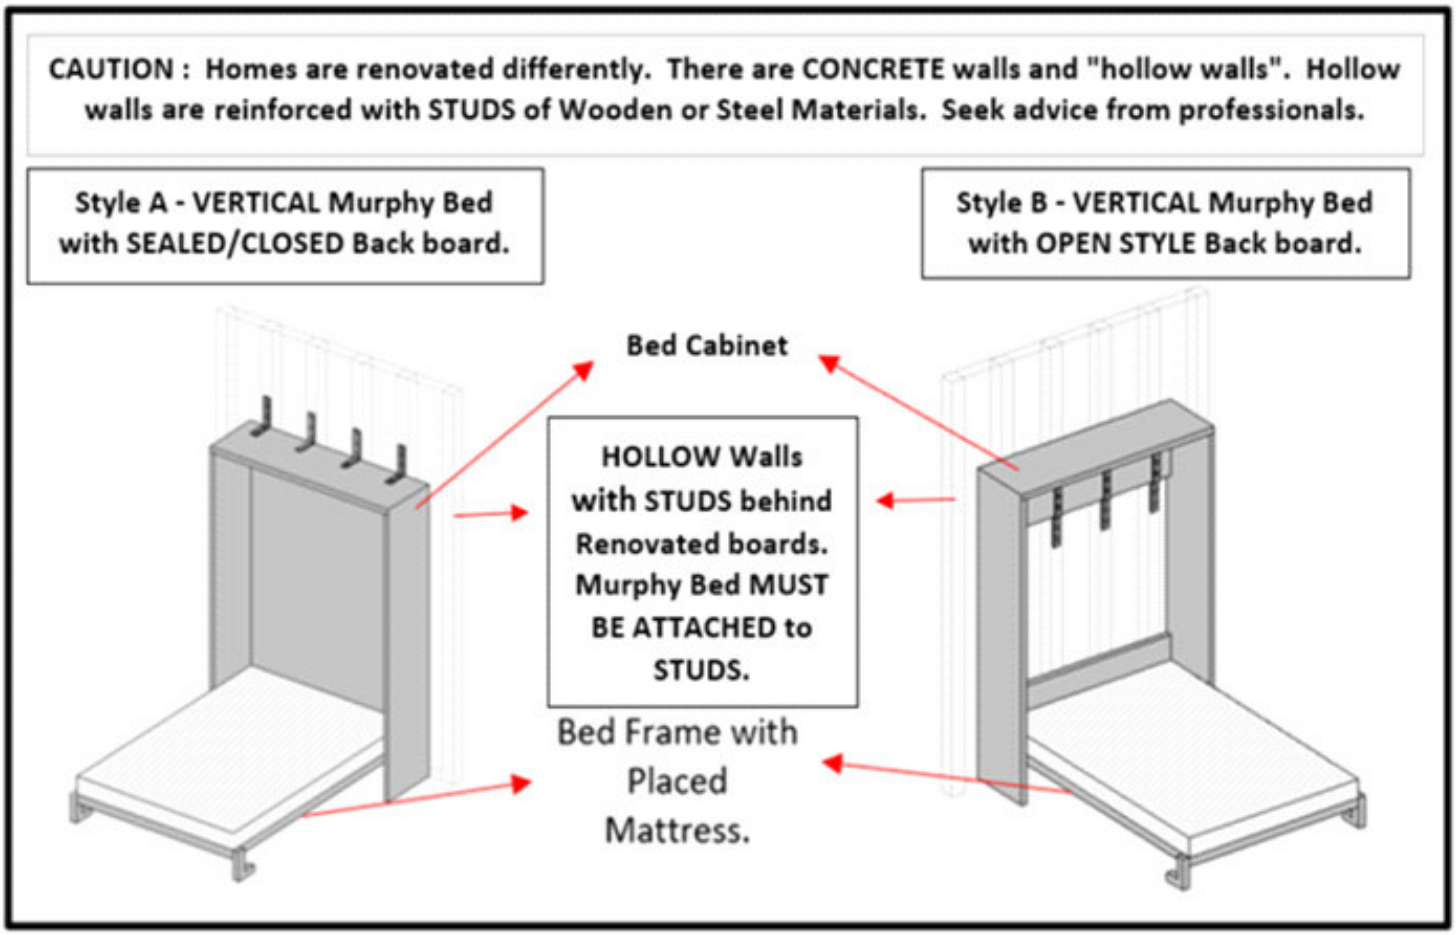

10.) This Murphy Bed is designed for home use and not intended for commercial use.

11.) This Murphy Bed is not intended to be moved, modified, uninstalled or disassembled once professionally installed.

C. MOUNTING INFO & HARDWARE.

1.) REMINDERS :

a.) **In the event, that this pre-packed Screws Set does not match to the walls in your home – DO NOT USE / DISCARD these hardware.**


b.) **ADHERE to the Professional Consultant-Contractor** instructions and information on the **RELEVANT** mounting hardware that suits your wall.


c.) Procurement of these **RELEVANT** hardware is an arrangement made between your Consultant-Contactor and you.

2.) A step ladder (not provided) is needed to attach the L-Brackets to the wall, at the Top of the Murphy Bed. **DO NOT** lean against the Top of the Murphy Bed, it may cause sagging.


Murphy Bed Style A


L-Bracket Fixture to Wood Studs

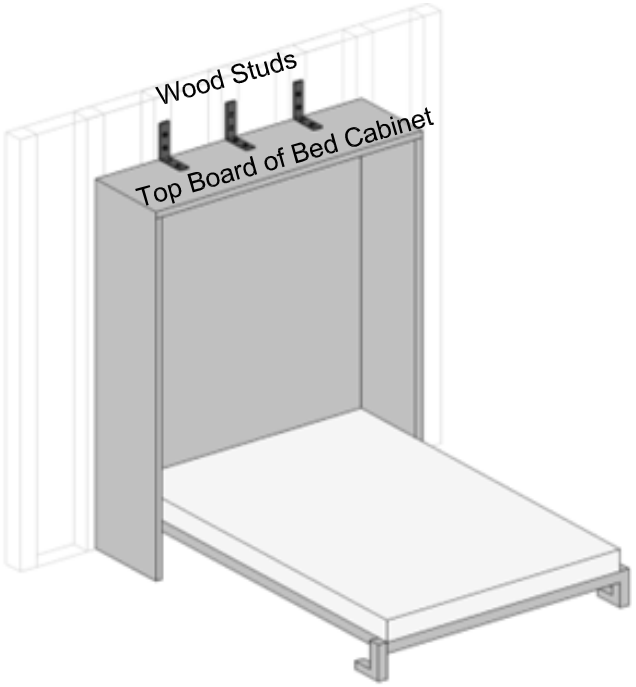

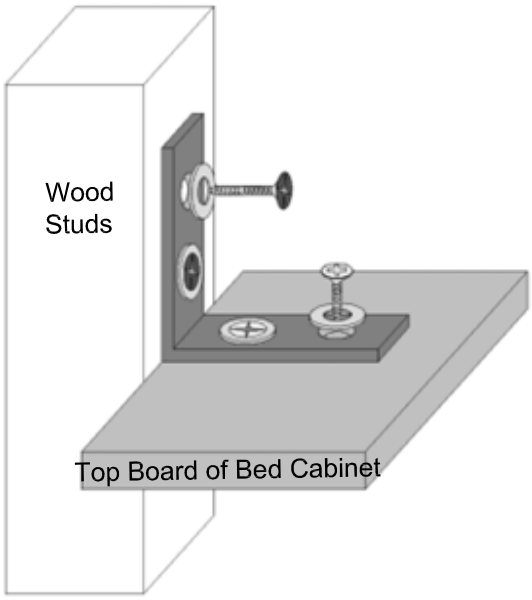

Z-Bracket Fixture to Wood Studs

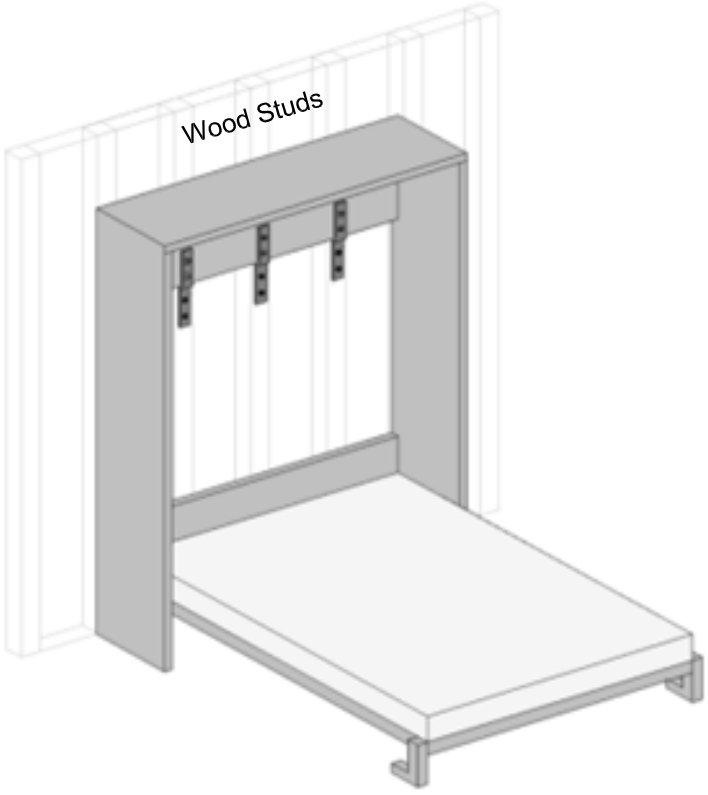

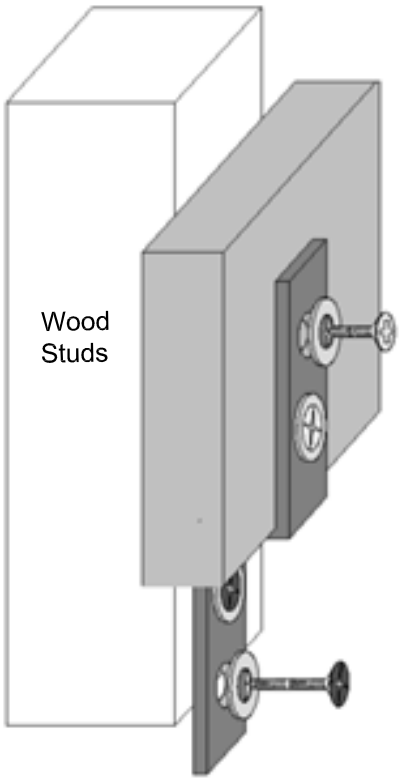

D. IDENTIFICATION of TOOLS and ATTACHMENT SKILL.

The parts and components to assemble the Bed Frame are stated in the Assembly Instructions. Follow the instructions carefully.

For an efficient assembly, after opening the cartons shipped to you :

a.) open and layout all parts and components in sequence;
b.) account for every part, hardware and component;
c.) then lay out the parts close to each other;

Assemble and tighten each bolt / nut / screw up to 80% to allow for the Bed Frame and Bed Cabinet to be HELD together.

Upon FINAL assembly where all the parts and components are FITTED precisely, in a sequential manner – proceed to tighten each bolt & nut & screw gradually.

CAUTION :

1.) **The METAL PLATES to the sides of the Side Rails – MUST BE FULLY and SECURELY TIED to the SIDE RAILS.**
2.) **The Piston L-Brackets that are attached to the INNER WALL of the Bed Cabinet – MUST BE FULLY and SECURELY TIED to these Inner Walls.**
3.) **These Metal Plates and the L-Brackets – are the components that are holding the Pistons that allow your Bed to "travel" to an OPEN or CLOSED position.**
4.) **Frequent Inspections of these Metal Plates / Brackets and Pistons Bolts, up to Once a Month – to ascertain these DO NOT BECOME LOOSE. For if these bolts to the Bed Frame and or Bed Cabinet or Pistons are loose, may cause the BED FRAME to become DISLODGED and cause injuries.**

REMINDER : NEVER FULLY TIGTHEN any screw / nut or bolt in one session. If you DO TIGHTEN the hardware all the way into the core of the wood, this cause the parts to become skewed that would impact other parts of the item not being able to be aligned to its mounting points for assembly.

E. ALLASSEMBLY WORKS REQUIRES A TEAM OF NO LESS THAN 3 ADULTS.

Reminder : Per above info, the cartons and products are heavy – therefore exercise CAUTION at all times and ENSURE YOUR TEAM NO LESS THAN 3 for the entire ASSEMBLY.

F. ASSEMBLY OF WALL BED CABINET.

Identify all parts and components for the Wall Bed Cabinet.
Assemble the Wall Bed Cabinet according to the Assembly Instructions.

Upon the completion assembly of the Bed Cabinet, make a final inspection that all joints and parts are fully and securely attached.

CLEAR all debris in the area where your Murphy Bed is going to be attached to the wall.

Move this FULLY ASSEMBLED BED CABINET and position this BED CABINET some 2 feet to 3 feet away from the designated Wall, where you have previously made markings.

SAFETY REMINDER - The Wall Bed Cabinet is NOT ATTACHED TO THE WALL, YET. From here on - YOU MUST HAVE 2 ADULT to HOLD and STABILISE this WALL BED CABINET, to prevent the Wall Bed Cabinet from TIPPING OVER.

G. THE FIXATION OF THE WALL BED CABINET.

Fix the wall bed cabinet to the wall using wall-mounted hardware, and check to ensure that the wall bed cabinet is securely fastened to the Wood Studs or Concrete Solid Wall.

REMINDER : FOLLOW the INSTRUCTIONS from your Professional Consultant / Contractor.

SEQ	Bed Description	Bed Size	Details.
1	Single/Twin(XL)	~38*75/80~ inches	Attach at least 2 pieces of L or Z Hardware onto the Wall or Studs;
2	Full	54*75inches	Install at least 3 pieces of L or Z Hardware onto the Wall or Studs;
3	Queen	60*80inches	Install at least 3 pieces of L or Z Hardware onto the Wall or Studs;
4	King	76*80inches	Install at least 4 pieces of L or Z Hardware onto the Wall or Studs;
5	Other Bed Size		Other Bed Sizes - seek advice from your Contractor

H. ASSEMBLY of BED FRAME.

Identify all parts and components for the Bed Frame.
Assemble the Bed Frame according to the Assembly Instructions.

Upon completion of assembly of the Bed Frame, make a final inspection that all joints and parts are fully and securely attached.

I. ATTACHMENT OF BED FRAME TO WALL BED CABINET.

Using the lifting hardware (compressed pneumatic/hydraulic piston and other hardware fitting), follow the installation instructions to securely connect the bed frame and the wall bed cabinet together. This process requires NO LESS THAN 2 adults.
You may need to - LIGHTLY slide forward-backward to adjust and create gap space so as to enable the Pneumatic Pistons to be hooked to both ends of the hanging bolts in the Inner

Wall of the L-BRACKET

Fully Secure and Tighten these Bolts at each end of the Pneumatic Pistons.

J. Attachment of Safety Latches.

Upon completion of Step I above, ensure the entire structure of Bed Frame to Wall Bed Cabinet is fully and securely attached as ONE UNIT - affix the Safety Latches.

These Latches are to be reachable by Adults Only. Thus, the minimum height shall be no less than 5 feet (1.5m) from ground.

K. Attachment of Safety Latches.

Recommended Mattress weight (39.6 -55)lb or (18-25)kg / Recommended Mattress thickness (8-10)in or (20.3-25.4)cm - Your Murphy Bed is engineered based on the bed frame weight, mattress weight, and the Neptune force system.

Therefore, load your bed with the RECOMMENDED MATTRESS Weight, Size and Thickness as stated in the assembly instructions.

DO NOT LOAD any heavier or LARGER or LIGHTER Mattress than what is recommended here.

L. MATTRESS PLACEMENT.

Have 1 to 2 persons - place equal strengths to the handles and gently and securely, PULL DOWN the Bed Frame until the Bed Frame is horizontally and level to the ground.

Have the other 2 persons - carry and place the Mattress (**within the recommended weight** and **thickness)** and gently place the Mattress on to the Bed Frame.

M. PNEUMATIC PISTON NEWTON-LOAD STRENGTH.

You are hereby reminded that when the BED FRAME is EMPTY OF MATTRESS, the Bed Frame may NEED a FULL force to be pulled down before you can place the Mattress.

This PULLED DOWN RESISTANCE is a normal feature, as the Newton-Loaded Piston Force is in action.

N. BED STRAP – GUIDE STRAP.

Your Murphy Bed may or may not come equipped with a Bed Strap.

This Bed Strap serves as a GUIDE STRAP to help you lift the Bed Frame some 6 inches or so off its resting position. Then use both hands to FULLY LIFT HOIST the Bed Frame to its closing position.

SAFETY REMINDER :

1. **) DO NOT USE THE BED STRAP to PULL DOWN TO OPEN the BED FRAME from its CLOSED POSITION.**
2. **) DO NOT USE THE BED STRAP to PULL-LIFT-HOIST the BED FRAME from the OPENED-HORIZONTAL position, to the CLOSED POSITION.**

Both the above may cause injury and or unnecessary strain to your arm(s).

O. USING YOUR MURPHY BED.

For EVERY USE – exercising Safety Precautionary Measures to ensure the safety of your family members and pets are IMPORTANT.

Therefore, PRIOR TO OPENING / PRIOR TO CLOSING OF YOUR MURPHY BED - Make sure all Children / Non Ambulatory Persons and Pets are away.

KEEP CHILDREN and NON-AMBULATORY persons from Unlatching the Safety Latches.


P. CAUTION : DO NOT BE DISTRACTED During EVERY OPENING and CLOSING of your Murphy Bed.

Every time you Pull to **OPEN** the Murphy Bed from its closed position OR **Lift-Pull to CLOSE** the Murphy Bed to stow it into the Bed Cabinet -

- Give these actions your focused and dedicated attention.
- **DURING EVERY OPENING and CLOSING of your Murphy Bed** - always ensure you have an Adult Partner close by for added assistance, where necessary.
- **DO NOT OVER EXERT ADDED FORCE to OPEN the Bed or to CLOSE the Bedframe**. For if you do, the resistance of the Piston will only make it harder for you to complete the task.
- **TO CLOSE the Murphy Bed** : depending on your height – stand some 6inches to 10inches away from the FootBoard edge. Use both your hands and place both hands at about equal distance from the middle of the Bed Frame, spaced at 2 to 3 feet between your hands - GENTLY LIFT-PULL to Close your Murphy Bed.
- **TO OPEN the Murphy Bed** : using equal force – **place your hands to the installed grab handle** and GENTLY PULL towards you to Open. **As you pull Open the Murphy Bed – proceed to move backwards, slowly and steadily, so as to give way to the Murphy Bed's OPEN Position.**

- During **EVERY OPENING** or **CLOSING** of the Murphy Bed - at about your hip level - you may find that you need to rotate your hand / wrist - take caution here to prevent injury.
- During EVERY OPENING and CLOSING, keep Children and Pets and Non Ambulatory Persons at bay.
- **NEVER** allow your children to treat this Murphy Bed as a Hide and Seek place of fun or jump on the bed.
- **Care & Maintenance** - Depending on the frequency of use of your Murphy Bed, it is recommended that you take precautionary Care and Maintenance. It is advisable to conduct NO LESS THAN 2 to 3 checks annually on these mounting points & pistons to ensure that these are securely bolted. Where necessary, use a vacuum cleaner to clear all dust and then wipe down with a damp cloth, then proceed with your maintenance work.

Safety Latches - Your Murphy Bed comes with two (2) Safety Latches. These are to be attached at, both the TOP LEFT and TOP RIGHT hand upper portion, **minimum of 5 feet (1.5m) from ground**, of the Bed Frame / Bed Cabinet. Monitor and Inspect these frequently.

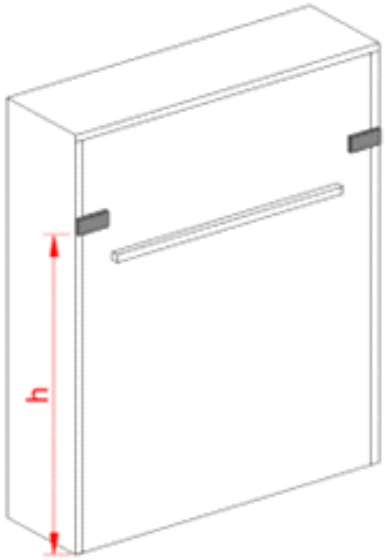

- Whenever NOT in use and after the Murphy Bed has been LIFTED and stowed in its **CLOSED POSITION - ALWAYS LATCH UP**.


Frequently Asked Questions.
Malfunctioned Pistons.

How do you know when the Murphy Bed's Piston has malfunctioned?
It would be quite evident in that :


a.) the Bed Frame may become LOPSIDED and
b.) the Lift-PULL force to CLOSE may be "heavier" than before.


IMMEDIATELY - STOP USING YOUR MURPHY BED.
SEEK and CONSULT professional maintenance service to ascertain the problem and repair and or have the pistons changed.


ASSEMBLY INSTRUCTIONS
INSTRUCTIONS DE MONTAGE

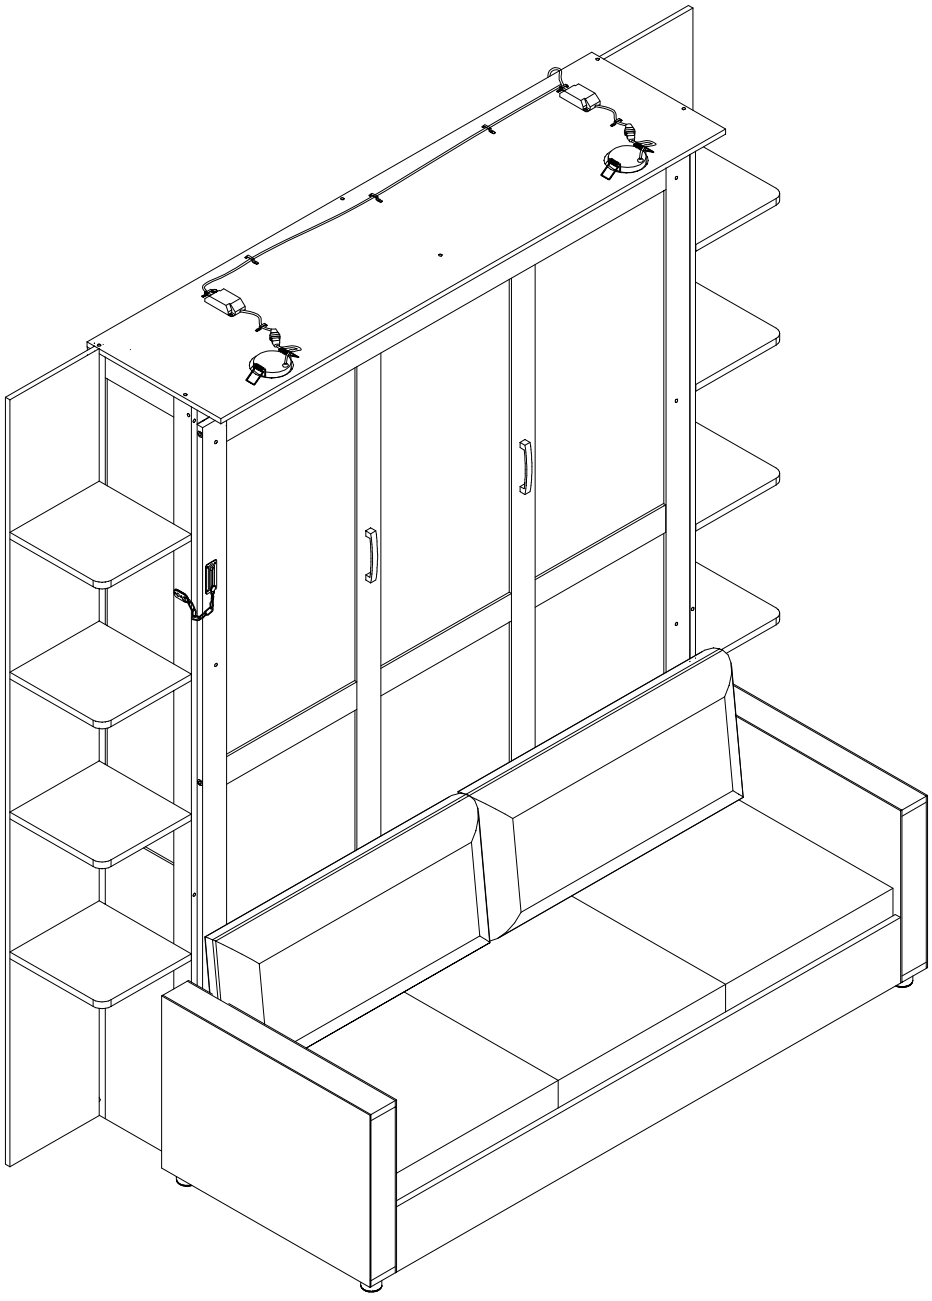



ASSEMBLY INSTRUCTIONS
INSTRUCTIONS DE MONTAGE

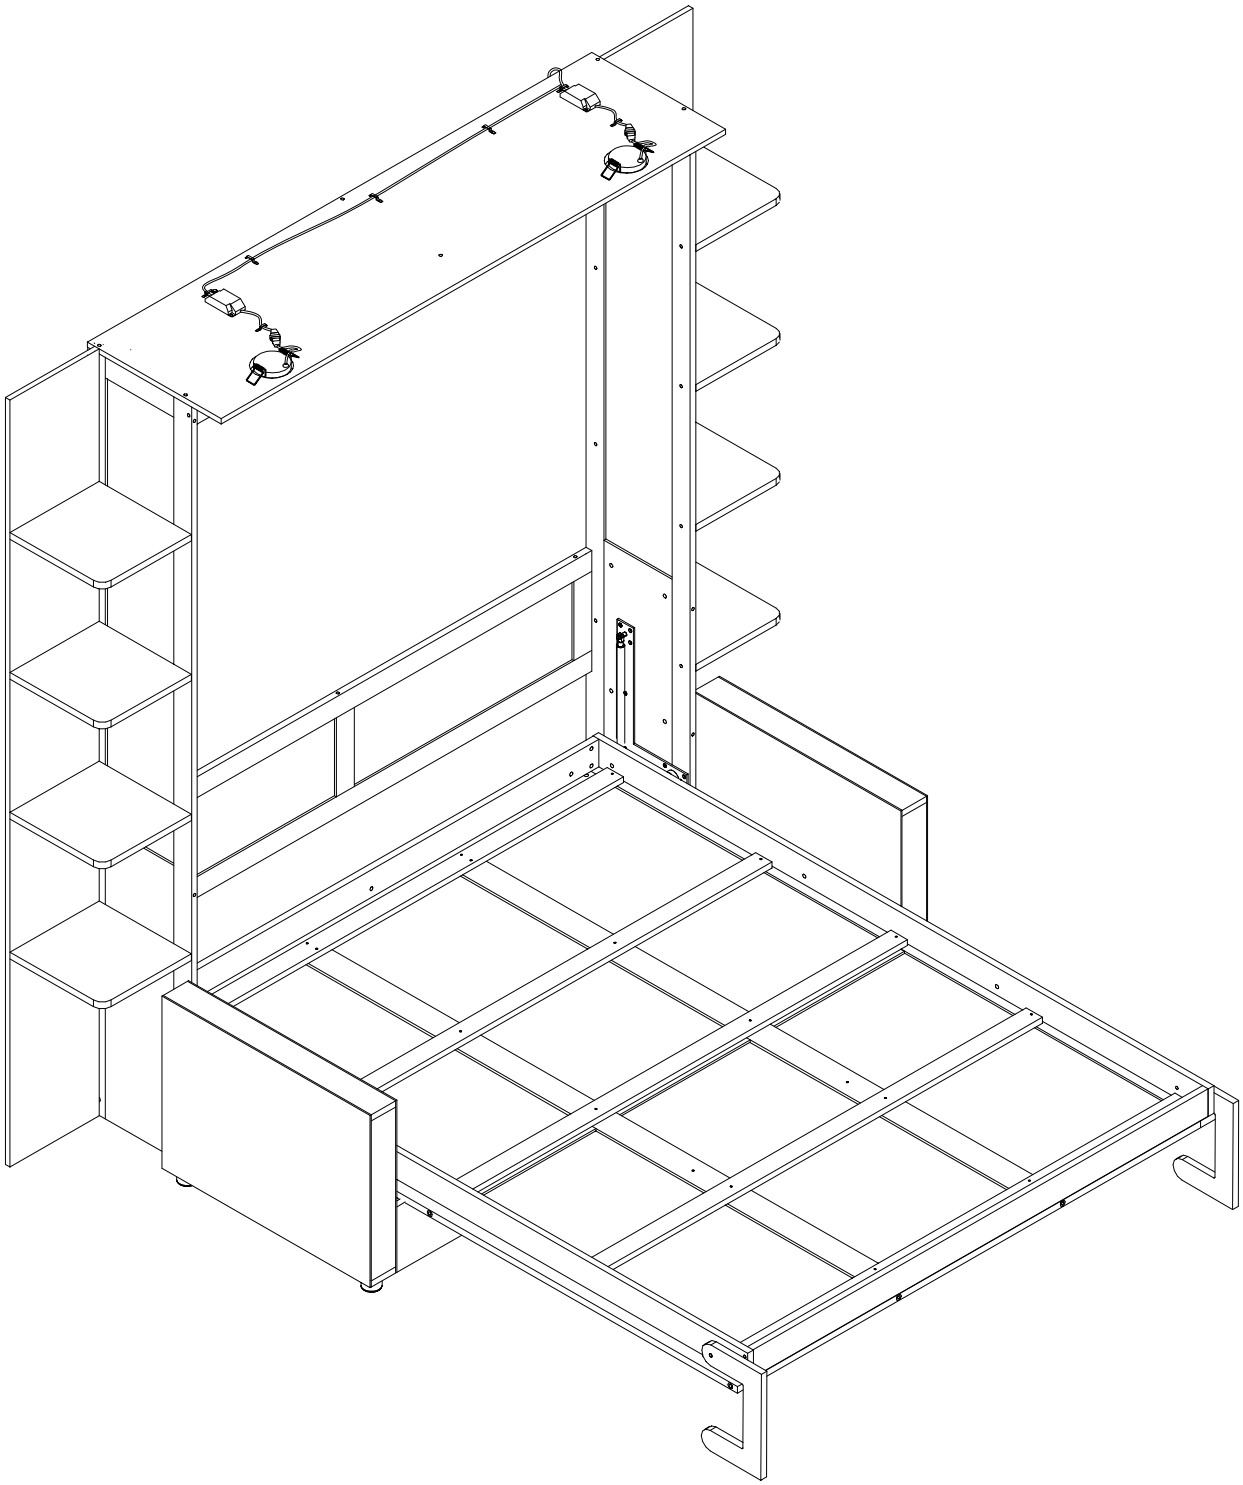






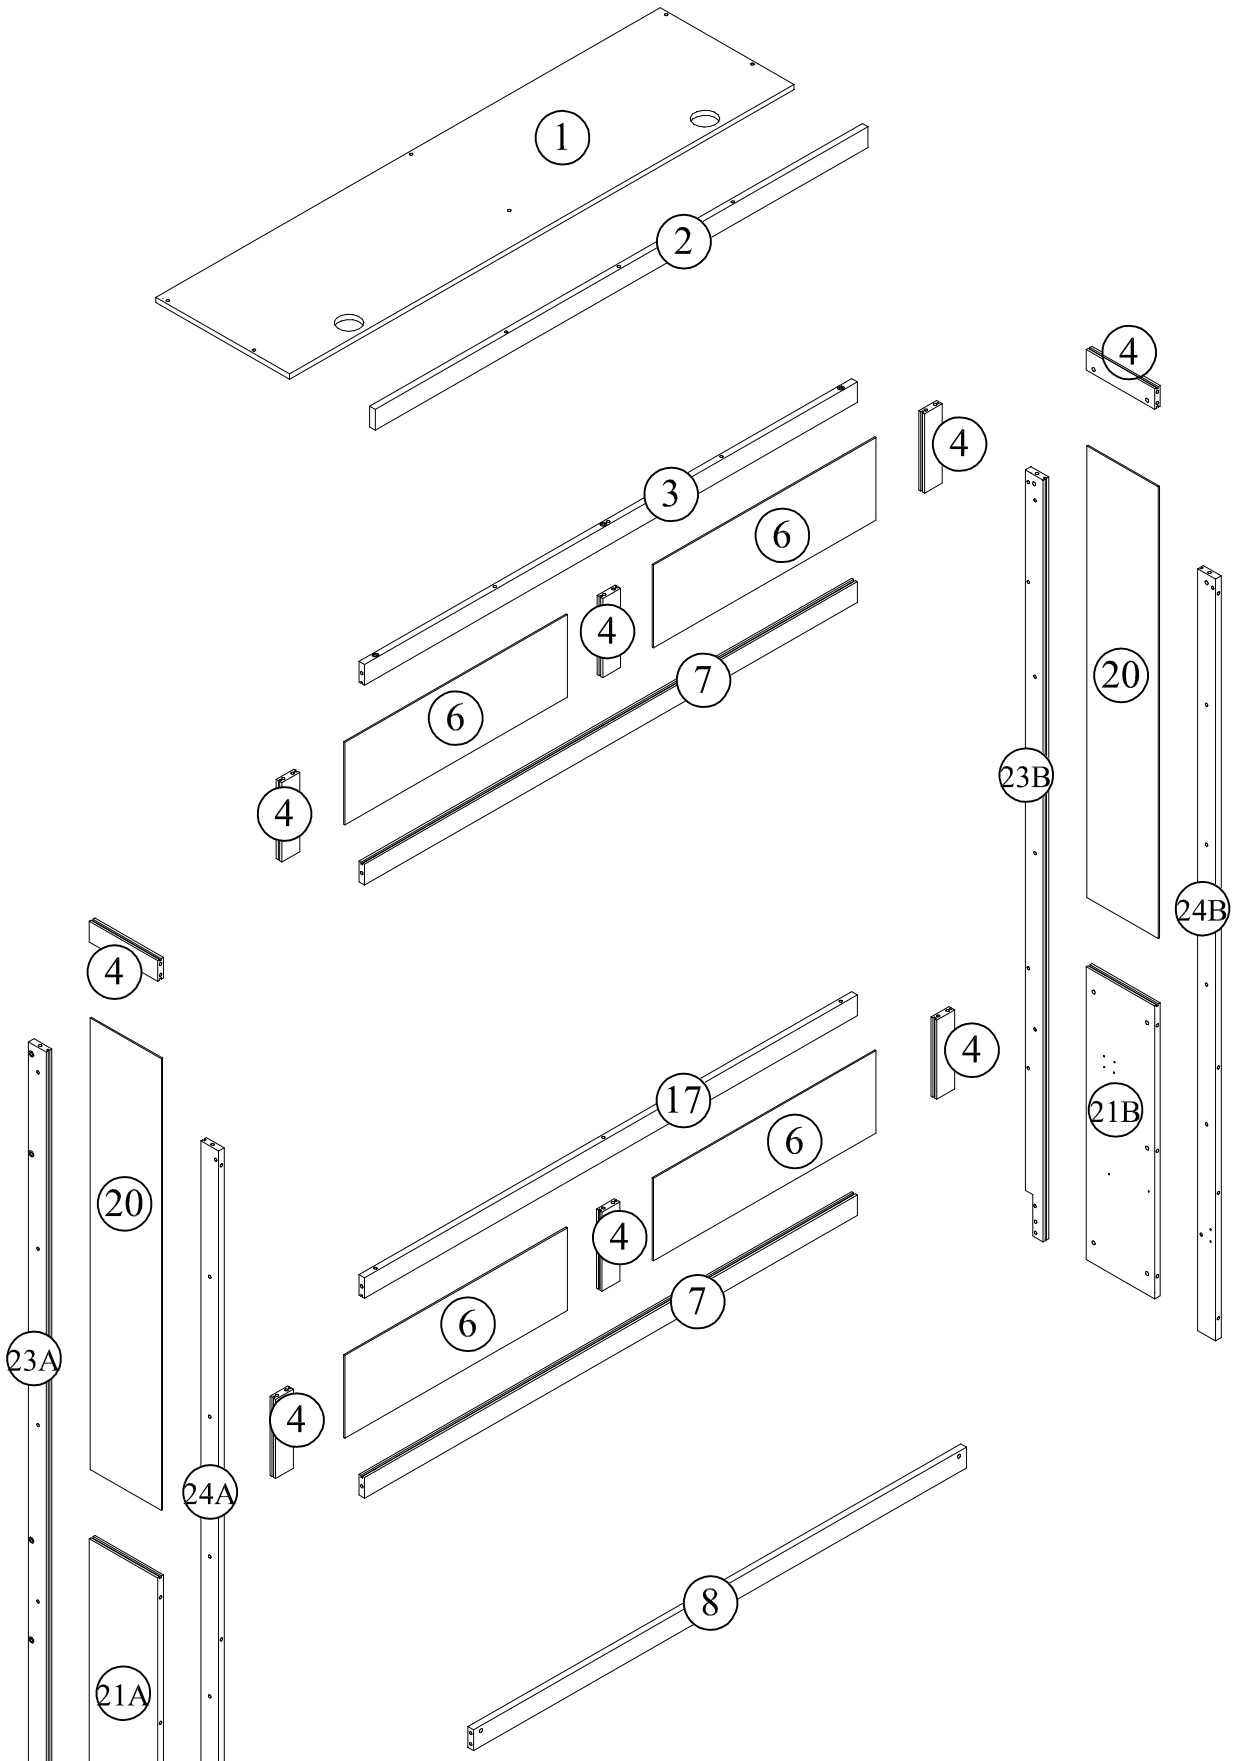

1
2
4
4
3
6
4
7
6
4
20
23B
24B
4
4
17
6
4
7
6
4
21B
23A
20
24A
21A
8

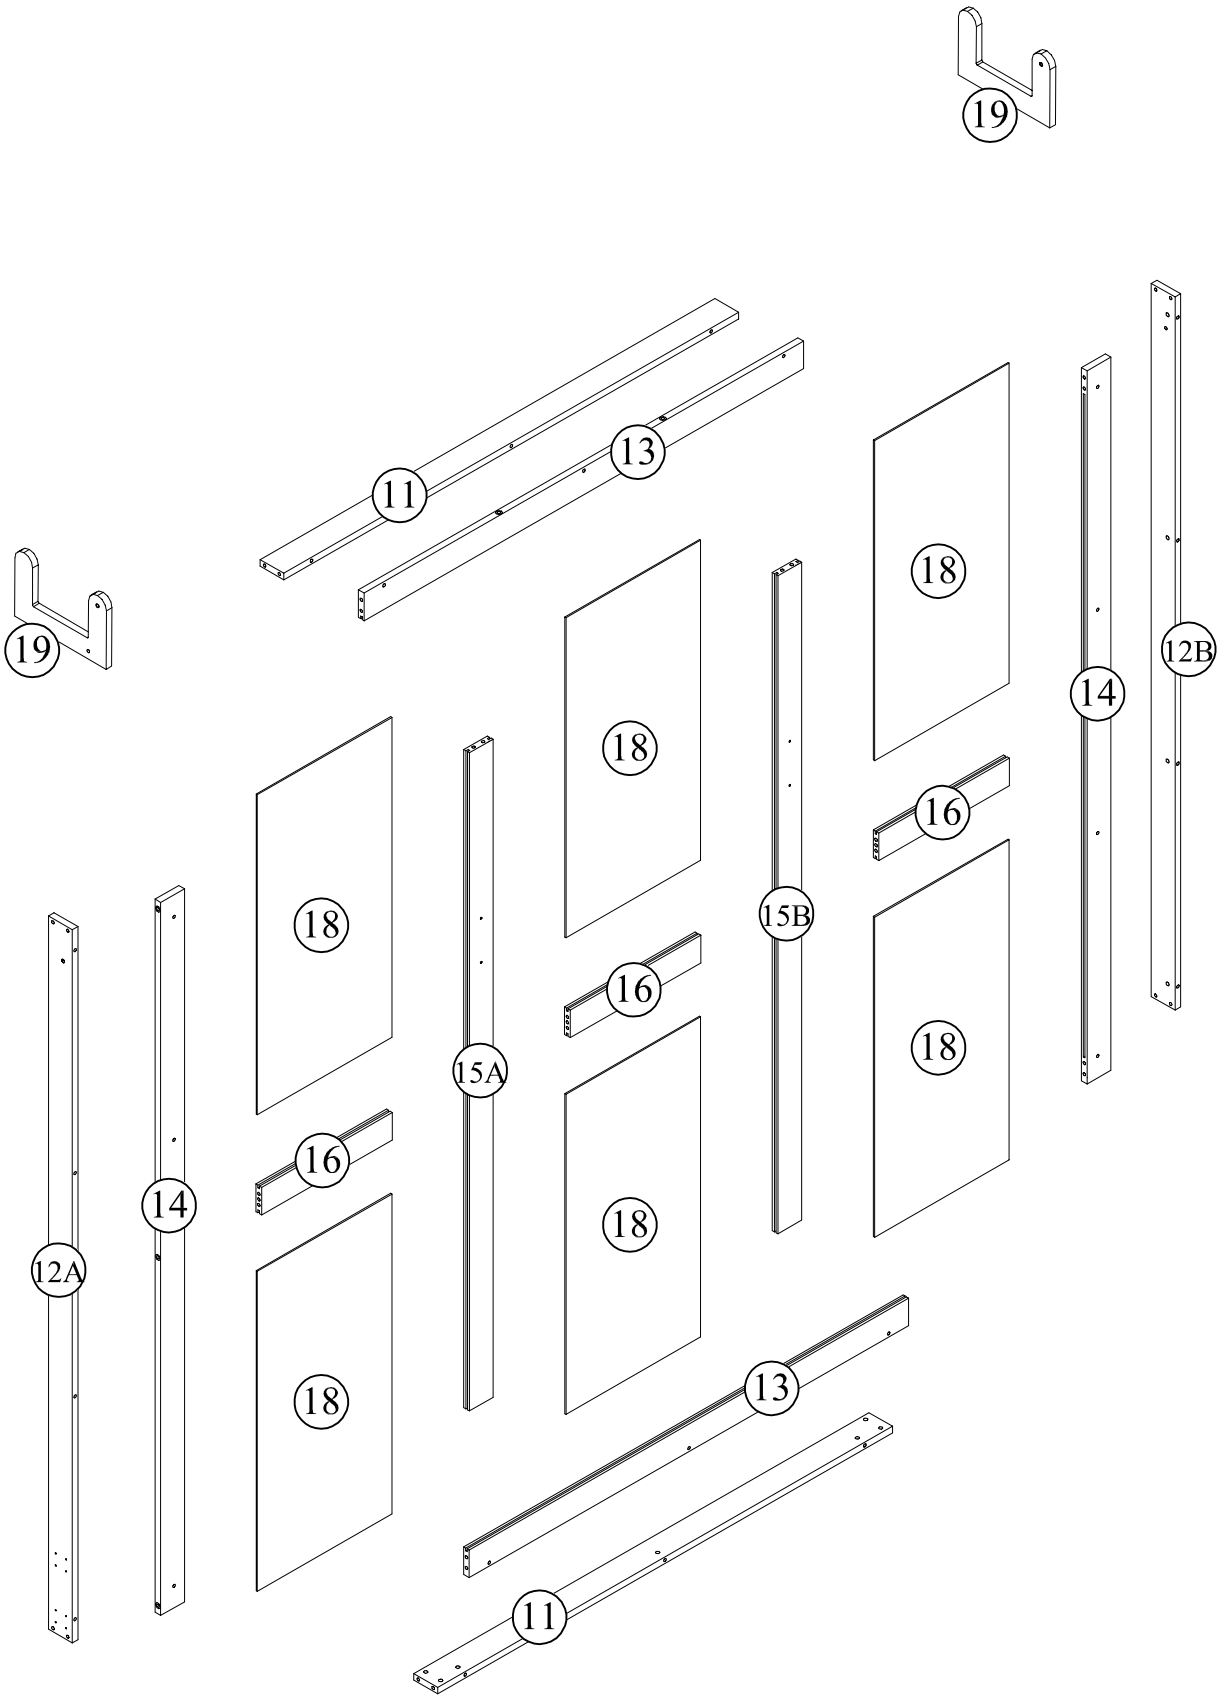
19
11
13
19
18
18
16
14
12B
18
15B
16
18
15A
12A
14
16
18
18
13
11













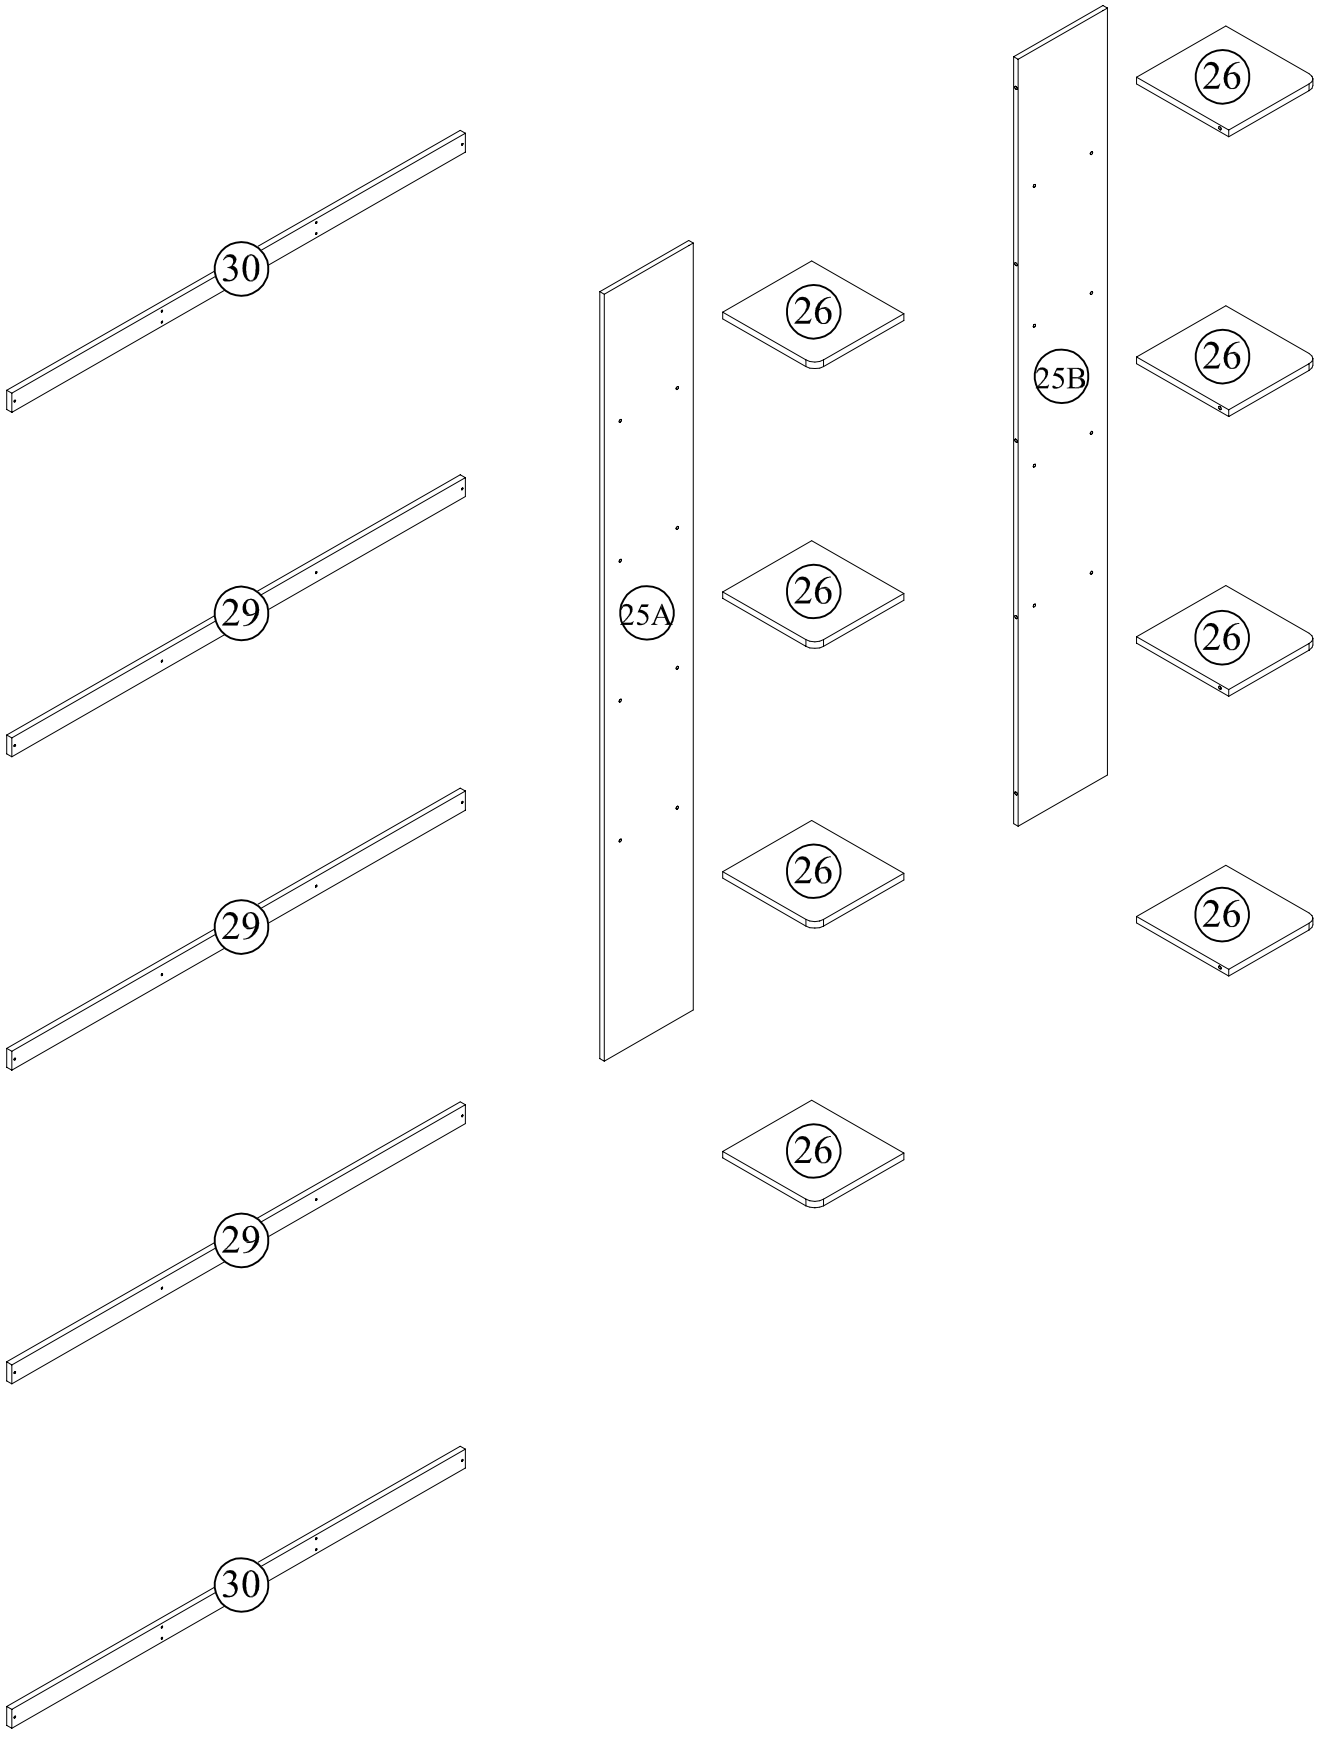

30
29
29
29
30
25A
25B
26
26
26
26
26
26

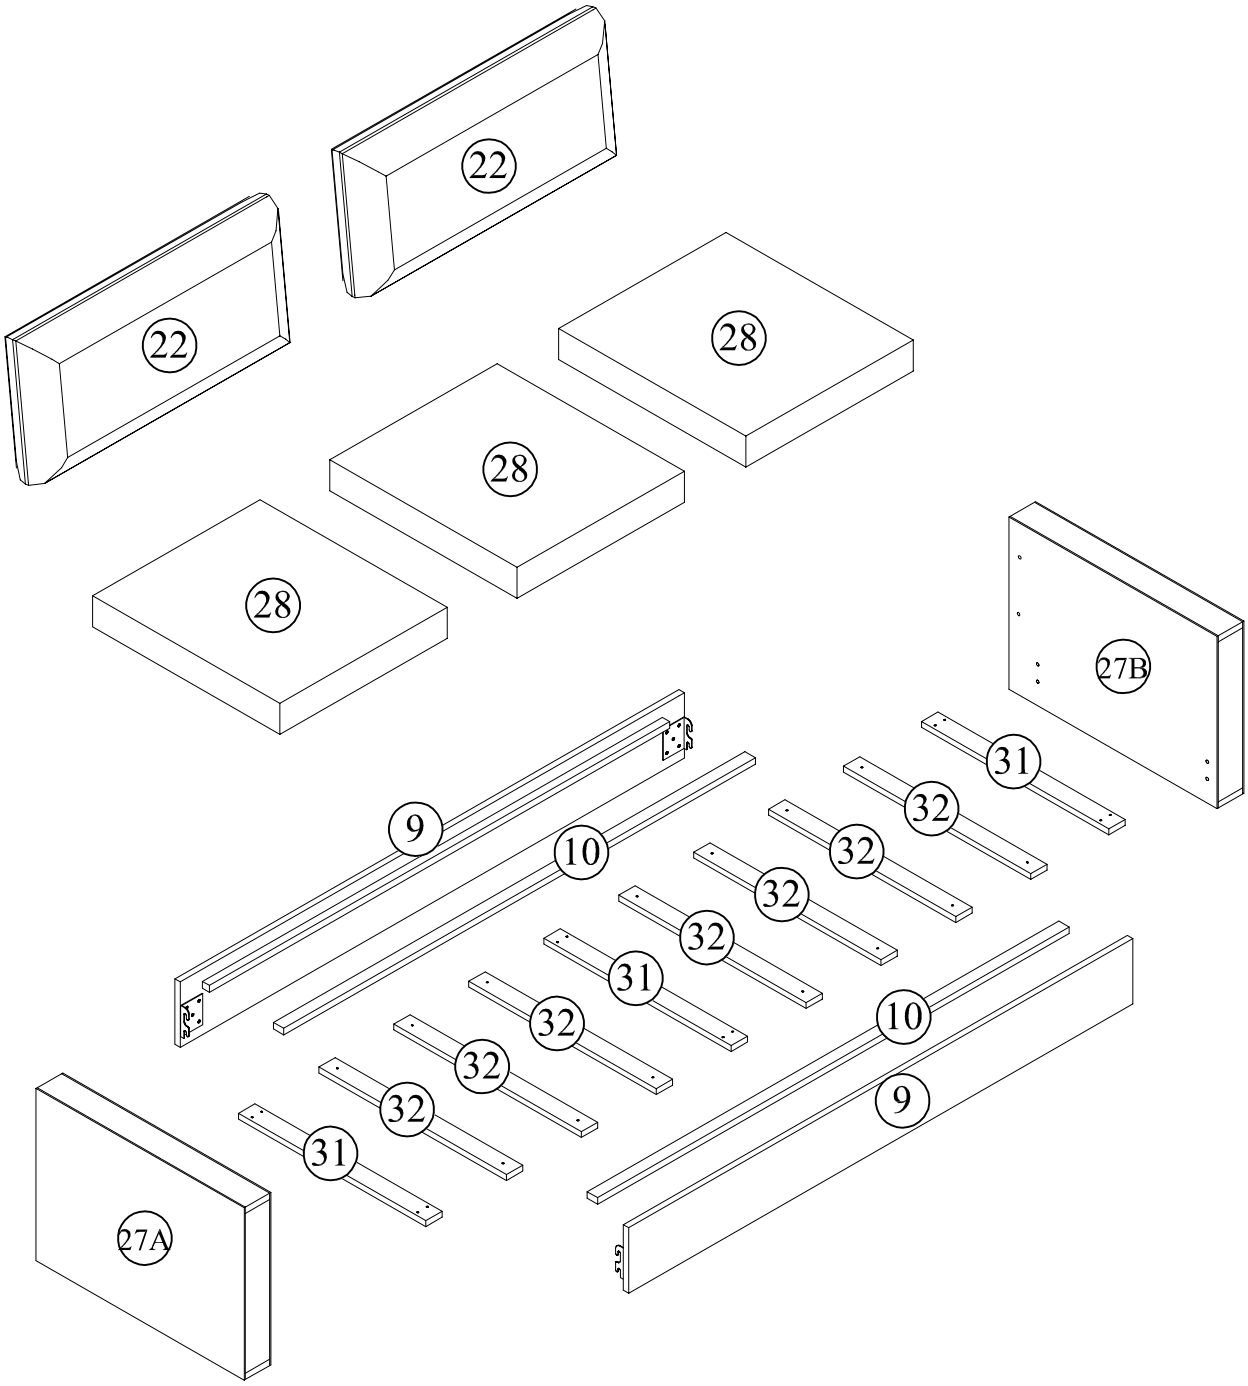
22
22
28
28
28
27B
31
32
32
32
32
31
32
32
32
31
10
9
9
10
27A















Part List (N708P503552)
Liste des pièces (N708P503552)

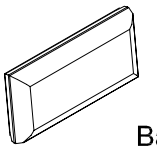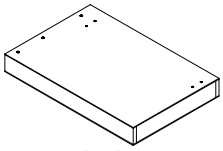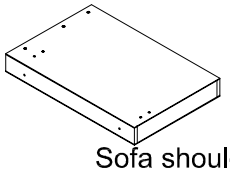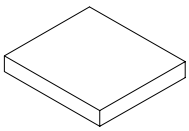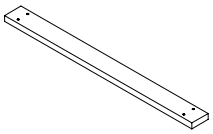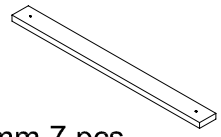22  Back cushion 2 pcs Coussin de dossier	27A  Sofa shoulders 1 pc Épaules de canapé	27B  Sofa shoulders 1 pc Épaules de canapé
28  Seat cushion 3 pcs Coussin de siège	31  Slats 630mm 3 pcs Lattes 630mm	32  Slats 630mm 7 pcs Lattes 630mm









Part List (N708P503553)
Liste des pièces(N708P503553)

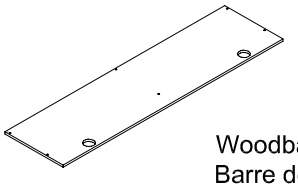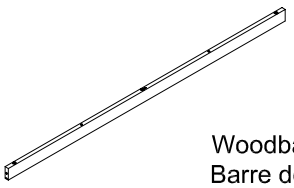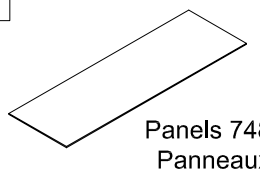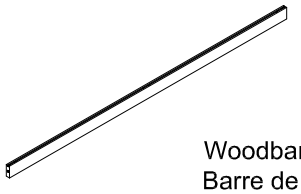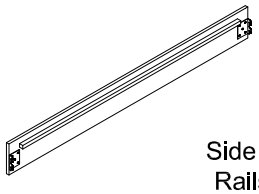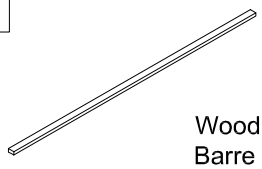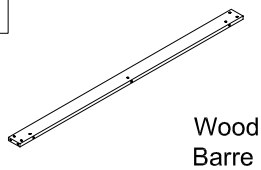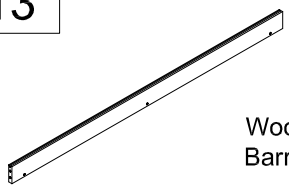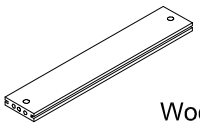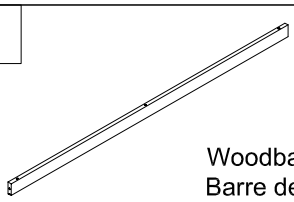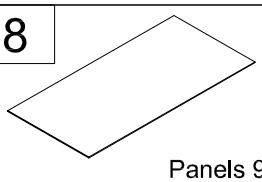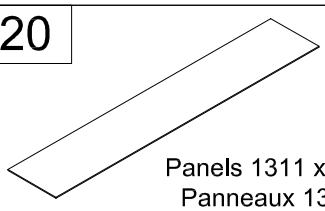1  Woodbar 1 pc Barre de bois	3  Woodbar 1 pc Barre de bois	6  Panels 748.5 x 240mm 4pcs Panneaux 748.5 x 240mm
7  Woodbar 2 pcs Barre de bois	9  Side rails 2 pcs Rails latéraux	10  Woodbar 2 pcs Barre de bois
11  Woodbar 2 pcs Barre de bois	13  Woodbar 2 pcs Barre de bois	16  Woodbar 3 pcs Barre de bois
17  Woodbar 1 pc Barre de bois	18  Panels 929 x 453mm 6pcs Panneaux 929 x 453mm	19  Woodbar 2 pcs Barre de bois
	20  Panels 1311 x 240mm 2 pcs Panneaux 1311 x 240mm	

Part List (N708P503554)
Liste des pièces (N708P503554)

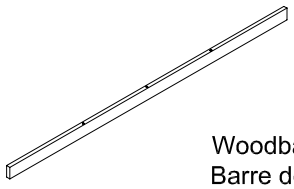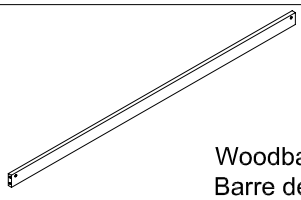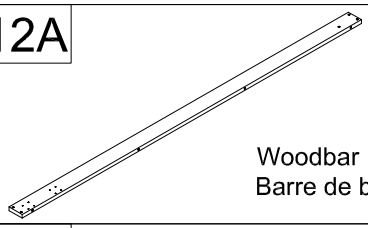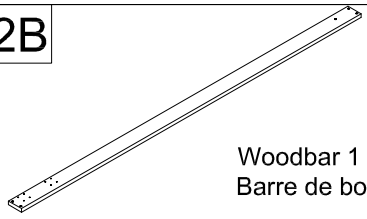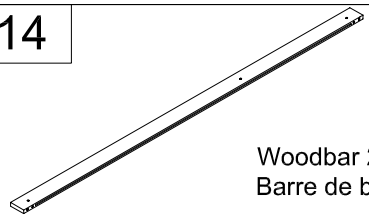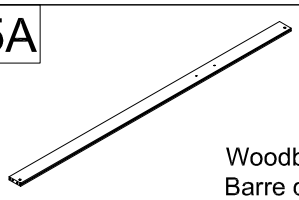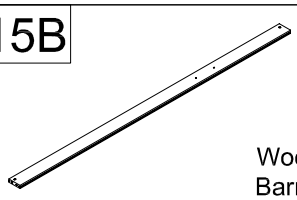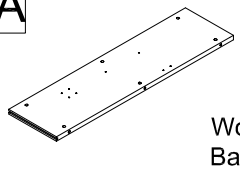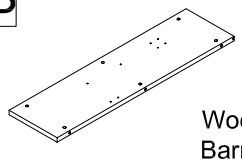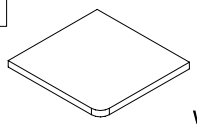
2  Woodbar 1 pc Barre de bois	4  Woodbar 8 pcs Barre de bois	8  Woodbar 1 pc Barre de bois
12A  Woodbar 1 pc Barre de bois	12B  Woodbar 1 pc Barre de bois	14  Woodbar 2 pcs Barre de bois
15A  Woodbar 1 pc Barre de bois	15B  Woodbar 1 pc Barre de bois	21A  Woodbar 1 pc Barre de bois
21B  Woodbar 1 pc Barre de bois	26  Woodbar 8 pcs Barre de bois	S  A Left L 1pcs Gauche L 1pièces  B Right L 1pcs Droite L 1pièces
Y  Carpet Fabric 1pc Tissu de tapis 1pièce	N  Piston 700N 2pcs Piston 700N 2pièces	L  A B C D Bracket Steel 2 Set Support en acier

Part List (N708P503555)
Liste des pièces (N708P503555)

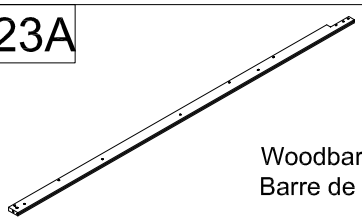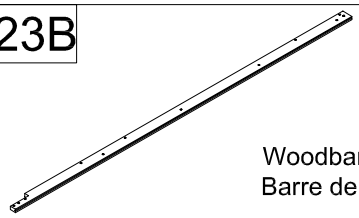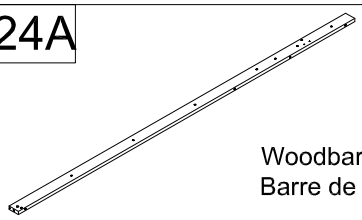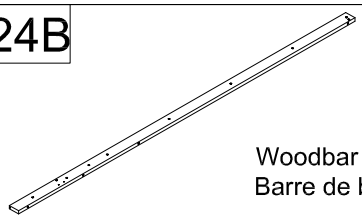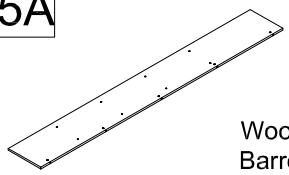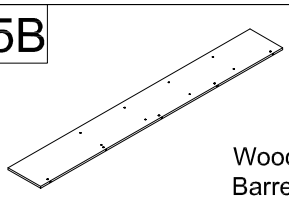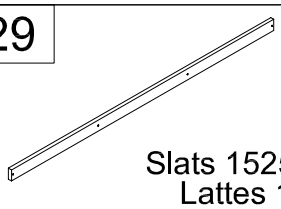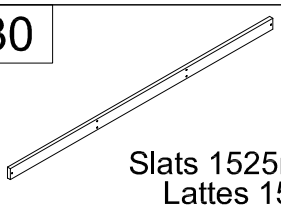23A  Woodbar 1 pc Barre de bois	23B  Woodbar 1 pc Barre de bois	24A  Woodbar 1 pc Barre de bois
24B  Woodbar 1 pc Barre de bois	25A  Woodbar 1 pc Barre de bois	25B  Woodbar 1 pc Barre de bois
29  Slats 1525mm 3 pcs Lattes 1525mm	30  Slats 1525mm 2 pcs Lattes 1525mm	

Hardware List (N708P503554)
Liste du matériel (N708P503554)

A




1/4" x 90mm Hex-Head bolts 38pcs
Boulons à tête hexagonale 1/4" x 90mm 38pièces

B




Ø10.5 x 12mm Horizontal -Hole bolts 90pcs
Boulons à trou horizontal Ø10.5 x 12 mm 90pièces

C




1/4" x 50mm Hex-Head bolts 54pcs
Boulons à tête hexagonale 1/4" x 50 mm 54pièces

D




Ø8 x 30 mm Wood dowel 42pcs
Cheville en bois Ø8 x 30 mm 42pcs

E




1/4" x 50mm Wood Screws 24pcs
Vis à bois 1/4" x 50mm 24pièces

G




M4 x 15mm Wood Screws 18 pcs
Vis à bois M4 x 15 mm 18 pièces

H



M4 x 20mm Wood Screws 42pcs
Vis à bois M4 x 20 mm 42pièces

I




Wire 1pc
Fil 1pièces

Led 2pcs
Led 2pièces

Adapter 1 pc
Adaptateur

J




1/4" x 70mm Hex-Head bolts 2pcs
Boulons à tête hexagonale 1/4" x 70mm 2pièces

K




M4 x 30 mm Wood Screws 54pcs
Vis à bois M4 x 30 mm 54pièces

M




Handle 2pcs
Poignée 2pièces

O




1/4" x 25mm Hex-Head bolts 10pcs
Boulons à tête hexagonale 1/4" x 25 mm 10pièces

P




1/4" x 30mm Steeve Nut 2pcs
Écrou Steeve 1/4" x 30 mm 2pièces

Q

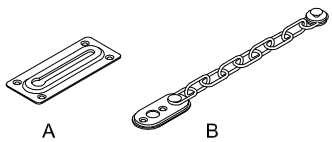


Safety Chain 1 set
Chaîne de sécurité 1 jeu

R




M4 x 22 mm bolts 4pcs
Boulons M4 x 22 mm 4pièces

T




Fixed brace 2 set (8pcs)
Attelle fixe 2 set (8pièces)

U




Plastic Feet(Ø50x40) 4pcs
Pieds en plastique (Ø50x40) 4pièces

V




Allen Key 2pcs
Clé Allen 2pièces

X

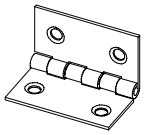

Hinge 3pcs
Charnière 3pièces

Z




Z Bracket 3 pcs
Support en Z 3 pièces

A1




Screws and plastic anchor 1set (6 pcs)
Vis et ancrage en plastique 1 jeu

A2

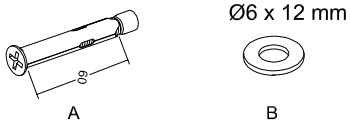

Stainless Steel anchor 1set (6 pcs)
Ancre en acier inoxydable 1 jeu



Assembly Tools Required (Not Included)
Outils d'assemblage Requis (Non Inclus)


Please scan the QR code below to see the safe assembly instructions.

Bitte scannen Sie den unten stehenden QR-Code, um die sichere Montageanleitung anzuzeigen.




STEP 1: Following below illustration:
ÉTAPE 1: Illustration ci-dessous :

J	D	A	B
1pc	2pcs	7pcs	8pcs

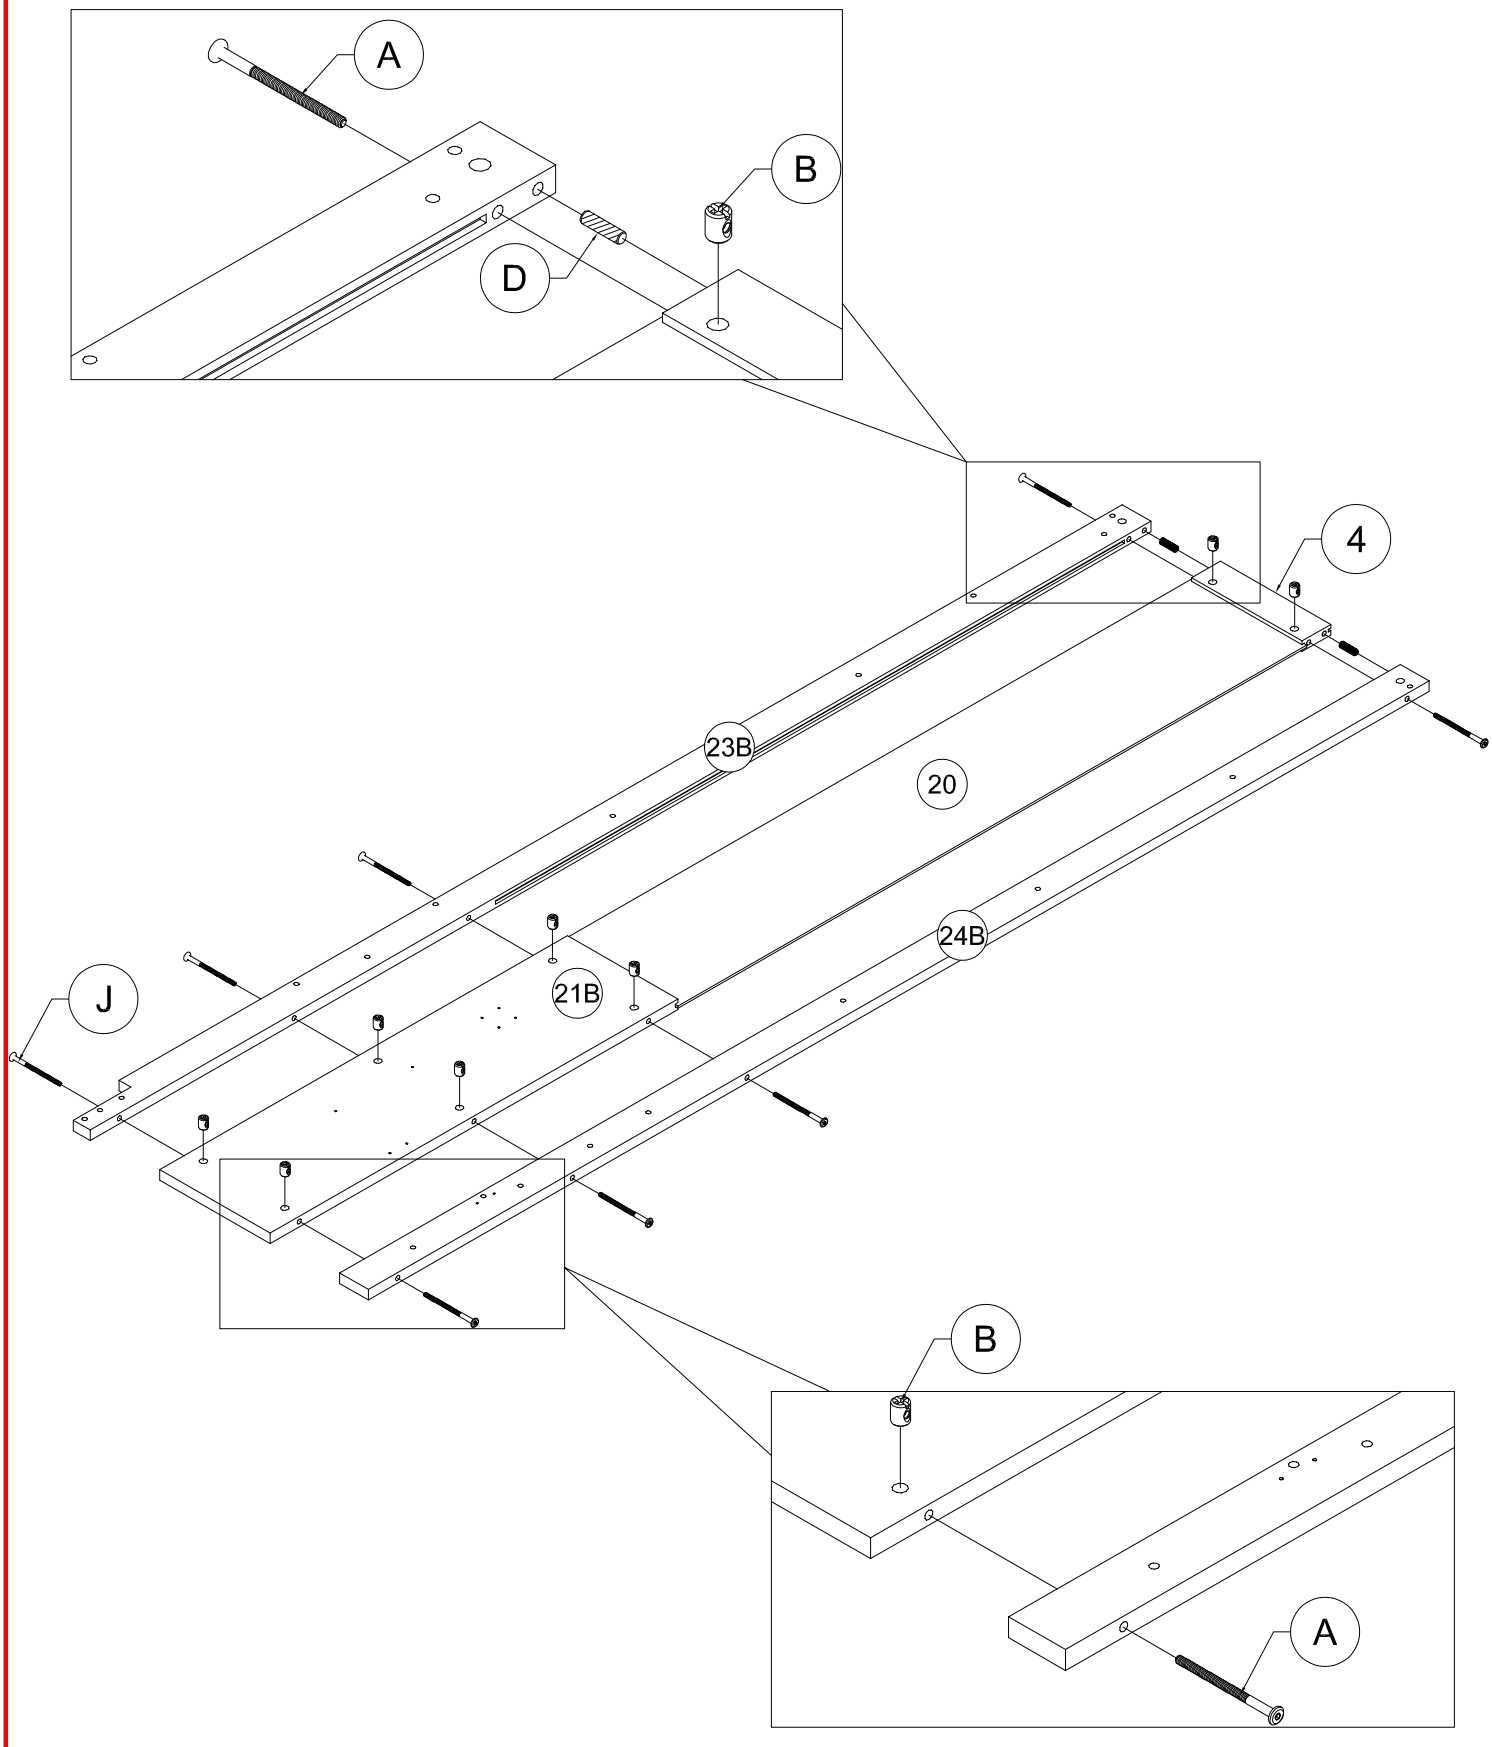



STEP 2: Following below illustration:
ÉTAPE 2: Illustration ci-dessous :

J	D	A	B
1pc	2pcs	7pcs	8pcs

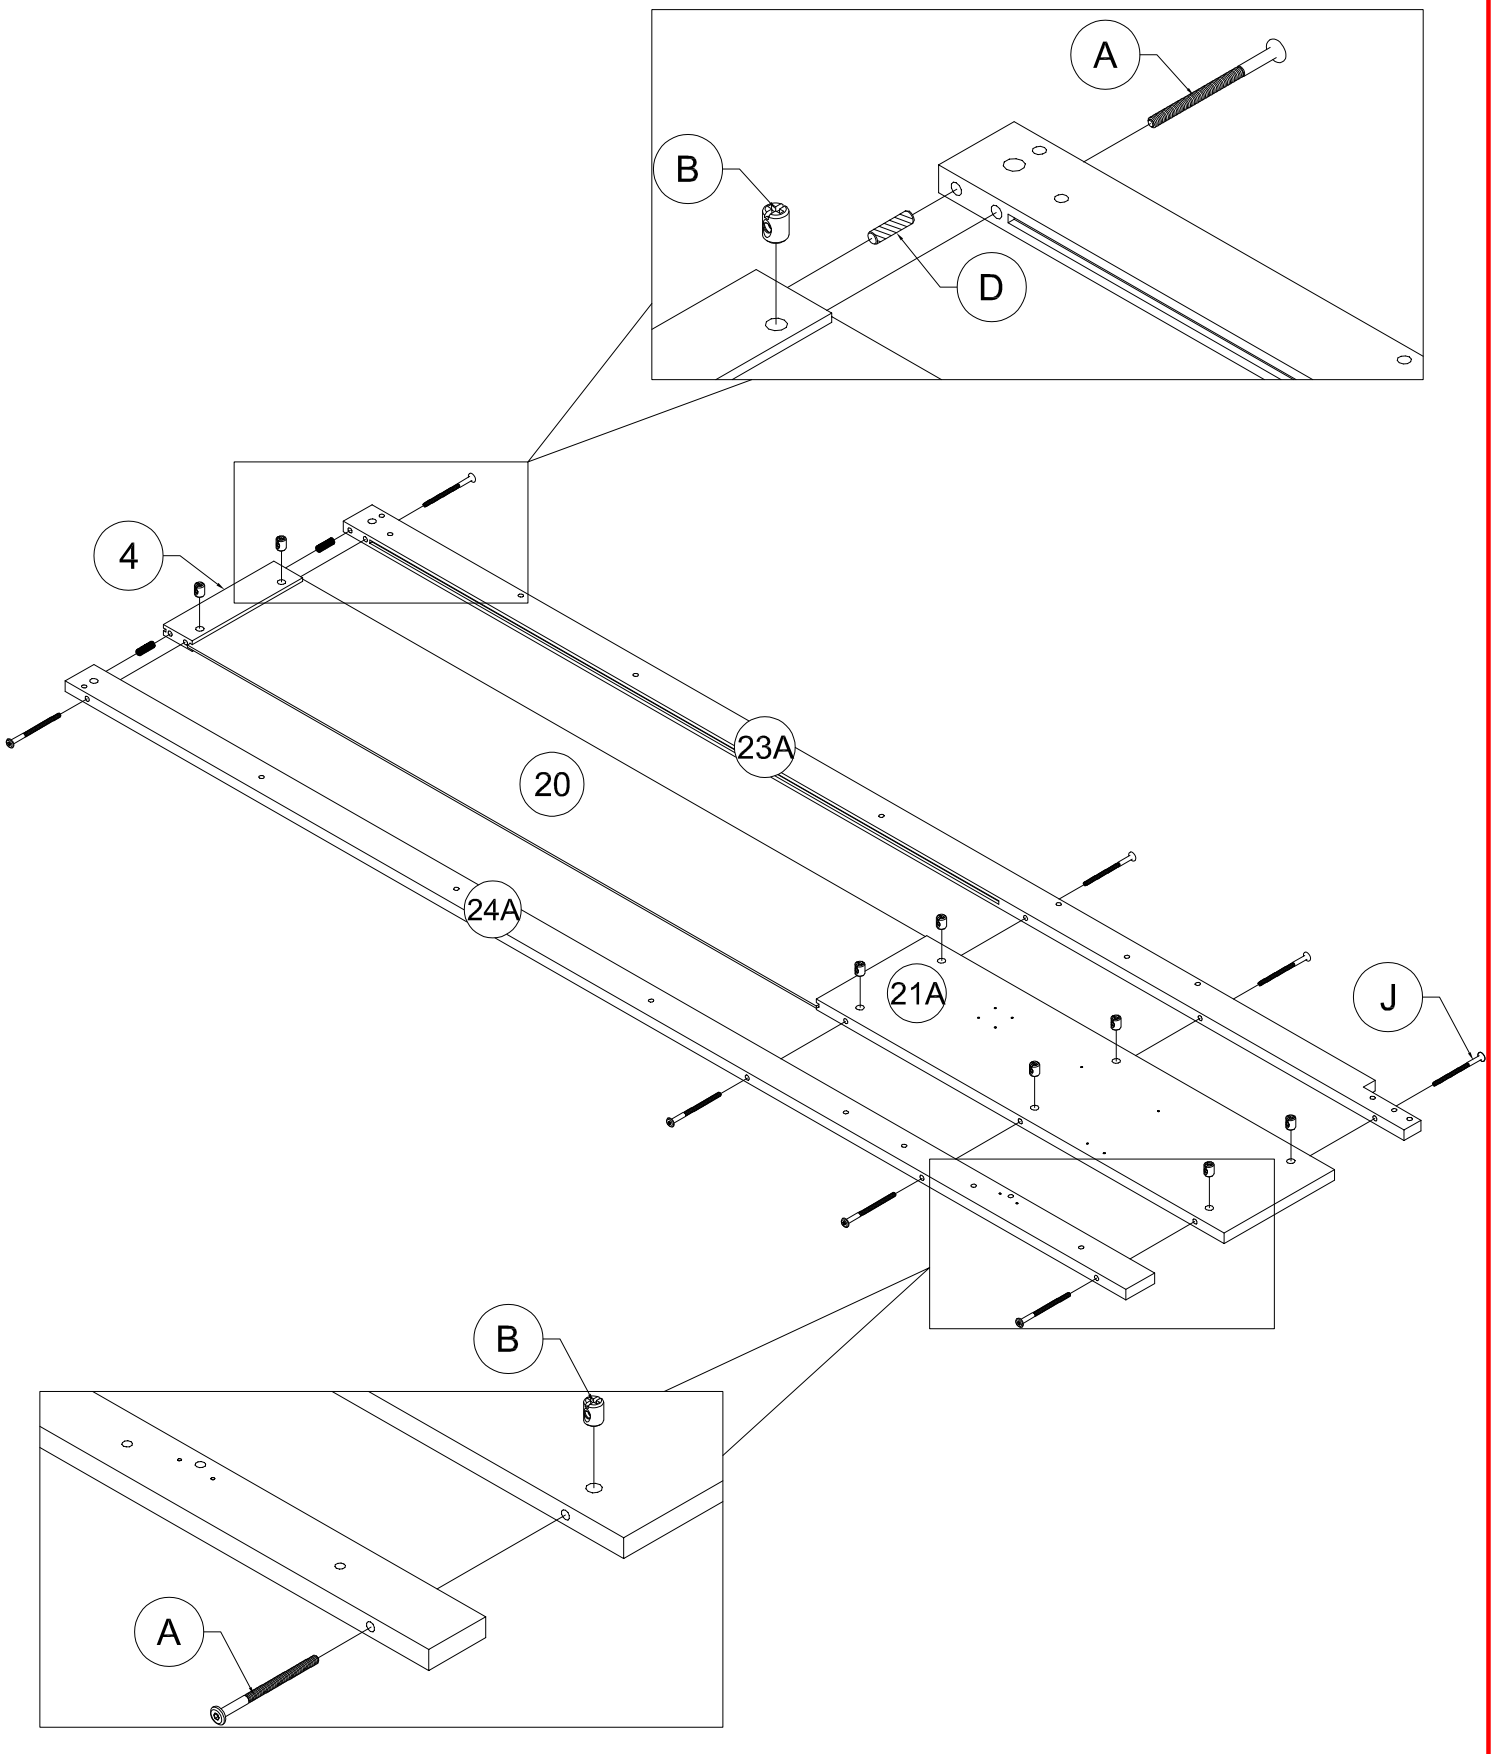



STEP 3.1: Following below illustration:
ÉTAPE 3.1: Illustration ci-dessous :

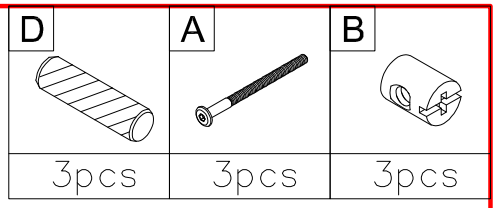

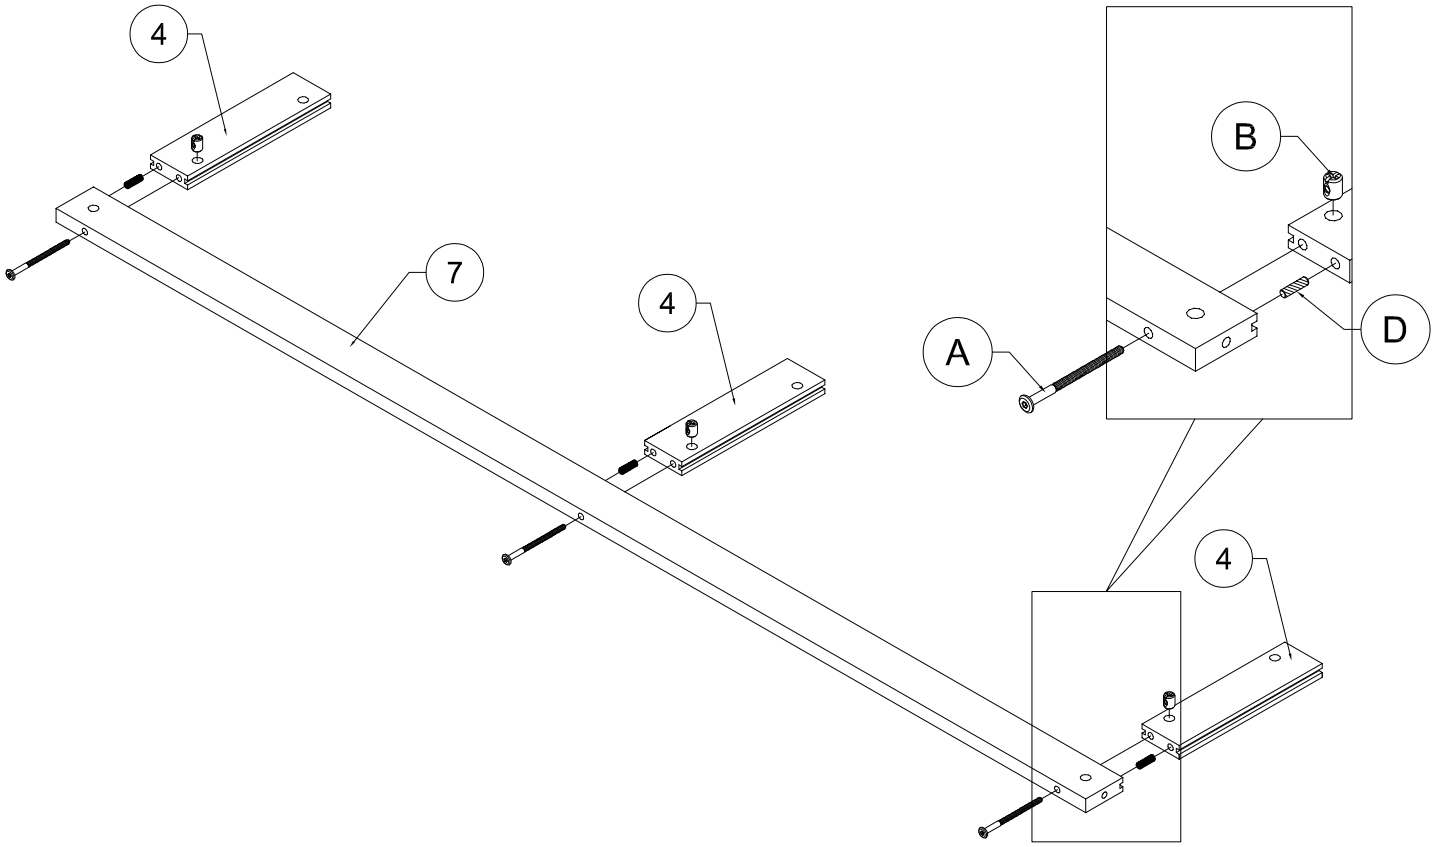


STEP 3.2: Following below illustration:
ÉTAPE 3.2: Illustration ci-dessous :

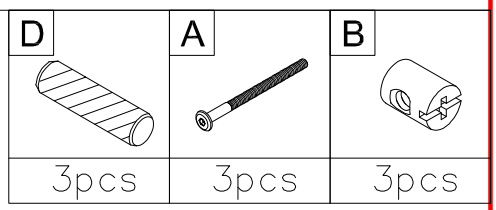

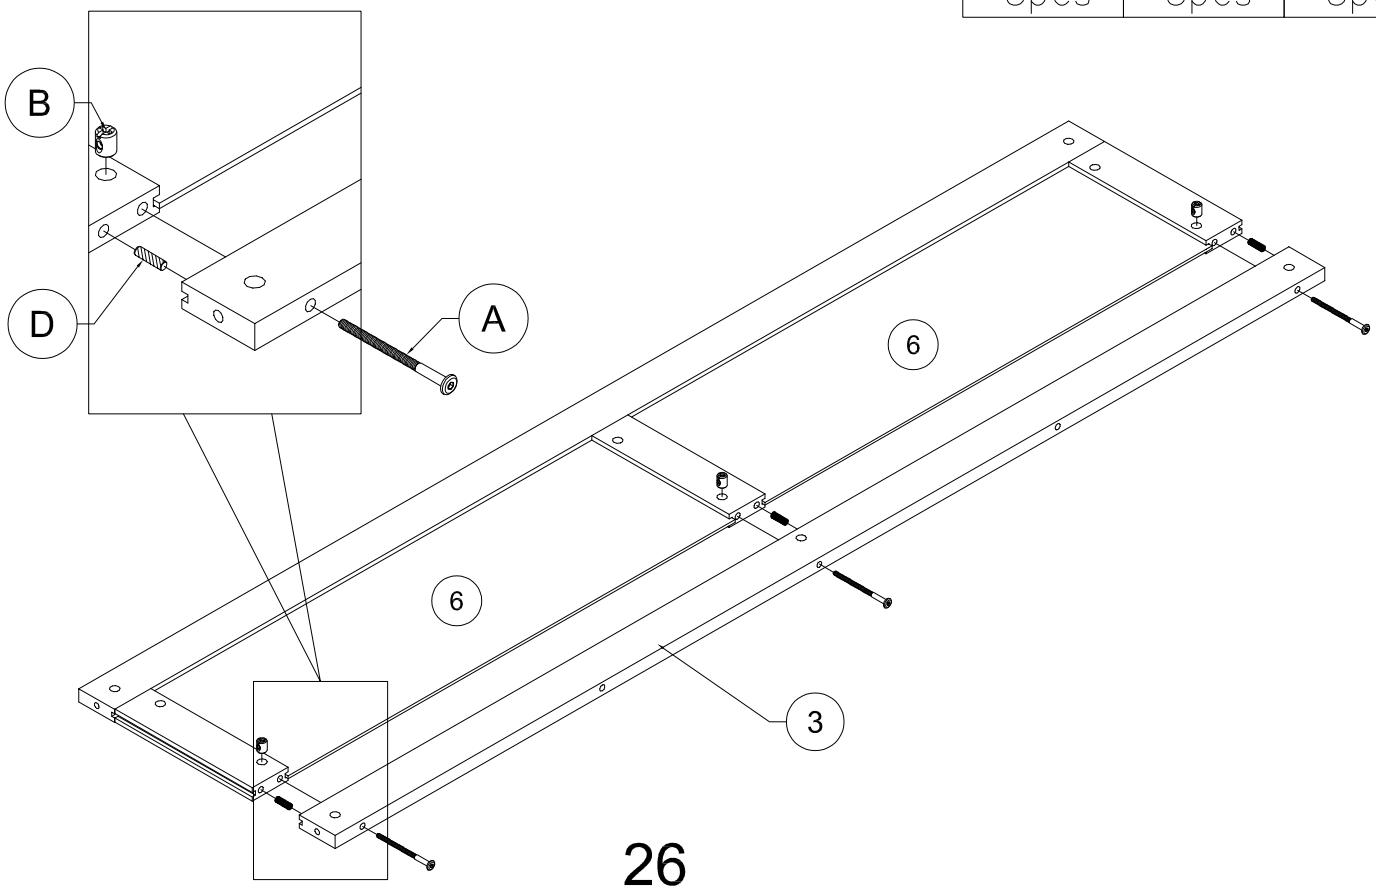


STEP 4.1: Following below illustration:
ÉTAPE 4.1: Illustration ci-dessous :

D	A	B
3pcs	3pcs	3pcs

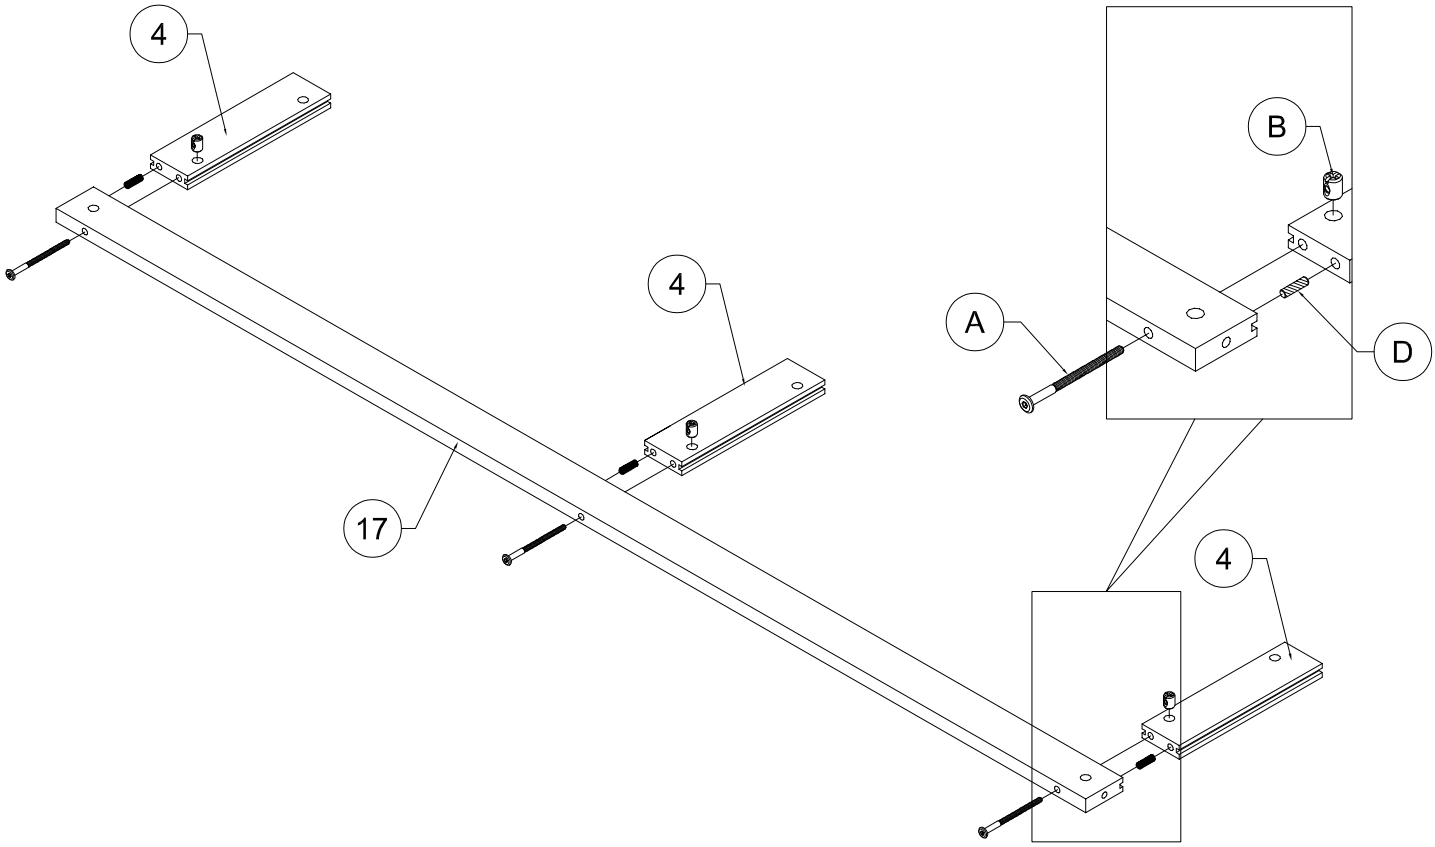


STEP 4.2: Following below illustration:
ÉTAPE 4.2: Illustration ci-dessous :


D	A	B
3pcs	3pcs	3pcs

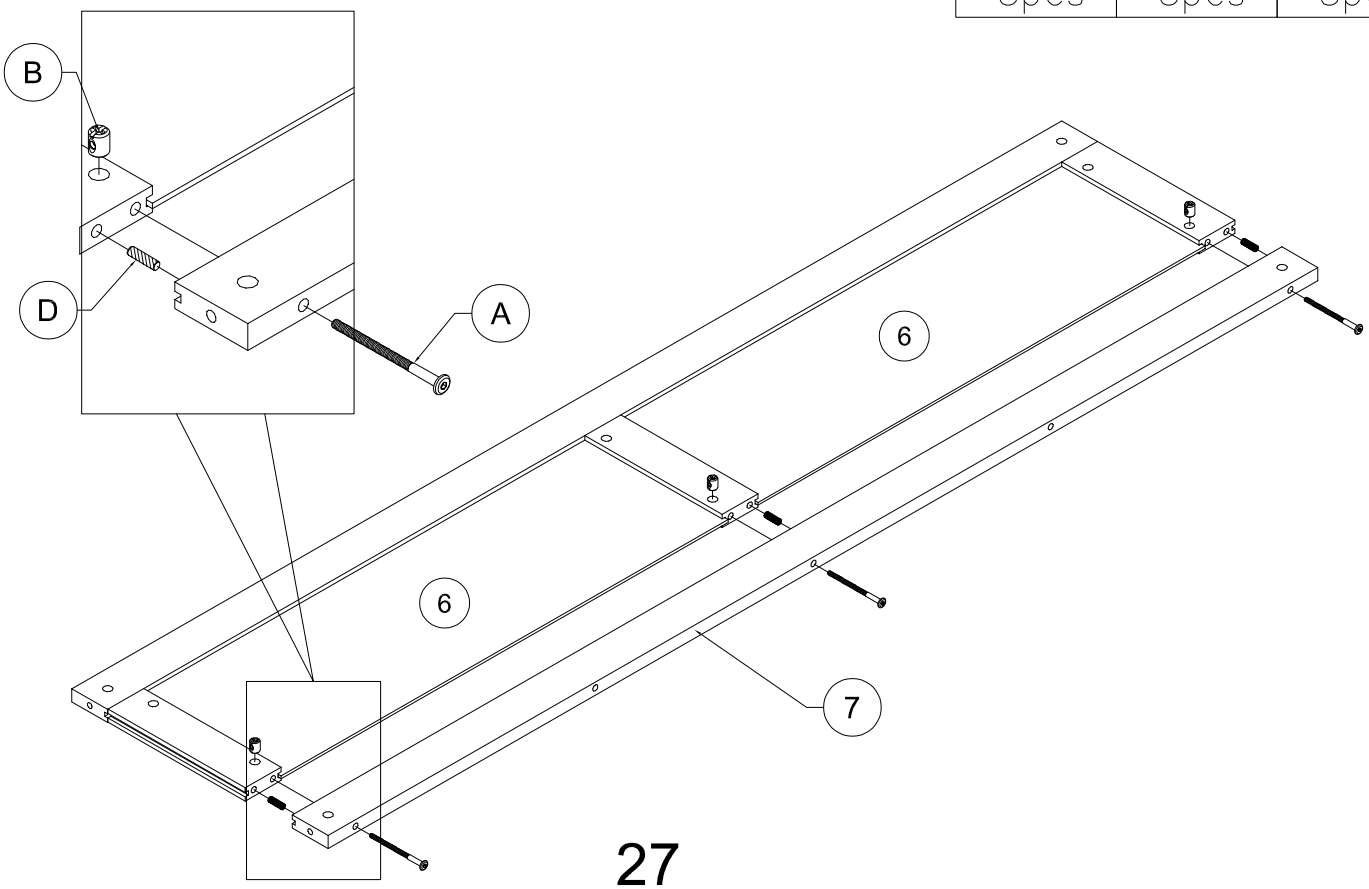

STEP 5.1: Following below illustration:
ÉTAPE 5.1: l'illustration ci-dessous :

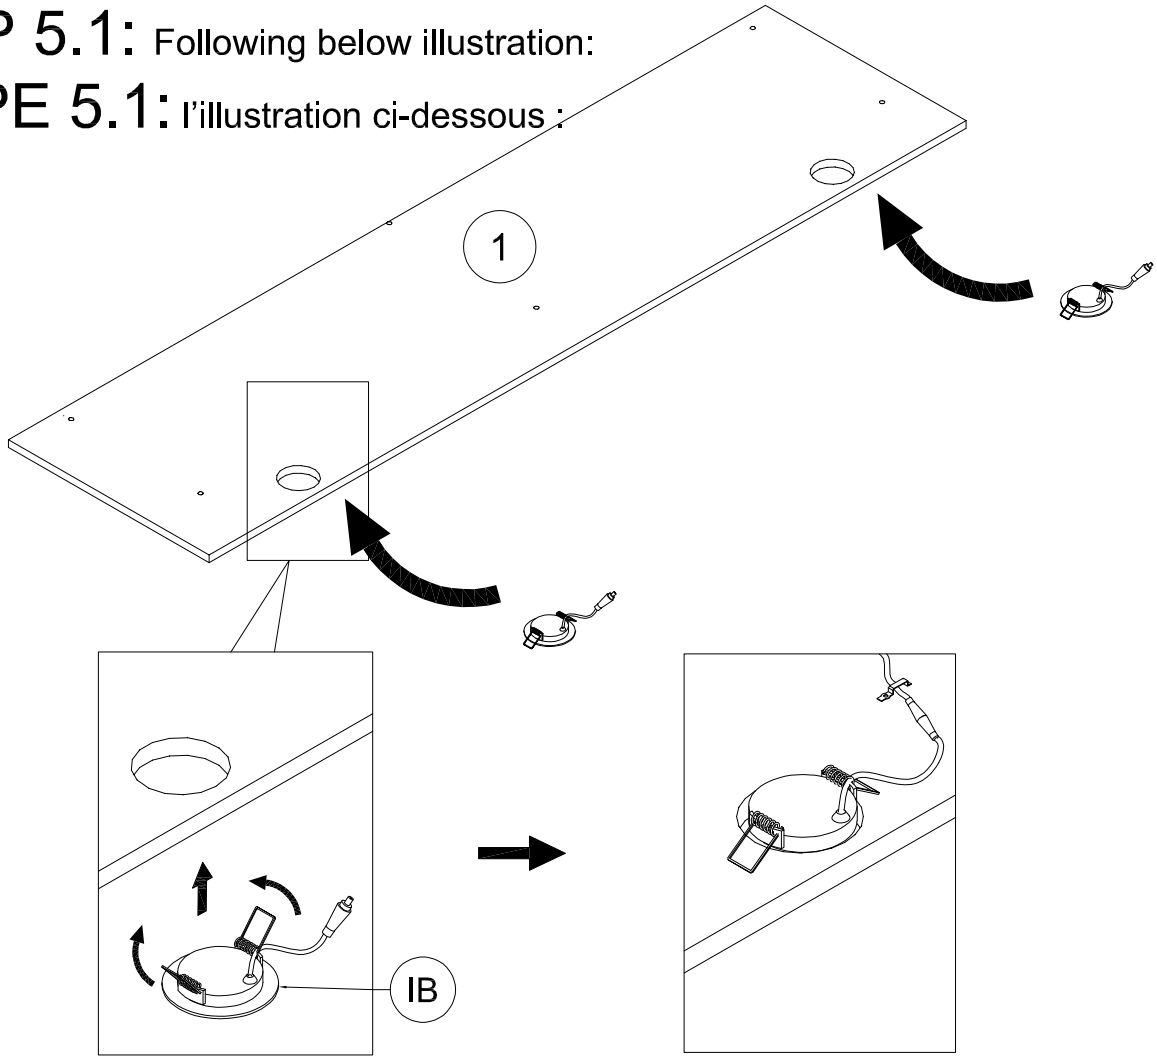


STEP 5.2: Following below illustration:
ÉTAPE 5.2: Illustration ci-dessous :

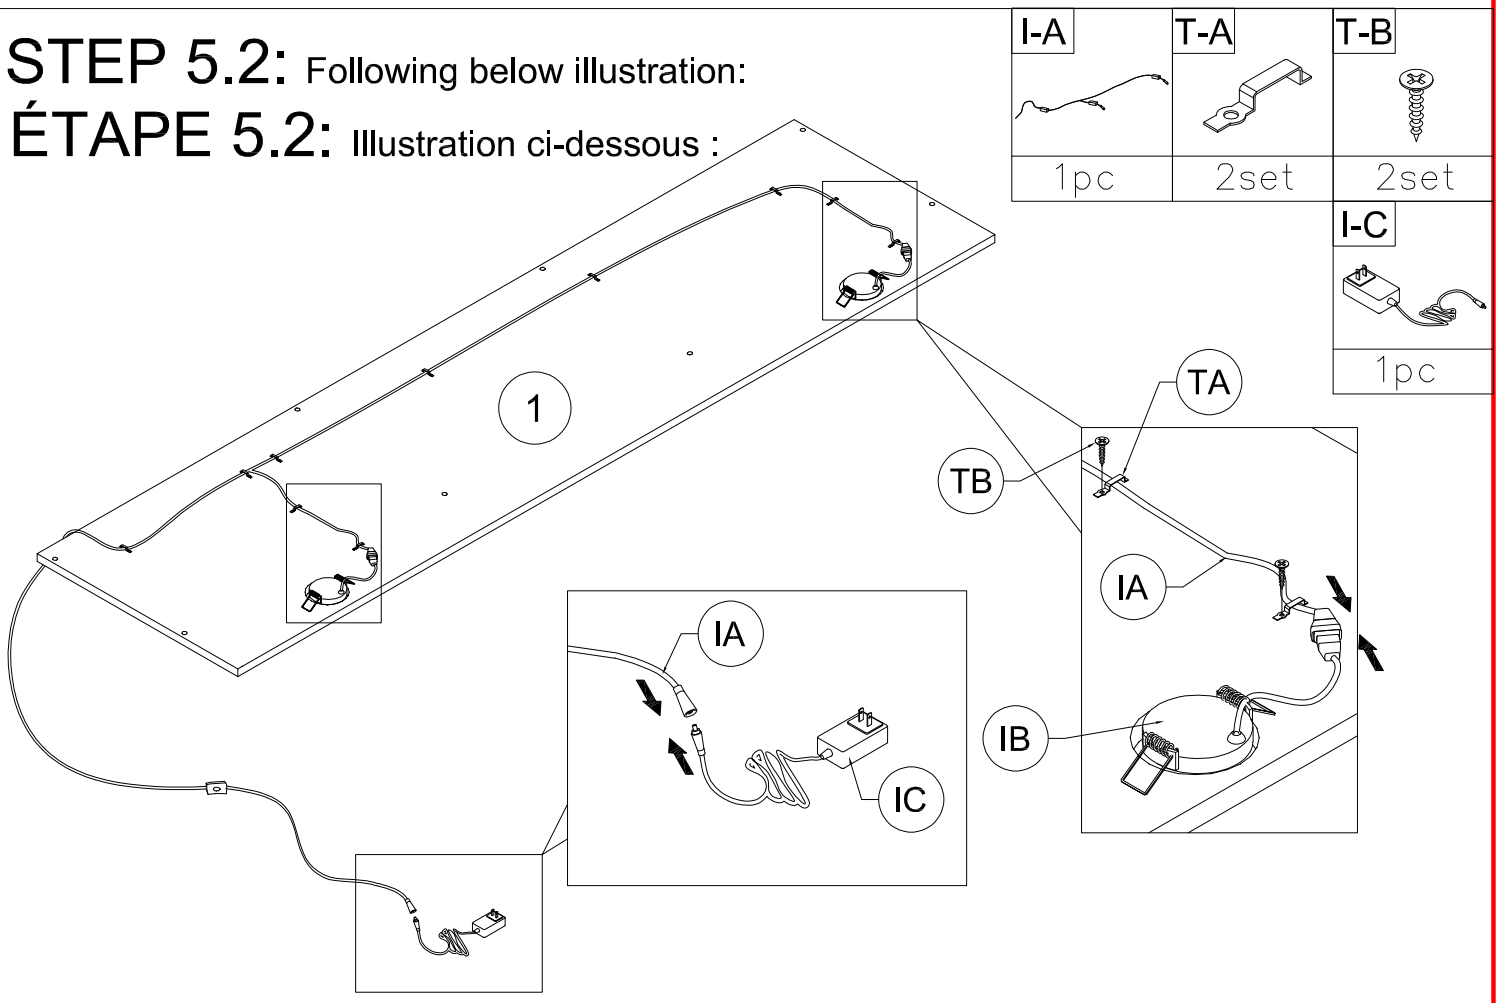


STEP 6: Following below illustration:


ÉTAPE 6: Illustration ci-dessous :

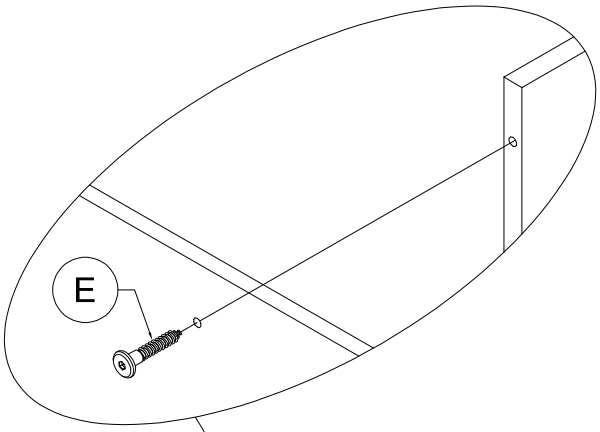

STEP 7: Following below illustration:


ÉTAPE 7: Illustration ci-dessous :


D	C	B
		
2pcs	10pcs	10pcs

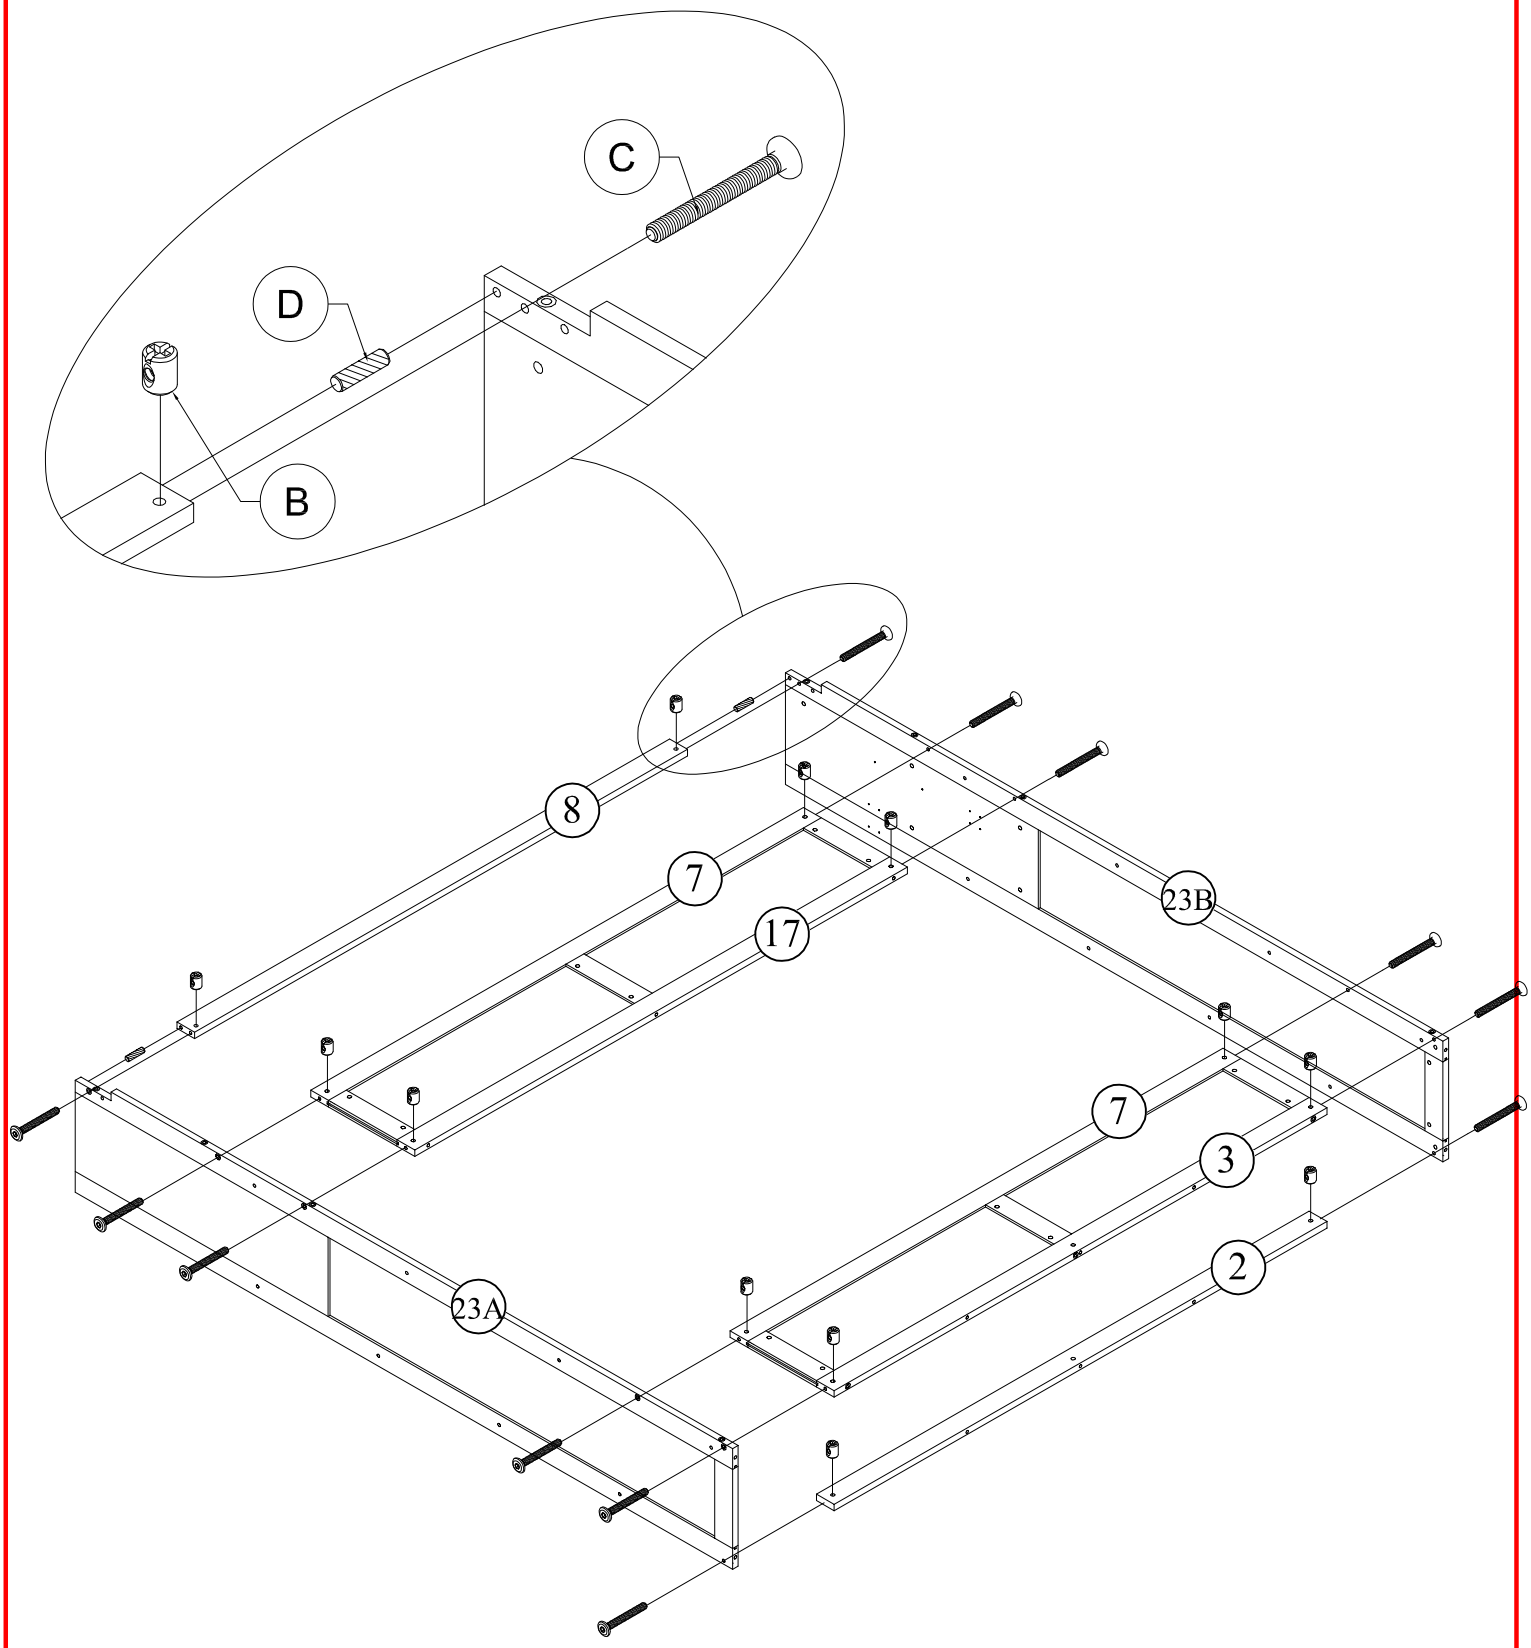

STEP 8: Following below illustration:


ÉTAPE 8: Illustration ci-dessous :


C	B
	
10pcs	10pcs

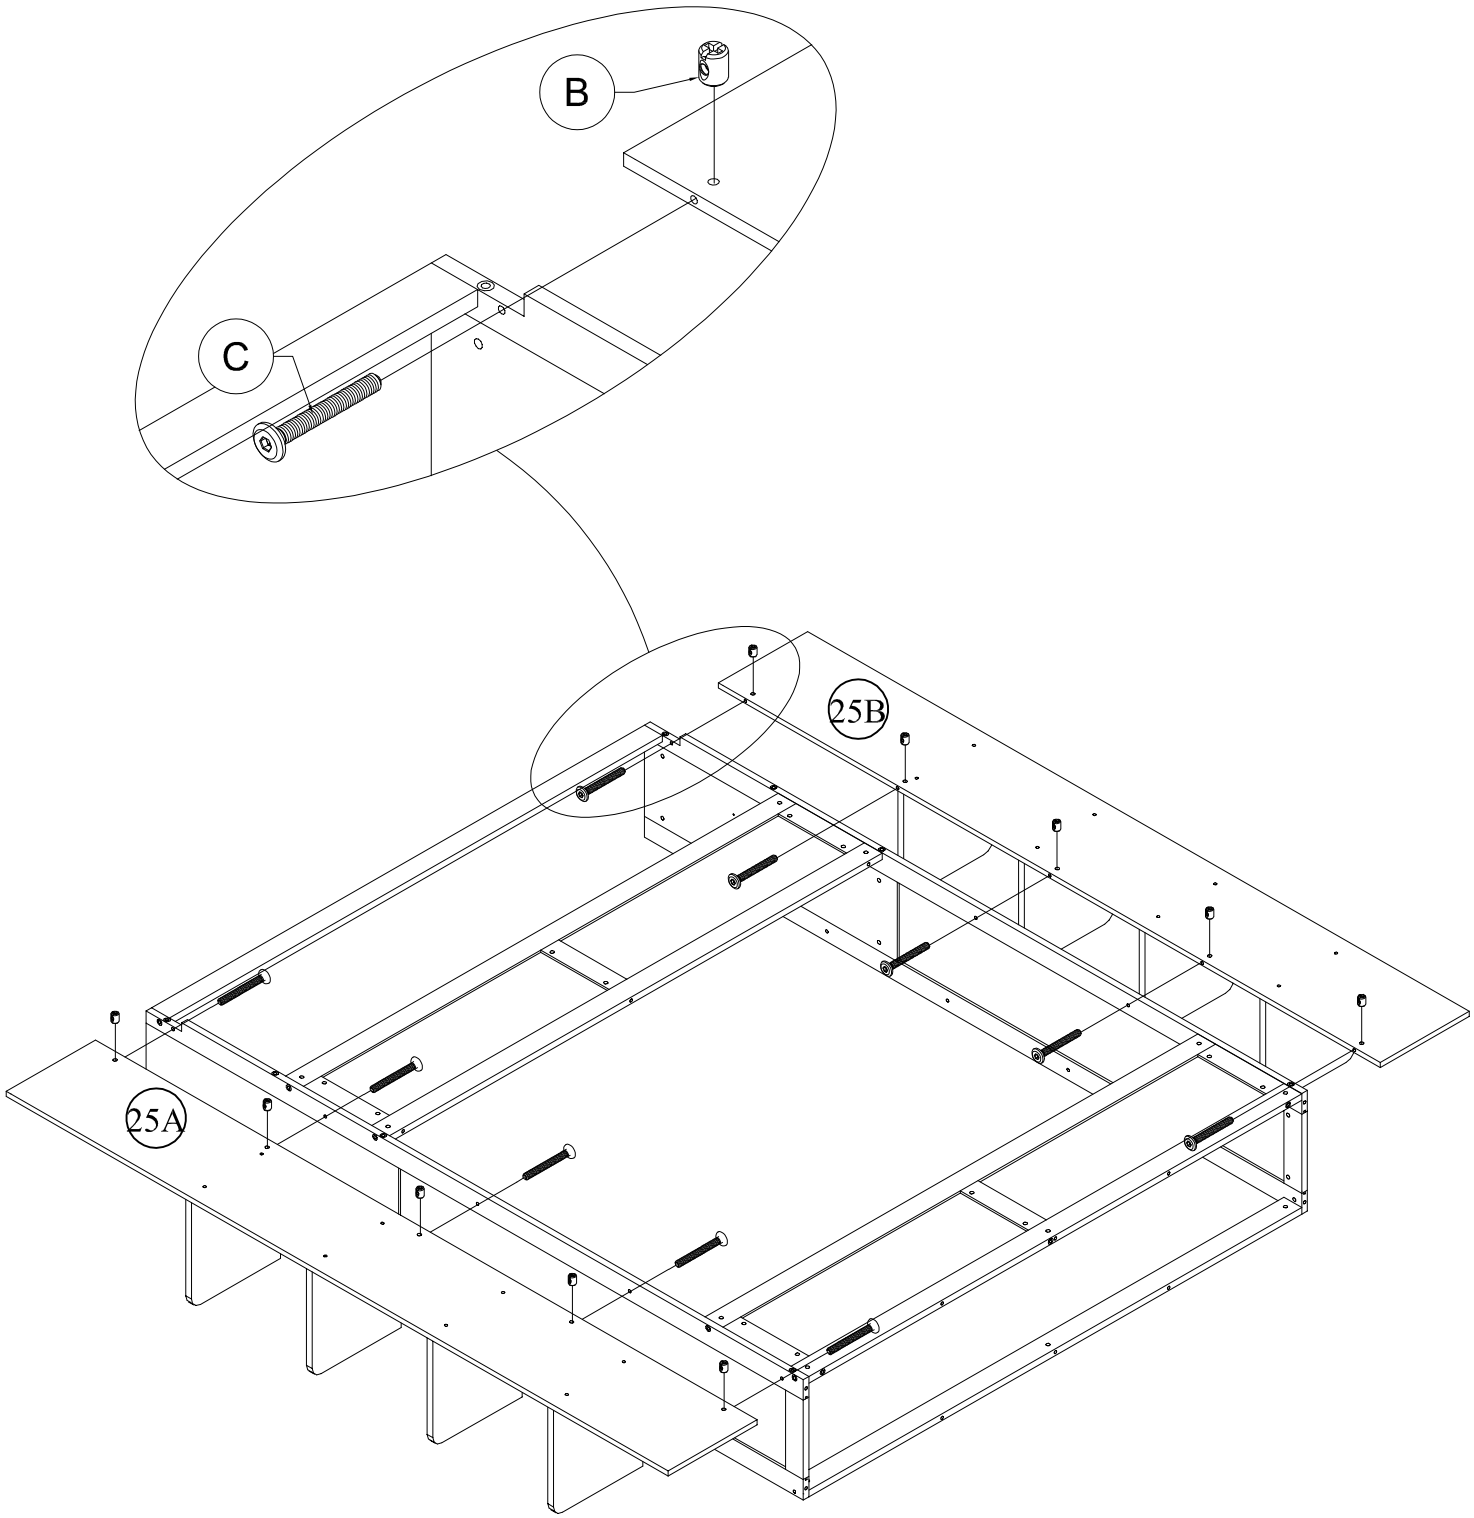

STEP 9: Following below illustration:

ÉTAPE 9: Illustration ci-dessous :

D	C	B
		
4pcs	8pcs	8pcs

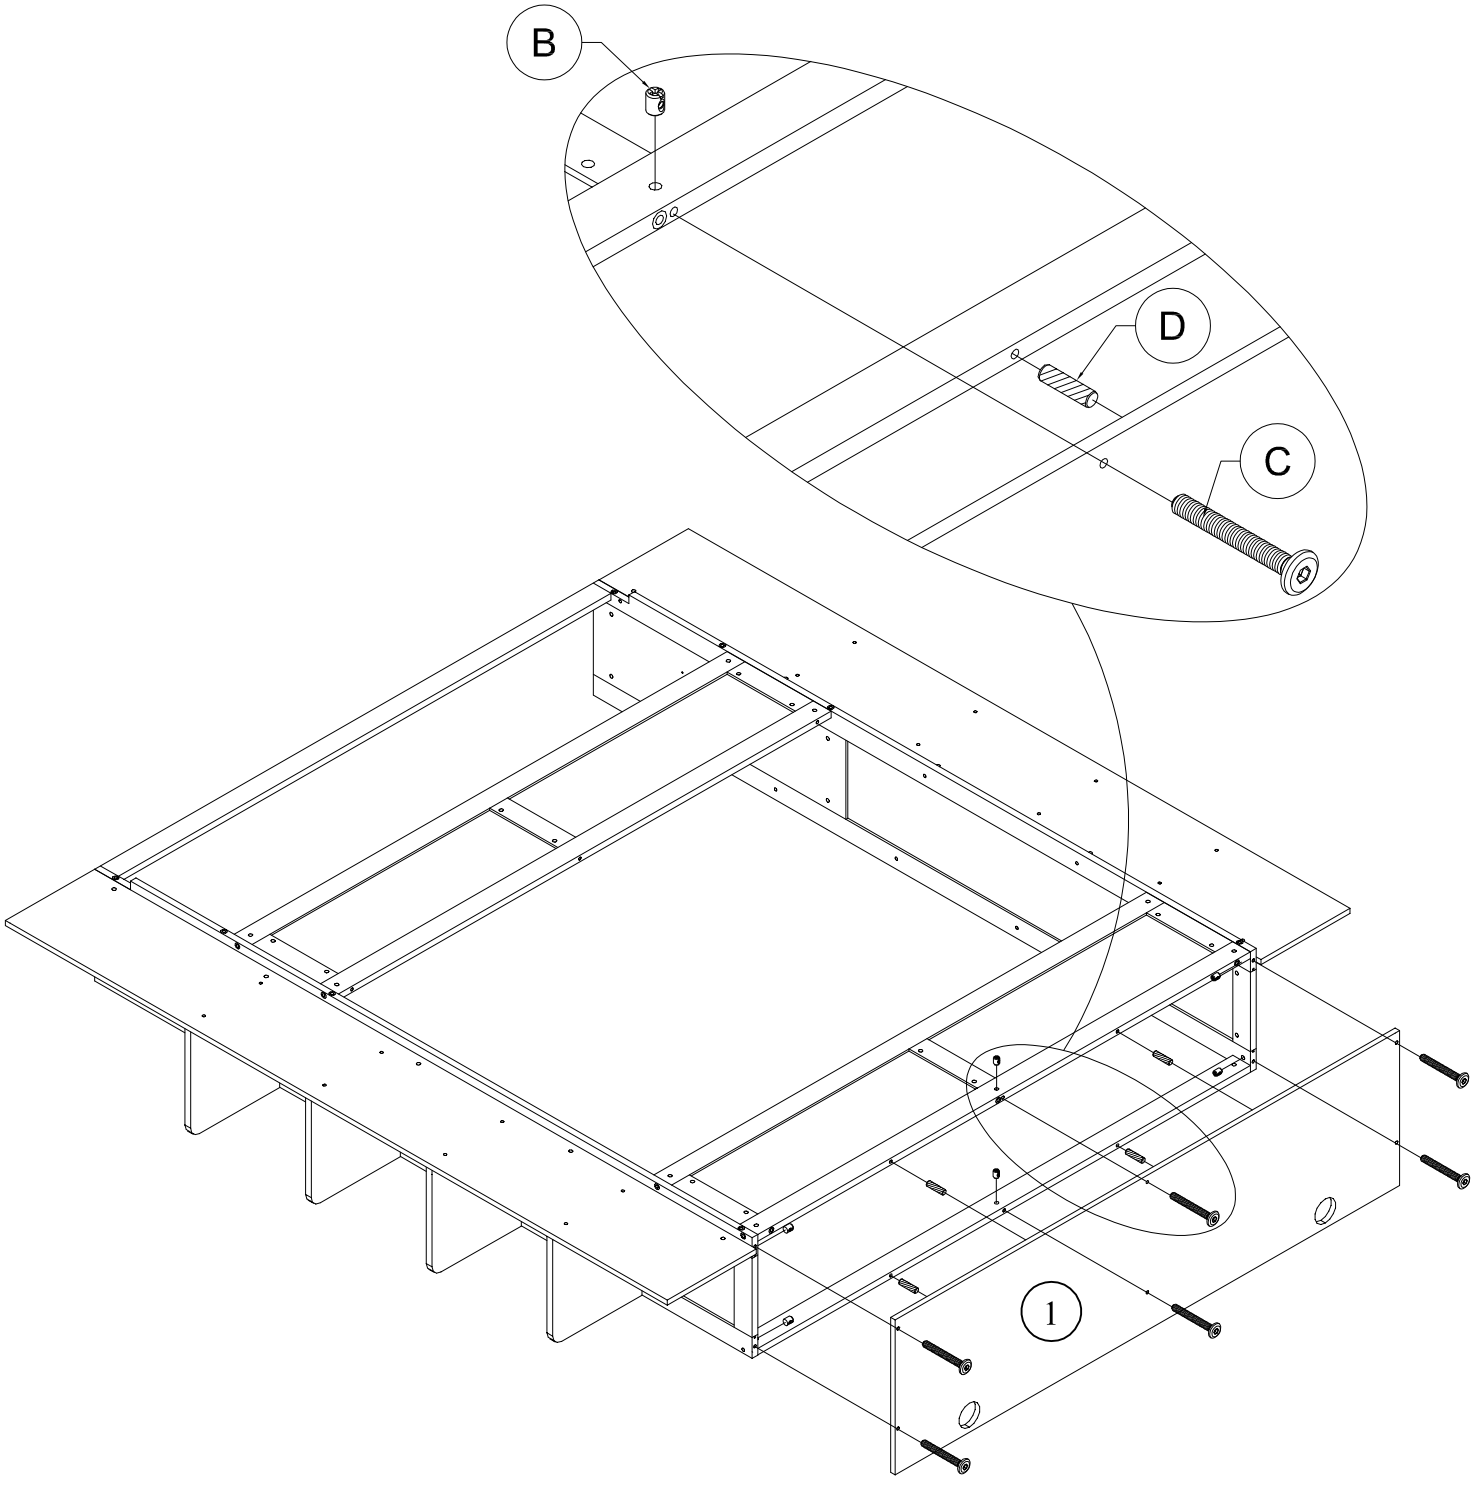


STEP 10: Following below illustration:
ÉTAPE 10: Illustration ci-dessous :

E




8pcs

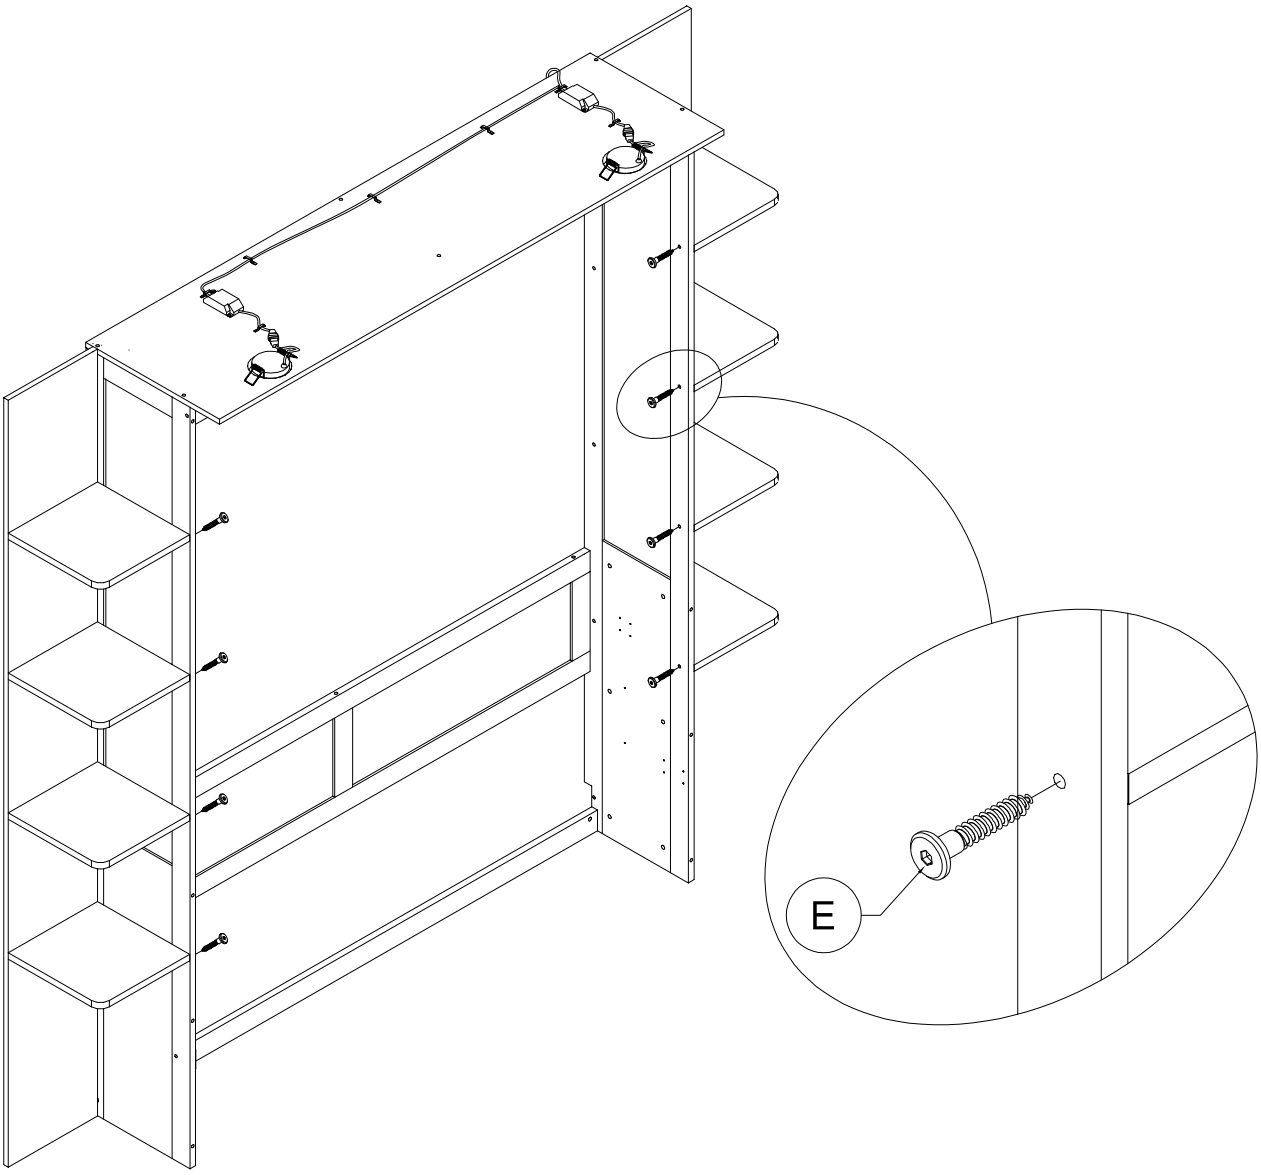



STEP 11: Following below illustration:
ÉTAPE 11: Illustration ci-dessous :


H	S-A	S-B
20pcs	1pcs	1pcs

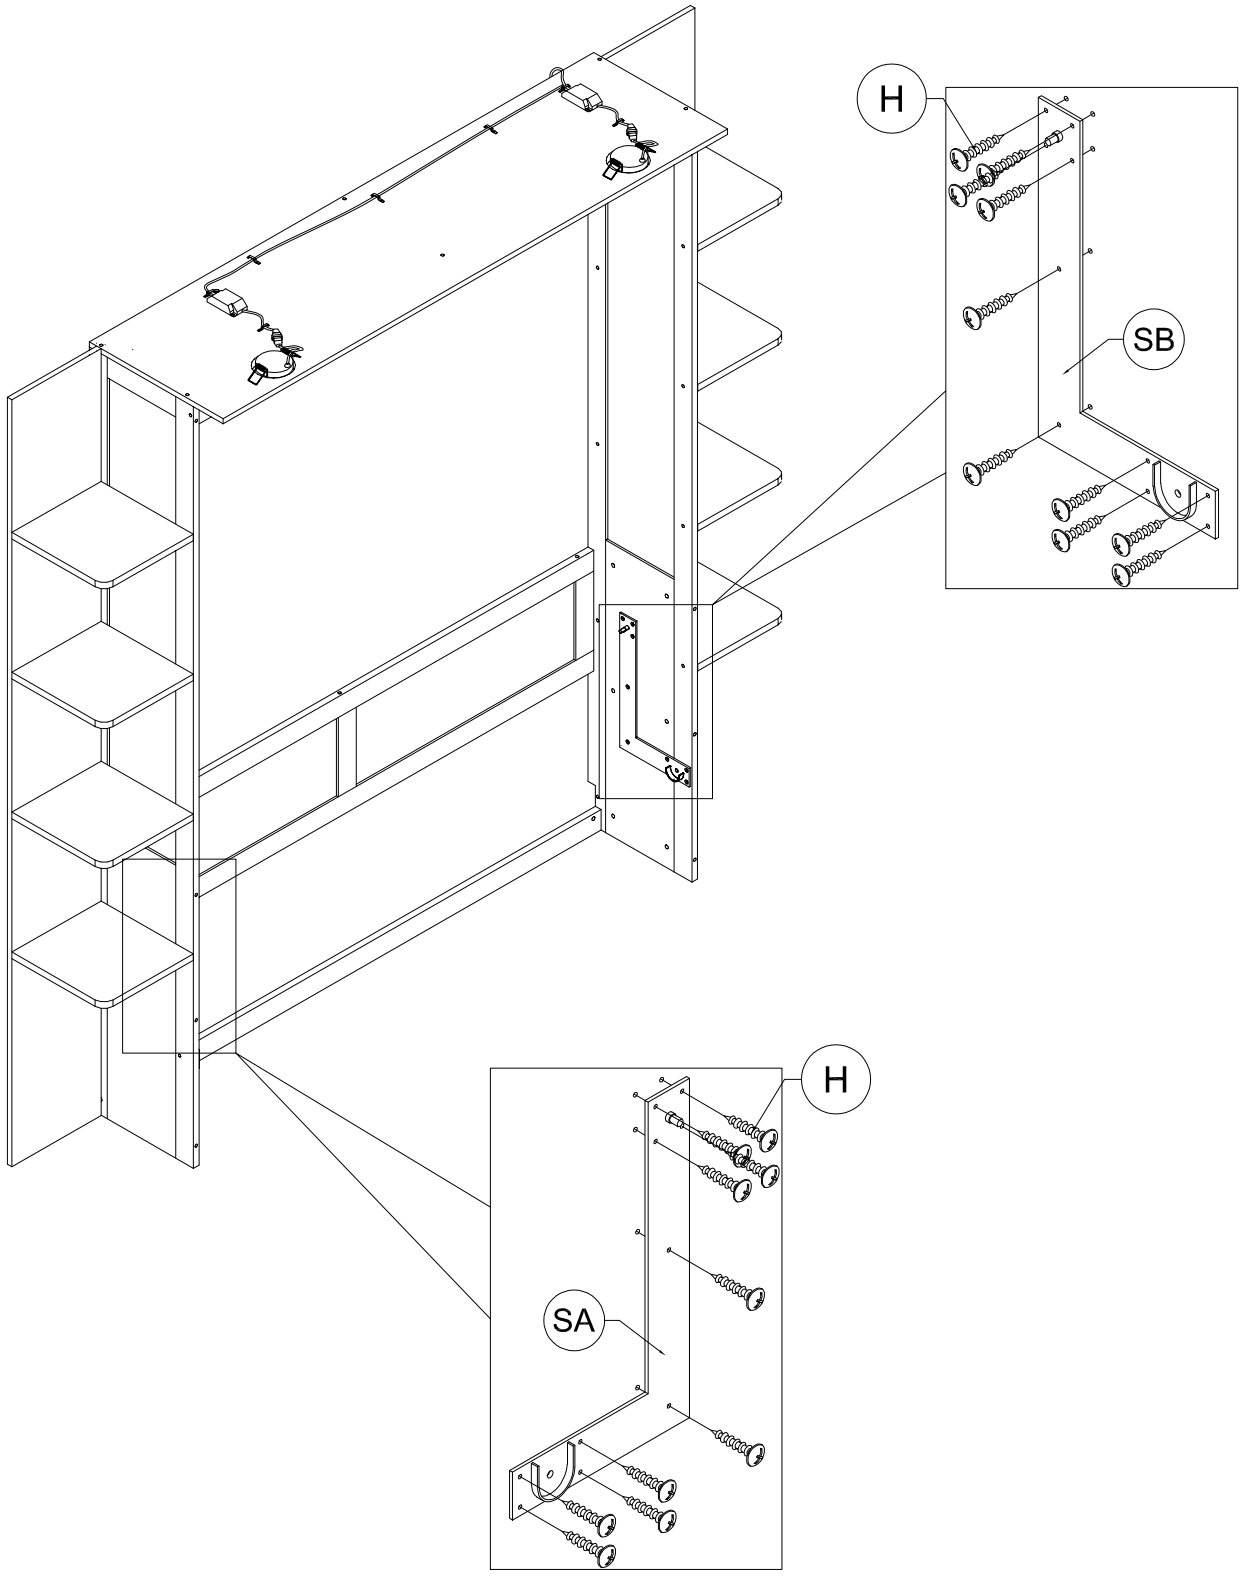


STEP 12: Following below illustration:
ÉTAPE 12: Illustration ci-dessous :

Z	H
	
3pcs	6pcs

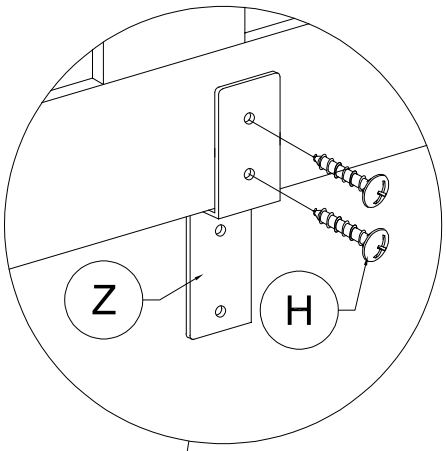

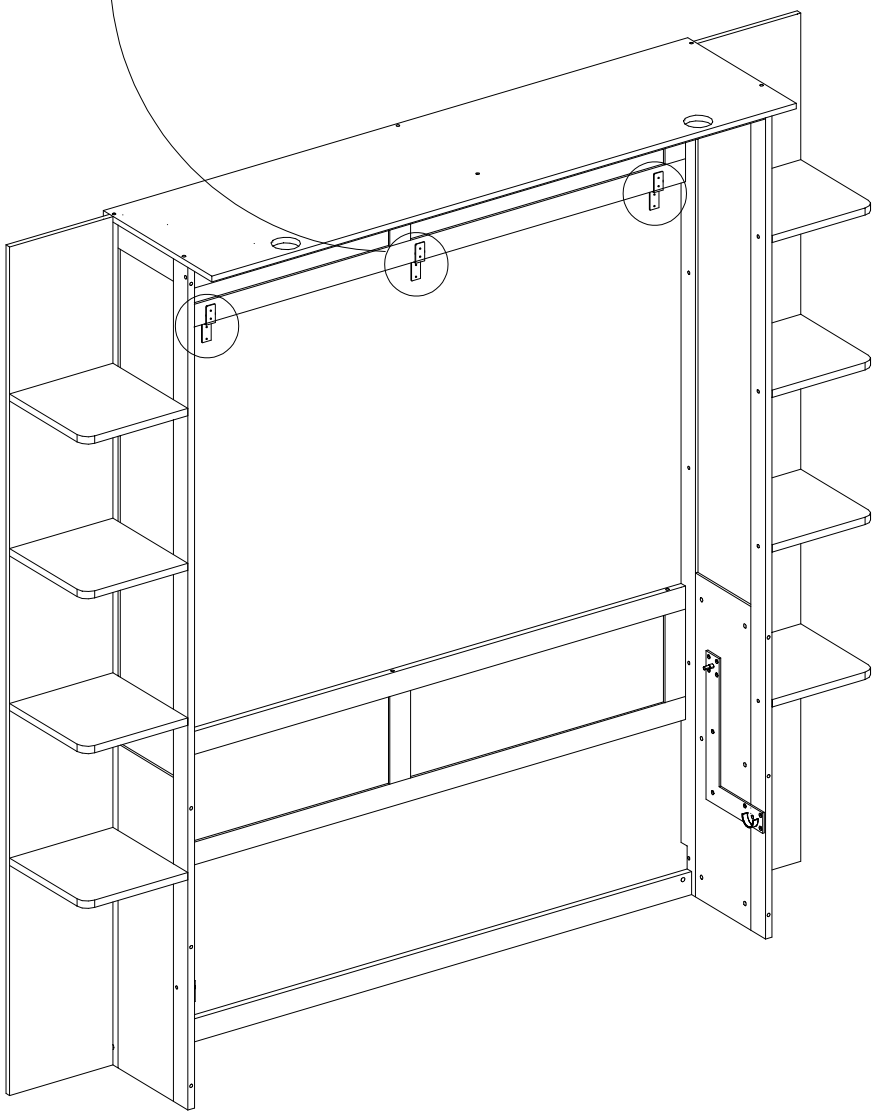


OPTION A: WOOD STUD WALL

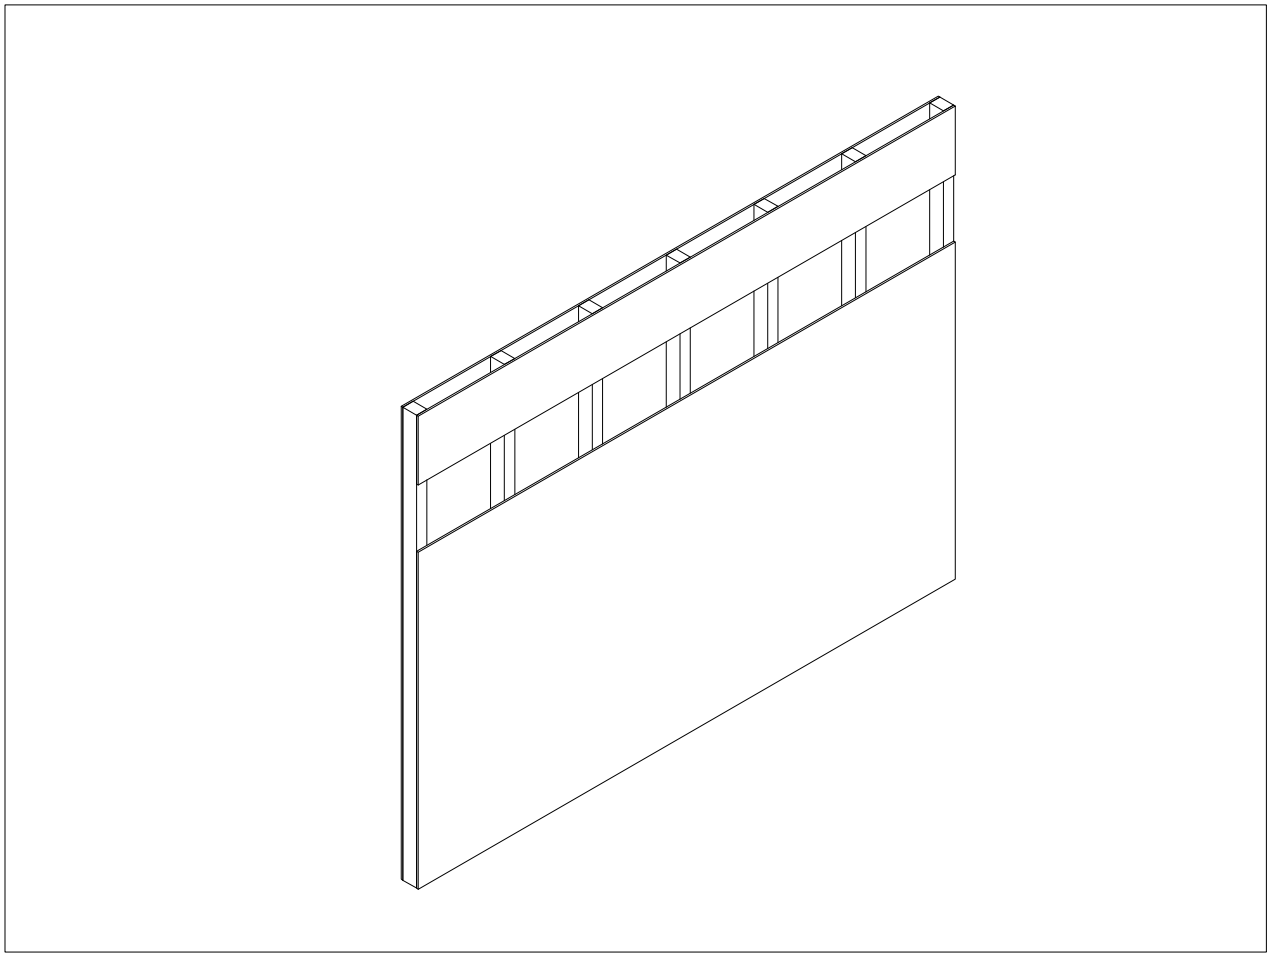


1- Determine the position of the bed in the room.

1- Déterminez la position du lit dans la chambre.

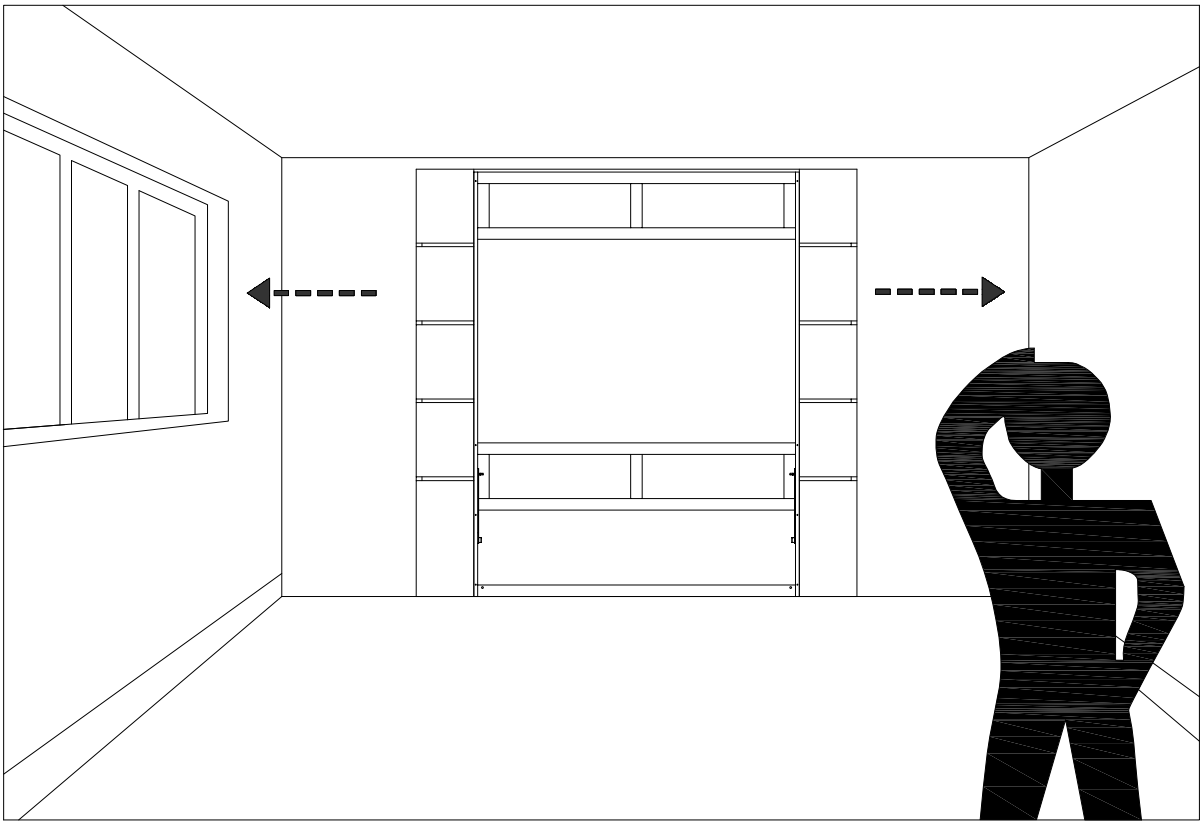


2- Put the bed back in its place. Please keep it vertical and horizontal.

2- Remettez le lit à sa place. Veuillez le garder vertical et horizontal.

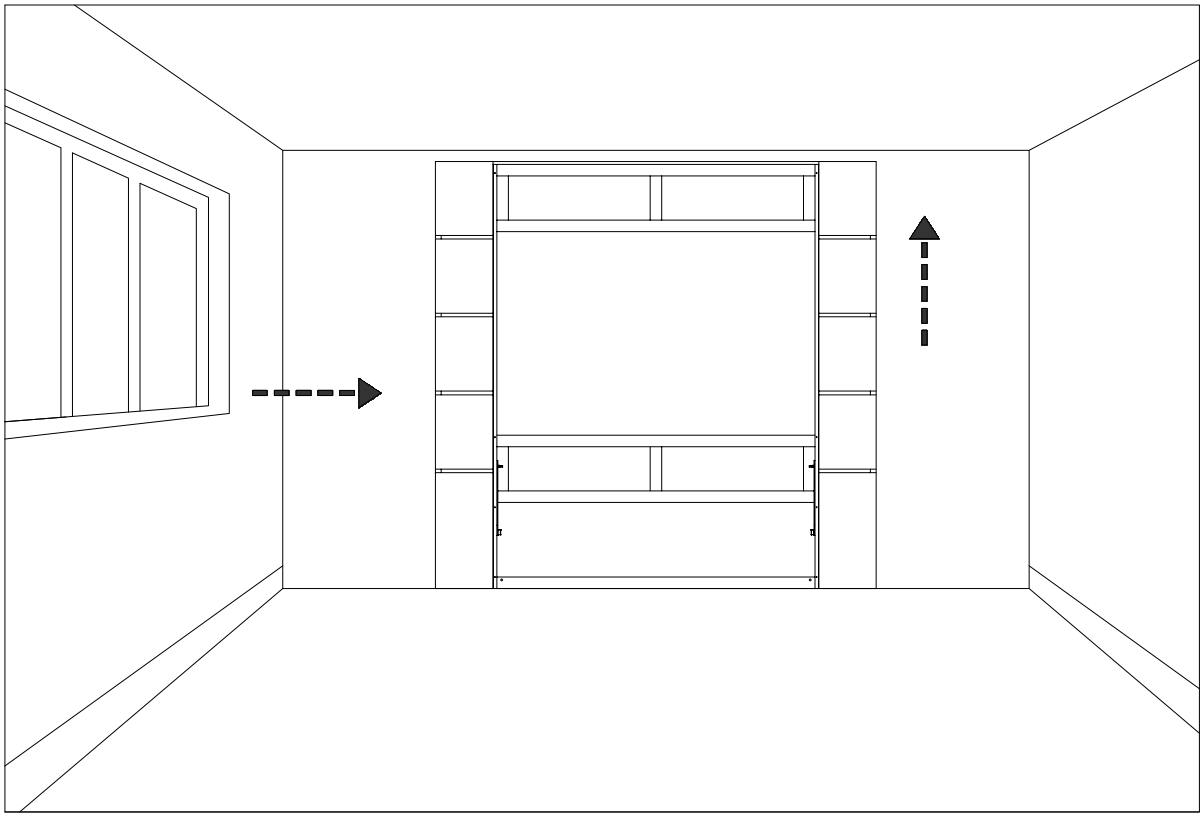


3- Mark the points drill holes according to actual products.


3- Marquez les points de percage en fonction des produits réels.

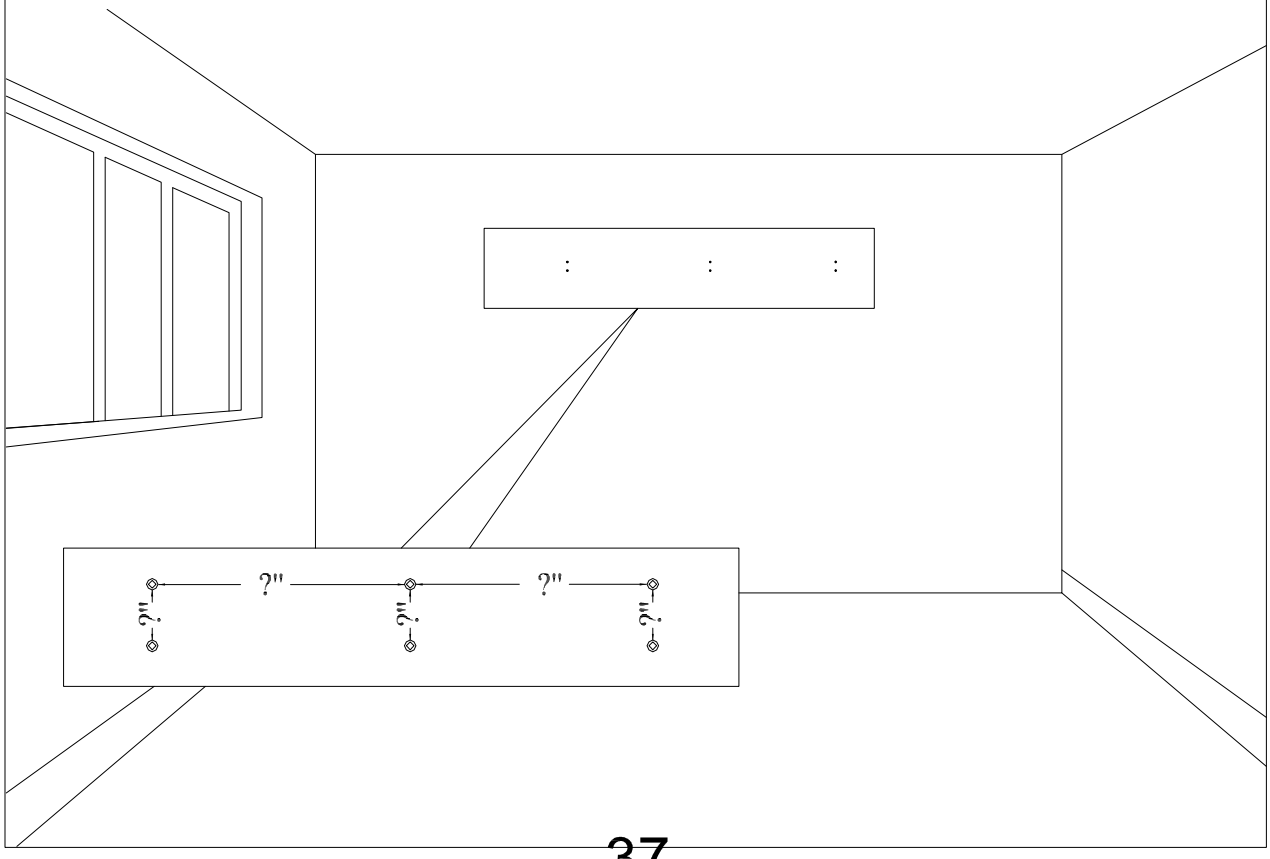

A1A	A1B
	
6pcs	6pcs

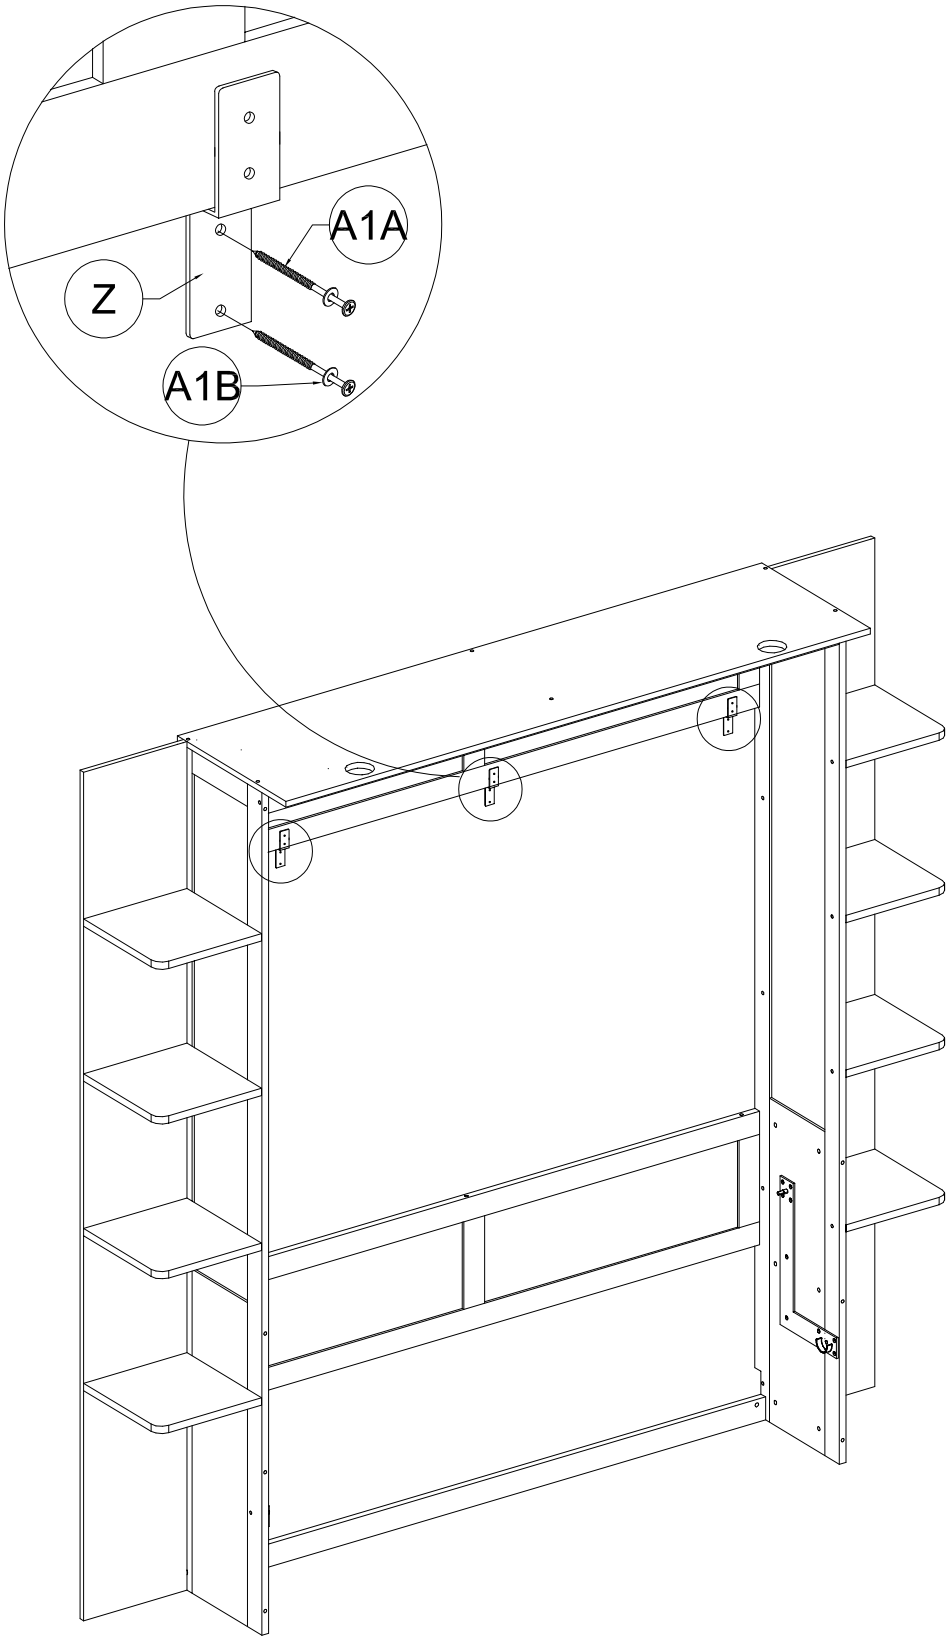


OPTION B: MASONRY/CONCRETE WALL

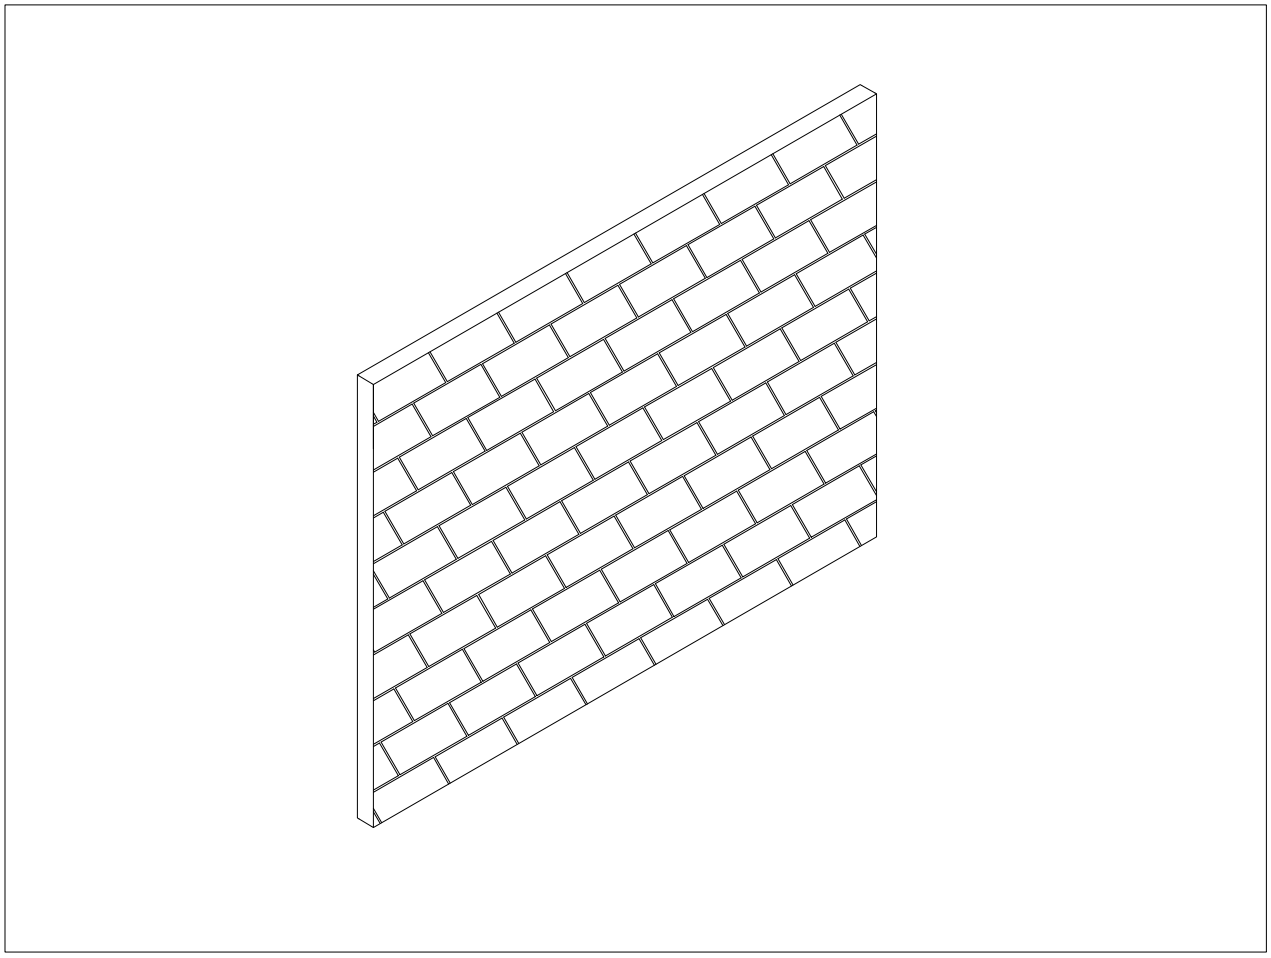


1- Determine the position of the bed in the room.

1- Déterminez la position du lit dans la chambre.

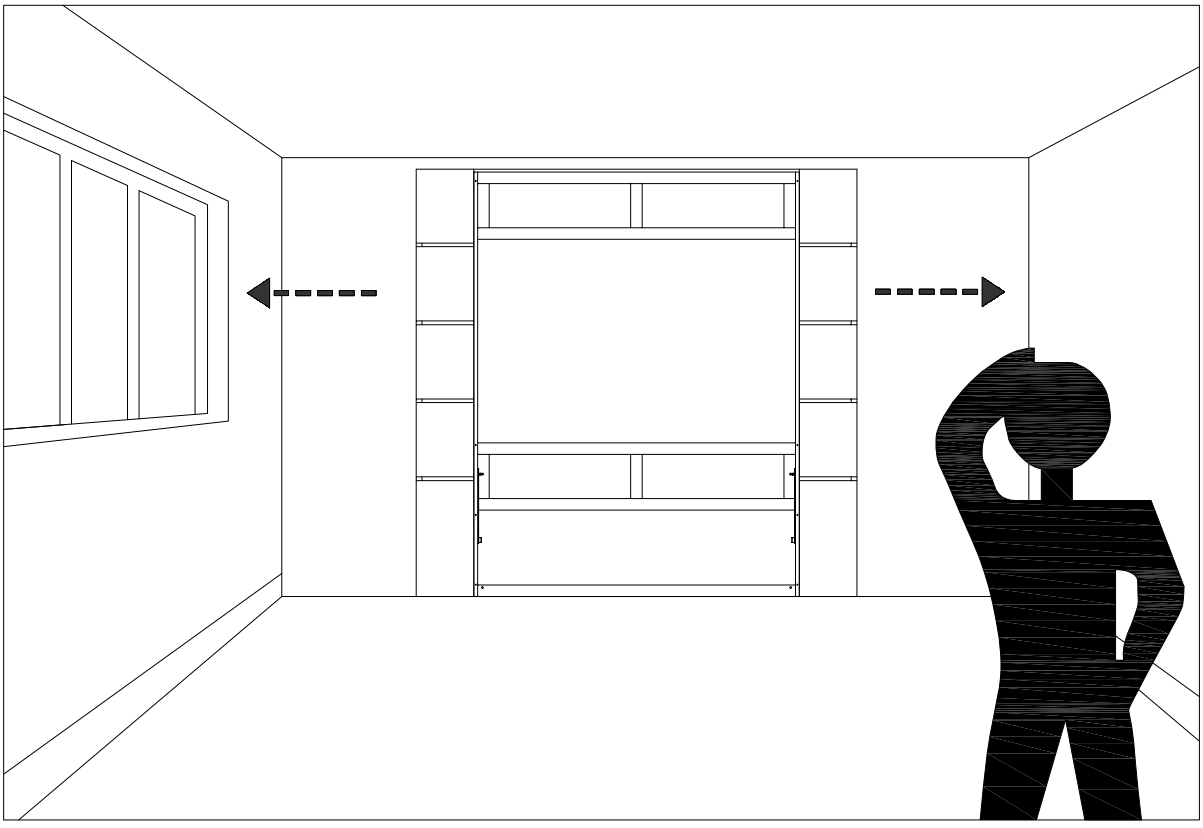


2- Put the bed back in its place. Please keep it vertical and horizontal.

2- Remettez le lit à sa place. Veuillez le garder vertical et horizontal.

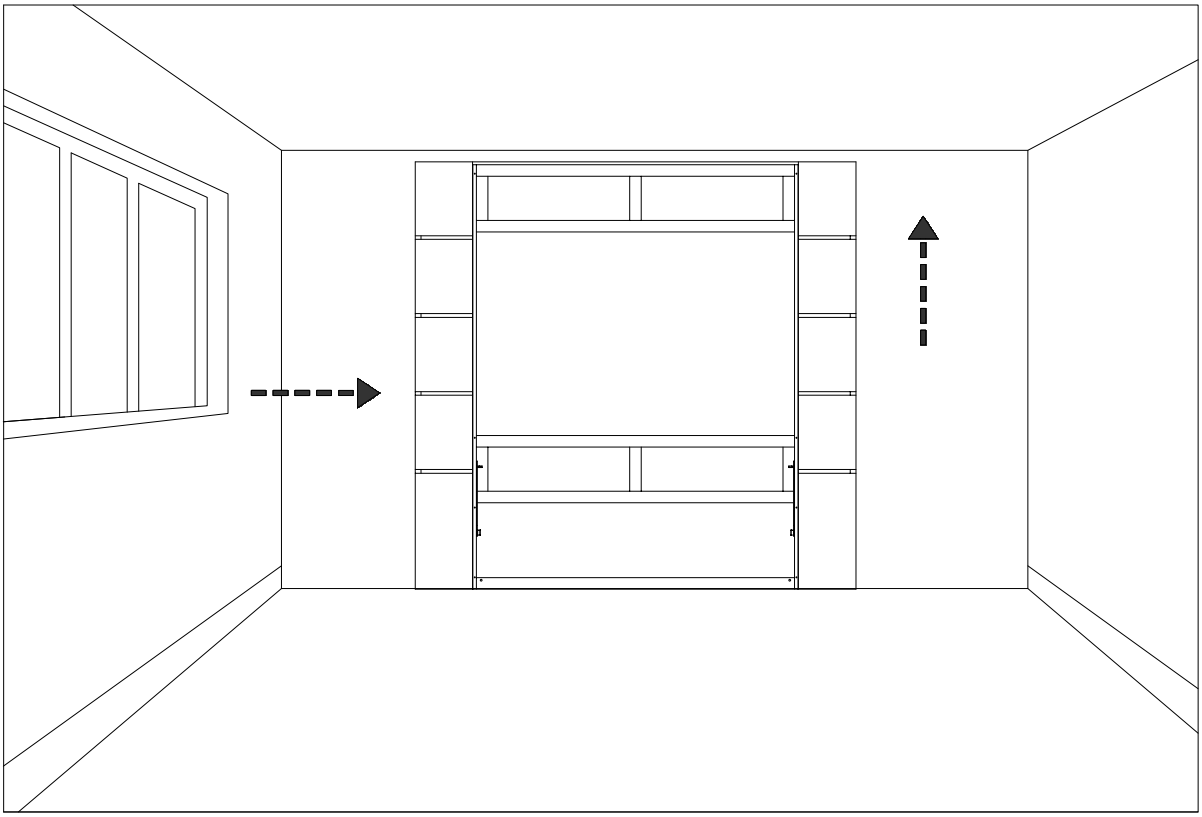


3- Mark the points drill holes according to actual products.

3- Marquez les points de percage en fonction des produits réels.

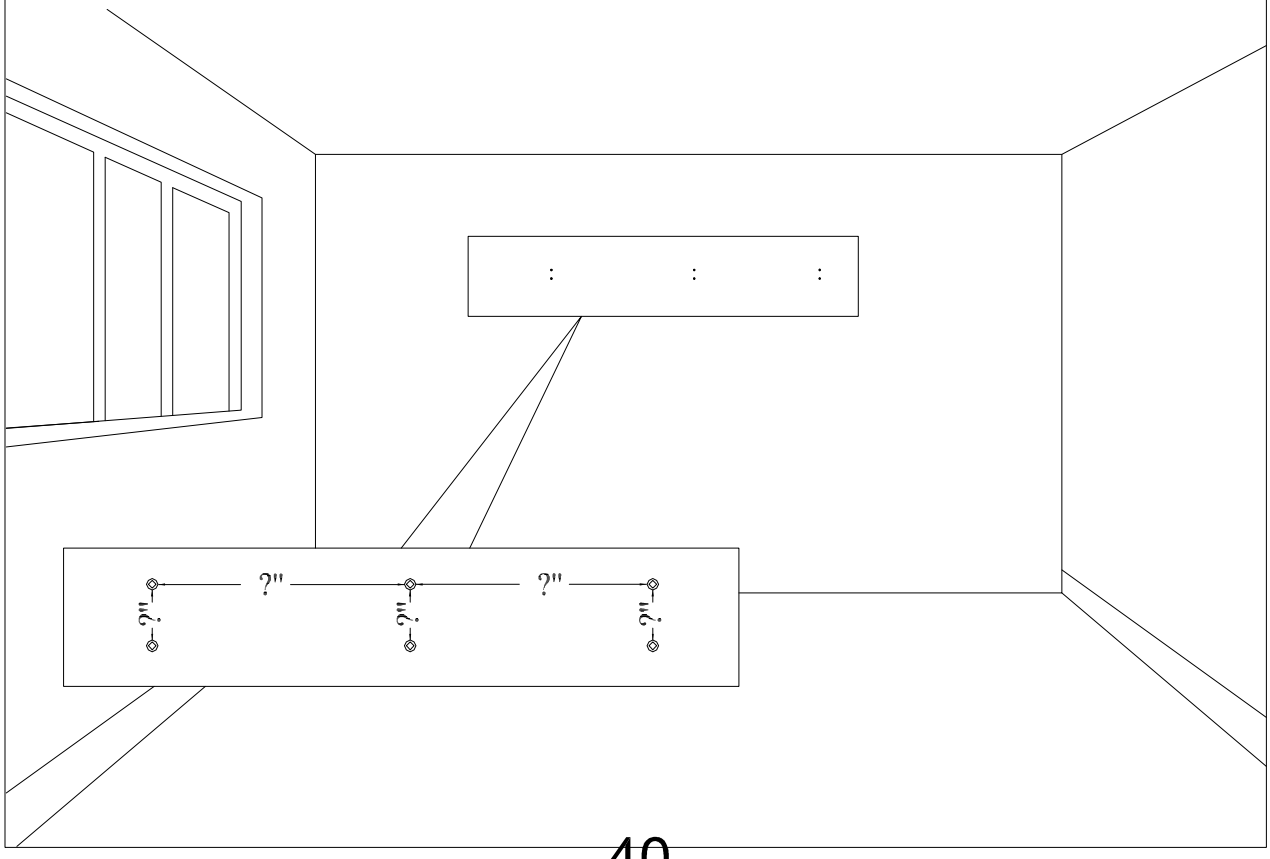


4- Drill the positions marked in STEP 3 and secure the plug.

4- Percez les positons marquées à ÉTAPE 3 et fixez la cheville.

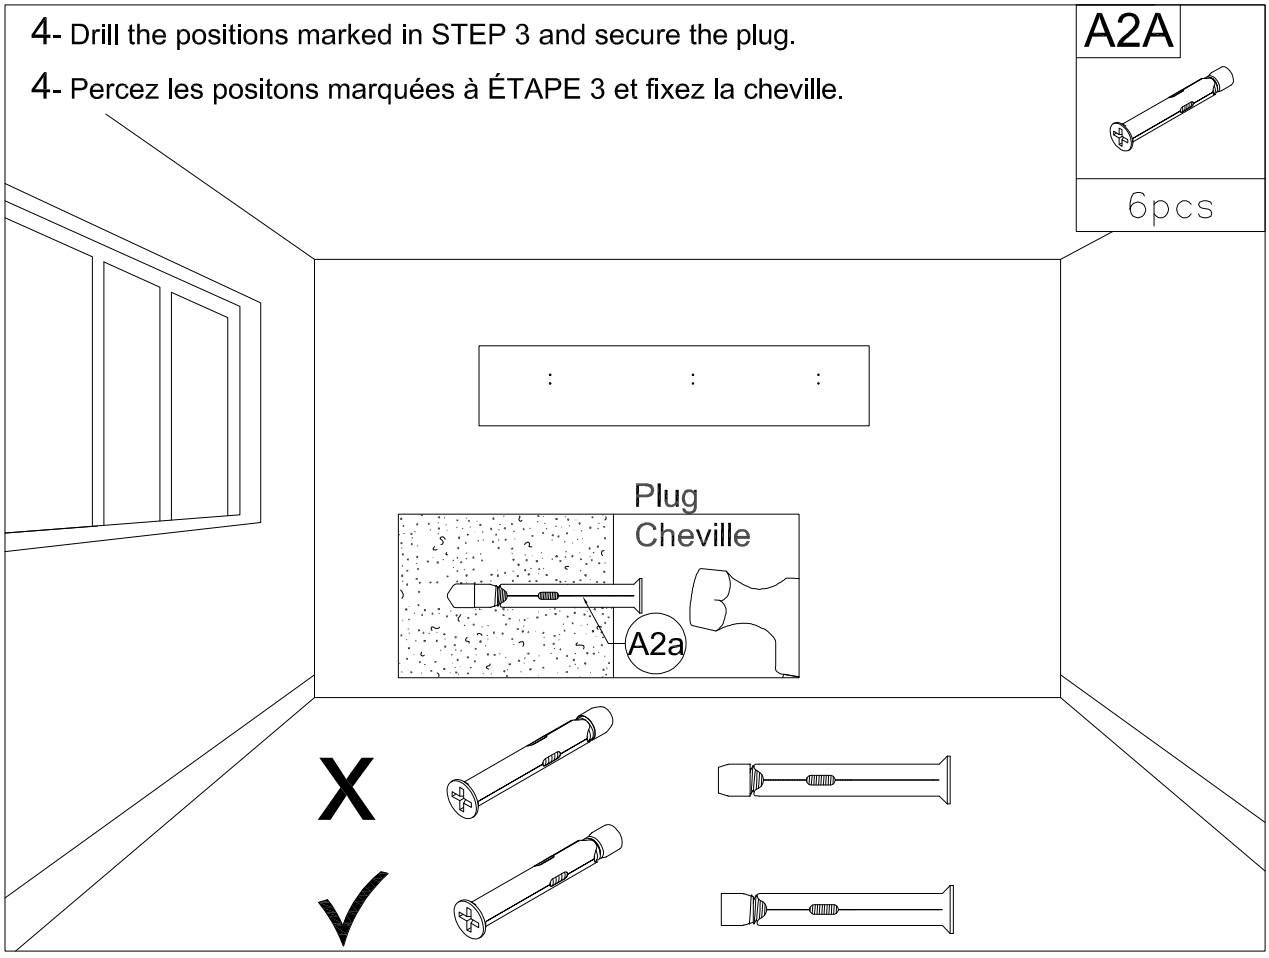

5- Remove the screw component from the anchor and reuse.


5- Etirez la vis de l'ancrage et réutilisez-la.

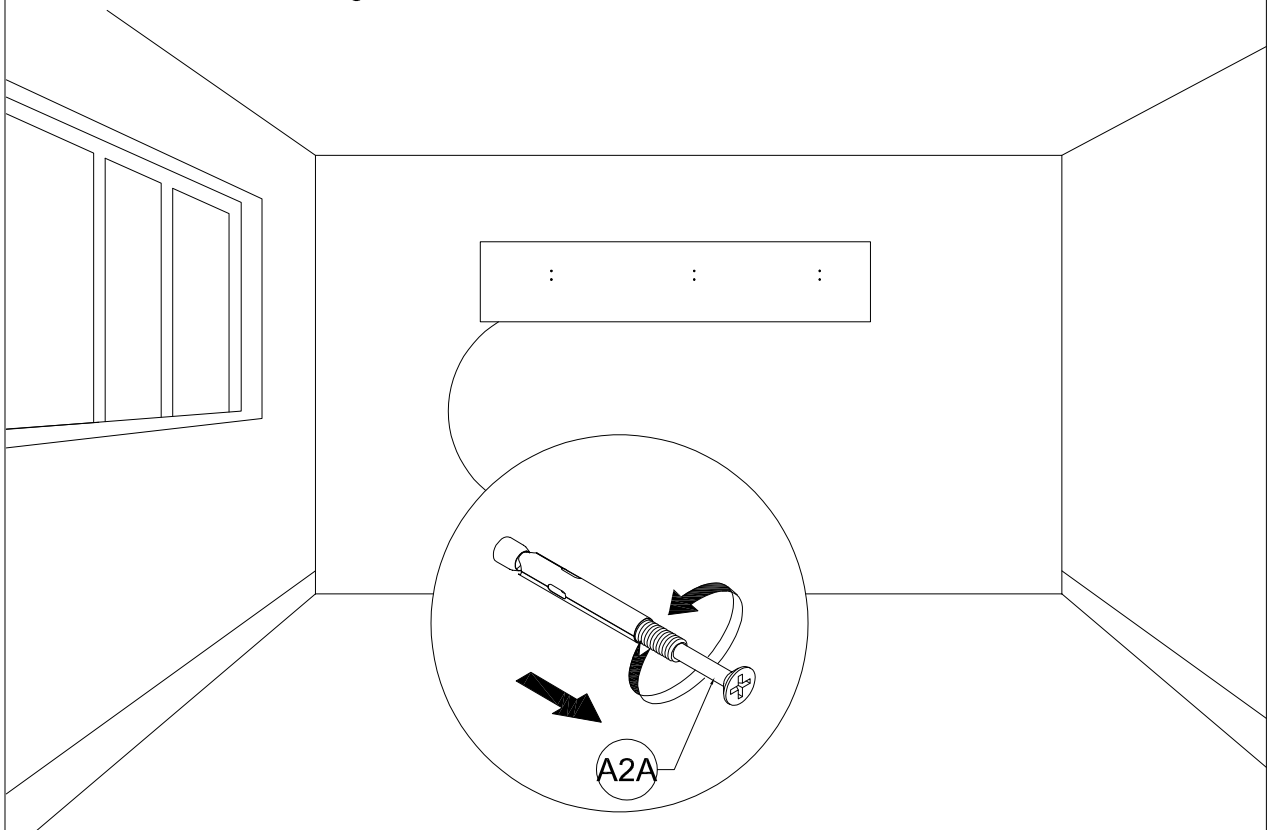


A2B




6pcs

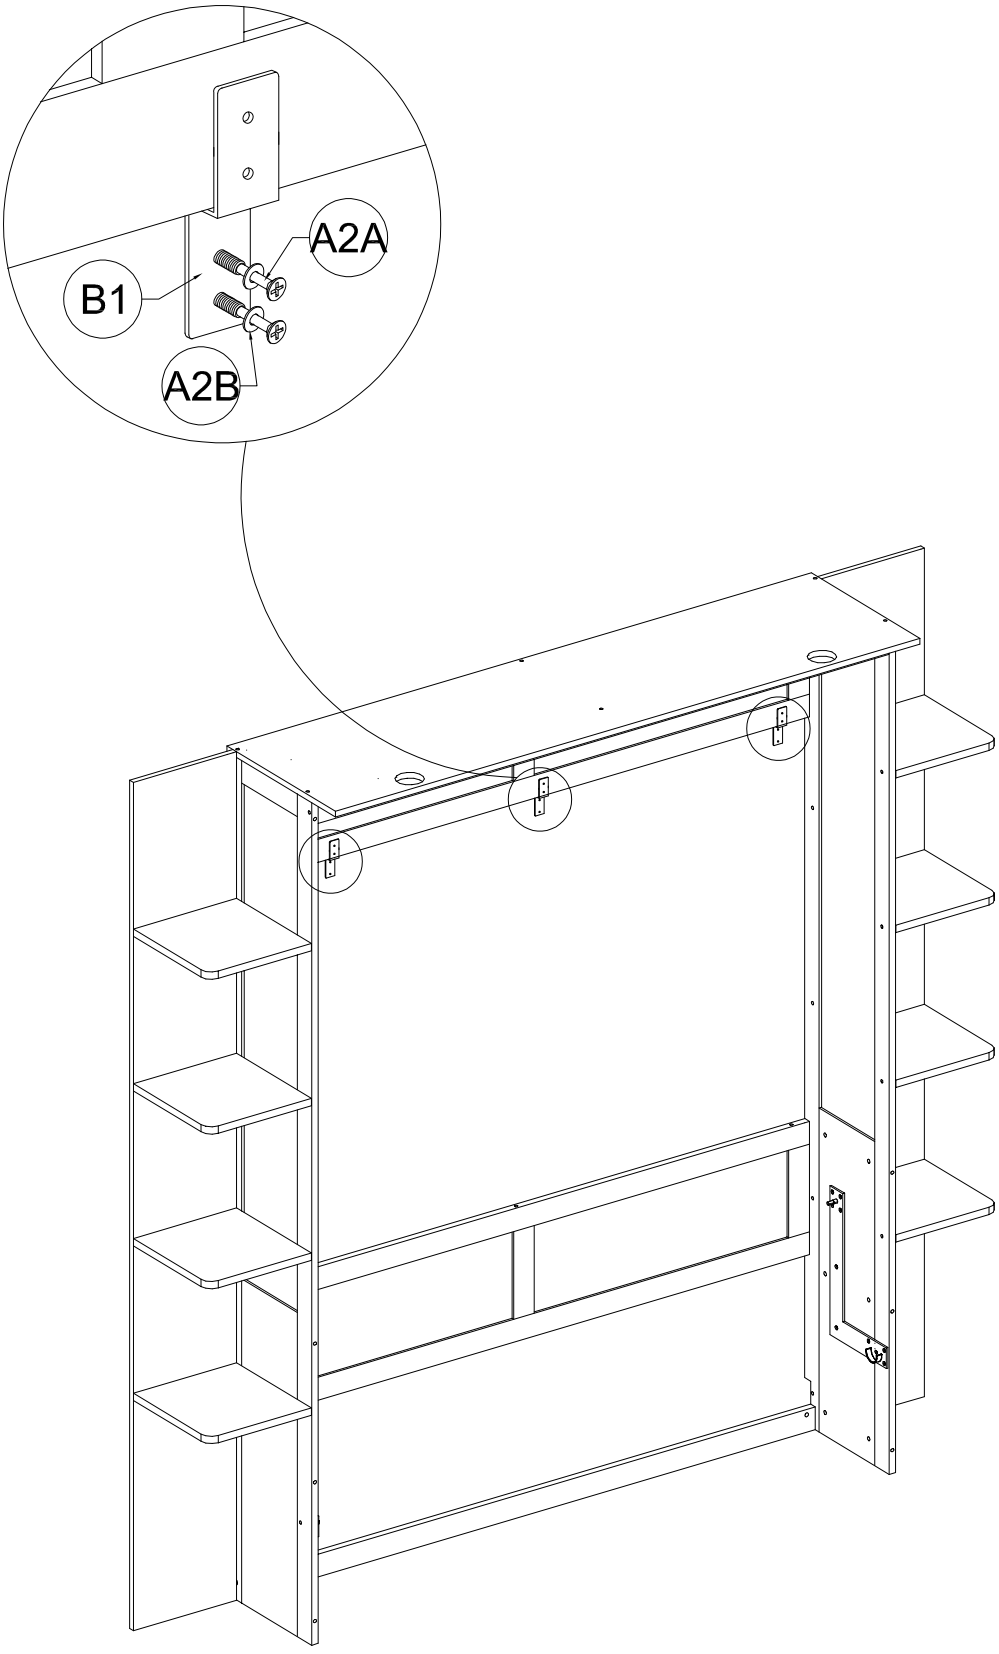


STEP 13.1: Following below illustration:
ÉTAPE 13.1: Illustration ci-dessous :

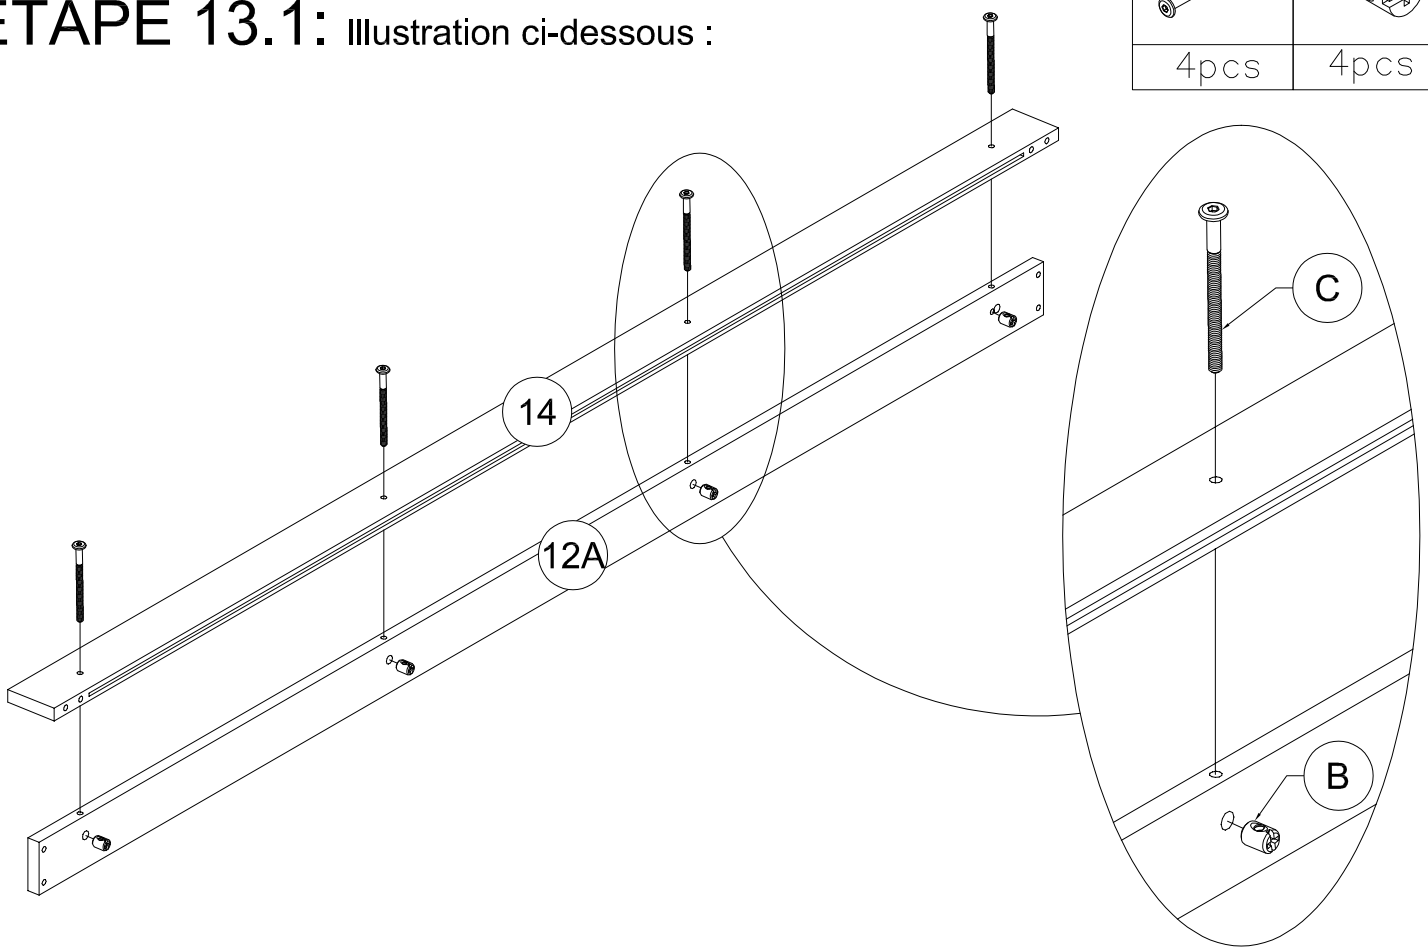


STEP 13.2: Following below illustration:
ÉTAPE 13.2: Illustration ci-dessous :

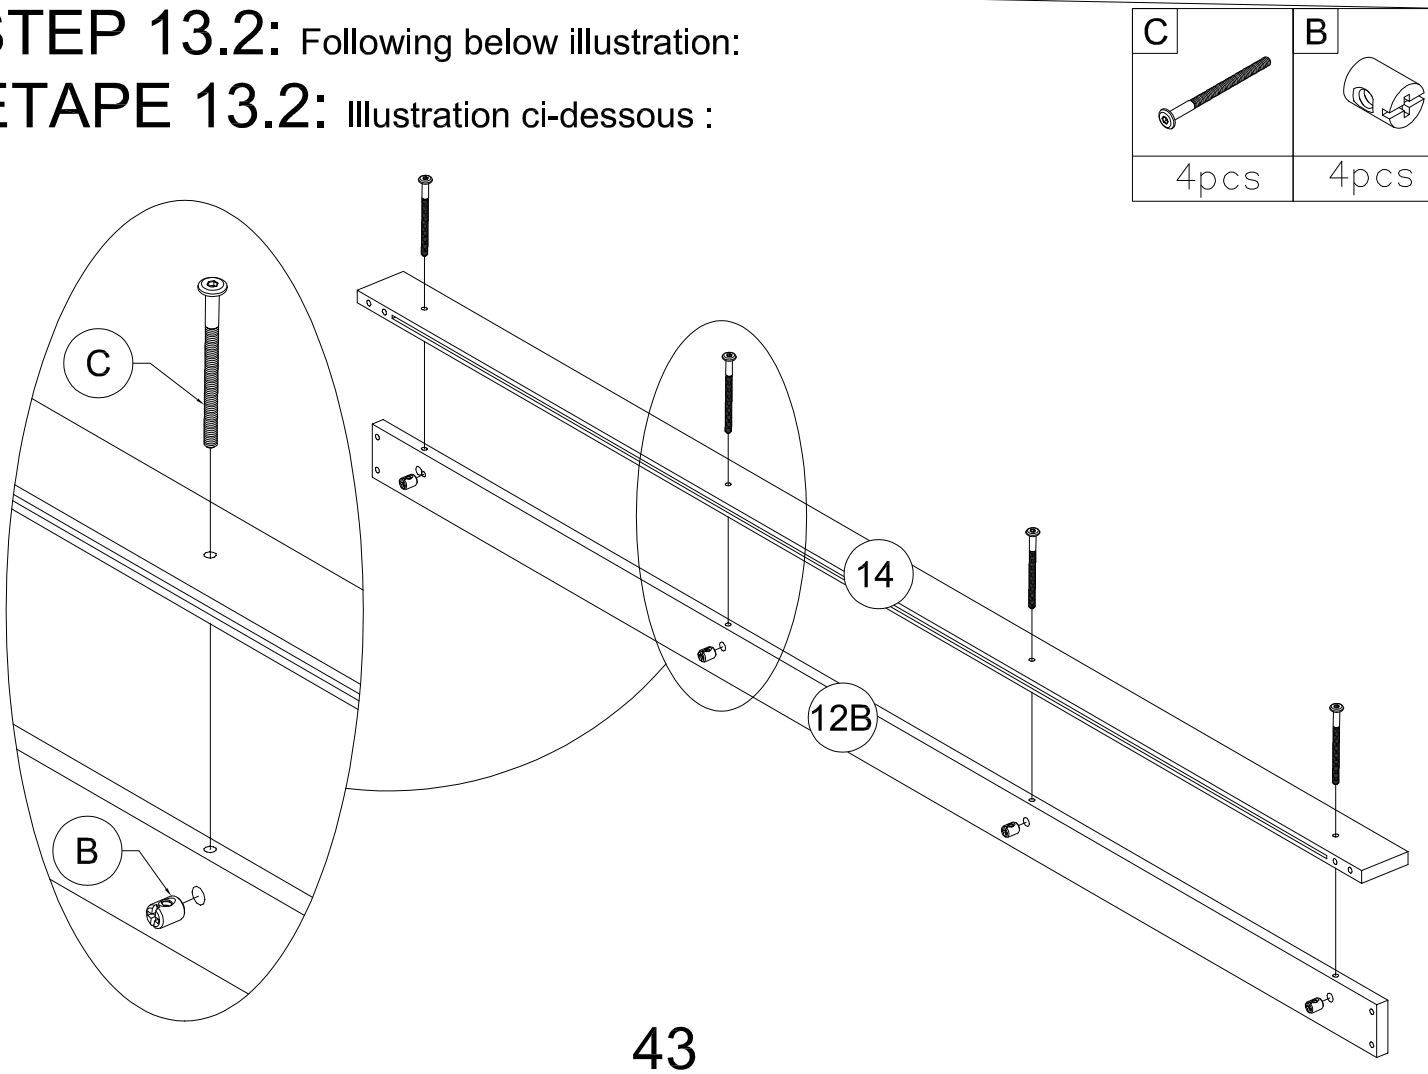

STEP 14: Following below illustration:
ÉTAPE 14: Illustration ci-dessous :


C	B
	
6pcs	6pcs

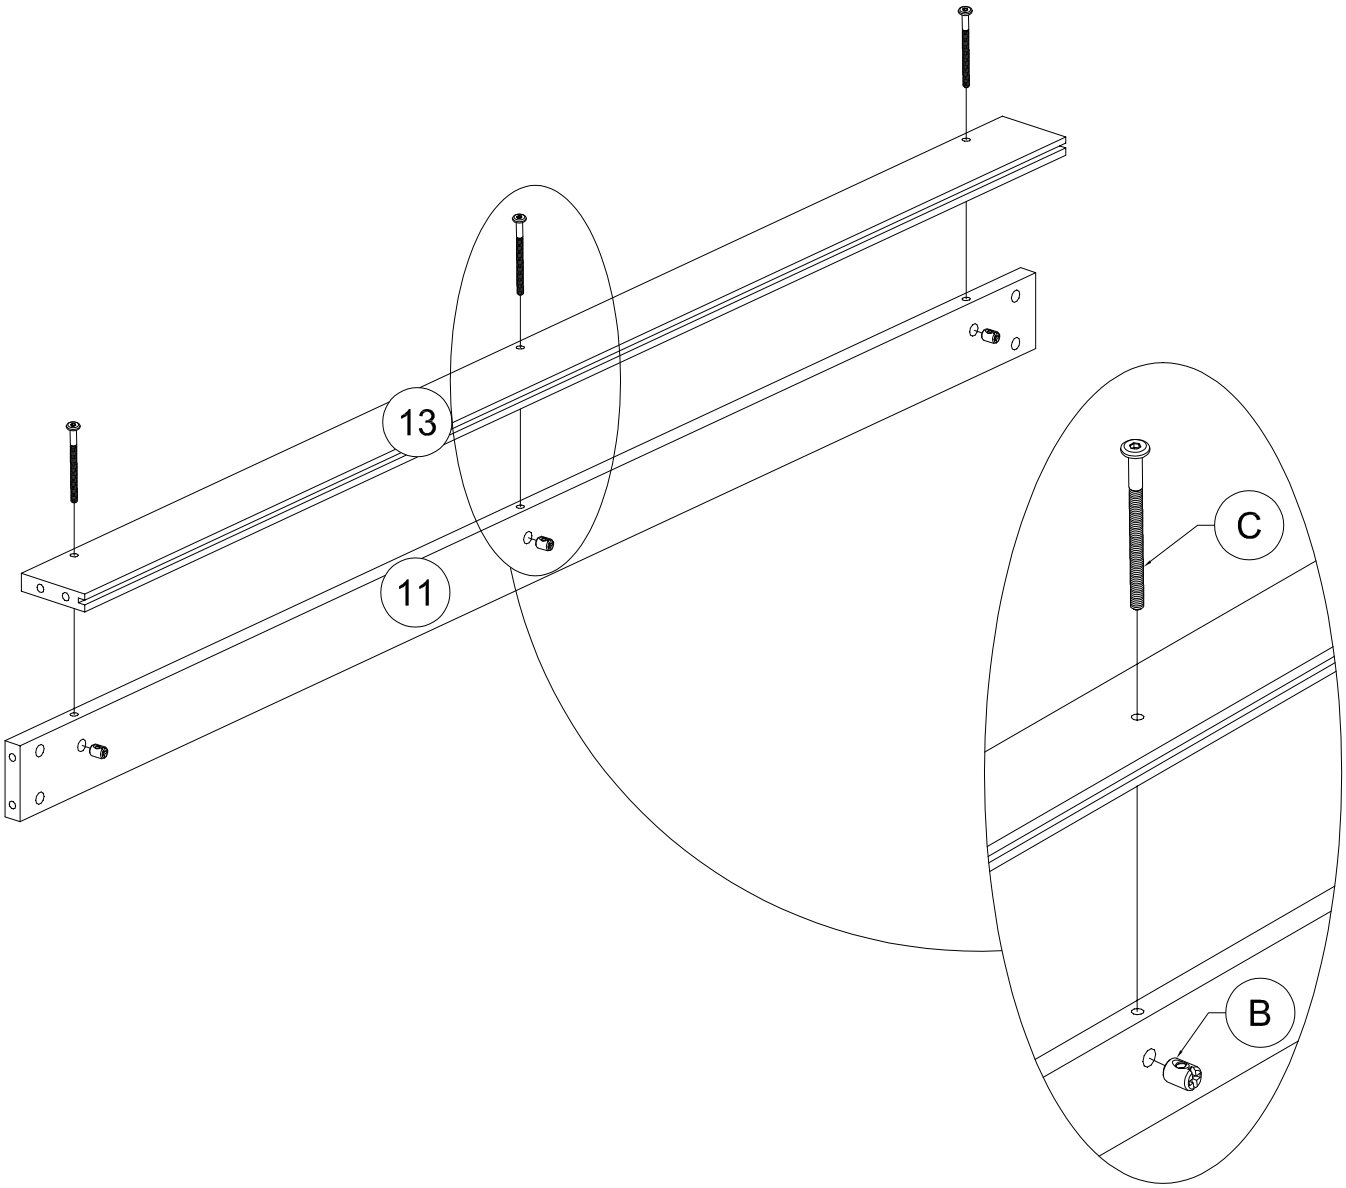

X2


STEP 15.1: Following below illustration:
ÉTAPE 15.1: Illustration ci-dessous :

D	A	B
2pcs	1pcs	1pcs

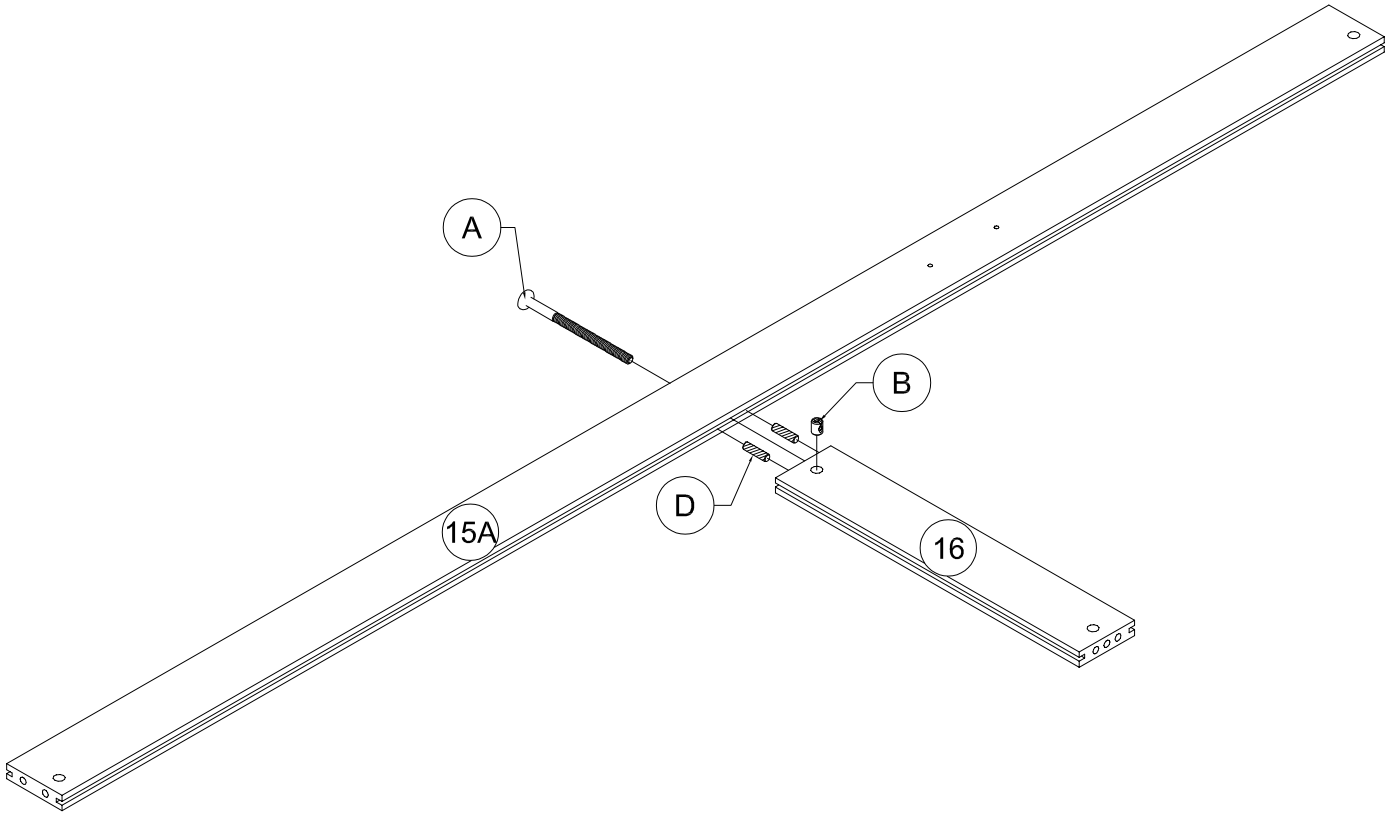

STEP 15.2: Following below illustration:
ÉTAPE 15.2: Illustration ci-dessous :


D	A	B
2pcs	1pcs	1pcs

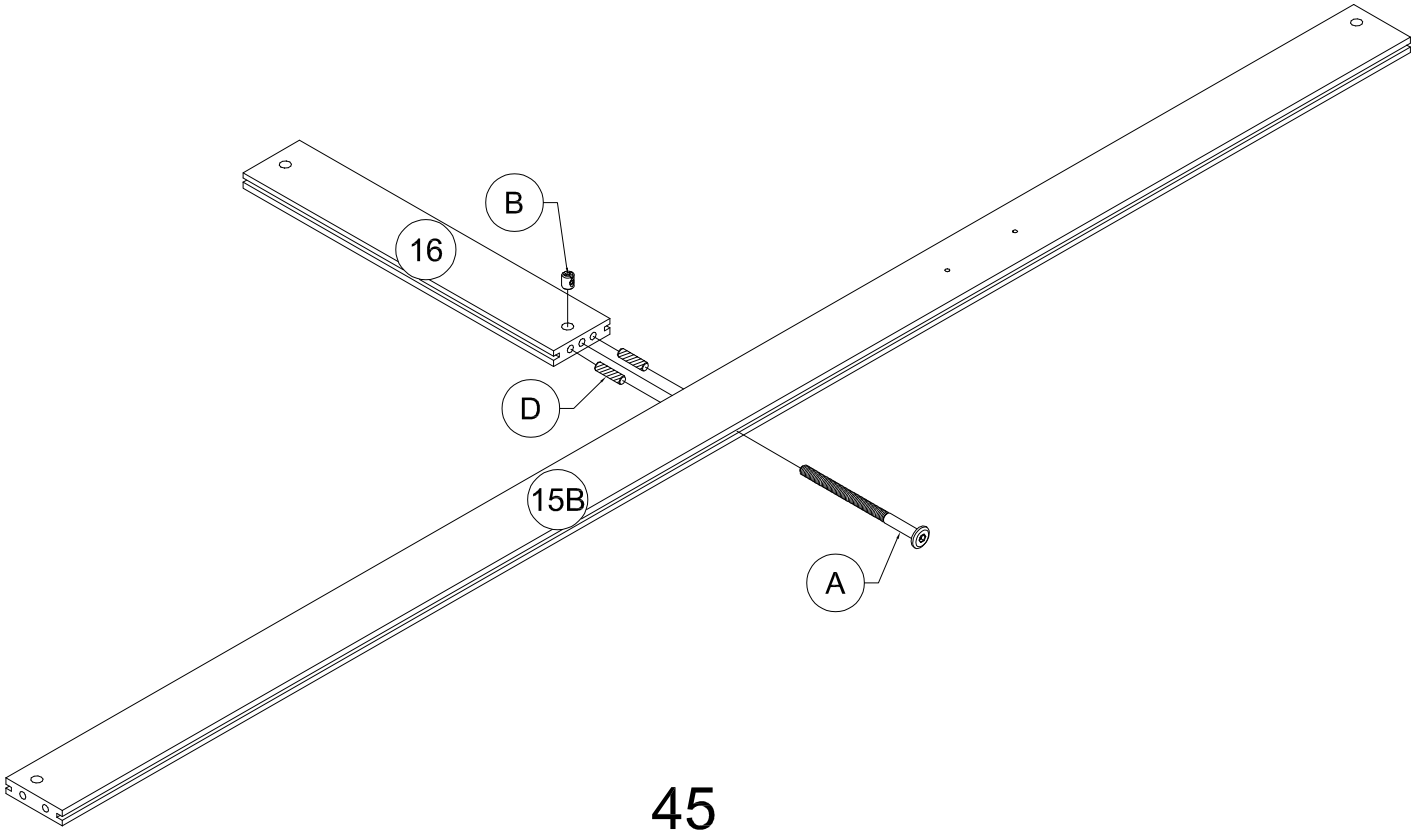

STEP 16.1: Following below illustration:
ÉTAPE 16.1: Illustration ci-dessous :


D

4pcs

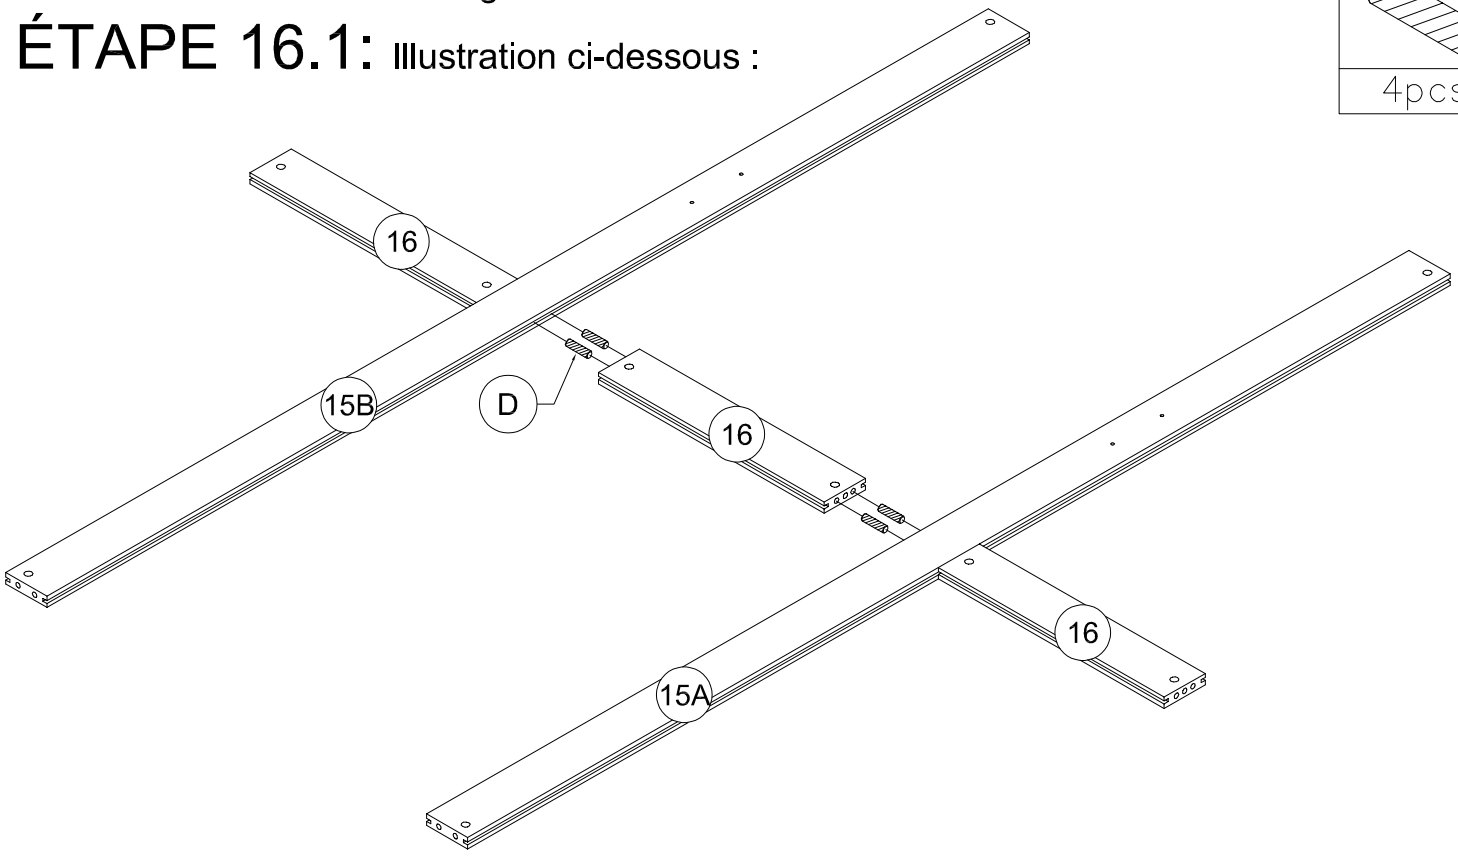



STEP 16.2: Following below illustration:
ÉTAPE 16.2: Illustration ci-dessous :

D	A	B
4pcs	4pcs	4pcs

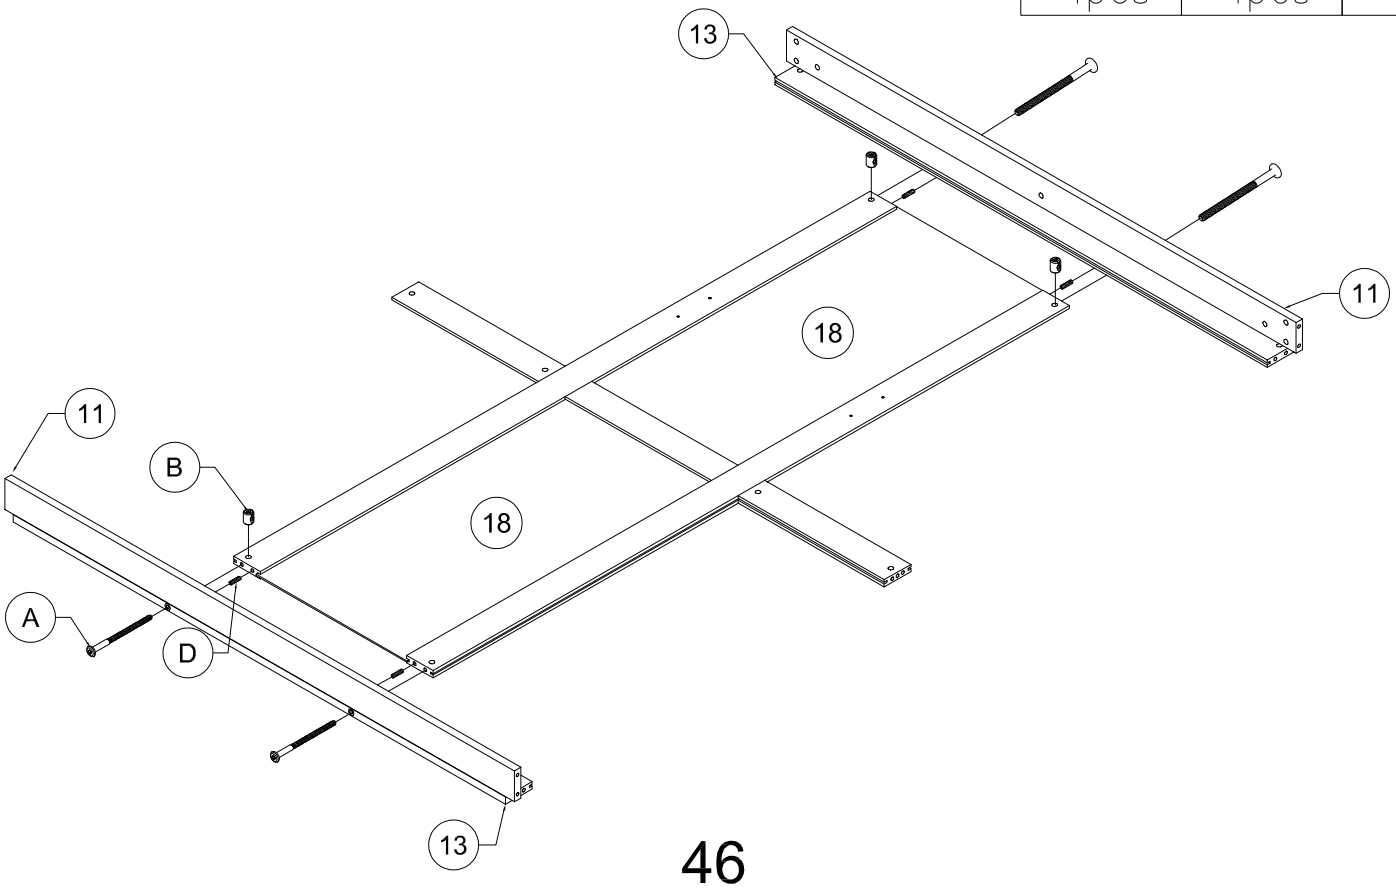


STEP 17: Following below illustration:
ÉTAPE 17: Illustration ci-dessous :


D	A	B
		
8pcs	6pcs	6pcs

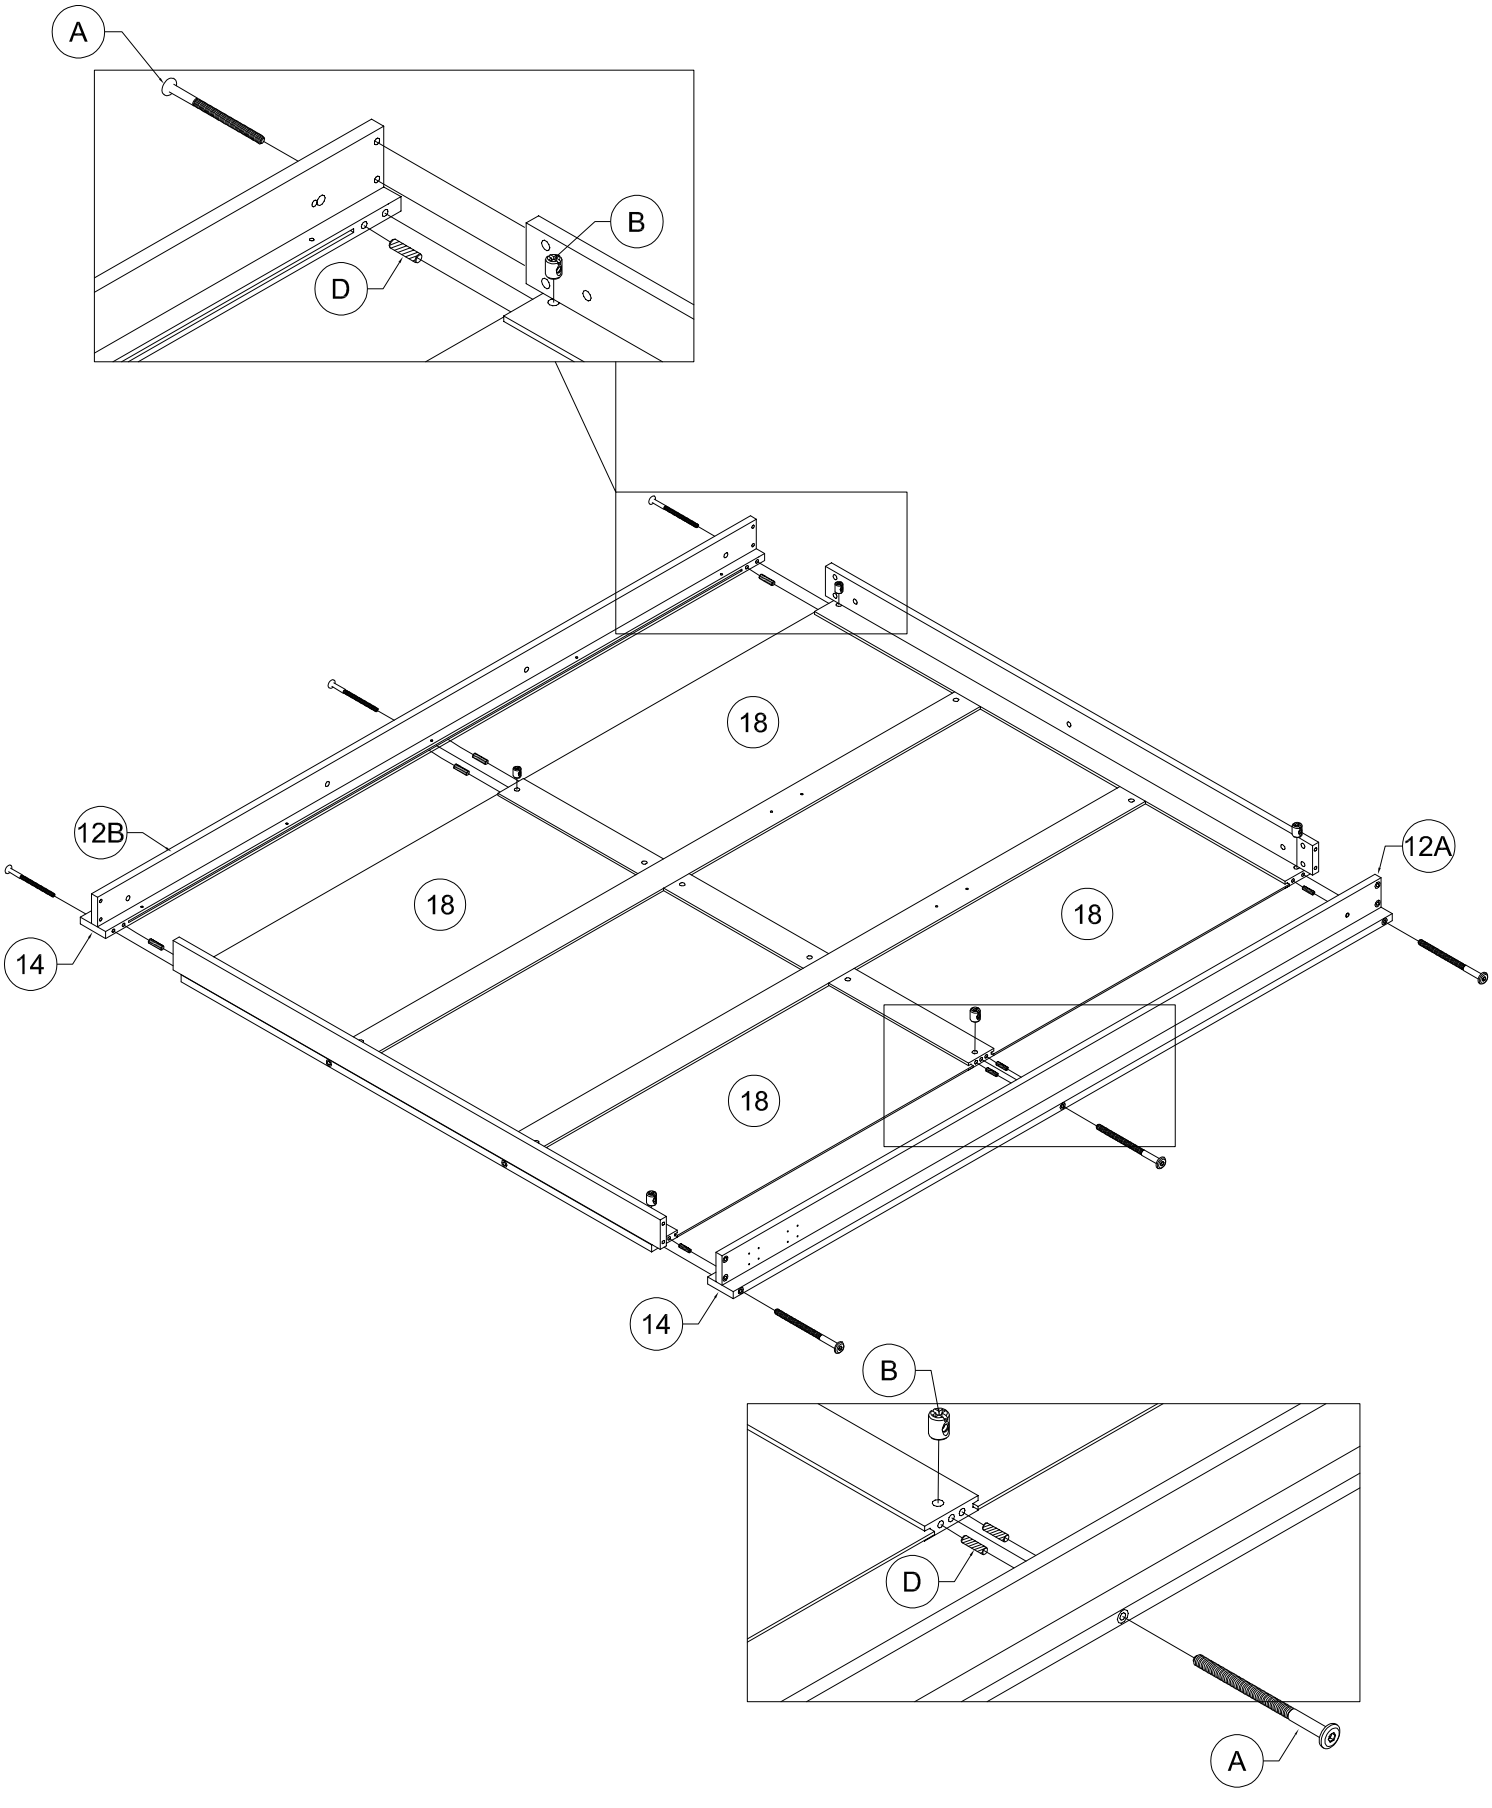

STEP 18: Following below illustration:


ÉTAPE 18: Illustration ci-dessous :

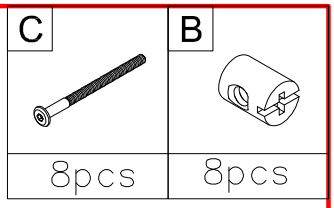

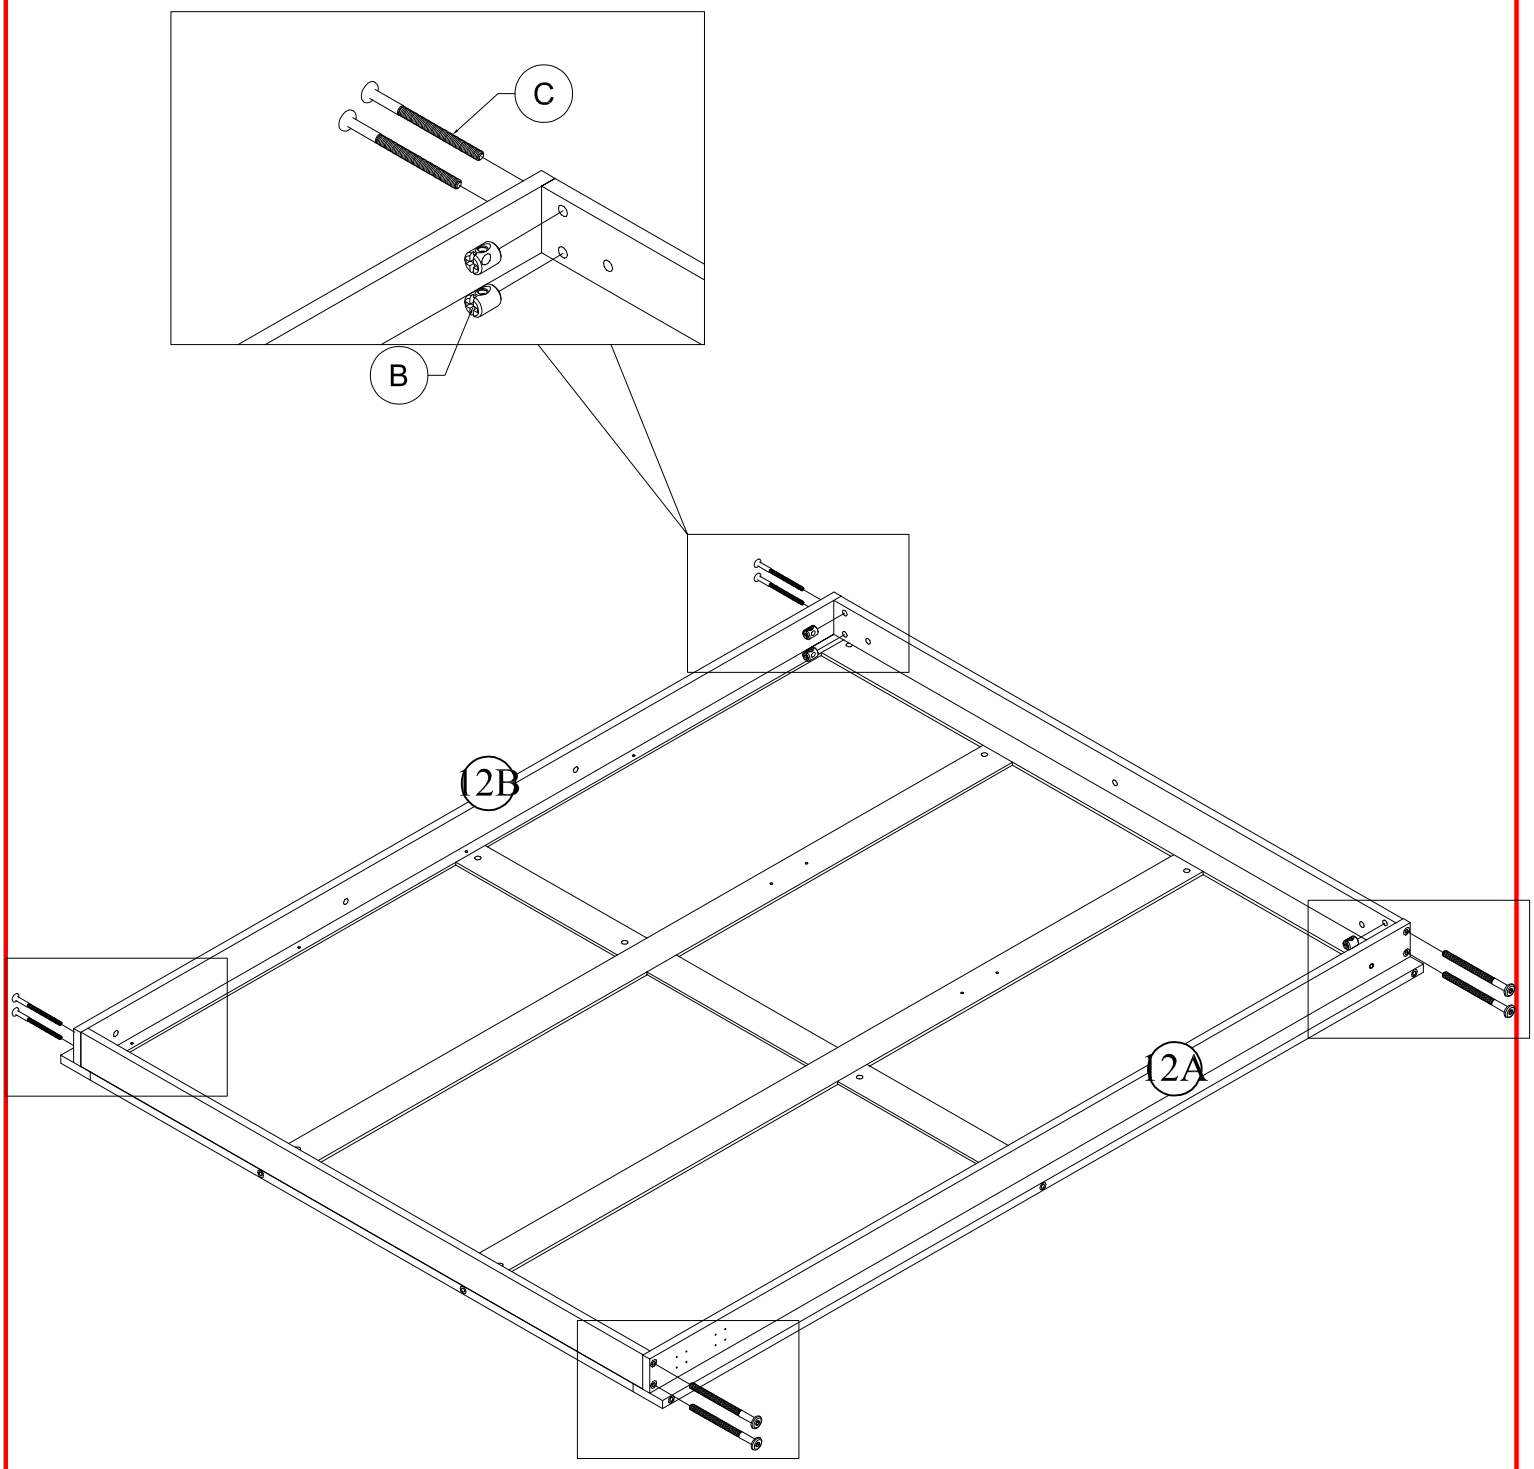


STEP 19: Following below illustration:
ÉTAPE 19: Illustration ci-dessous :


K	H	L-A	L-B
24pcs	16pcs	2pcs	2pcs

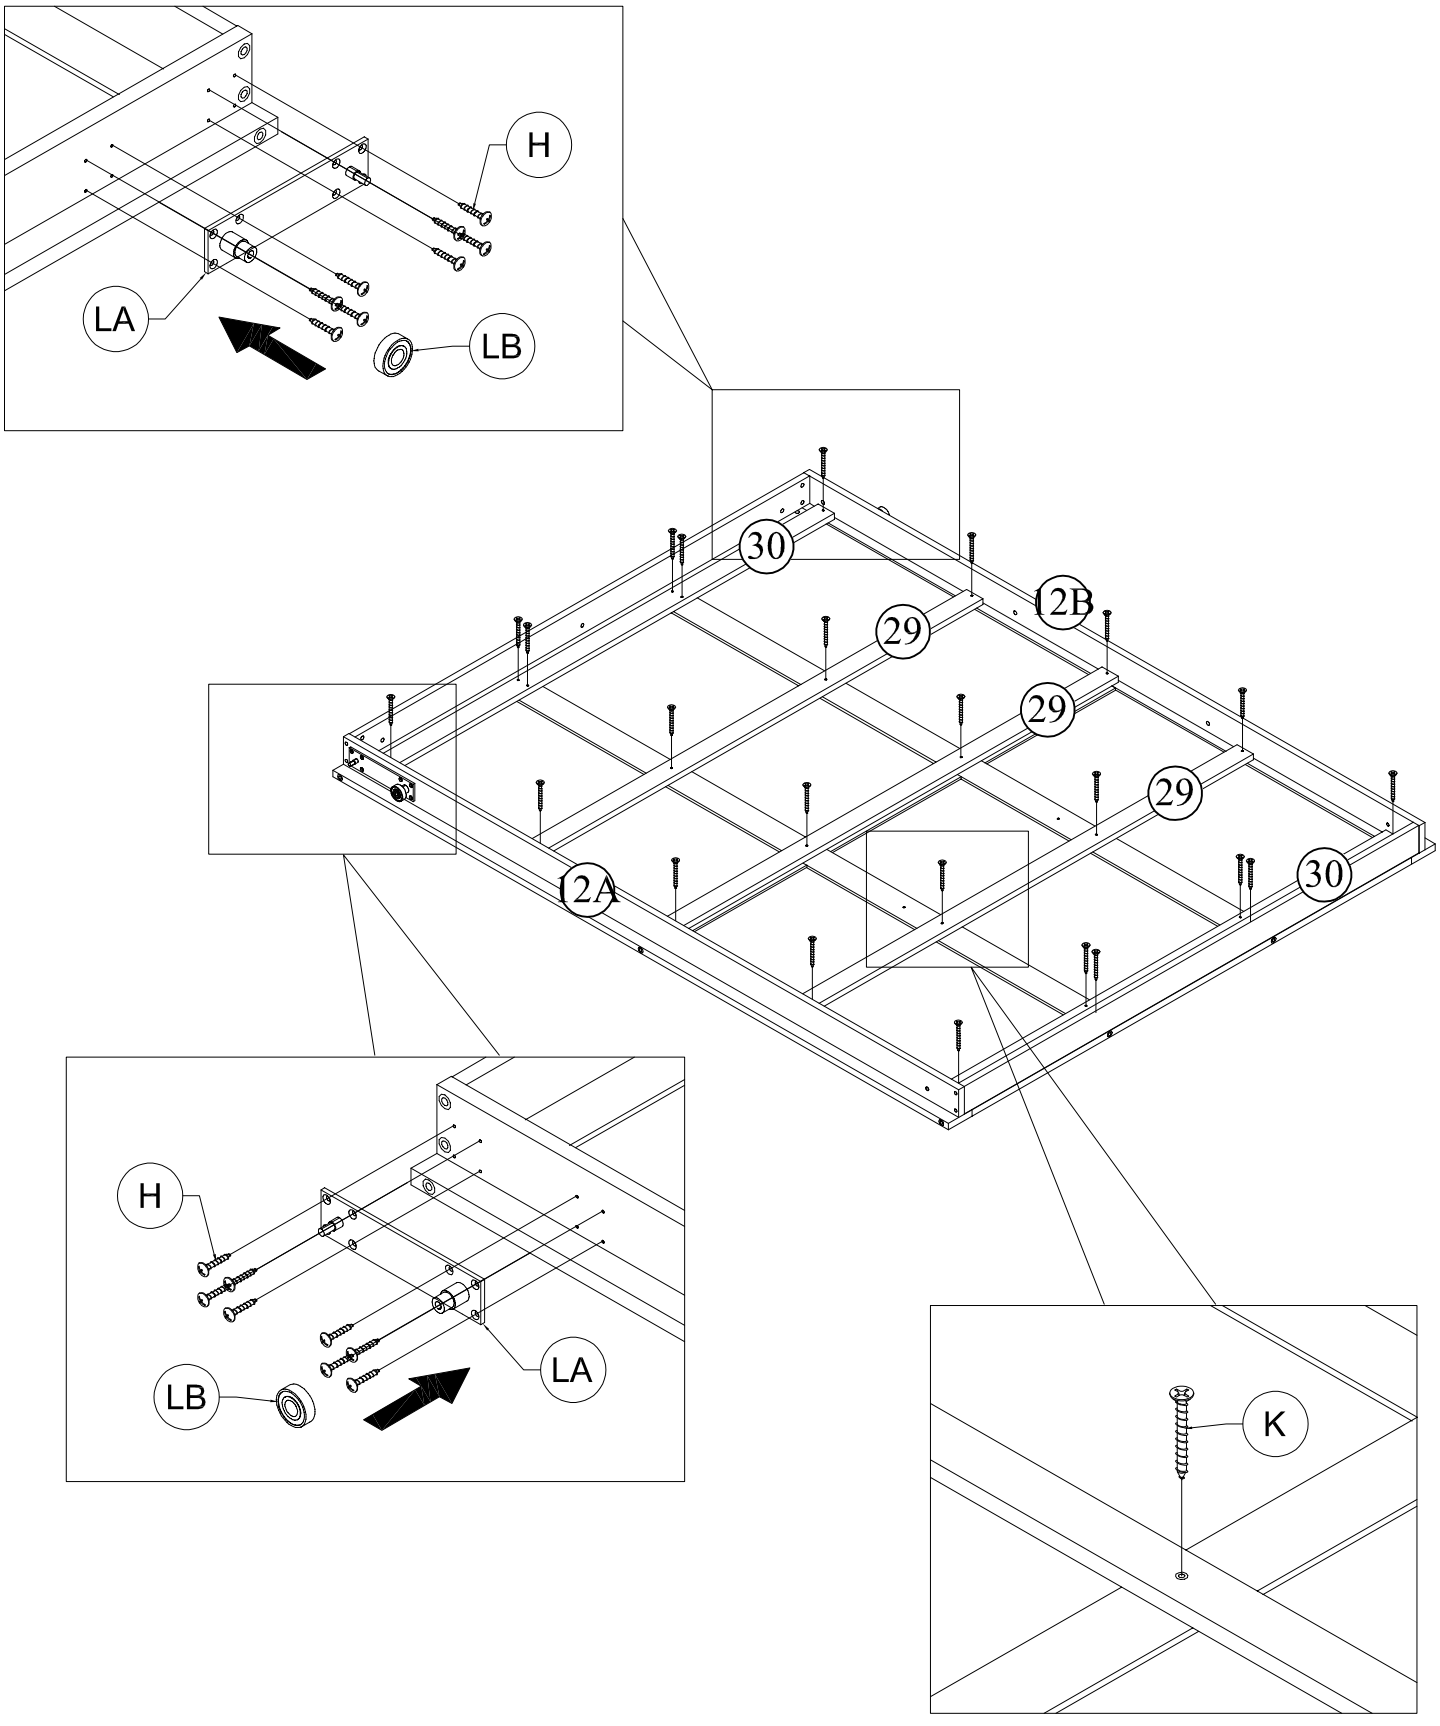


STEP 20: Following below illustration:

ÉTAPE 20: Illustration ci-dessous :

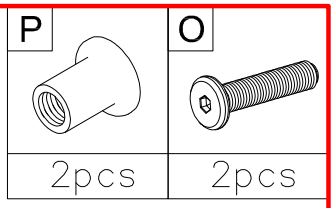

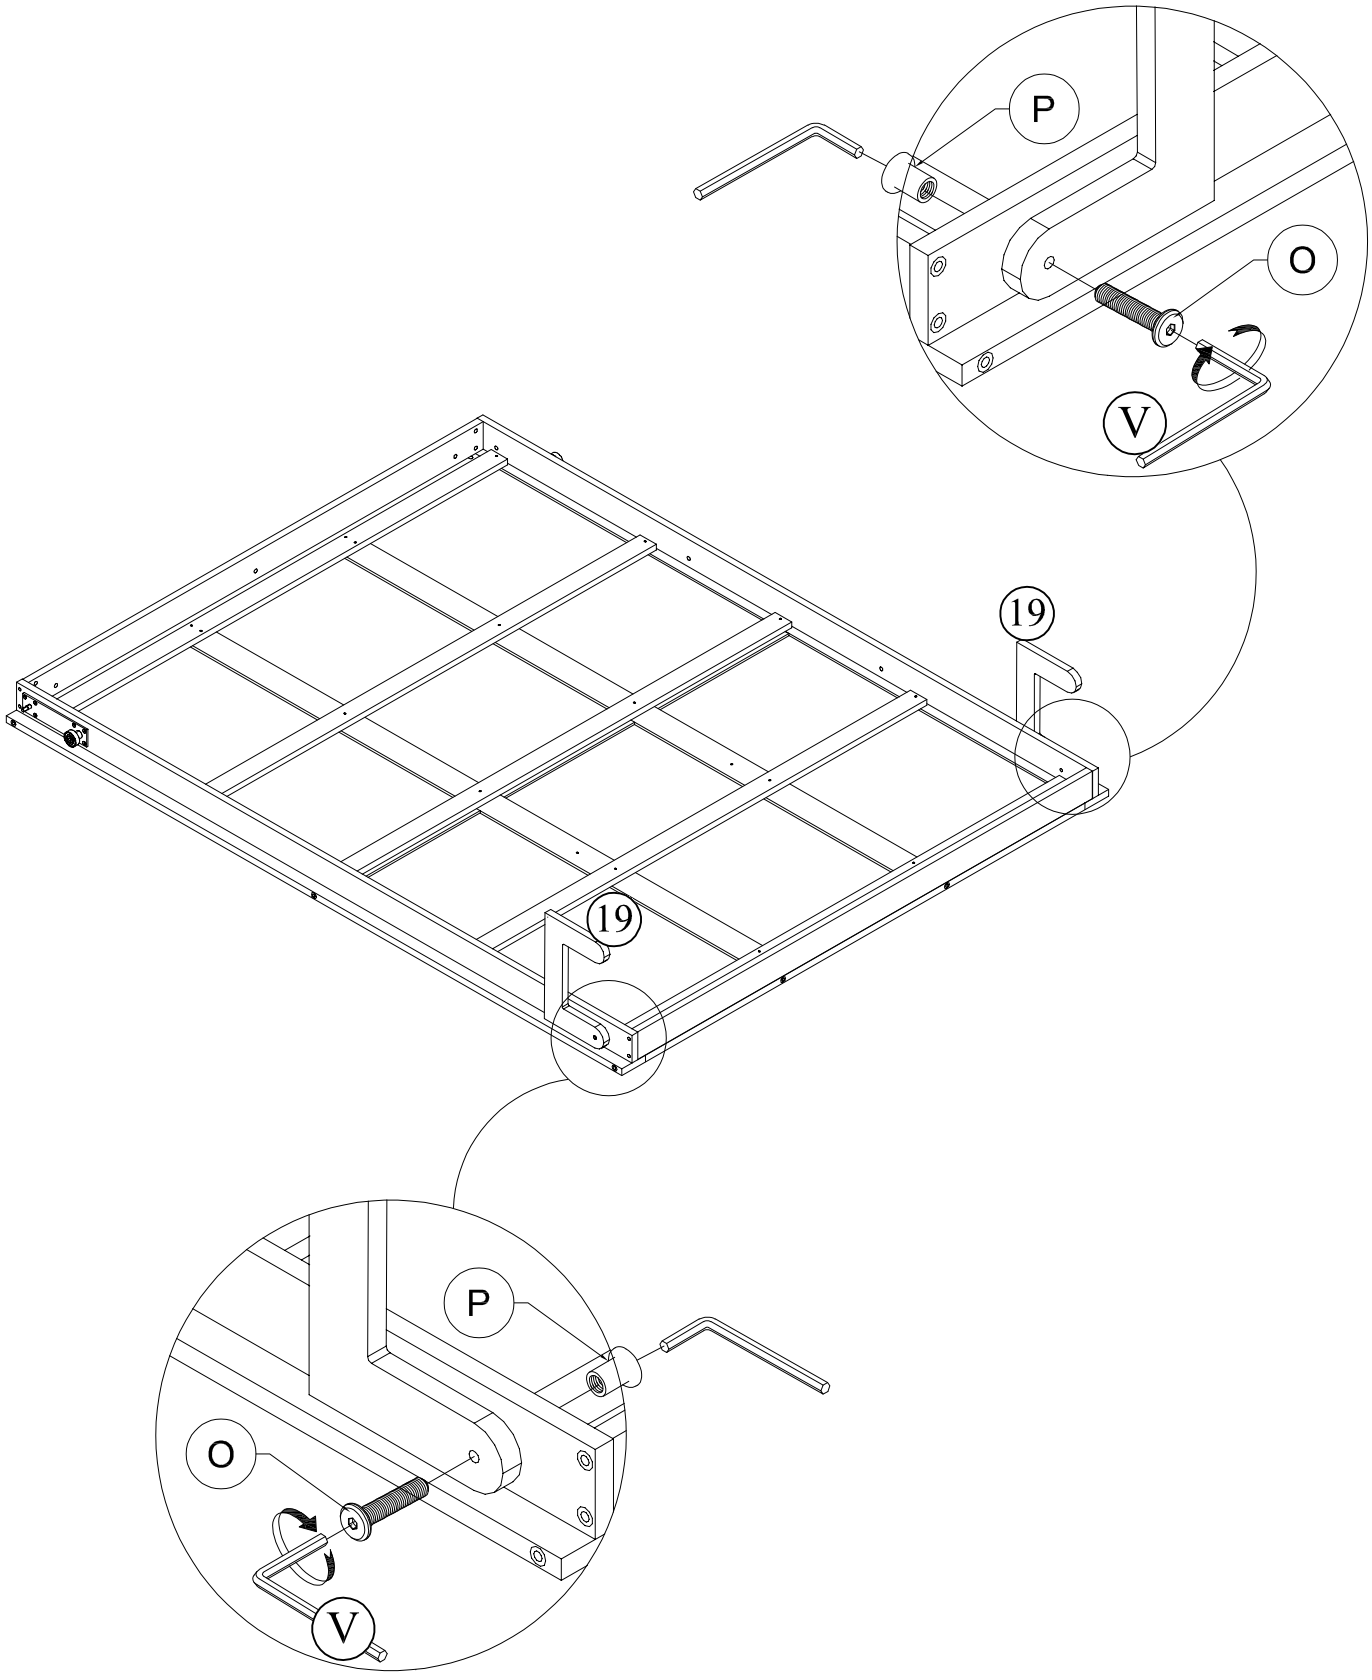


STEP 21: Following below illustration:
ÉTAPE 21: Illustration ci-dessous :

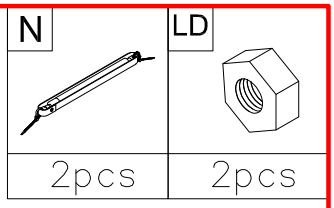

Before assembling, we need to remove the plastic ties first.

Avant le montage, il faut d'abord retirer les attaches en plastique.

Please do not remove the steel ring.
Bitte entfernen Sie den Stahlring nicht.

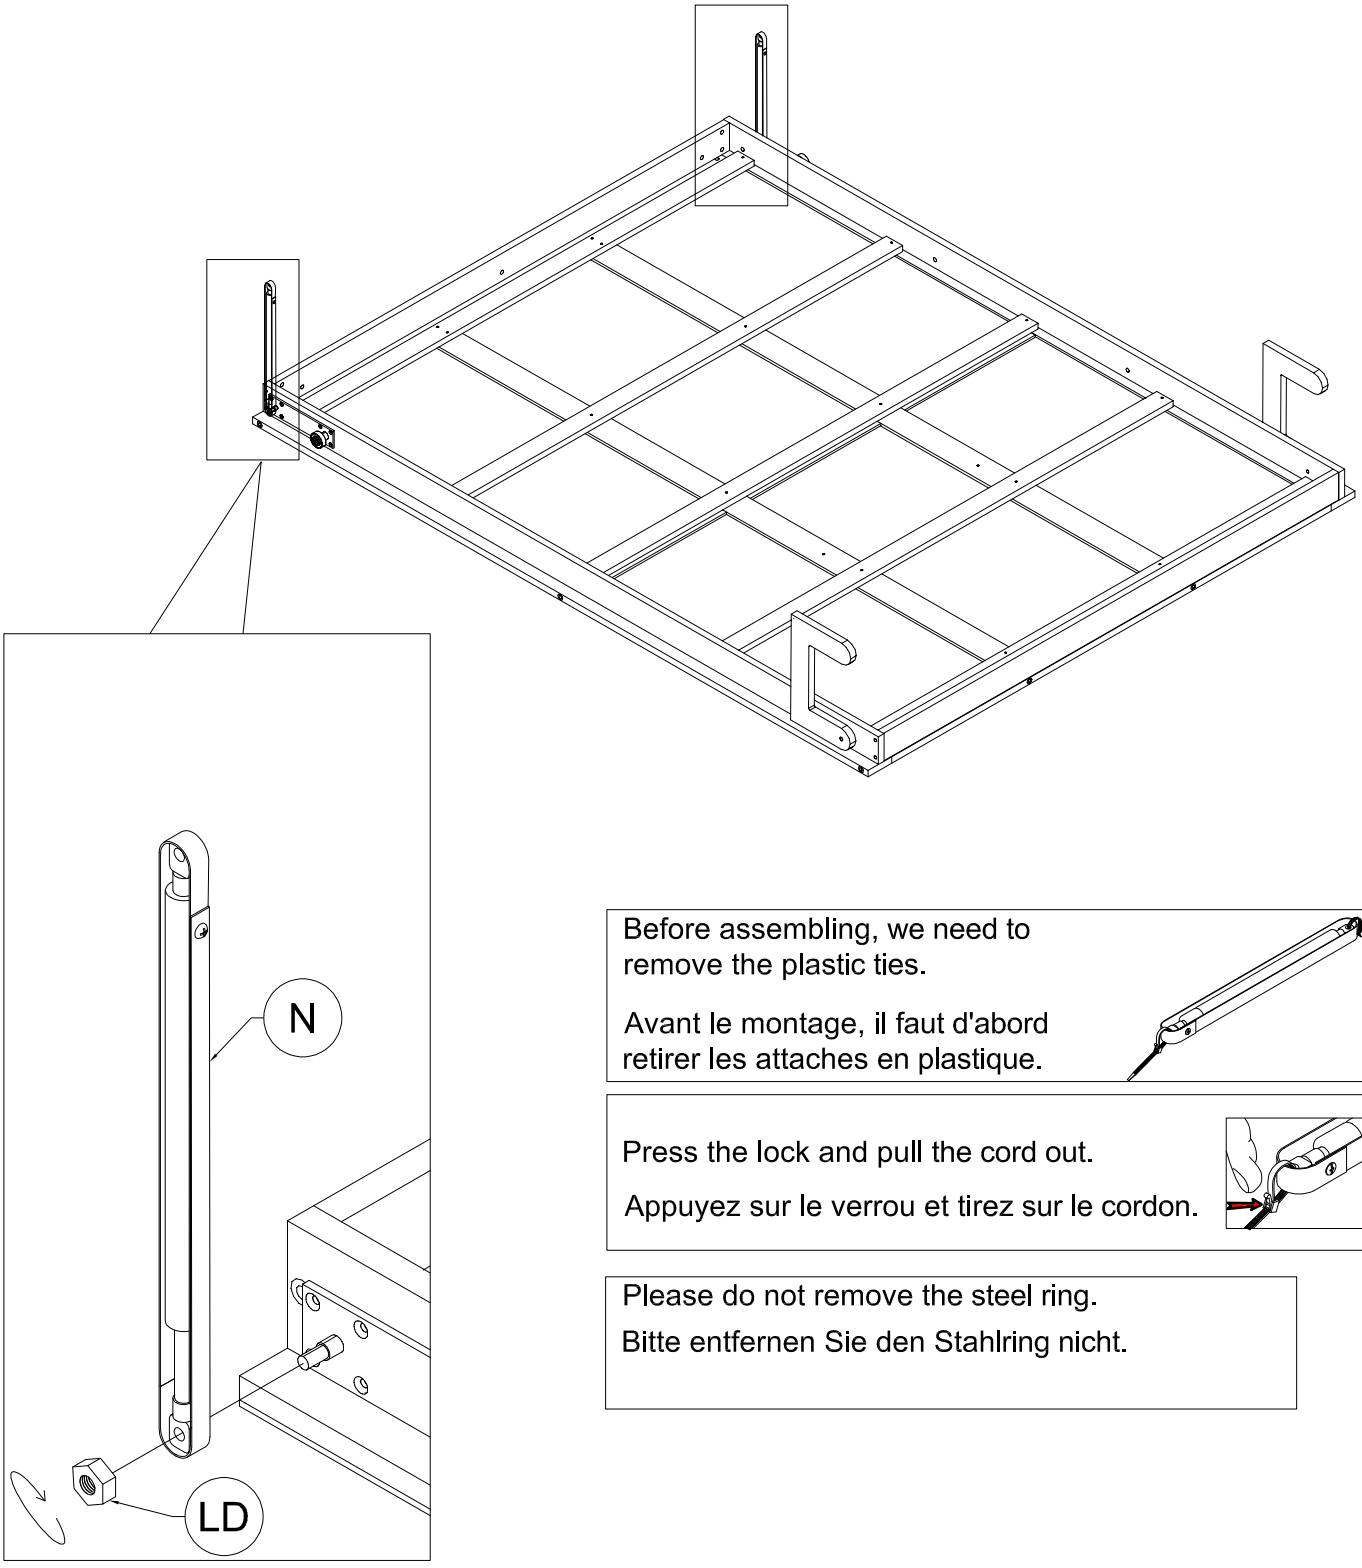

Before assembling, we need to remove the plastic ties.

Avant le montage, il faut d'abord retirer les attaches en plastique.


Press the lock and pull the cord out.

Appuyez sur le verrou et tirez sur le cordon.

Please do not remove the steel ring.
Bitte entfernen Sie den Stahlring nicht.


STEP 22: Following below illustration:
ÉTAPE 22: Illustration ci-dessous :

LC




2pcs

Please do not remove the steel ring.
Bitte entfernen Sie den Stahlring nicht.

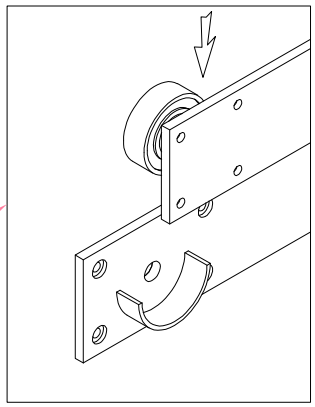

Step 1 **Step 2** **Step 3** **Step 4**

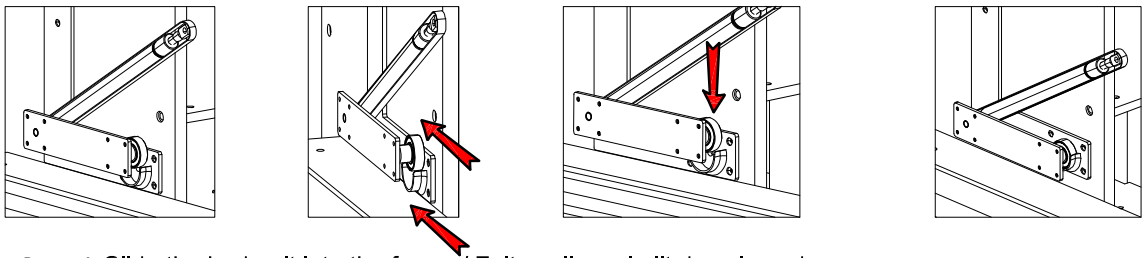

Step 1 Slide the bed unit into the frame / Faites glisser le lit dans le cadre

Step 2 The roller housing of must be positioned between the roller of and the front vertical bar of the bed assembly / Le logement du rouleau de doit être placé entre le rouleau de et le montant vertical avant du lit

Step 3 Slide in slowly from both sides, align until the roller of is directly above the housing , then lower the bed assembly gently, keeping both sides aligned / Faites glisser lentement des deux côtés, alignez jusqu'à ce que le rouleau de soit directement au-dessus du logement, puis abaissez doucement l'ensemble du lit en gardant les deux côtés alignés

Important note / Remarque importante :Do not insert the bed unit into the frame as shown in illustrations No1 and No2 / Ne pas insérer le module lit dans la structure comme indiqué sur les illustrations No1 et No2


STEP 23: Following below illustration:

ÉTAPE 23: Illustration ci-dessous :

LD




2pcs

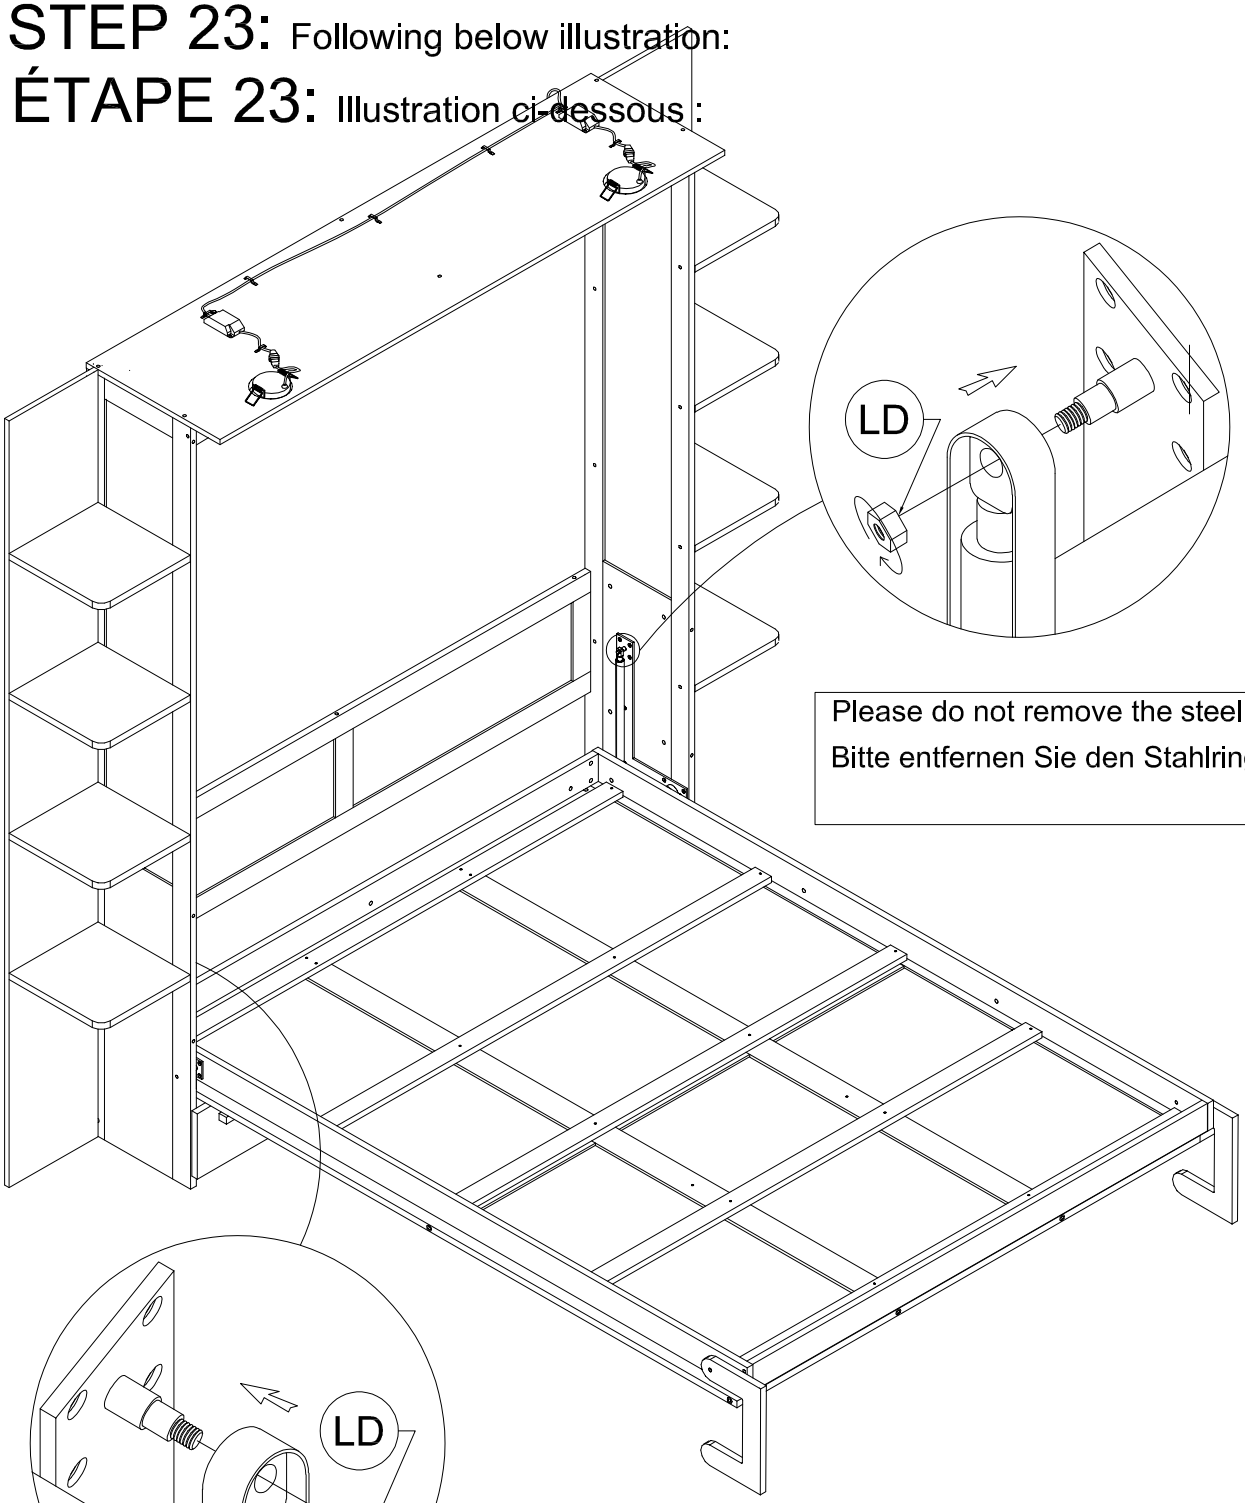

Please do not remove the steel ring.
Bitte entfernen Sie den Stahlring nicht.


Before assembling, we need to remove the plastic ties.

Avant le montage, il faut d'abord retirer les attaches en plastique.

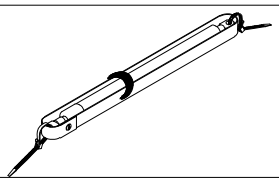


Press the lock and pull the cord out.

Appuyez sur le verrou et tirez sur le cordon.

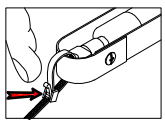


Please do not remove the steel ring.
Bitte entfernen Sie den Stahlring nicht.



STEP 24: Following below illustration:
ÉTAPE 24: Illustration ci-dessous :

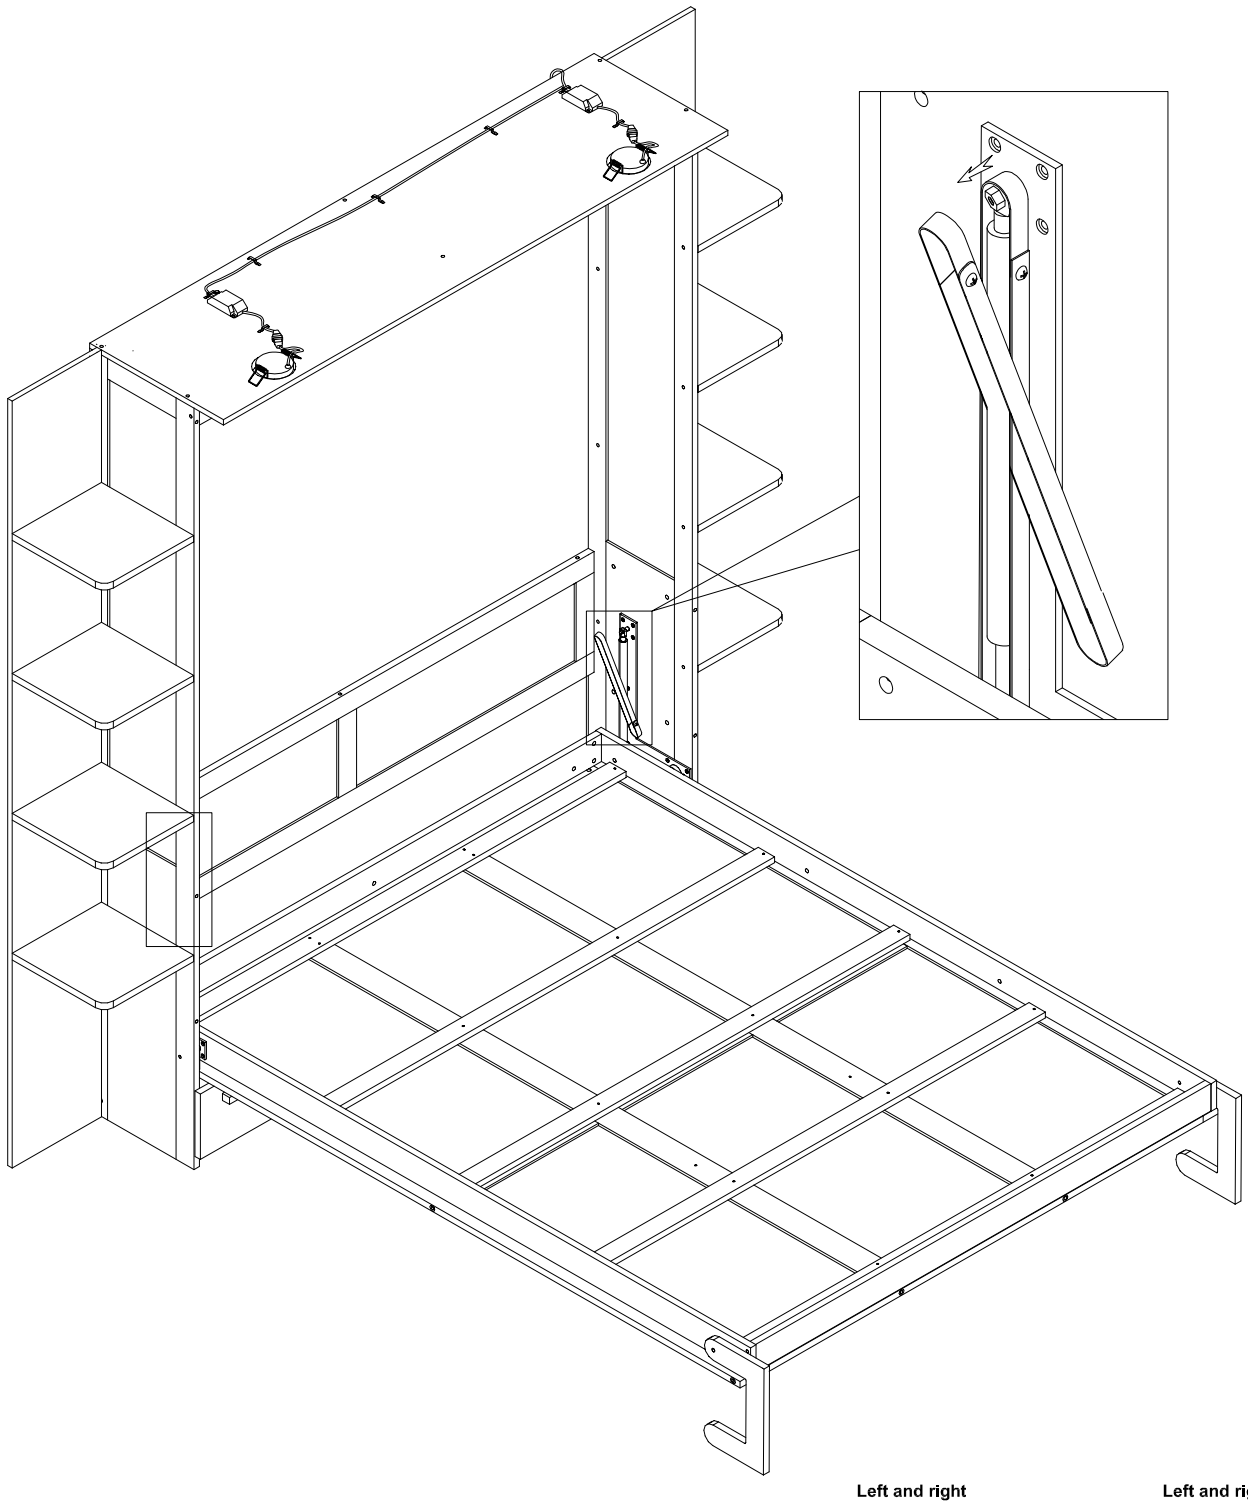


Move the bed frame in the direction of the arrow, pull the straps to the side, then use a screwdriver to open and remove the straps.
Déplacez le cadre de lit dans le sens de la flèche, tirez les sangles sur le côté, puis utilisez un tournevis pour ouvrir et retirer les sangles.
Because the cord is made of metal, please handle it carefully. When removing it, please do so very slowly to avoid injury and scratching the product.

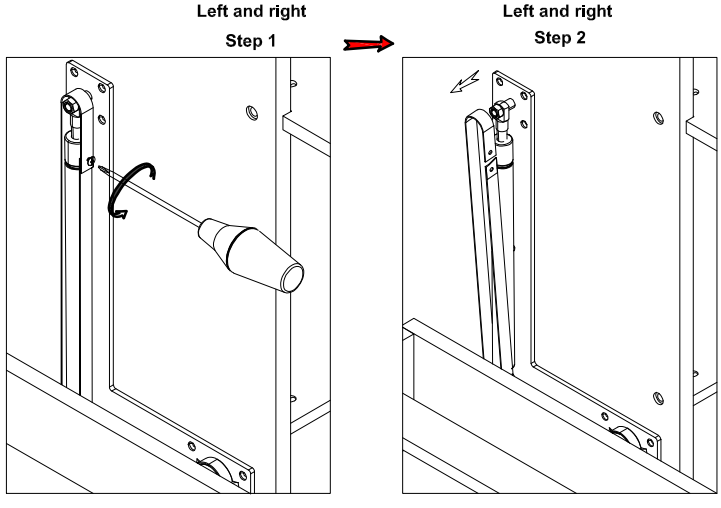



STEP 25: Following below illustration:
ÉTAPE 25: Illustration ci-dessous :

M	R
	
2pcs	4pcs

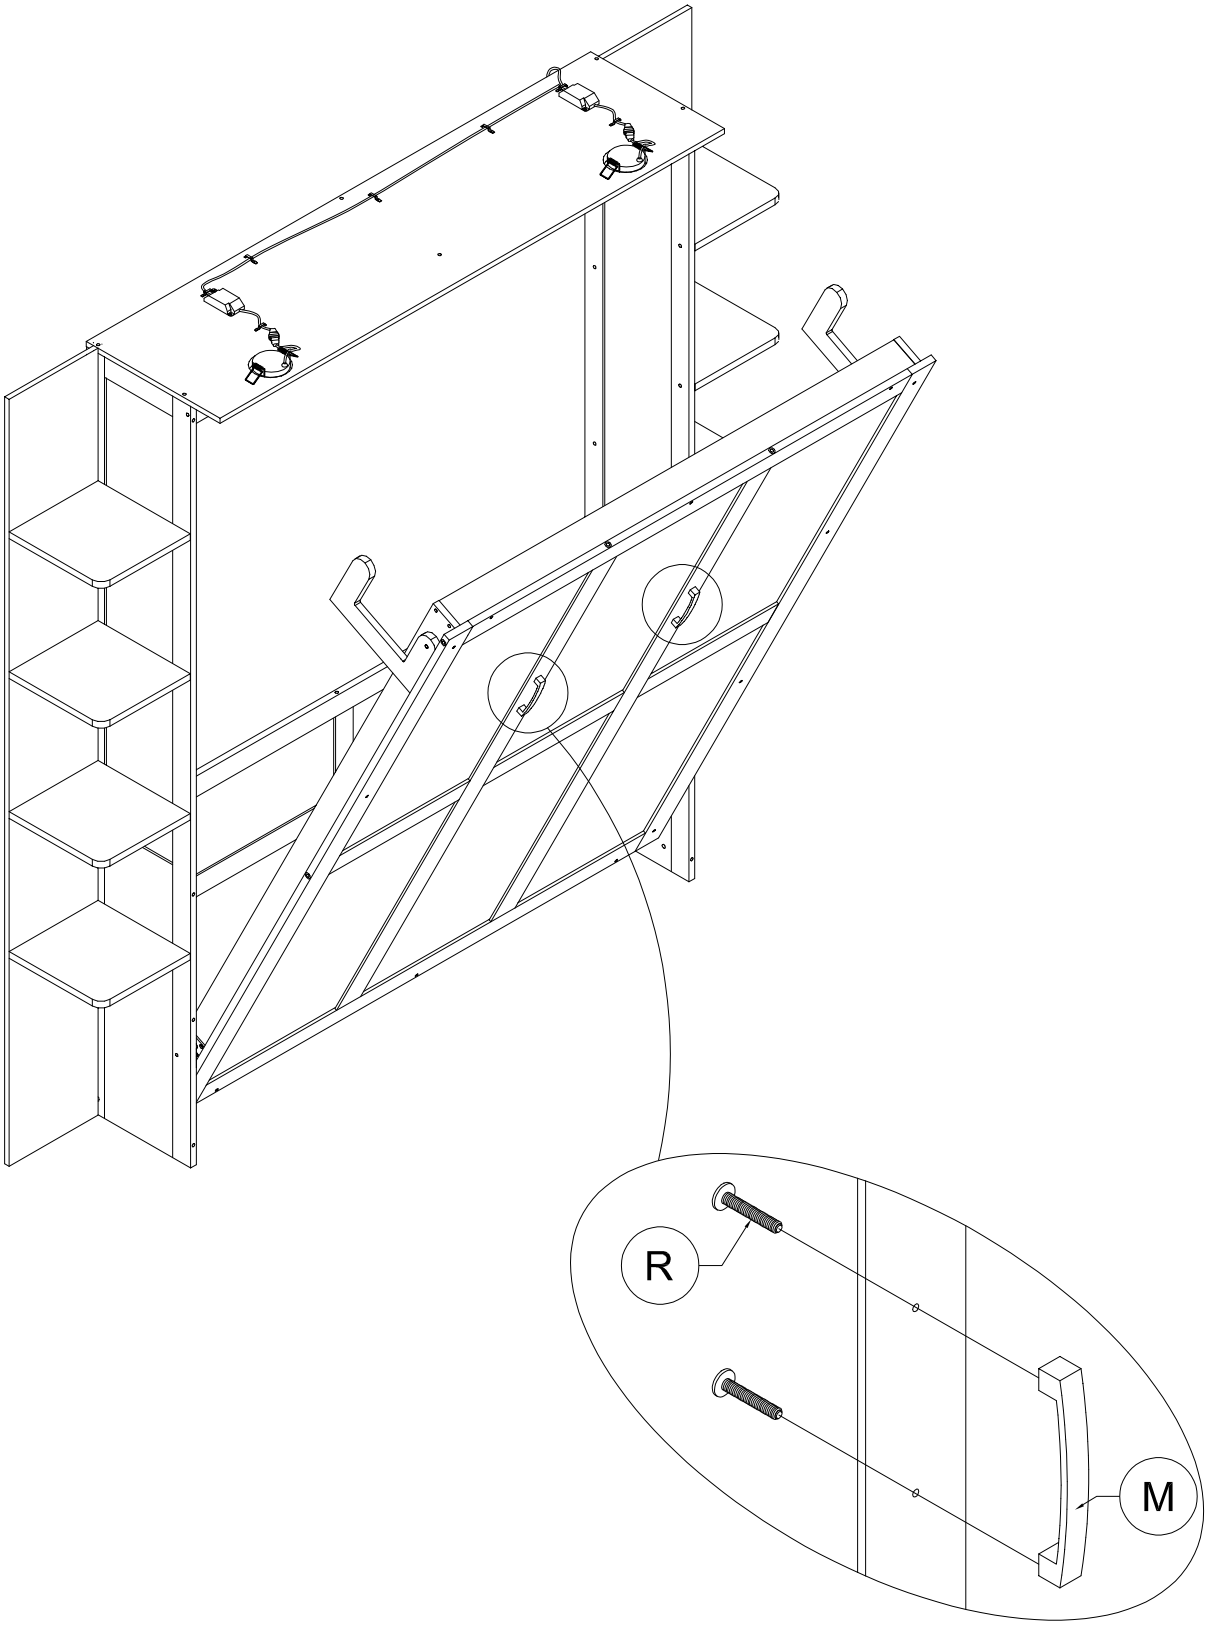


STEP 26: Following below illustration:
ÉTAPE 26: Illustration ci-dessous :

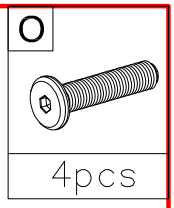

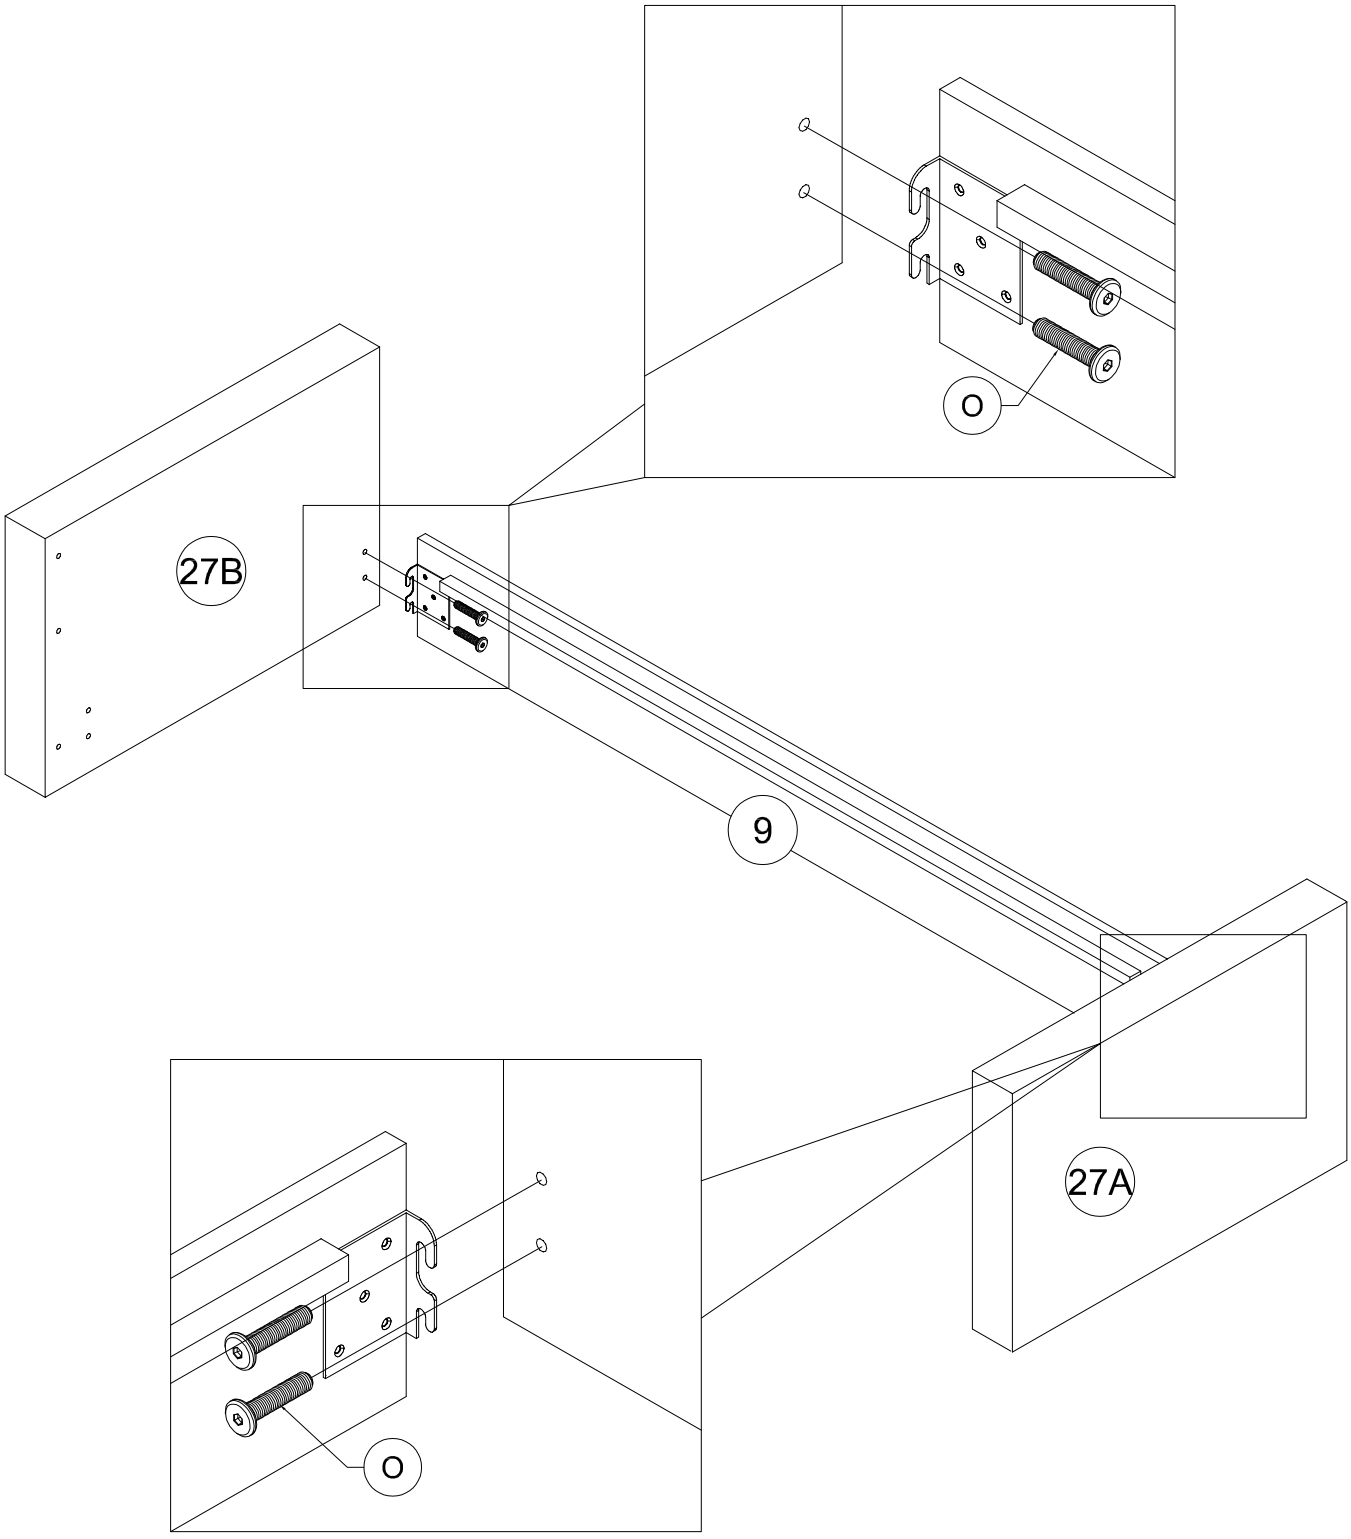

STEP 27: Following below illustration:
ÉTAPE 27: Illustration ci-dessous :

U	Y
4pcs	1pc

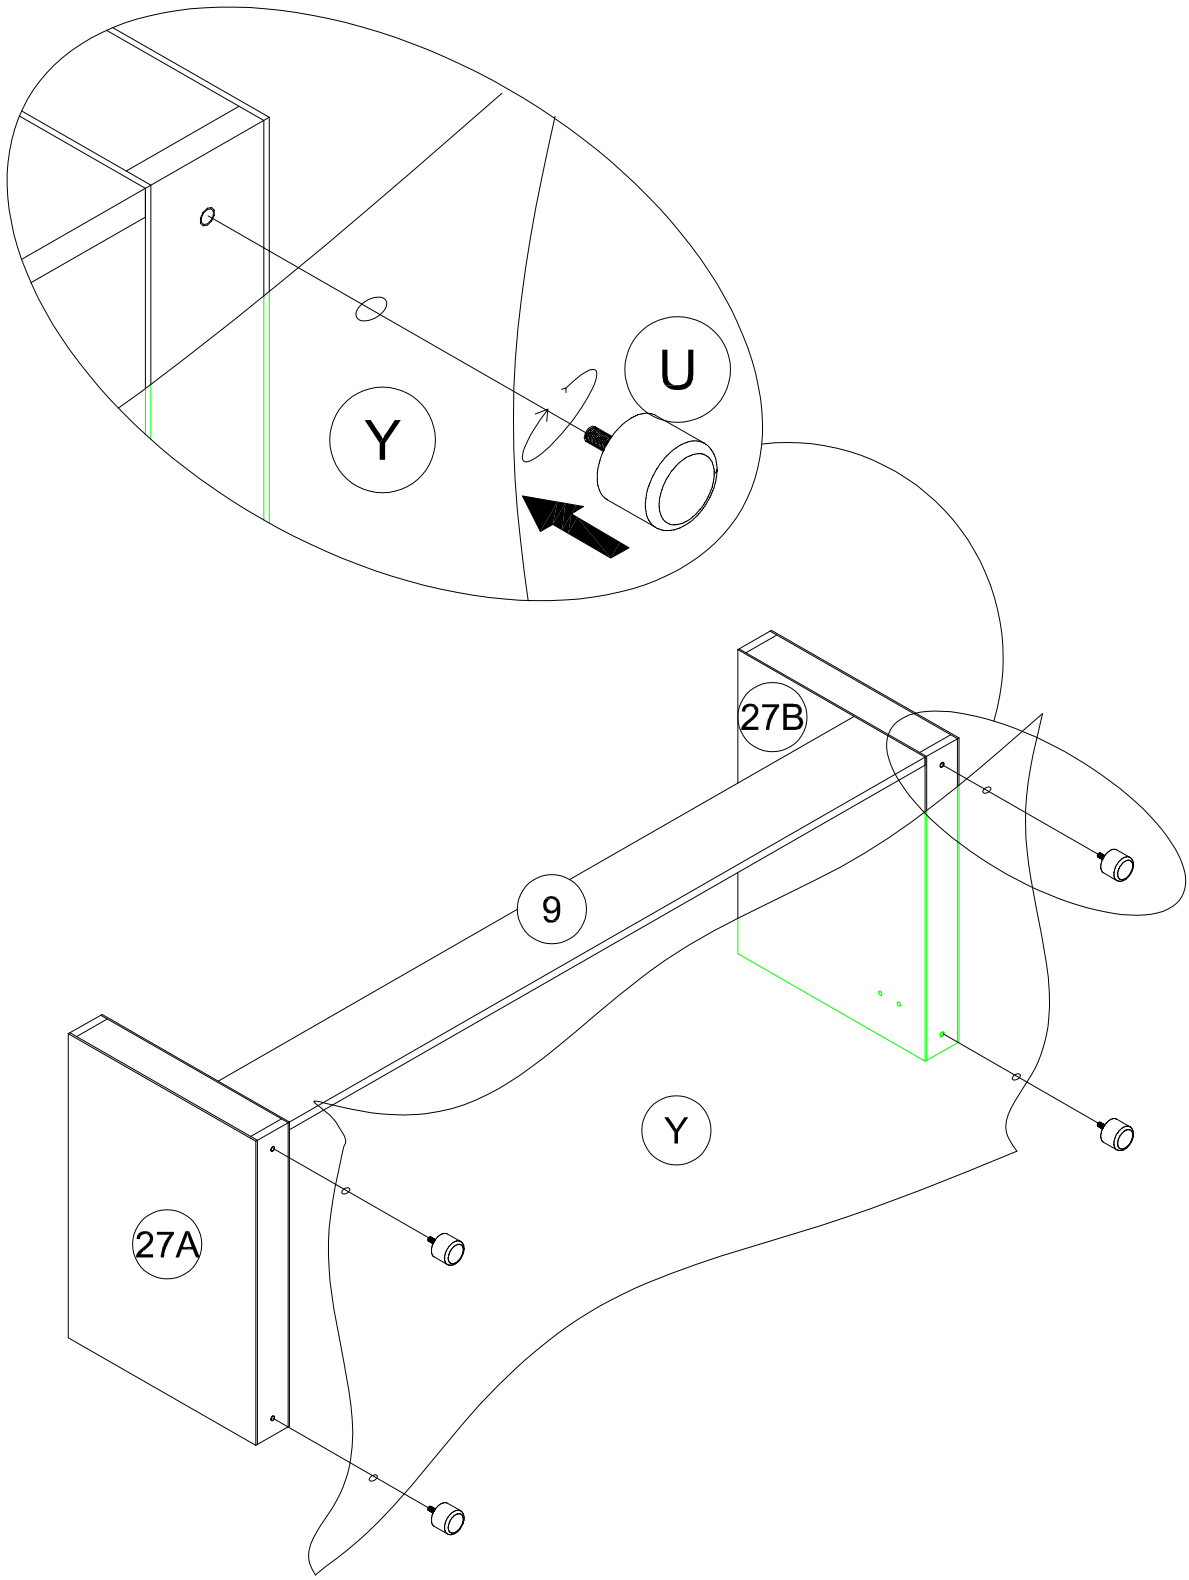


STEP 28: Following below illustration:
ÉTAPE 28: Illustration ci-dessous :

C





4pcs

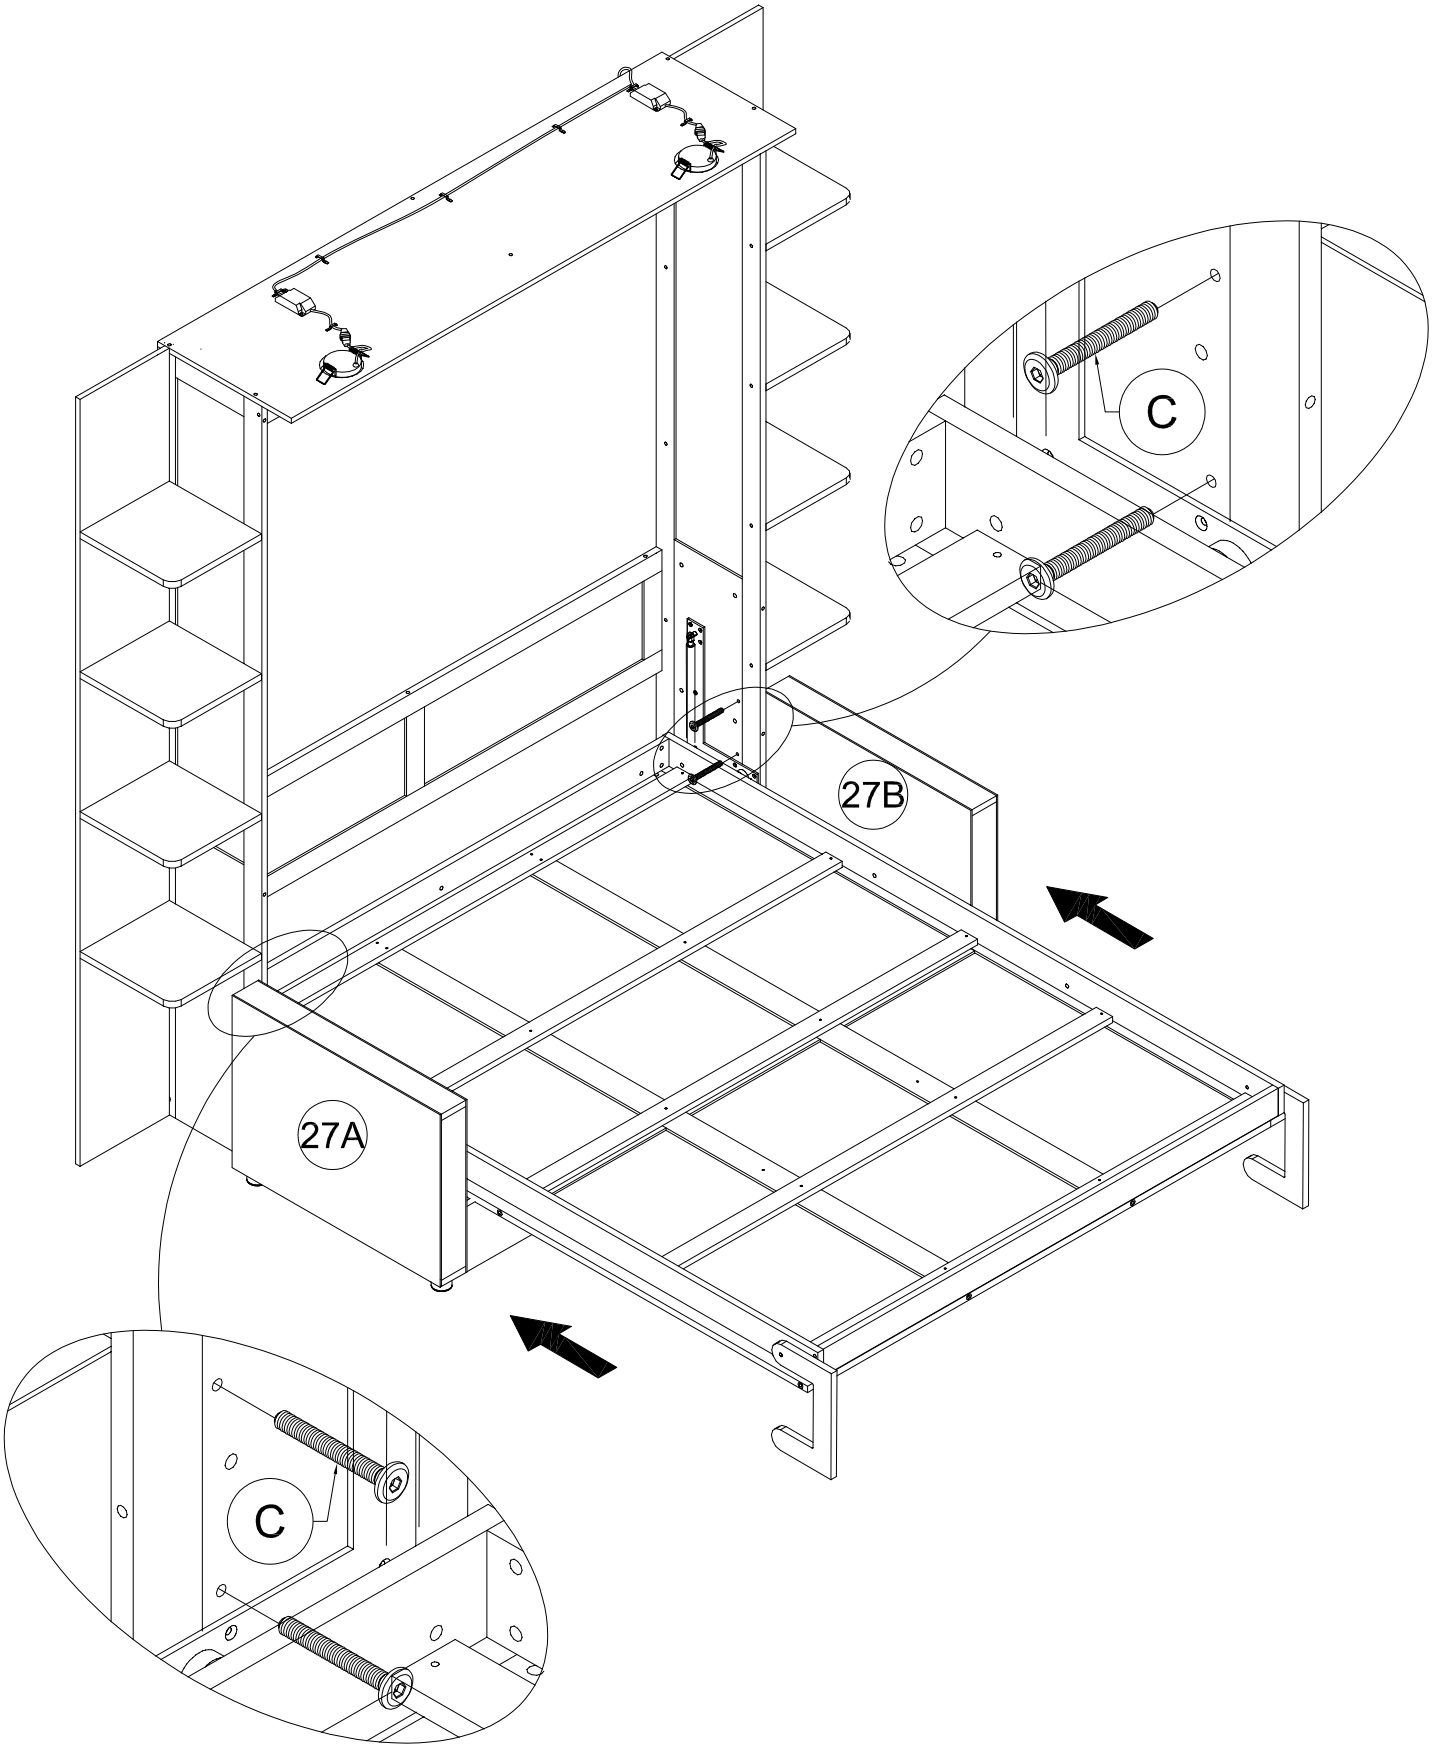


STEP 29: Following below illustration:
ÉTAPE 29: Illustration ci-dessous :


G	Q-A	Q-B
6pcs	1pc	1pc

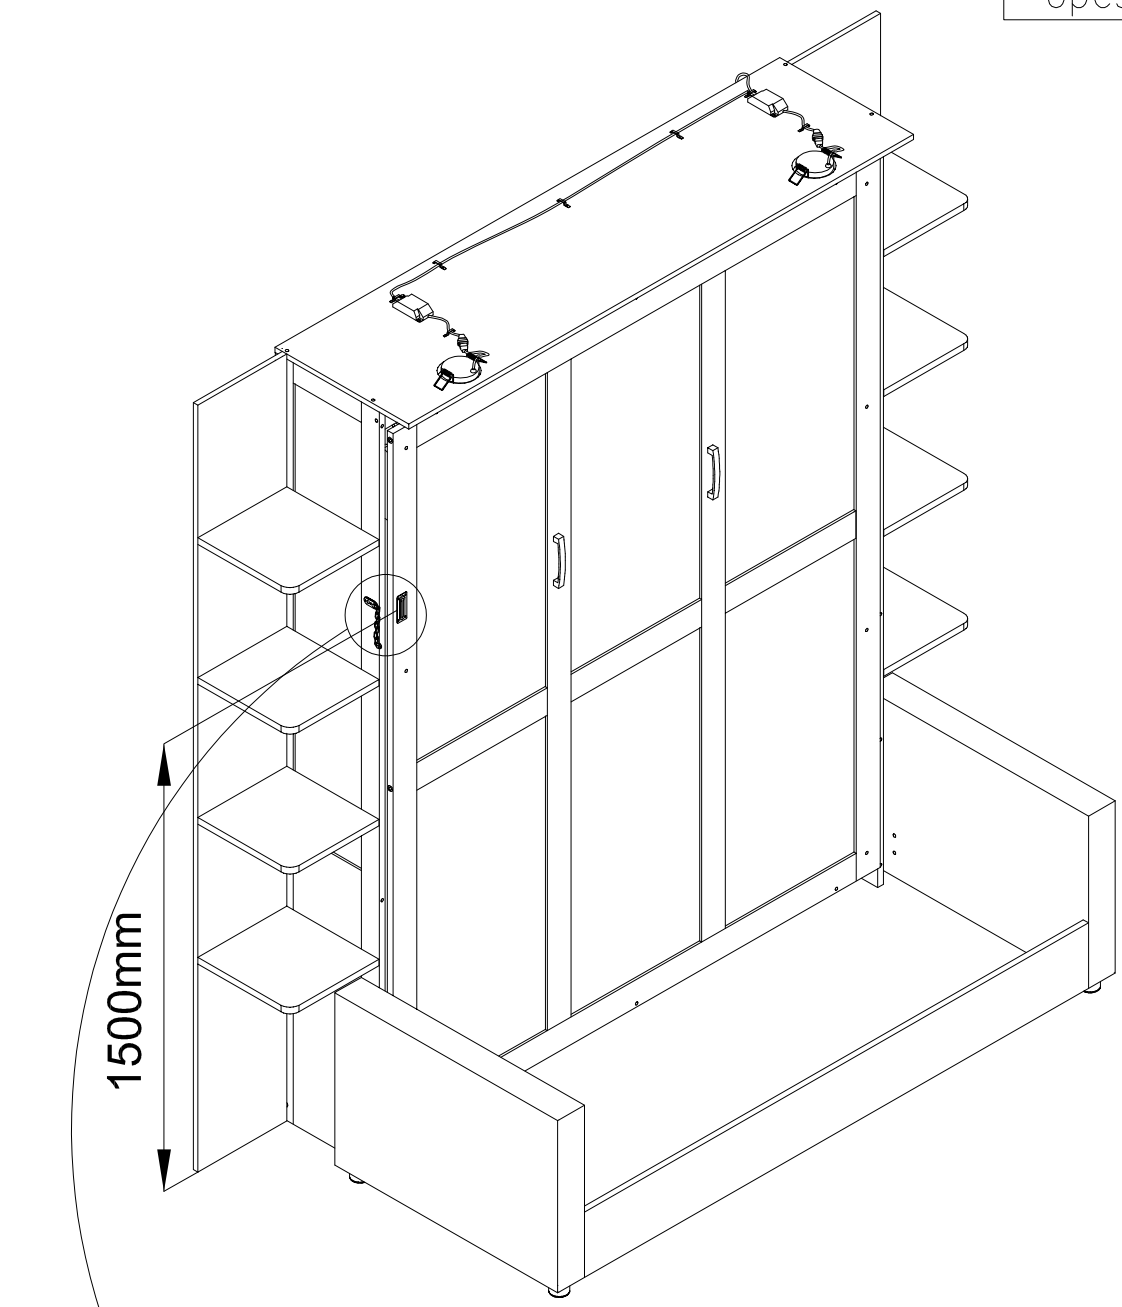

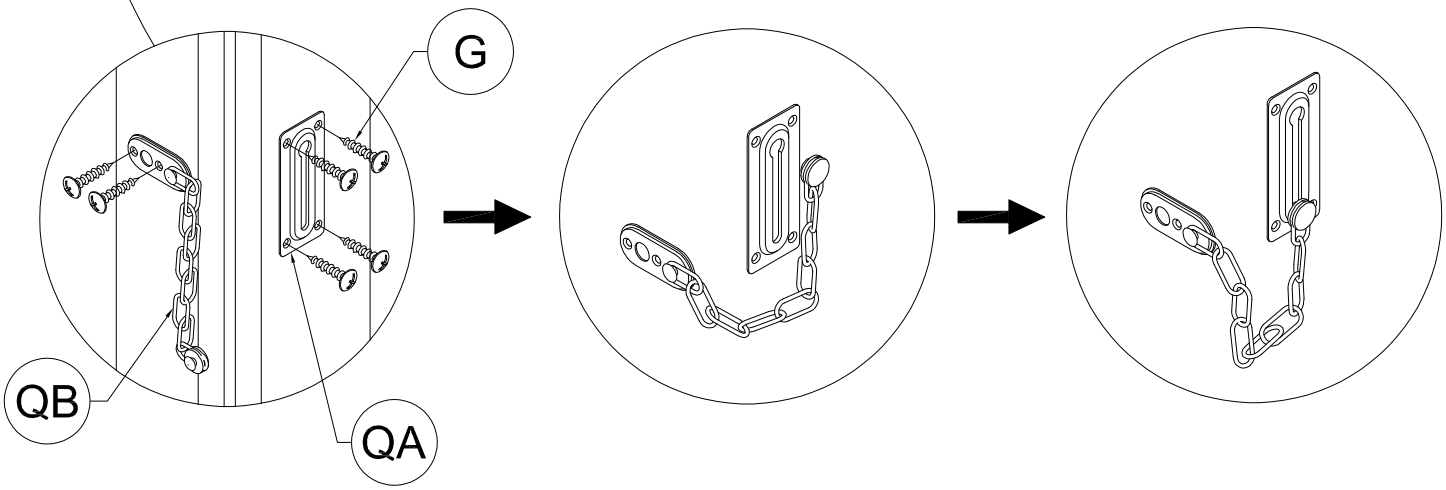


STEP 30: Following below illustration:
ÉTAPE 30: Illustration ci-dessous :

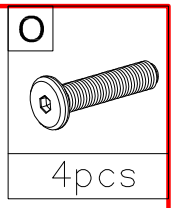


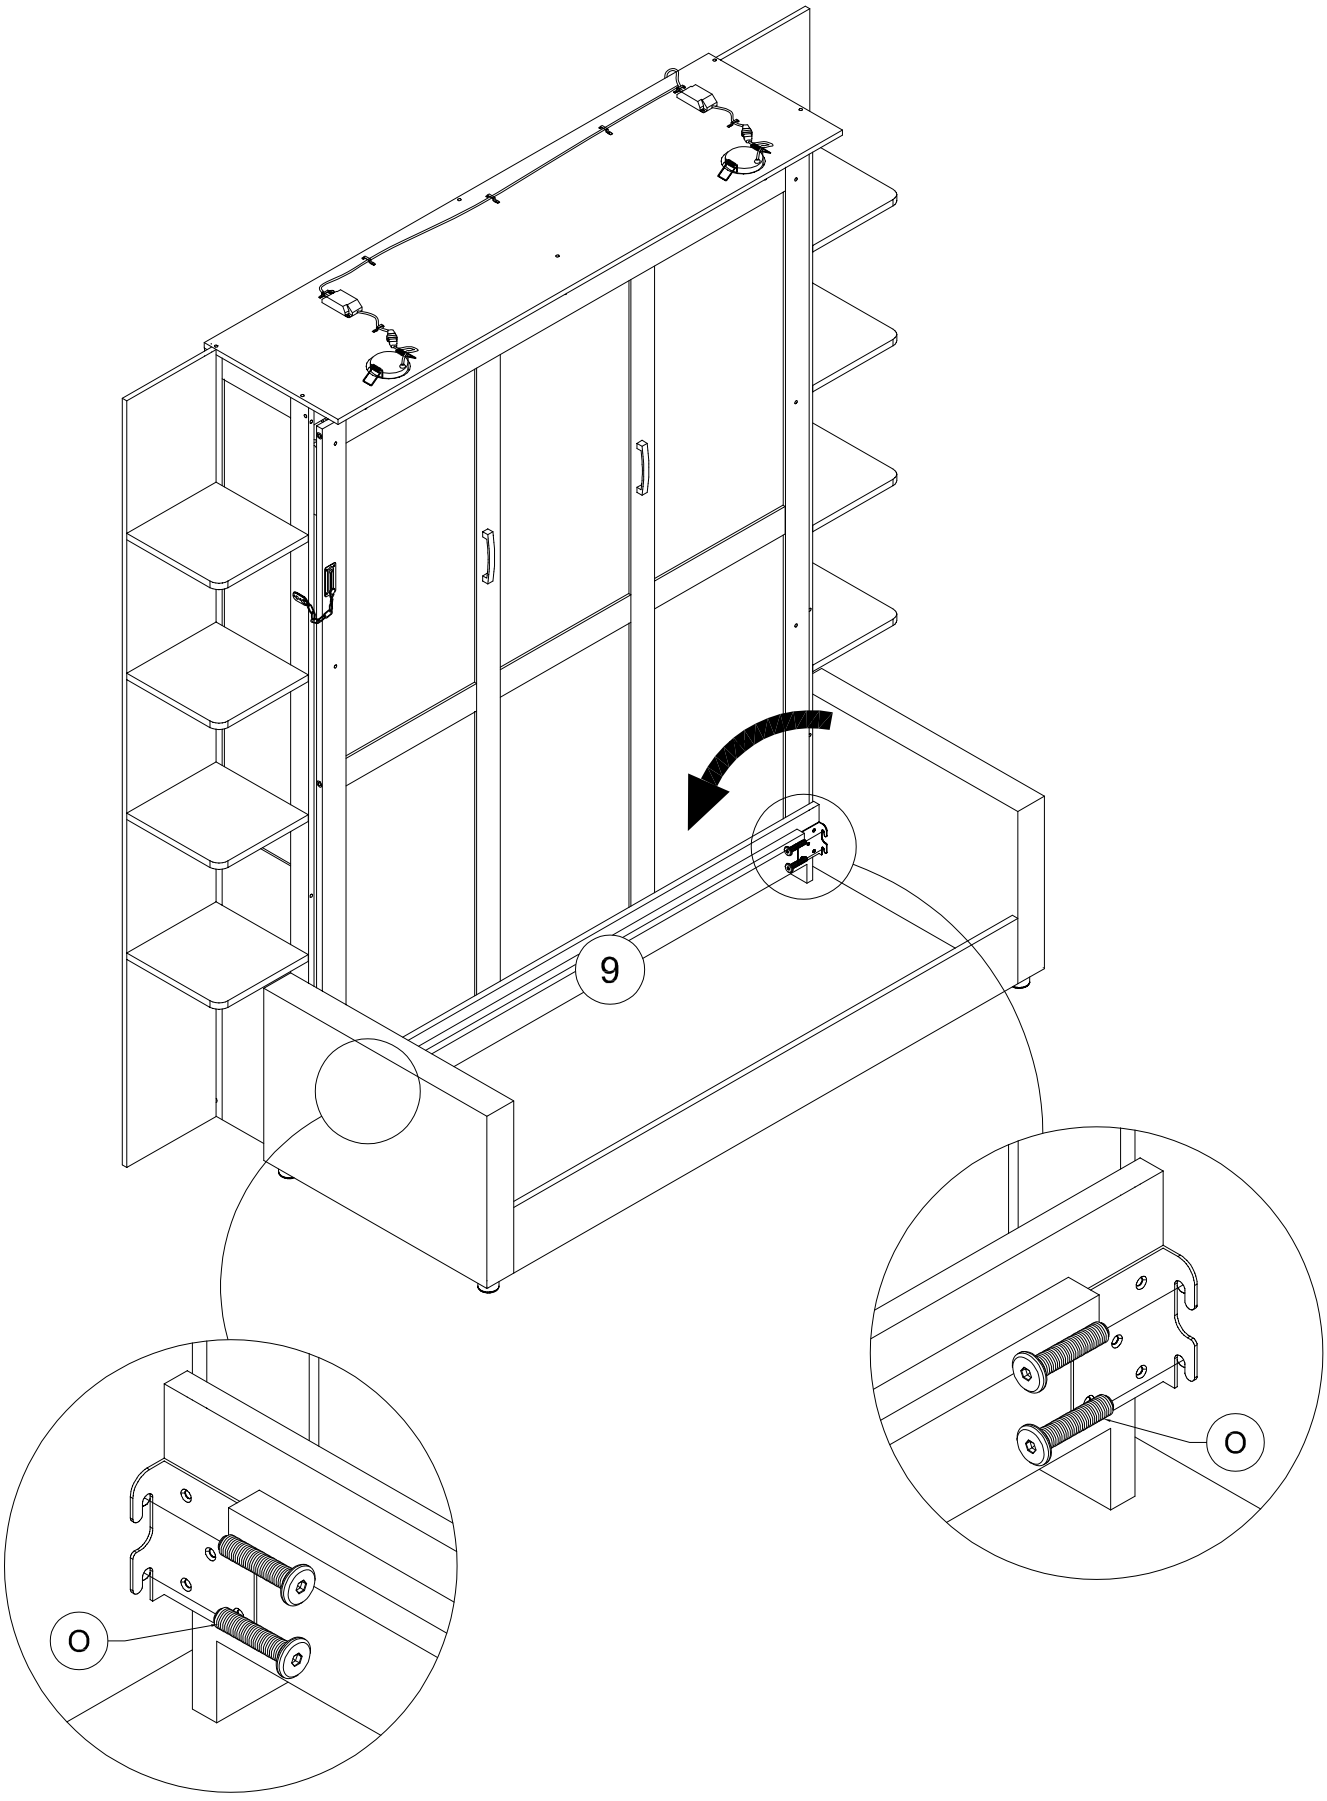

STEP 31: Following below illustration:
ÉTAPE 31: Illustration ci-dessous :


X	K	G
3pcs	26cs	6pcs

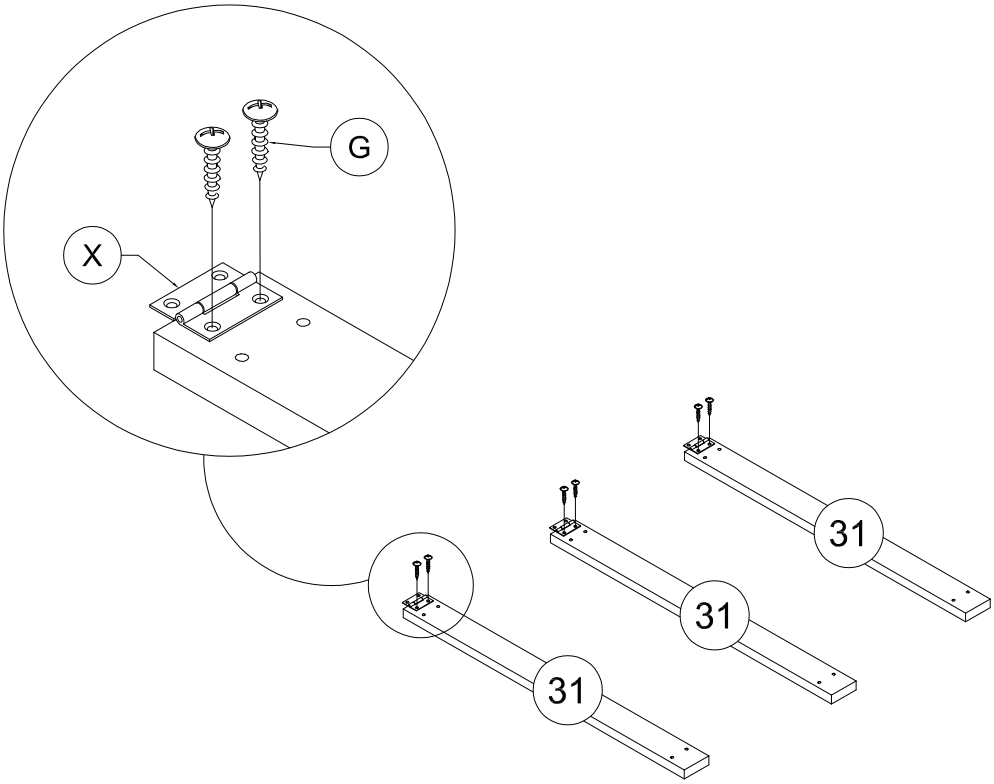

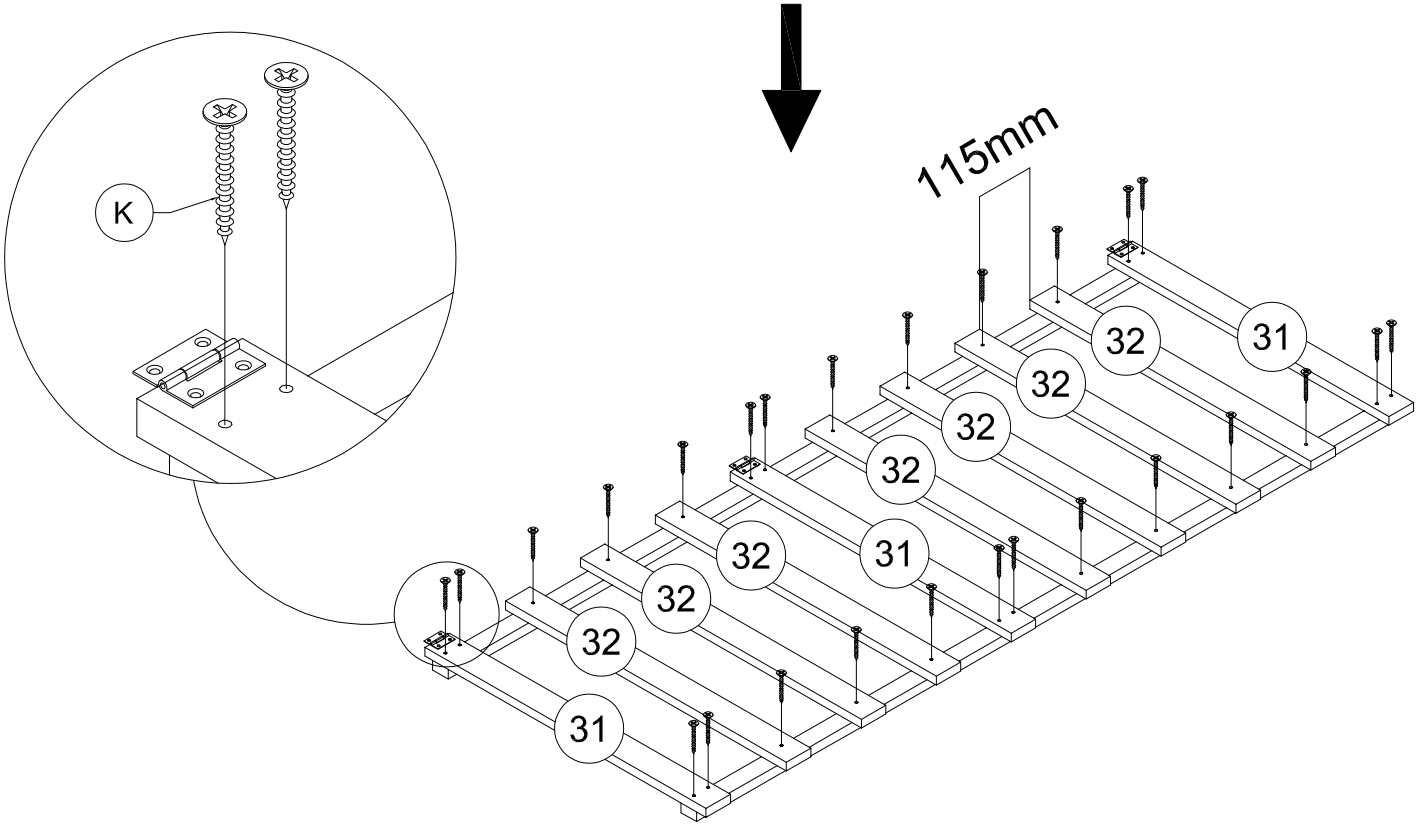


STEP 32: Following below illustration:
ÉTAPE 32: Illustration ci-dessous :

G

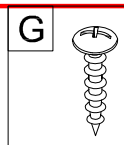



6pcs

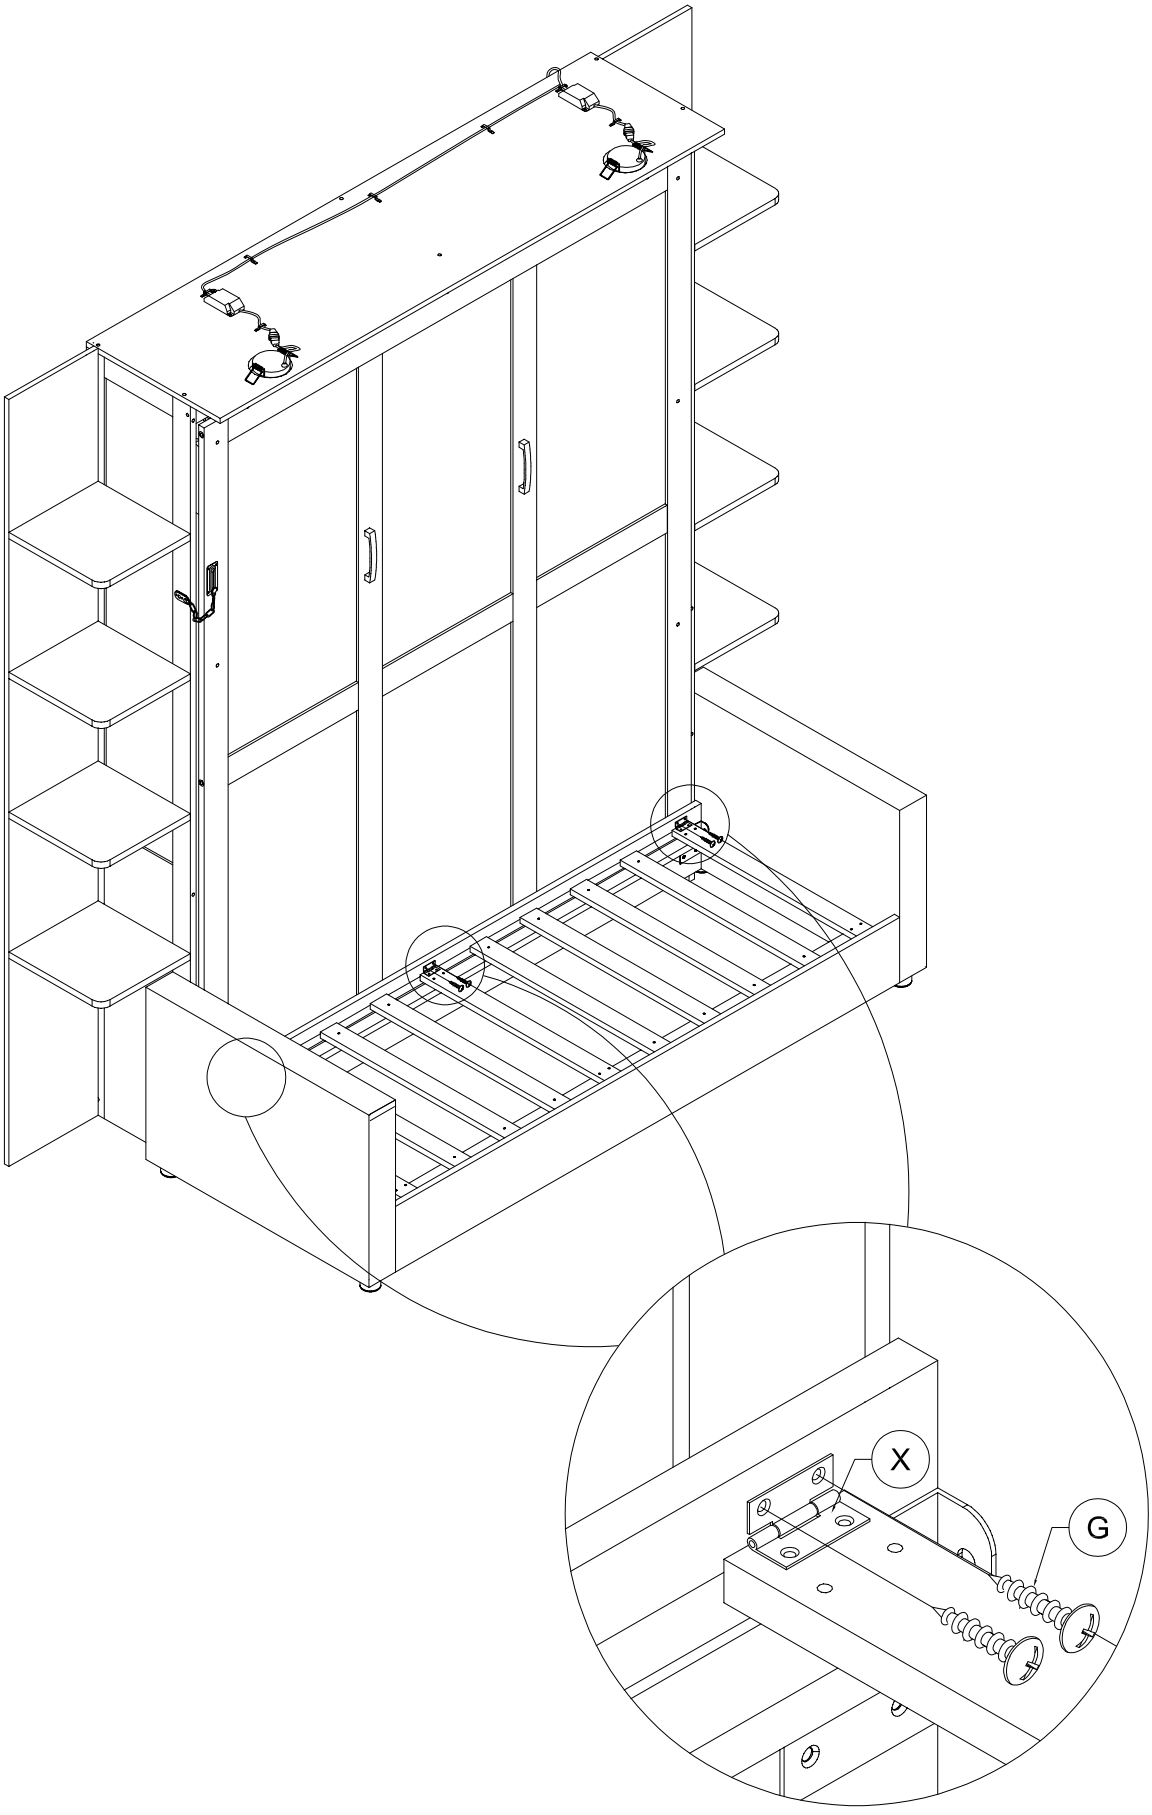


STEP 33: Following below illustration:


ÉTAPE 33: Illustration ci-dessous :

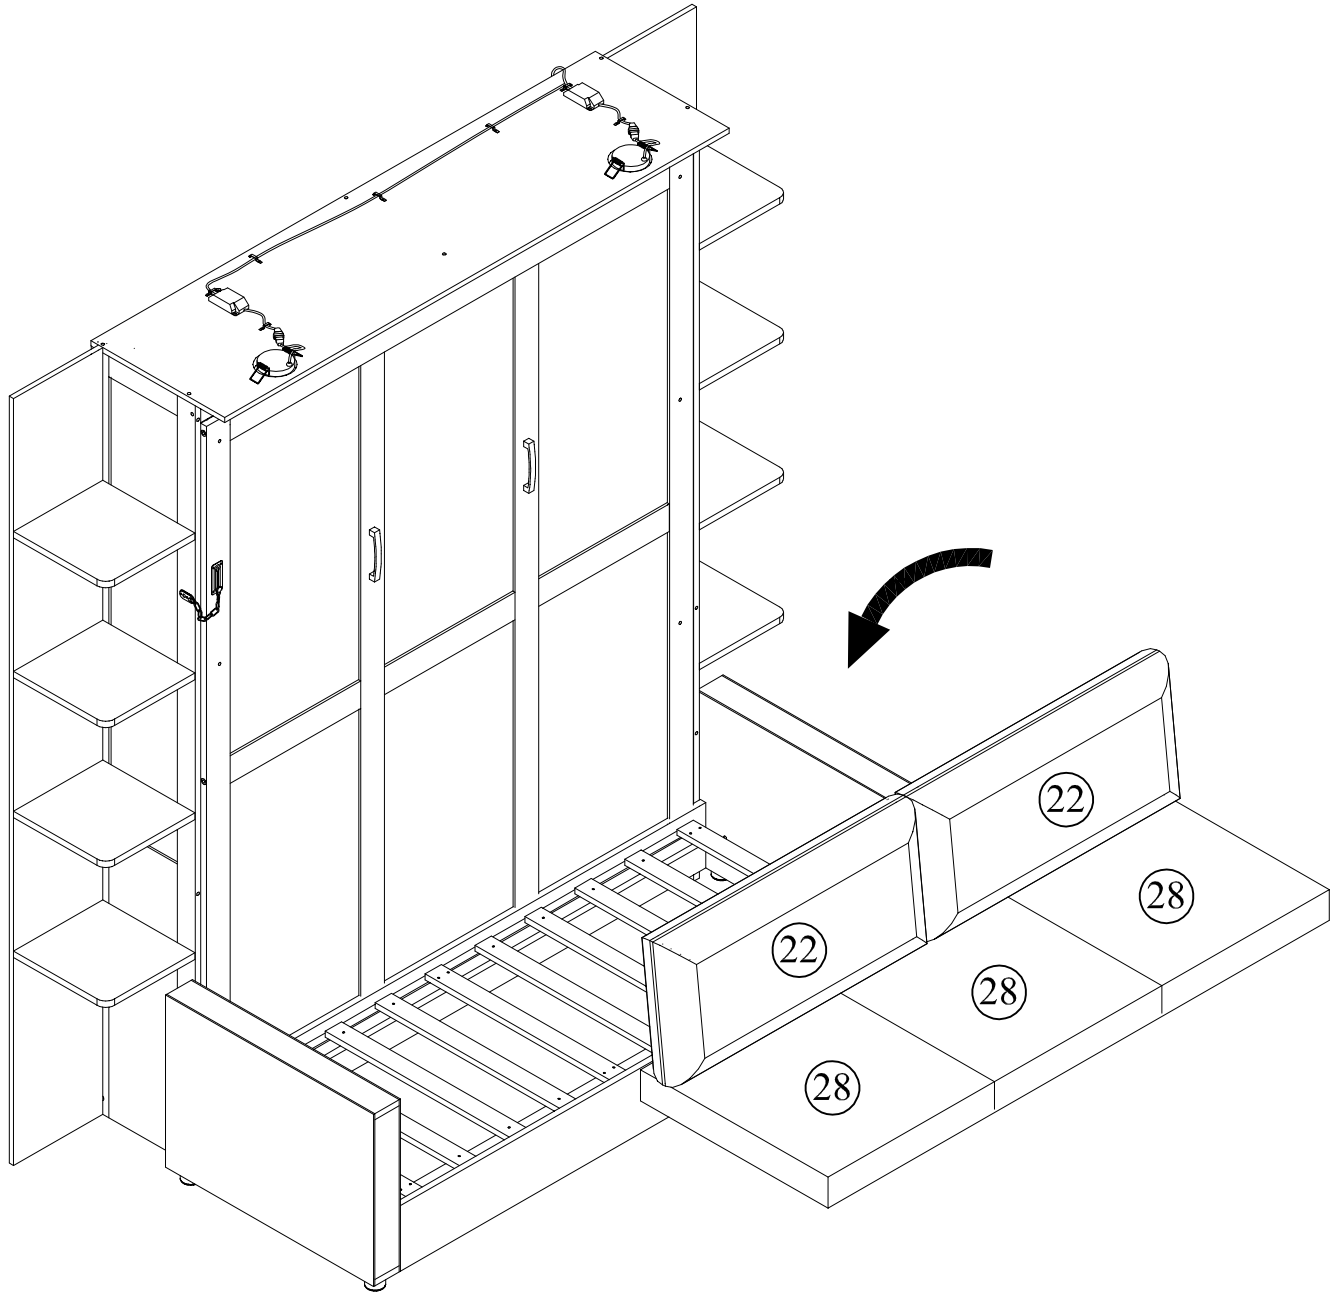

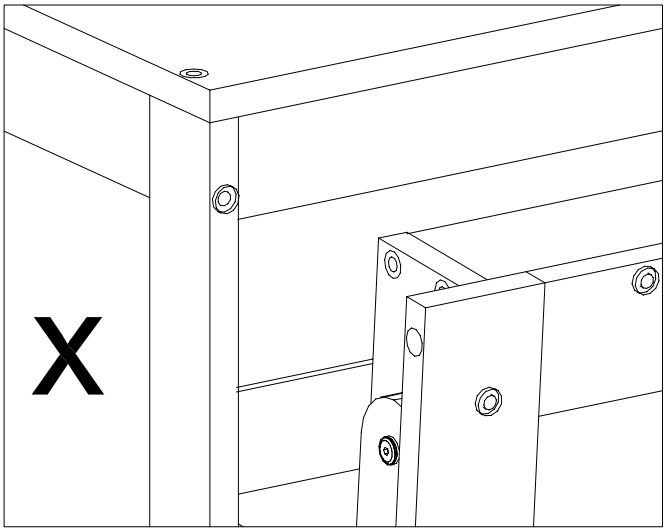

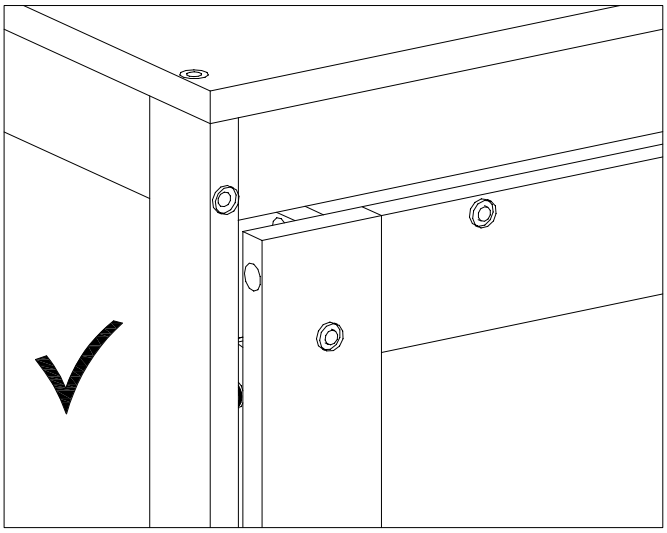



X

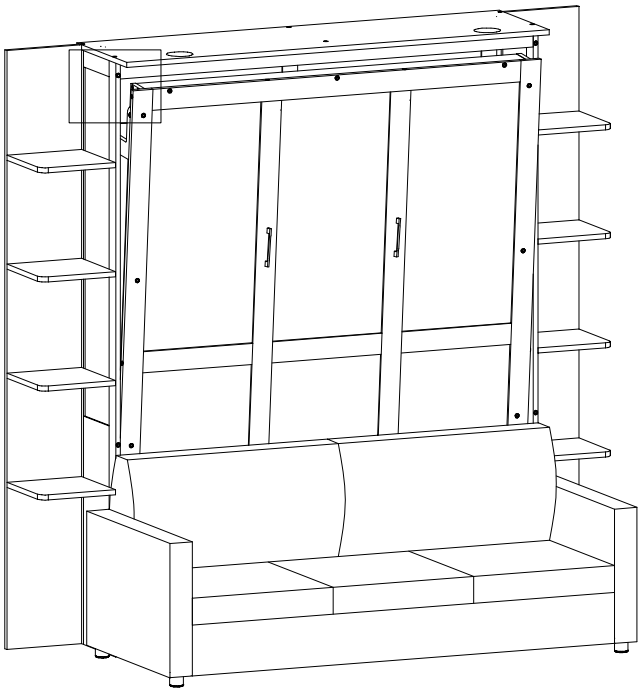

NOTED

ADJUSTABLE ACCESSORIES.
PLEASE FOLLOW THE INSTRUCTIONS
SO THAT THE DETAILS CAN BE
IN THE CORRECT POSITION AS DESIRED

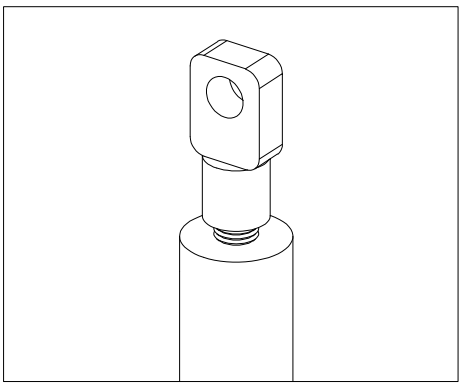


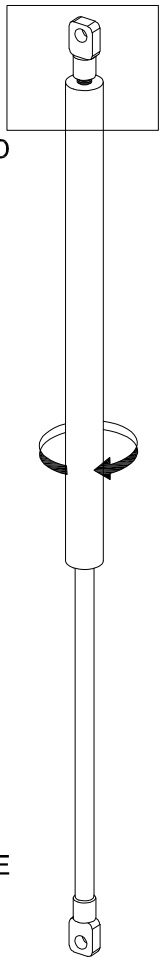


RENOMMÉ


ACCESSOIRES RÉGLABLES. VEUILLEZ
SUIVRE LE
INSTRUCTIONS POUR QUE LES
DÉTAILS PUISSENT ÊTRE DANS LE
POSITION CORRECTE COMME VOUS LE
SOUHAITEZ

✓

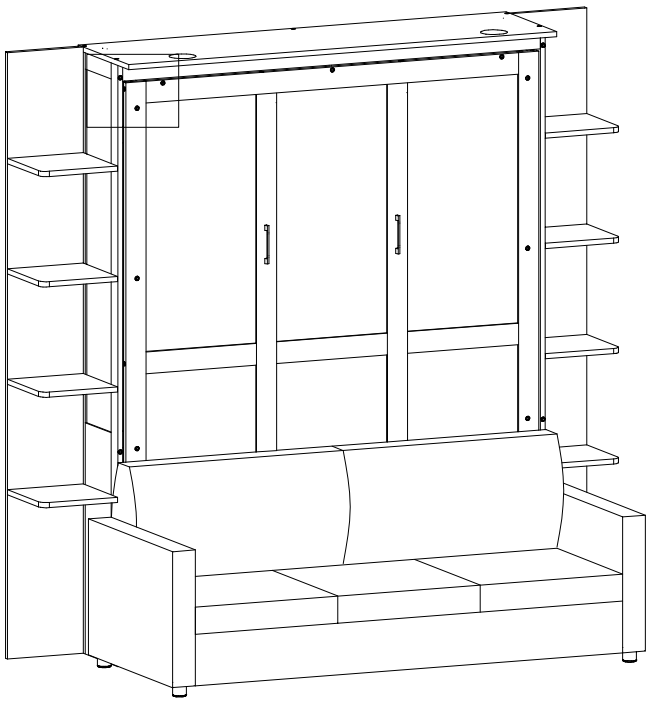


X

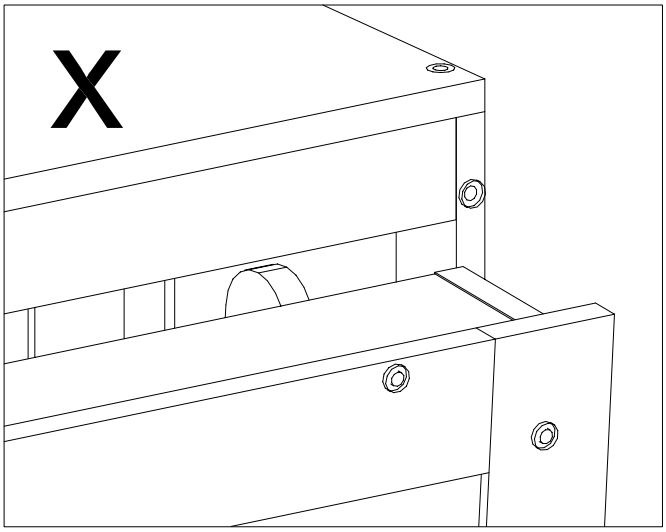

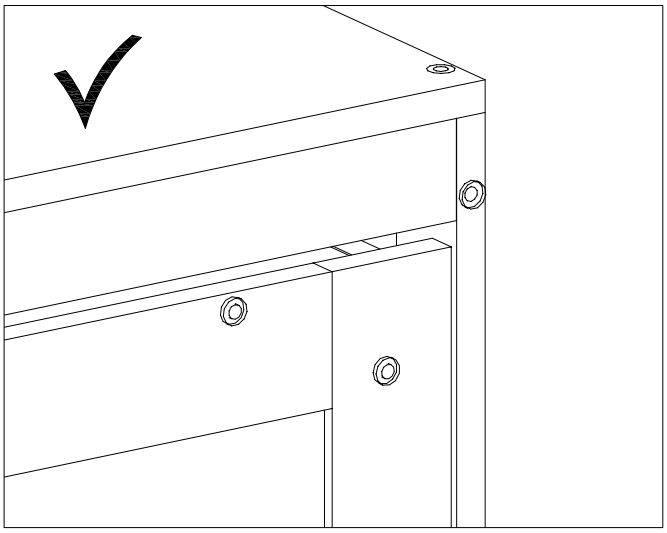



X

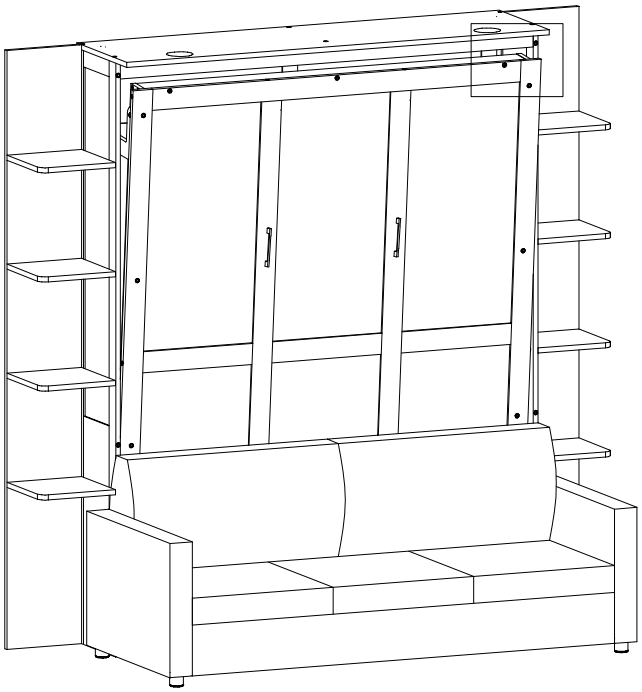

NOTED

ADJUSTABLE ACCESSORIES.
PLEASE FOLLOW THE INSTRUCTIONS
SO THAT THE DETAILS CAN BE
IN THE CORRECT POSITION AS DESIRED

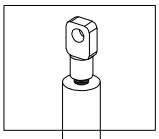


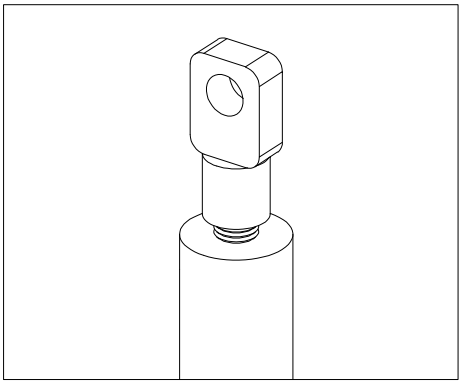

RENOMMÉ

ACCESSOIRES RÉGLABLES. VEUILLEZ
SUIVRE LE
INSTRUCTIONS POUR QUE LES
DÉTAILS PUISSENT ÊTRE DANS LE
POSITION CORRECTE COMME VOUS LE
SOUHAITEZ



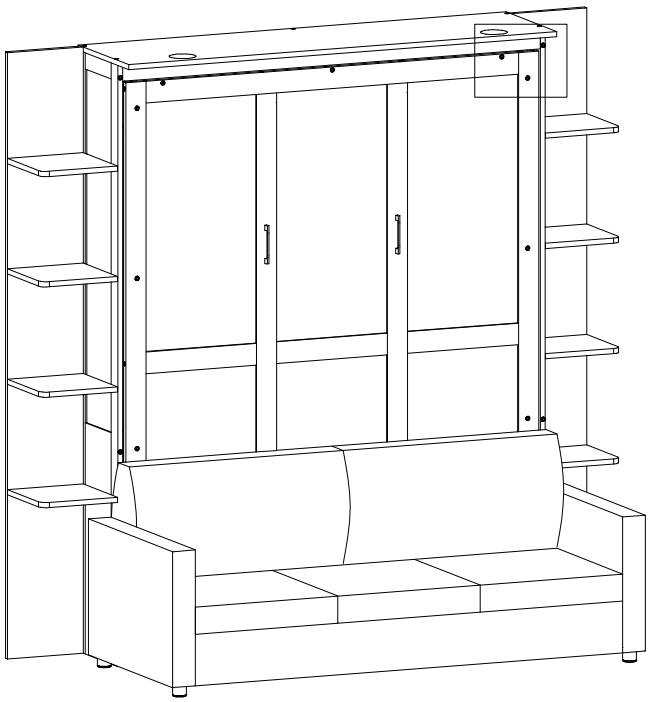

FINISH
FINITION

