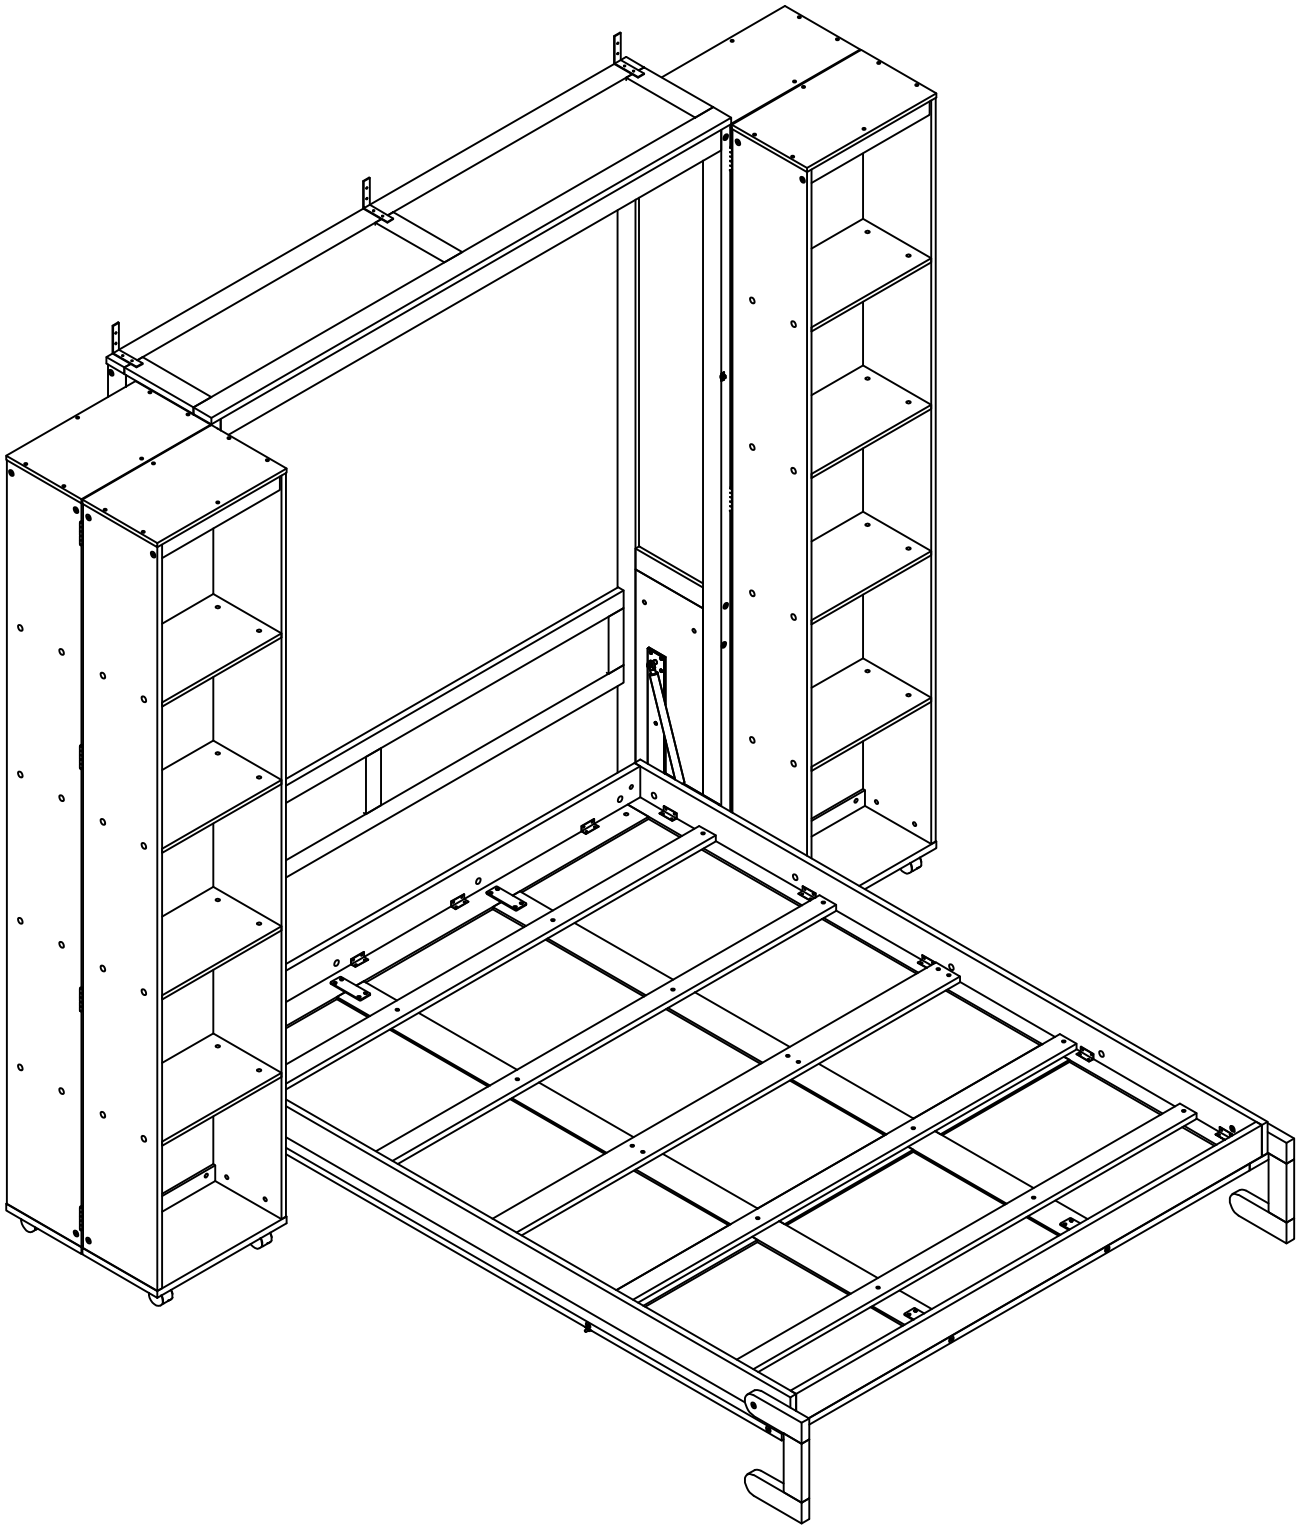
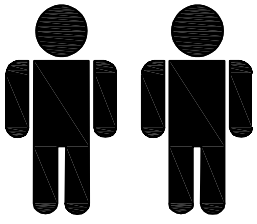
ASSEMBLY INSTRUCTION


SKU CODE: (N708P527489-90-91-92)






Two people are required to assemble and move this model.

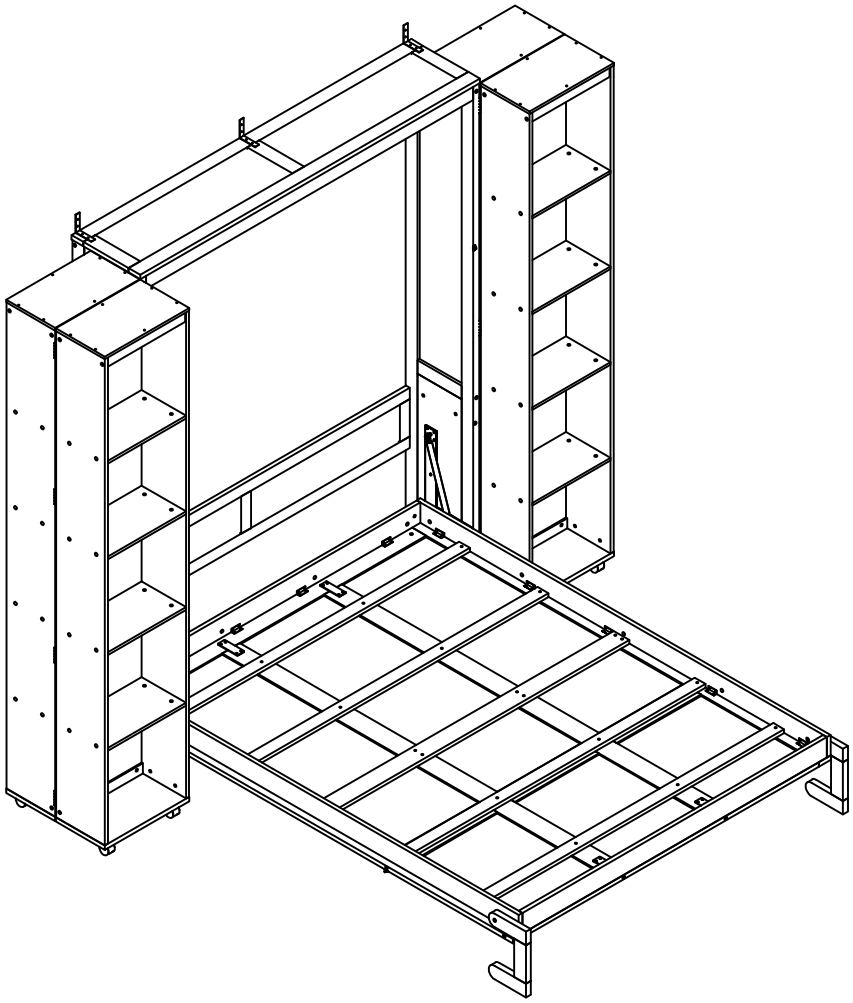OPTION 1:



OPTION 2:

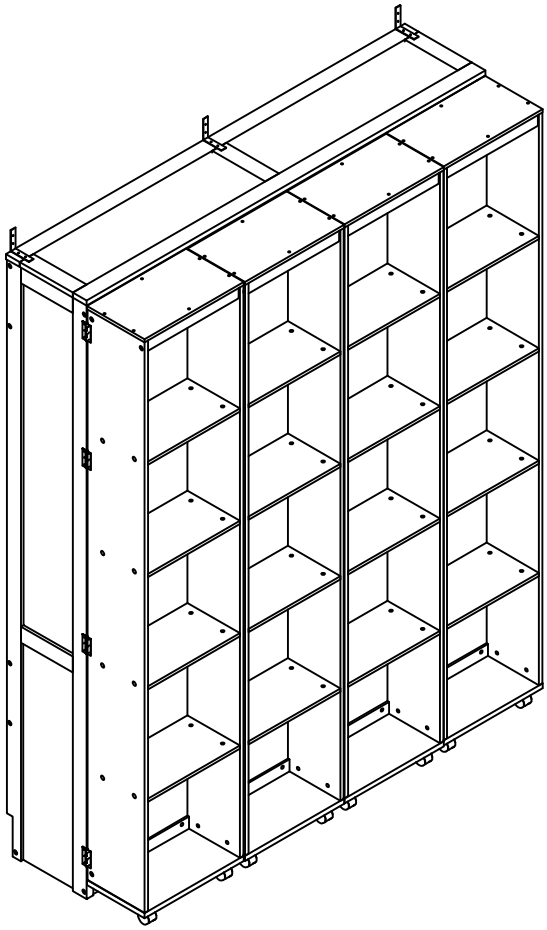

IMPORTANT INFORMATION PACKAGE.

THIS INFORMATION PACKAGE CONTAINS WARNING AND PRODUCT SAFETY INFORMATION. DO NOT PROCEED WITHOUT REVIEWING THOROUGHLY.

A. WARNING LABELS.

Your purchased Murphy Bed is delivered to you with WARNING LABELS to constantly remind you to take and adopt Safety Measure throughout the entire assembly and mounting points of the Bed to the walls.

DO NOT REMOVE these labels.

These Warning Labels serve as a Reminder Tool for visiting friends and relatives when using the Murphy Bed to ensure Safety Precautions are taken.

WARNING.

IMPORTANT SAFETY REQUIREMENTS - Bed Attachment to Wall.
For Your Safety, the Murphy Bed MUST BE ATTACHED to the Wall.

Seek Certified Professional Consultant / Contractors for their Services to:
1.) DETERMINE the WALL Type in Your Home;
2.) PRECISE HARDWARE that suits to the Wall Type in Your Home;
3.) INSTALL / ATTACH of the Murphy Bed to the Wall in Your Home;
4.) VALIDATE the Murphy Bed is appropriately and securely installed/attached.

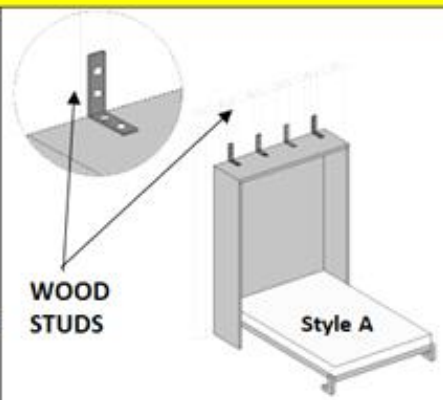
The choice of wall anchoring hardware depends on the type of wall. This Murphy Bed is delivered with HARDWARE SCREWS suited for attachment to WOOD STUDS in walls. Any STUDS type detected with your Consultant-Contractors to be NOT WOOD STUDS - DISCARD and DO NOT USE these SCREWS. Use the hardware suitable for your wall material.

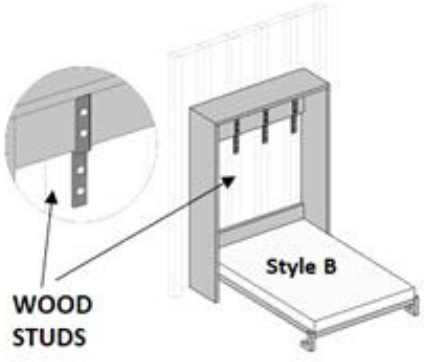
Seek the professional advice of your Consultant-Contractor and procure the appropriate hardware and brackets for the attchment of the Murphy Bed to the Wall.

FAILURE TO ADHERE TO THE ABOVE INSTRUCTIONS MAY RESULT IN SERIOUS and/or SEVERE INJURIES or Death caused by the detachment of the Murphy Bed from the Wall.


SAFETY PRECAUTION :

1.) **MAXIMUM Mattress Weight** suited to your Murphy Bed : **77 lbs (35 kg)**;
   MAXIMUM mattress thickness: 8 inches (20 cm);
2.) **ENSURE ADULTS ONLY** throughout the entire assembly and attachment.
3.) **KEEP ALL Children, Non-Ambulatory persons and Pets** at bay during the entire assembly and attachment.





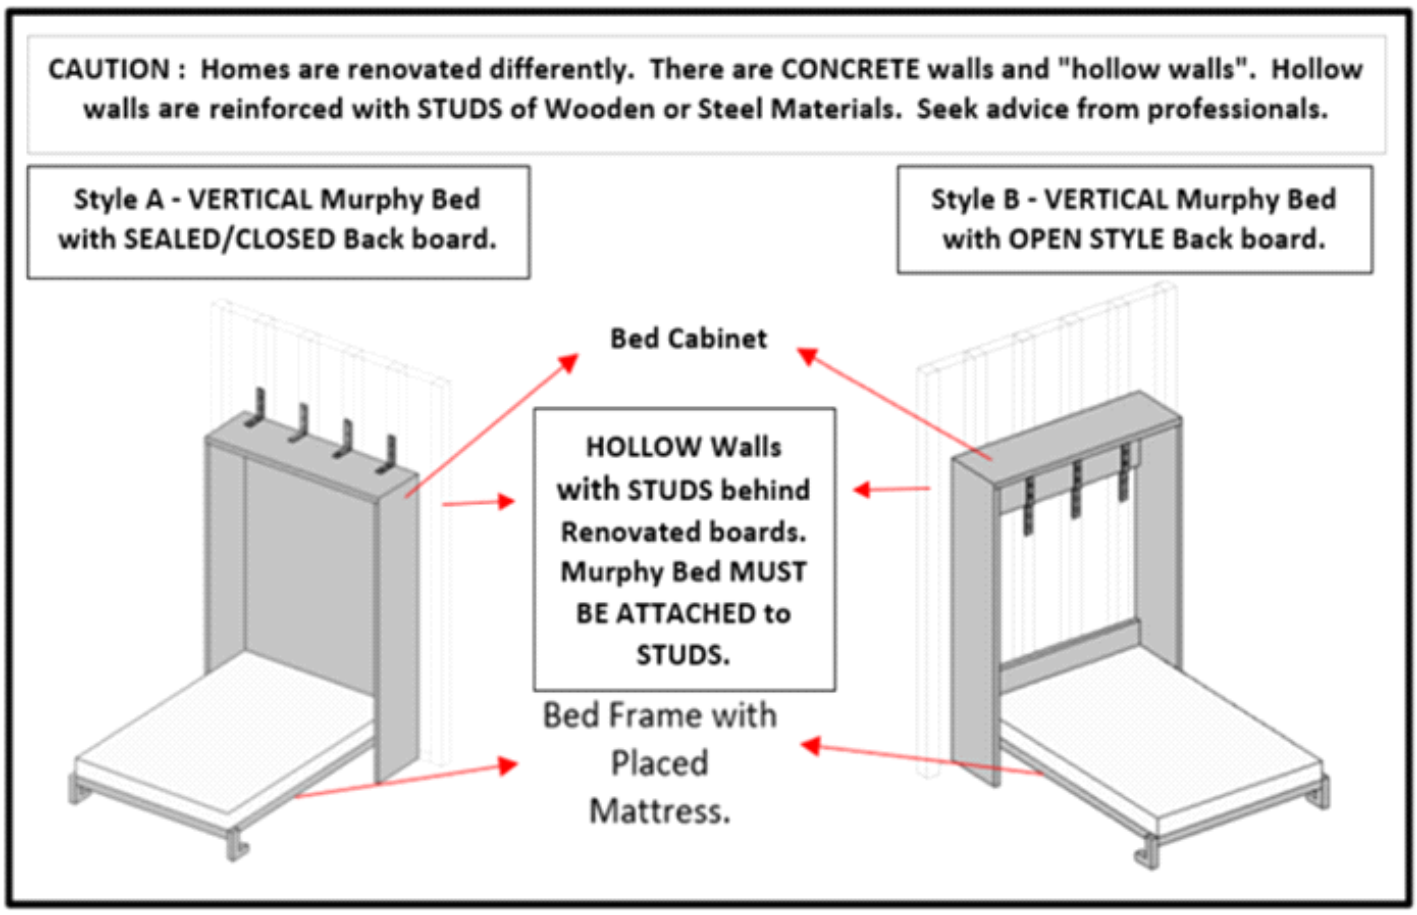LINE ART for Reference only and **NOT DRAWN TO SCALE.**



B. SAFETY REMINDERS.
MARKINGS in WALL - WHERE TO ATTACH the MURPHY BED.

Irrespective of the wall type, whether **Solid Concrete Walls** OR **Decorative Walls with WOODEN Studs** OR **Decorative Walls with Metal Studs**, ensure that

a. **) you choose a professional installer who has a good understanding of the wall structure where the Murphy Bed is anchored, including the position of the wall studs and structural components in the case of a wood or metal structure.**
b. **) precise markings of the positions of the anchor points are to be made on the wall for easy identification during the Murphy Bed attachment to the wall.**
c. **) the relevant and appropriate Hardware with Metal Brackets are READY for this attachment and are within easy access for prompt and efficient attachment.**

This product requires Professional Consultation and Installation*.

* When you choose the professional installer, make sure to comply with all applicable laws, regulations and rules in the city, state or country where the Murphy Bed is installed.

To have your Murphy Bed fully assembled and to achieve its intended functionality - you **MUST READ** through this entire Assembly Instructions Manual before you start the assembly of the bed

1.) **There are numerous Safety Issues and Safety Precautionary Actions that you MUST KNOW before you start the Assembly.**

2.) **CAUTION - Failure to FOLLOW / ADHERE to the GUIDE, WARNING AND REMINDERS here, may result in serious / severe injuries or death.**

3.) **PRECAUTION : For the assembly, Adult Partners only, to assist in the entire assembly**. **Ensure 4 (four) to 6 (six) ABLE BODIED PERSONS ONLY in the entire assembly and attachment of this Murphy Bed to the walls of your home.**

4.) **CAUTION : During the entire assembly process and attachment of the Murphy Bed to the walls of your home, Keep ALL Children, Non-Ambulatory Persons and Pets completely at bay**.

5.) SAFETY REMINDER on / to : Personal, Family Members and Pets. The Murphy Bed may be shipped to you in 3 to 5 packages and are HEAVY. Each carton holds many parts and components. Some of these components eg., bolts and screws are relatively small * in size.

***. During the assembly process, ensure that any misplaced bolts and nuts are picked up so that Children and or Pets do not play or ingest these.**

6.) This Murphy Bed is intended for ADULT USE ONLY.

7.) This Murphy Bed is delivered to you pre-packed with Hardware - suitable for wood-framed walls renovated with WOOD STUDS ONLY.

8.) **Your Home's Wall Type -** Every home is renovated differently with different wall(s) type / finishes. Before you proceed to assemble your Murphy Bed :

a.) **SEEK and CONSULT Professional Services** to ascertain the wall type in the designated location where you intend to attach the Murphy Bed;

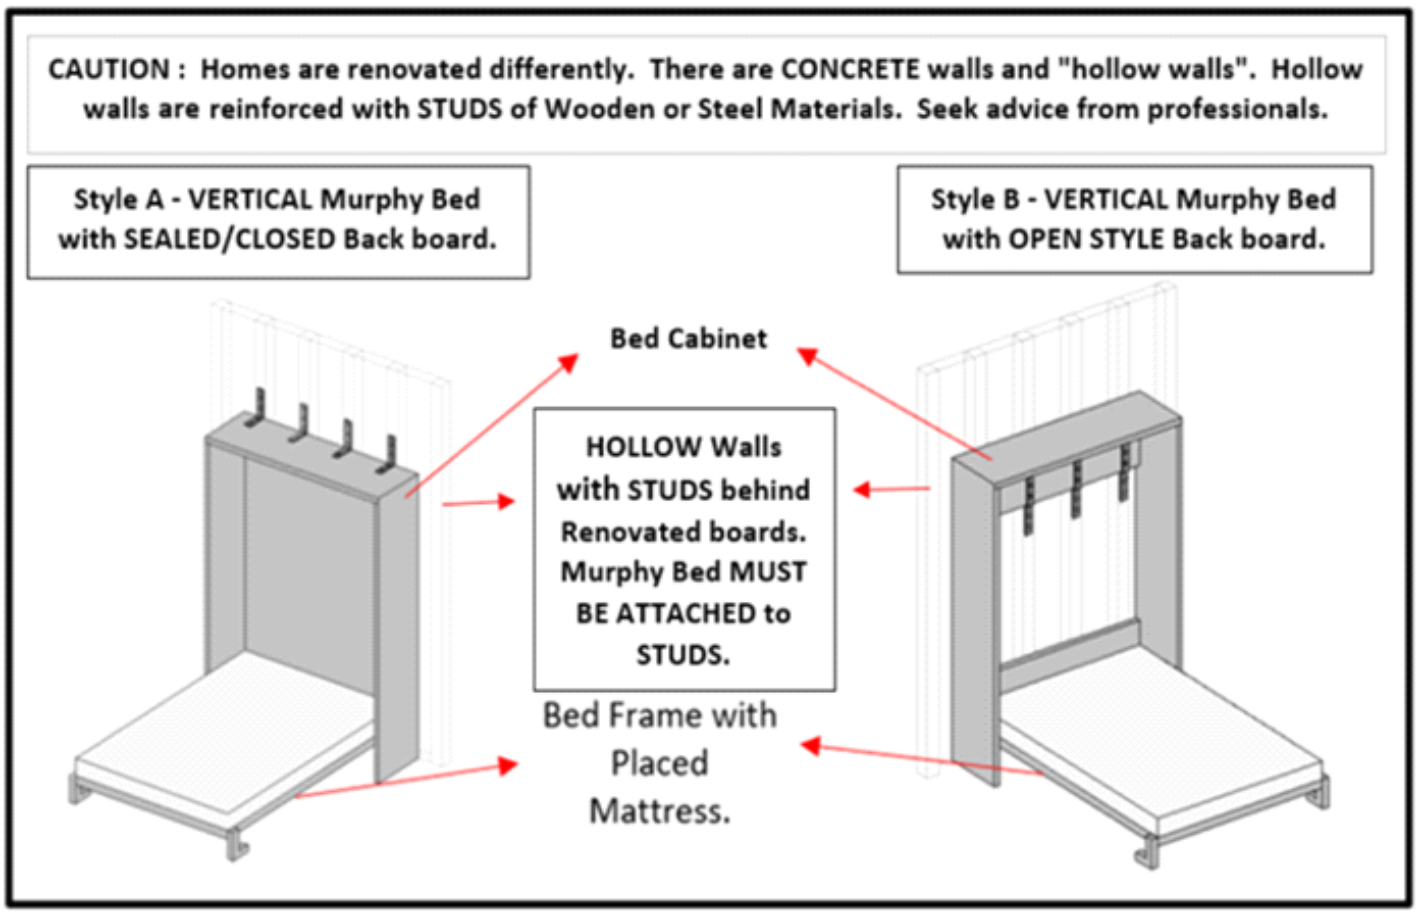
b.) ENSURE the Consultant-Contractor specifically **INFORMS** you of the **WALL TYPE** in the designated spot where you intend to attach the Murphy Bed.

c.) **ENSURE** the Consultant **INFORMS** you specifically on the matching and relevant Hardware / Brackets to secure and attach the Murphy Bed to the wall.

9.) **WARNING - YOU MUST HEED THE INSTRUCTIONS** given by your appointed Consultant-Contractor on the :

a.) Mounting Hardware Type that suits the wall(s) type - where / when it is NOT WOOD STUDS, the **pre-packed Screws for Wood Stud Walls would not match/ not fit.**

b.) Number of Mounting Points for the Murphy Bed to the Wall.



11.) This Murphy Bed is designed for home use and not intended for commercial use.

12.) This Murphy Bed is not intended to be moved, modified, uninstalled or disassembled once professionally installed.

A.) MOUNTING INFO & HARDWARE.

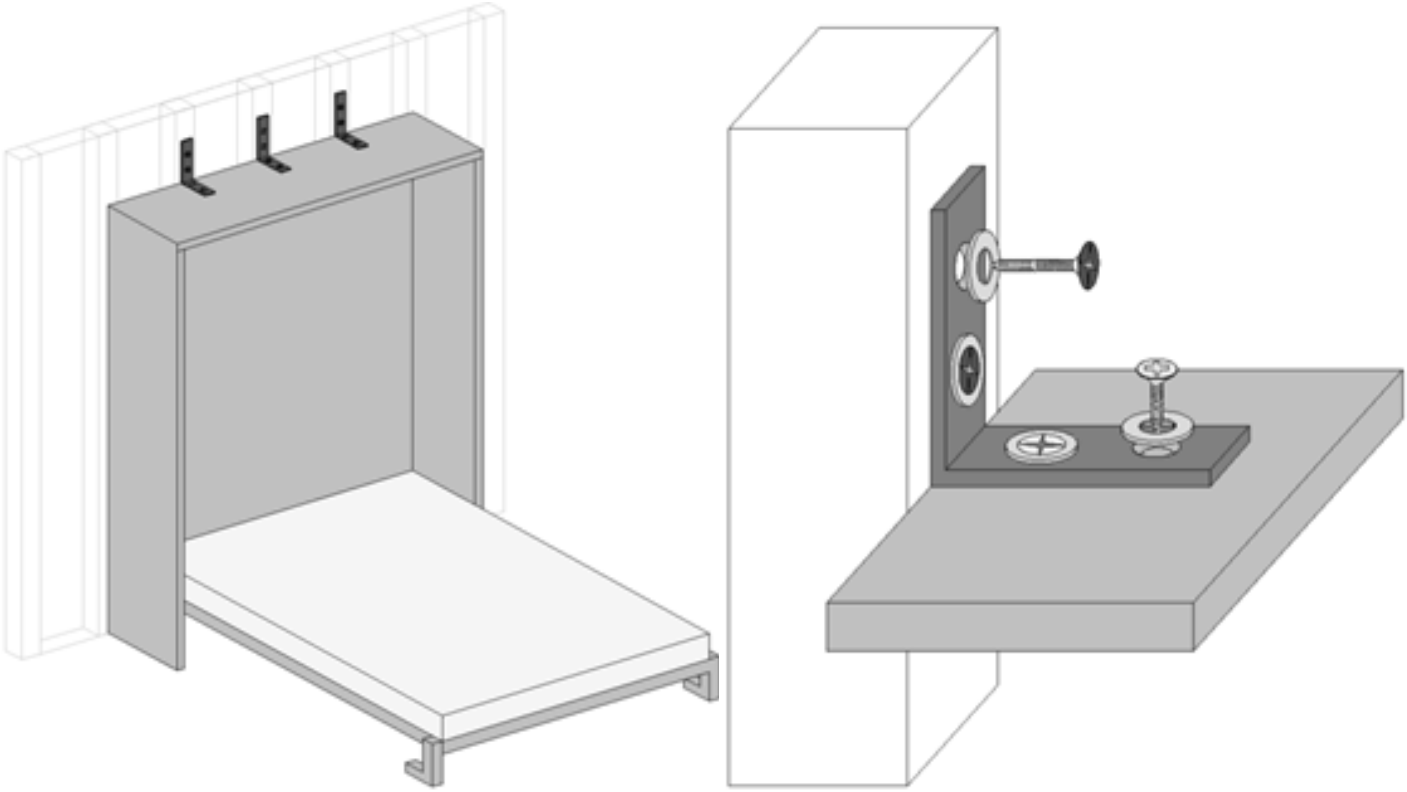
1.) REMINDERS :

a.) **In the event, that this pre-packed Screws Set does not match to the walls in your home - DO NOT USE / DISCARD these hardware.**
b.) **ADHERE to the Professional Consultant-Contractor** instructions and information on the **RELEVANT** mounting hardware that suits your wall.
c.) Procurement of these **RELEVANT** hardware is an arrangement made between your Consultant-Contactor and you.


* 2.) A step ladder (not provided) is needed to attach the L-Brackets to the wall, at the Top of the Murphy Bed. **DO NOT** lean against the Top of the Murphy Bed, it may cause sagging.

Murphy Bed Style A

L-Bracket Fixture to Wood Studs



Z-Bracket Fixture to Wood Studs

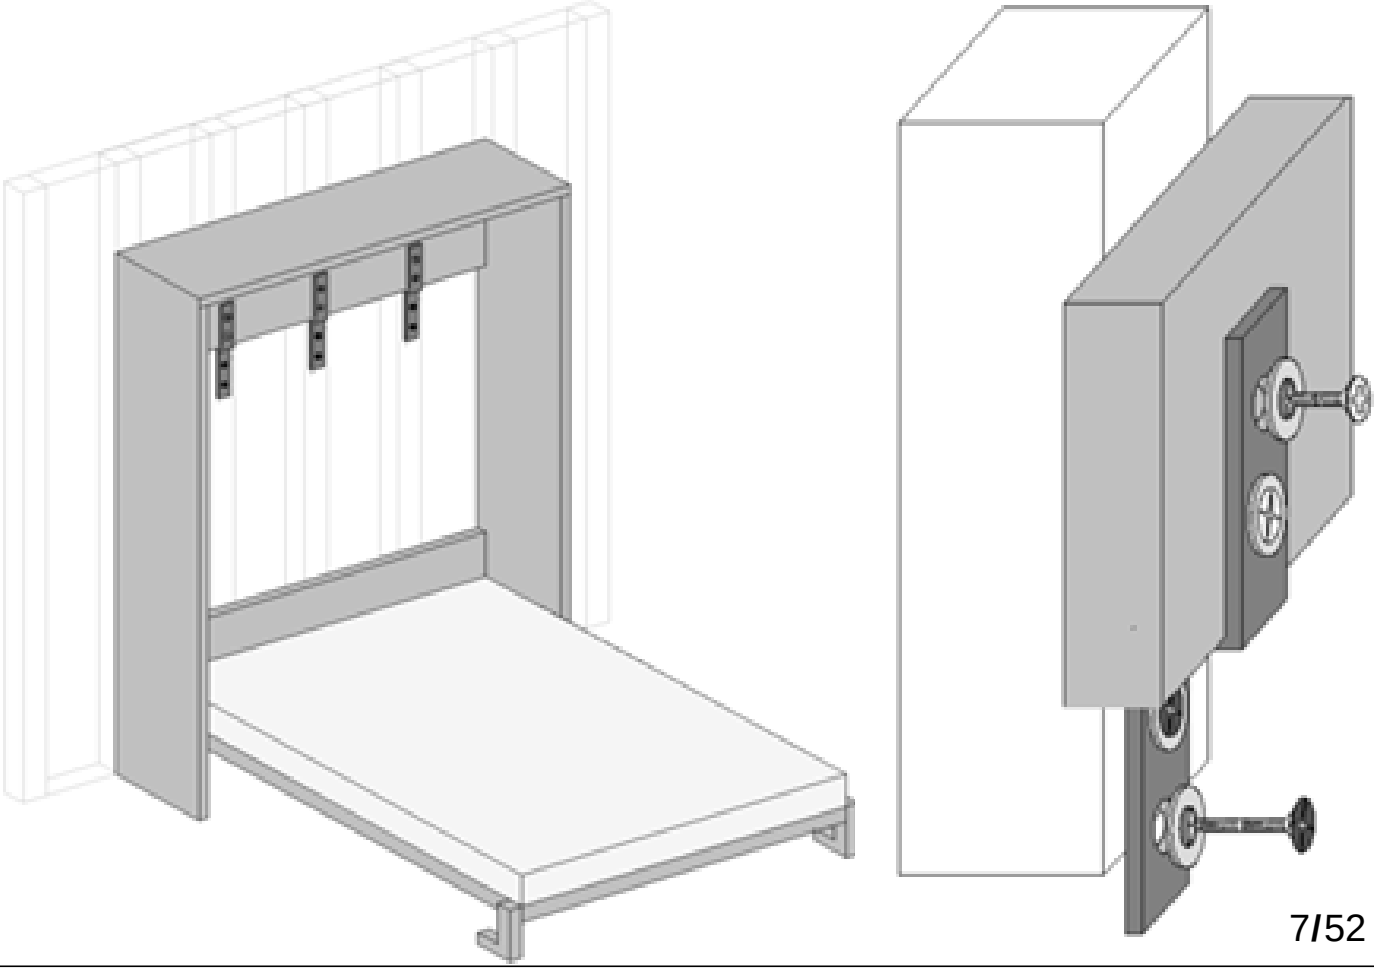

D.) IDENTIFICATION of TOOLS and ATTACHMENT SKILL.

The parts and components to assemble the Bed Frame are stated in the Assembly Instructions. Follow the instructions with attention.

For an efficient assembly, after opening the cartons shipped to you :

a.) open and layout all parts and components in sequence;
b.) account for every part, hardware and component;
c.) then lay out the parts close to each other;

Assemble and tighten each bolt / nut / screw up to 80% to allow for the Bed Frame and Bed Cabinet to be HELD together.

Upon FINAL assembly where all the parts and components are FITTED precisely, in a sequential manner - proceed to tighten each bolt & nut & screw gradually.

CAUTION :

1.) The METAL PLATES to the sides of the Side Rails - MUST BE FULLY and SECURELY TIED to the SIDE RAILS.
2.) The Piston L-Brackets that are attached to the INNER WALL of the Bed Cabinet - MUST BE FULLY and SECURELY TIED to these Inner Walls.
3.) These Metal Plates and the L-Brackets - are the components that are holding the Pistons that allow your Bed to "travel" to an OPEN or CLOSED position.
4.) Frequent Inspections of these Metal Plates / Brackets and Pistons Bolts, up to Once a Month - to ascertain these DO NOT BECOME LOOSE. For if these bolts to the Bed Frame and or Bed Cabinet or Pistons are loose, may cause the BED FRAME to become DISLODGED and cause injuries.

REMINDER : NEVER FULLY TIGTHEN any screw / nut or bolt in one session. If you DO TIGHTEN the hardware all the way into the core of the wood, this cause the parts to become skewed that would impact other parts of the item not being able to be aligned to its mounting points for assembly.

E. ALL ASSEMBLY WORKS REQUIRES A TEAM OF NO LESS THAN 4 ADULTS.

Reminder : Per above info, the cartons and products are heavy - therefore exercise CAUTION at all times and ENSURE YOUR TEAM OF 4 for the entire ASSEMBLY.

F.) ASSEMBLY of BED FRAME.

Identify all parts and components for the Bed Frame.
Assemble the Bed Frame according to the Assembly Instructions.

Upon completion of assembly of the Bed Frame, make a final inspection that all joints and parts are fully and securely attached.

Then place this assembled Bed Frame horizontally flat on the ground, some 10feet away, so as to allow room for the assembly of the Bed Cabinet.

G.) ASSEMBLY OF BED CABINET.

Identify all parts and components for the Bed Cabinet.
Assemble the Bed Cabinet according to the Assembly Instructions.

Upon the completion assembly of the Bed Cabinet, make a final inspection that all joints and parts are fully and securely attached.

CLEAR all debris in the area where your Murphy Bed is going to be attached to the wall.

Move this FULLY ASSEMBLED BED CABINET and position this BED CABINET some 2feet to 3 feet away from the designated Wall, where you have previously made markings.

SAFETY REMINDER - The Cabinet is NOT ATTACHED TO THE WALL, YET. From here on - YOU MUST HAVE 2 ADULT to HOLD and STABILISE this BED CABINET, to prevent the Bed Cabinet from TIPPING OVER.

H. ATTACHMENT OF BED FRAME TO BED CABINET.

Safety Reminder : DO ENSURE the 2 adult persons holding the Bed Cabinet is IN POSITION ALL THE TIME.

The other 2 adults shall lift and carry the Bed Frame and attach to the L-Bracket - at the inner walls of the Bed Cabinet.

Thereafter, gently LIFT THE Bed Frame to a CLOSED POSITION.

I.) ATTACHMENT OF PISTONS TO HOLD & SUPPORT BED CABINET TO BED FRAME.

The Murphy Bed, is now still placed at 2feet to 3feet, from the wall.

The 2 adults, upon attachment the Bed Frame to the Bed Cabinet, shall get the Pistons, and move to the back of the Murphy Bed. Both persons shall - then attach the Pistons to the Bed Frame and Bed Cabinet.

You may need to - LIGHTLY slide forward-backward to adjust and create gap space so as to enable the Pistons to be hooked to both ends of the hanging bolts in the Inner Wall of the L-BRACKET

Fully Secure and Tighten these Bolts at each end of the Pistons.

J.) Attachment of Safety Latches.

Upon completion of Step I above, ensure the entire structure of Bed Frame to Cabinet is fully and securely attached as ONE UNIT - affix the Safety Latches.

These Latches are to be reachable by Adults Only. Thus, the minimum height shall be no less than 5feet (1.5m) from ground.

K.) POSITIONING THE MURPHY BED INTO ITS FINAL POSITION.

At this juncture, the Murphy Bed is ASSEMBLED BUT NOT AS A FULL & COMPLETE piece of furniture AND NOT FUNCTIONAL AS A BED YET, as it is NOT SECURED TO THE WALL.

DO NOT ATTEMPT TO OPEN THE MURPHY BED AND OR TEST SLEEP AND OR LIE-INTO the Murphy Bed.

ALL 4 (four) adults shall now move the entire Murphy Bed to the FINAL DESIGNATED Position, matching to the previously marked "SCREW-IN" positions in the walls.

L) ATTACHMENT OF MURPHY BED TO WALL.

With the Murphy Bed now in its final designated spot, 2 adult persons shall continue to hold down the entire Murphy Bed.

REMINDER : FOLLOW the INSTRUCTIONS from your Professional Consultant / Contractor.

Position the Ladder (where necessary) and FULLY & SECURELY turn in the BOLTS or SCREWS into the CONCRETE WALL or WOODEN STUDS or STEEL STUDS.

SEQ	Bed Description	Bed Size	Details.
1	Single/Twin(XL)	~38*75/80~ inches	Attach at least 2 pieces of L or Z Hardware onto the Wall or Studs;
2	Full	54*75inches	Install at least 3 pieces of L or Z Hardware onto the Wall or Studs;
3	Queen	60*80inches	Install at least 3 pieces of L or Z Hardware onto the Wall or Studs;
4	King	76*80inches	Install at least 4 pieces of L or Z Hardware onto the Wall or Studs;
5	Other Bed Size		Other Bed Sizes - seek advice from your Contractor

Recommended Mattress weight (77)lb or (35)kg / Recommended Mattress thickness (8)in or (20)cm - Your Murphy Bed is made having taken into consideration the Bed Frame Weight and Mattress weight to pair with the Pistons Newton Force.

Therefore, load your bed with the RECOMMENDED MATTRESS Weights, Size and Thickness as stated here in the assembly instructions.

DO NOT LOAD any heavier and or LARGER and or LIGHTER Mattress than what is recommended here.

M.) MATTRESS PLACEMENT .

Only after the Murphy Bed is FULLY SECURED to the wall, the 2 adult persons who are holding down the entire Murphy Bed, can now be released for this action.

Have 1 to 2 persons - place equal strengths to the handles and gently and securely, PULL DOWN the Bed Frame until the Bed Frame is horizontally and level to the ground.

Have the other 2 persons - carry and place the Mattress (**within the recommended weight** and **thickness)** and gently place the Mattress on to the Bed Frame.

N) PISTON NEWTON-LOAD STRENGTH.

You are hereby reminded that when the BED FRAME is EMPTY OF MATTRESS, the Bed Frame may NEED a STRONGER force to be pulled down before you can place the Mattress.

This RESISTANCE to be PULLED DOWN is a normal characteristics of the Pistons Newton-Load force is “in action”.

O) BED STRAP - GUIDE STRAP

Your Murphy Bed may or may not come equipped with a Bed Strap.

This Bed Strap serves as a GUIDE STRAP to help you lift the Bed Frame some 6 inches or so off its resting position. Then use both hands to FULLY LIFT HOIST the Bed Frame to its closing position.

SAFETY REMINDER :

1. **) DO NOT USE THE BED STRAP to PULL DOWN TO OPEN the BED FRAME from its CLOSED POSITION.**
2. **) DO NOT USE THE BED STRAP to PULL-LIFT-HOIST the BED FRAME from the OPENED-HORIZONTAL position, to the CLOSED POSITION.**

Both the above may cause injury and or unnecessary strain to your arm(s).

P.) USING YOUR MURPHY BED.

For EVERY USE - exercising Safety Precautionary Measures to ensure the safety of your family members and pets **are** IMPORTANT.

Therefore, PRIOR TO OPENING / PRIOR TO CLOSING OF YOUR MURPHY BED - Make sure all Children / Non Ambulatory Persons and Pets are at bay.

KEEP CHILDREN and NON-AMBULATORY persons from Unlatching the Safety Latches.

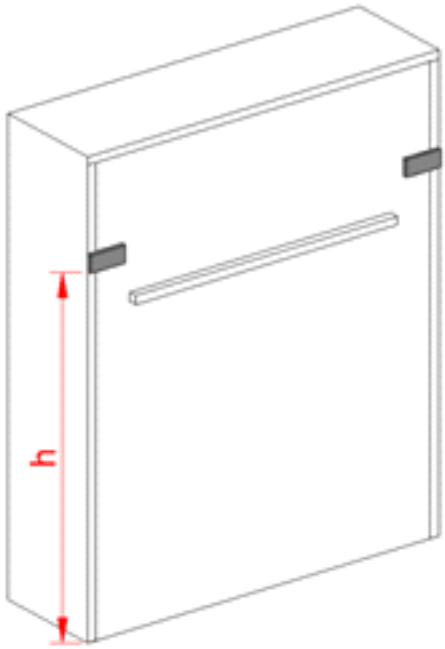
Q.) CAUTION : DO NOT BE DISTRACTED During EVERY OPENING and CLOSING of your Murphy Bed.

Every time you Pull to **OPEN** the Murphy Bed from its closed position OR **Lift-Pull to CLOSE** the Murphy Bed to stow it into the Bed Cabinet -

- give these actions your focused and dedicated attention.
- **DURING EVERY OPENING and CLOSING of your Murphy Bed** - always ensure you have an Adult Partner close by for added assistance, where necessary.
- **DO NOT OVER EXERT ADDED FORCE to OPEN the Bed or to CLOSE the Bedframe**. For if you do, the resistance of the Piston will only make it harder for you to complete the task.
- **TO CLOSE the Murphy Bed** : depending on your height - stand some 6inches to 10inches away from the FootBoard edge. Use both your hands and place both hands at about equal distance from the middle of the Bed Frame, spaced at 2 to 3 feet between your hands - GENTLY LIFT-PULL to Close your Murphy Bed.
- **TO OPEN the Murphy Bed** : using equal force - **place your hands to the installed grab handle** and GENTLY PULL towards you to Open. **As you pull Open the Murphy Bed - proceed to move backwards, slowly and steadily, so as to give way to the Murphy Bed's OPEN Position.**

- During **EVERY OPENING or CLOSING** of the Murphy Bed - at about your hip level - you may find that you need to rotate your hand / wrist - take caution here to prevent injury.
- During EVERY OPENING and CLOSING, keep Children and Pets and Non Ambulatory Persons at bay.
- **NEVER** allow your children to treat this Murphy Bed as a Hide and Seek place of fun or jump on the bed.
- **Care & Maintenance -** Depending on the frequency of use of your Murphy Bed, it is
- recommended that you take precautionary Care and Maintenance. It is advisable to conduct NO LESS THAN 2 to 3 checks annually on these mounting points & pistons to ensure that these are securely bolted. Where necessary, use a vacuum cleaner to clear all dust and then wipe down with a damp cloth, then proceed with your maintenance work.

Safety Latches - Your Murphy Bed comes with two (2) Safety Latches. These are to be attached at both the TOP LEFT and TOP RIGHT hand upper portion**, minimum of 5 feet (1.5m) from ground**, of the Bed Frame / Bed Cabinet. Monitor and Inspect these frequently.



- Whenever NOT in use and after the Murphy Bed has been LIFTED and stowed in its **CLOSED POSITION - ALWAYS LATCH UP**.

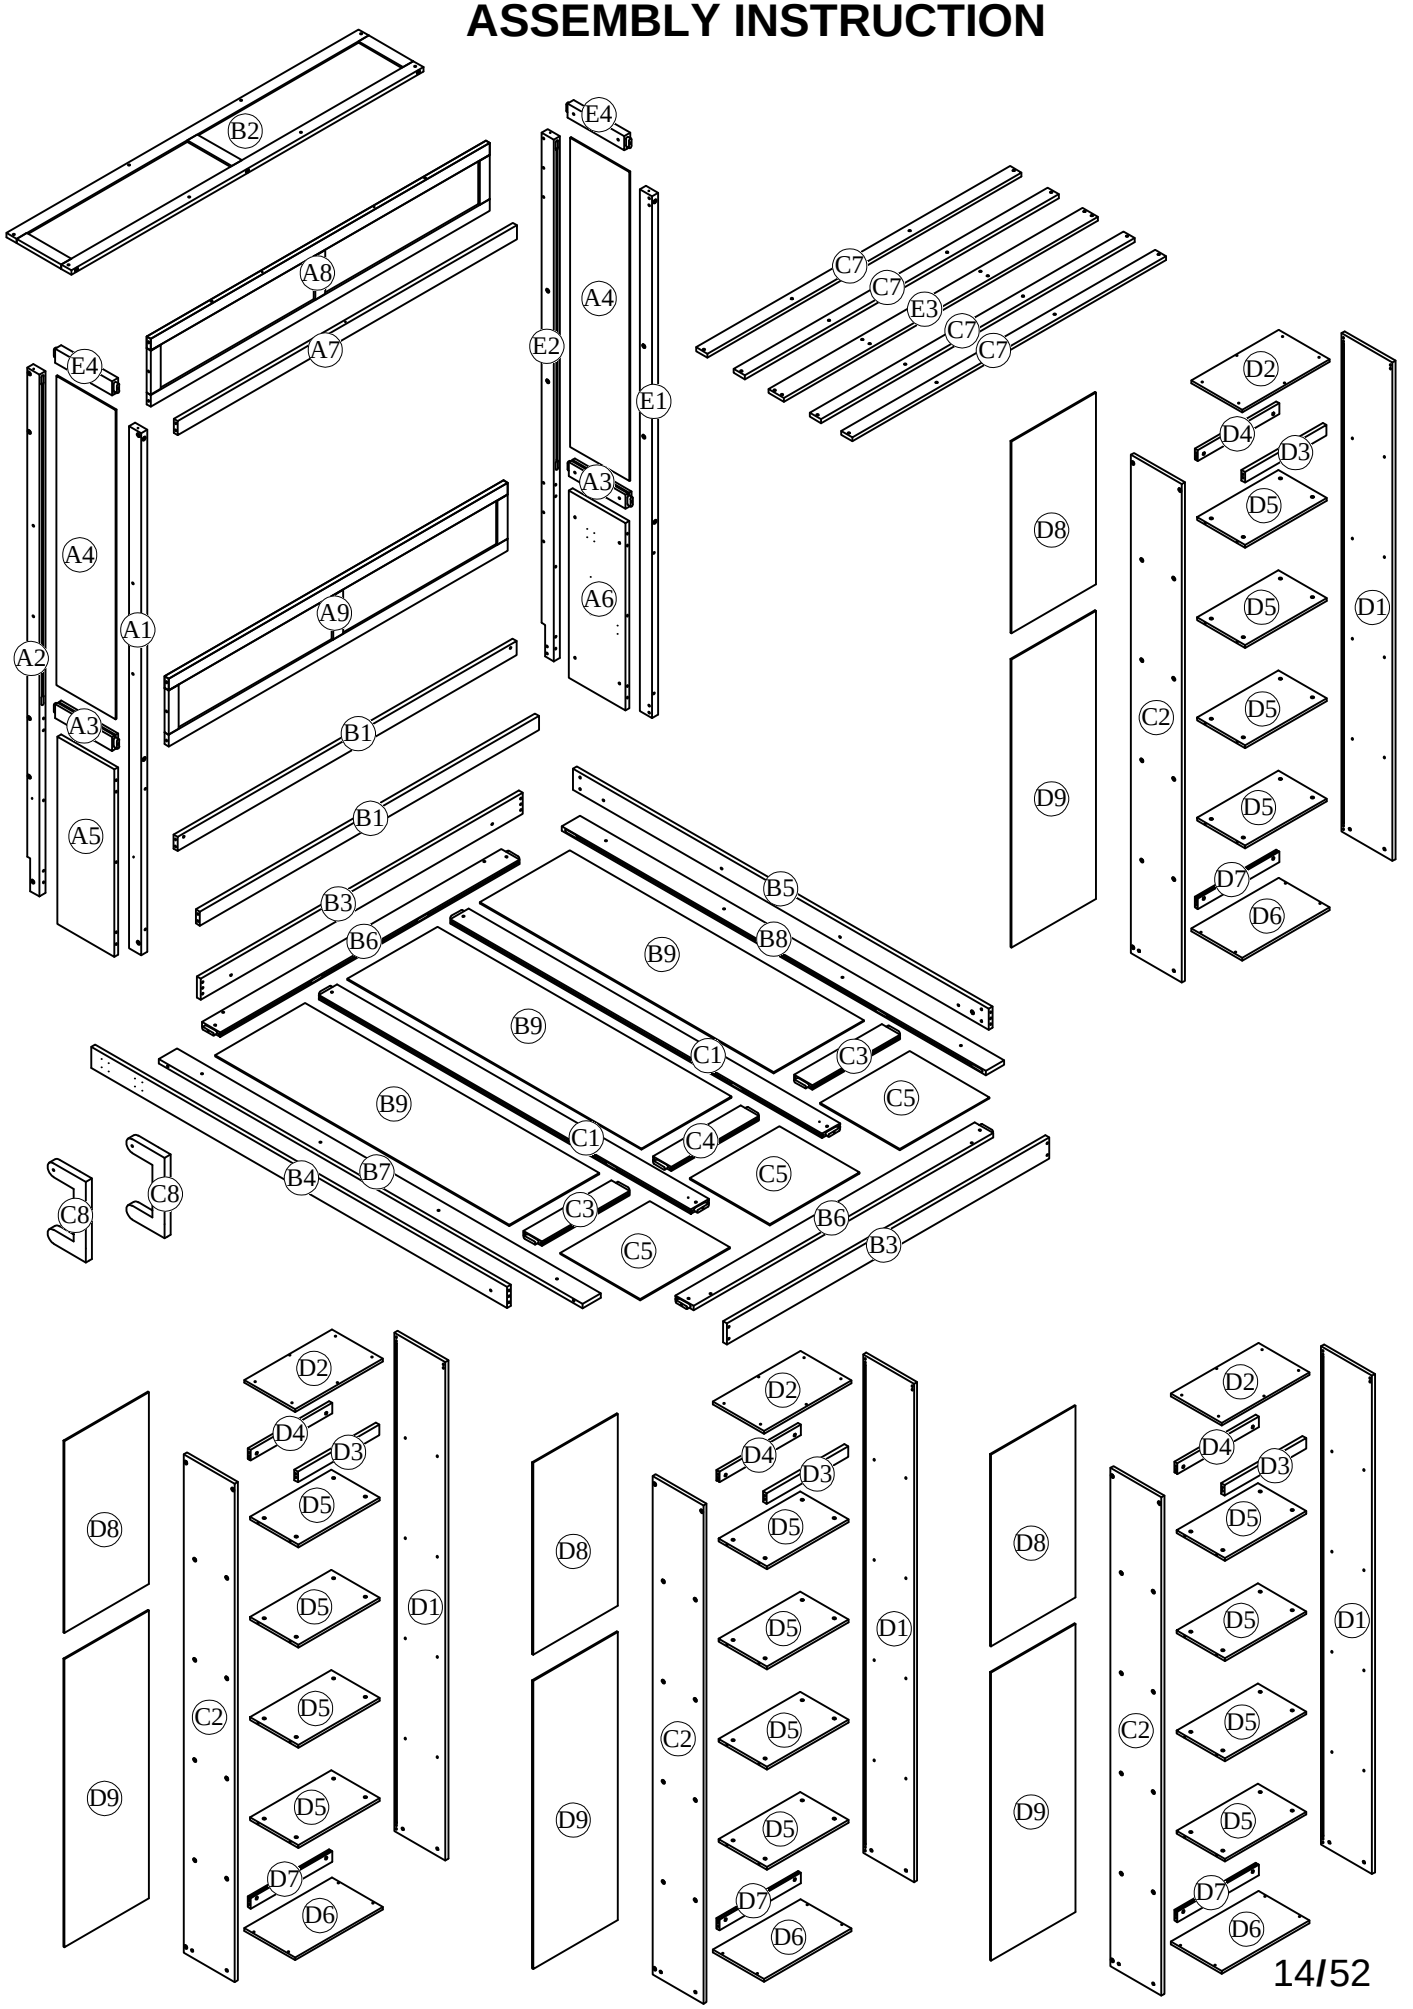
Frequently Asked Questions.
Malfunctioned Pistons.

How do you know when the Murphy Bed's Piston has malfunctioned?
It would be quite evident in that :












a.) the Bed Frame may become LOPSIDED and
b.) the Lift-PULL force to CLOSE may be "heavier" than before.

IMMEDIATELY - STOP USING YOUR MURPHY BED.
SEEK and CONSULT professional maintenance service to ascertain the problem and repair and or have the pistons changed.













ASSEMBLY INSTRUCTION




Part List (Box 1-N708P527489)

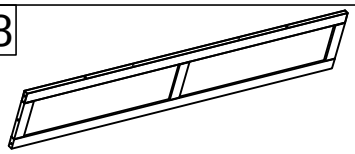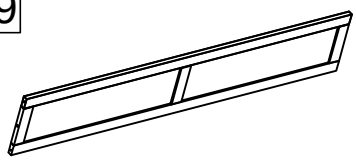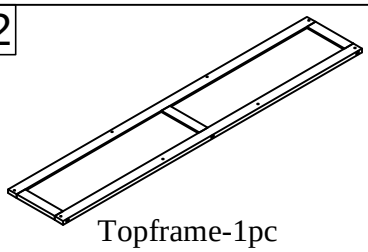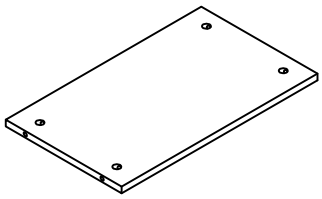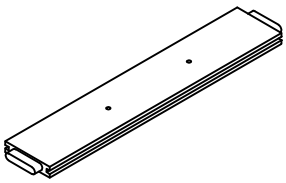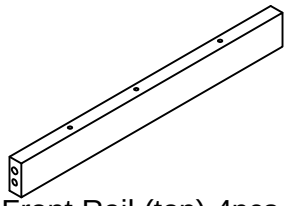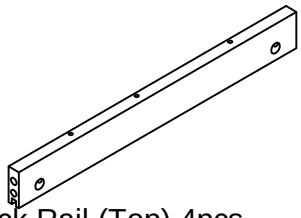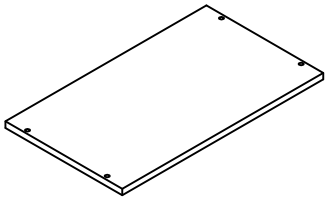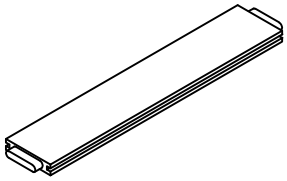A5  Left Panel (Bottom)-1pc	A6  Right Panel (Bottom)-1pc	A8  Back Frame (Top)-1pc
A9  Back Frame (Bottom)-1pc	B2  Topframe-1pc	D5  Shelf Panel-6pcs
C3  Crossbar-2pcs	D3  Front Rail (top)-4pcs	D4  Back Rail (Top)-4pcs
D6  Bottom panel-4pcs	C4  Middle Crossbar-1pc	

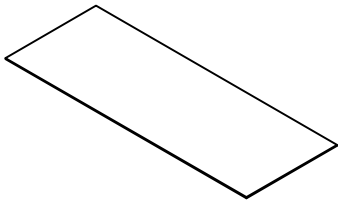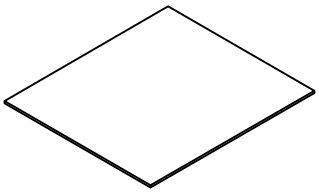

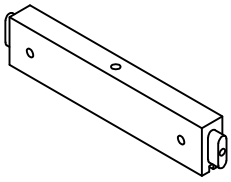
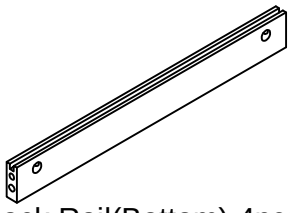
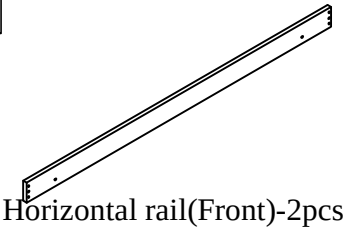
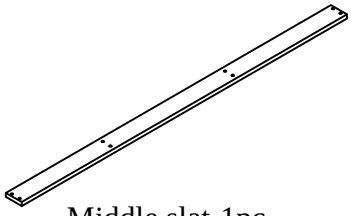
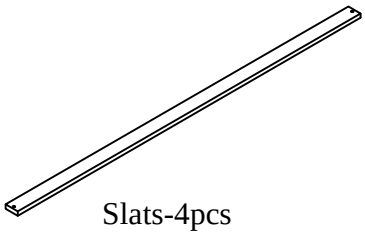
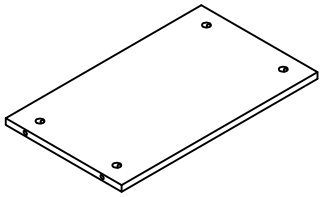
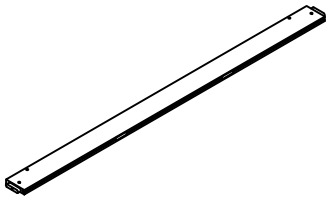
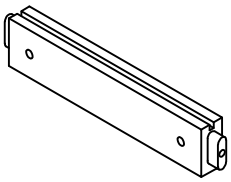
Part List (Box 2-N708P527490)

B9  Front Panel(Bottom)-3pcs	C5  Front Panel(Top)-3pcs	D8  Back panel (Top)-4pcs
D9  Back panel (bottom)-4pcs	A4  panel (bottom)-2pcs	C8  Woodleg-2pcs
E4  Horizontal rail (Top)-2pcs	D7  Back Rail(Bottom)-4pcs	B3  Horizontal rail(Front)-2pcs
E3  Middle slat-1pc	C7  Slats-4pcs	D5  Shelf Panel-8pcs
B6  Horizontal rail(Front)-2pcs	A3  Horizontal rail (Middle)-2pcs	

















Part List & Hardware List (Box 3-N708P527491)

A1  Front leg Left -1pc	A2  Back leg Left-1pc	E1  Front leg Right-1pc
E2  Back leg Right-1pc	C2  Left side Panel-4pcs	D1  Right side Panel-1pc








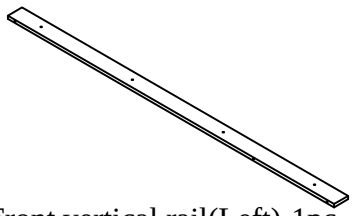
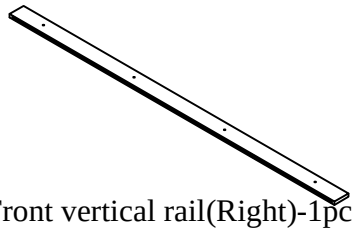
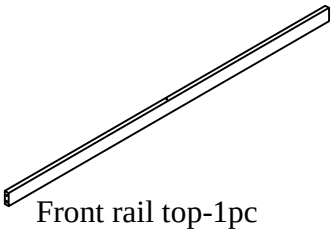
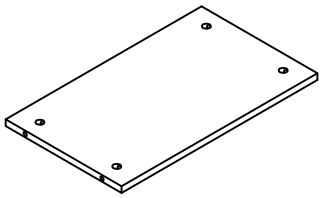
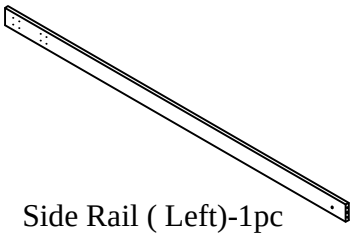
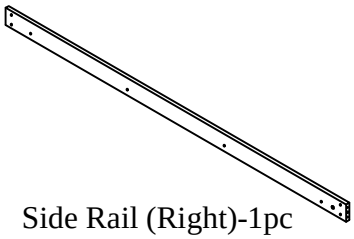
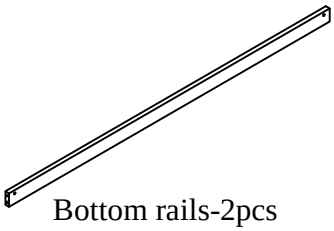
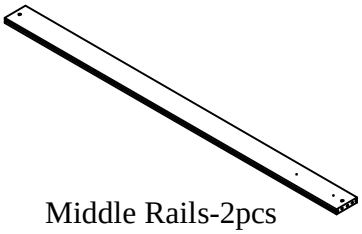

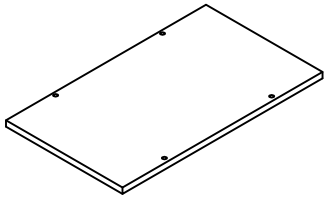
Part List & Hardware List (Box 4-N708P527492)


B7  Front vertical rail(Left)-1pc	B8  Front vertical rail(Right)-1pc	A7  Front rail top-1pc
D5  Shelf Panel-2pcs	B4  Side Rail (Left)-1pc	B5  Side Rail (Right)-1pc
B1  Bottom rails-2pcs	C1  Middle Rails-2pcs	D1  Right side Panel-3pcs
D2  Top panel-4pcs		

Hardware List (Box 1-N708P527489)

1  Ø1/4" x 100 mm Hex-Head bolts 18pcs	2  Ø1/4" x 12 mm Horizontal-Hole bolts 162pcs	3  Ø8 x 30 mm Wood dowel 106pcs
4  Ø1/4" x 80 mm Hex-Head bolts 2pcs	5  Screws Ø6.5 x40 8pcs	7  Ø1/4" x 70 mm Hex-Head bolts 18pcs
8  M4 x 15 mm Wood Screws 104pcs	9  Ø1/4" x 125 mm Hex-Head bolts 4pcs	10  Cam Bolt 22pcs
11  Cam Lock 22pcs	13  M4 x 20 mm Wood Screws 62pc	14  Nut - 4pcs
15  Screws Ø6.5 x35 8pcs	16  Ø1/3" x 40 mm Hex-Head bolts 2pcs	17  Ø1/4" x 15 mm T-nut 2pcs
18  Ø1/4" x 40 mm Hex-Head bolts 2pcs	19  Ø20 / Ø6 x 2 mm Washer 2pcs	21  Bolt 5/32" x 25 mm 4pcs
AG  M4 x 65 mm Wood Screws 10pcs Vis à bois 10 pièces	24  Ø1/4" x 60 mm Hex-Head bolts 120pcs	27  M3.5 x 12 mm Wood Screws 144pcs

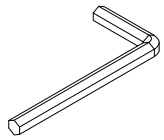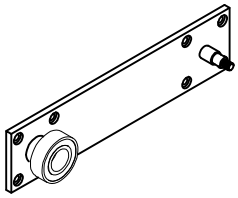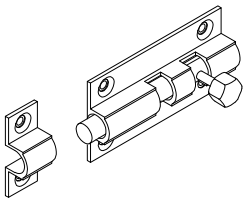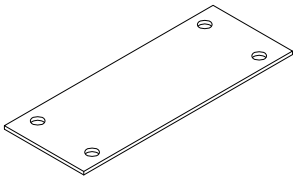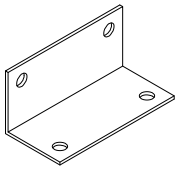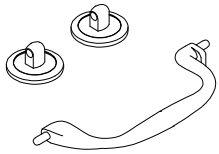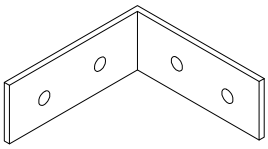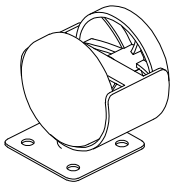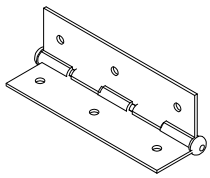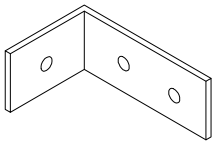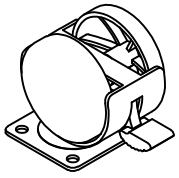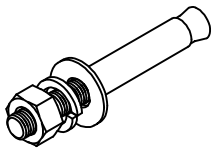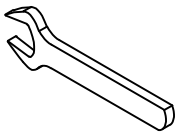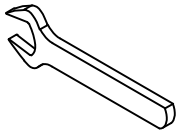Hardware List (Box 1-N708P527489)


35  Allen Key 4pcs	29  Metal Corner Left - 1pc	30  Metal Corner Right - 1pc
31  Metal Panel Link - 2pcs	33  Barrel Bolt Latch - 2pcs	34  M4 x 30 mm Wood Screws 24pc
6  Straight Steel Panel 8pcs	12  Metal Angle - 18pcs	20  Handle - 2pcs
22  Metal Angle - 3pcs	25  Rotationable Wheel - 8pcs	26  Leaf Hinge - 16pcs
32  Metal Angle - 4pcs	36  Rotationable Wheel - 4pcs	AY  Ø6 x 75mm Iron wall socket - 10pcs
CC  K13 Wrench - 1pc	CA  K10 Wrench - 1pc	BB  Ø18 / Ø6 x 1.5 mm Iron Washer 10pcs




Assembly Tools Required (Not Included)

Hardware List (Box 1-N708P527489)

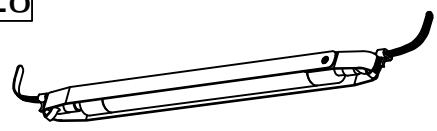28



Piston Steam - 2pcs




Assembly Tools Required (Not Included)

STEP1: Following below illustration.

Installation video


1	2	3	4
18pcs	20pcs	8pcs	2pcs

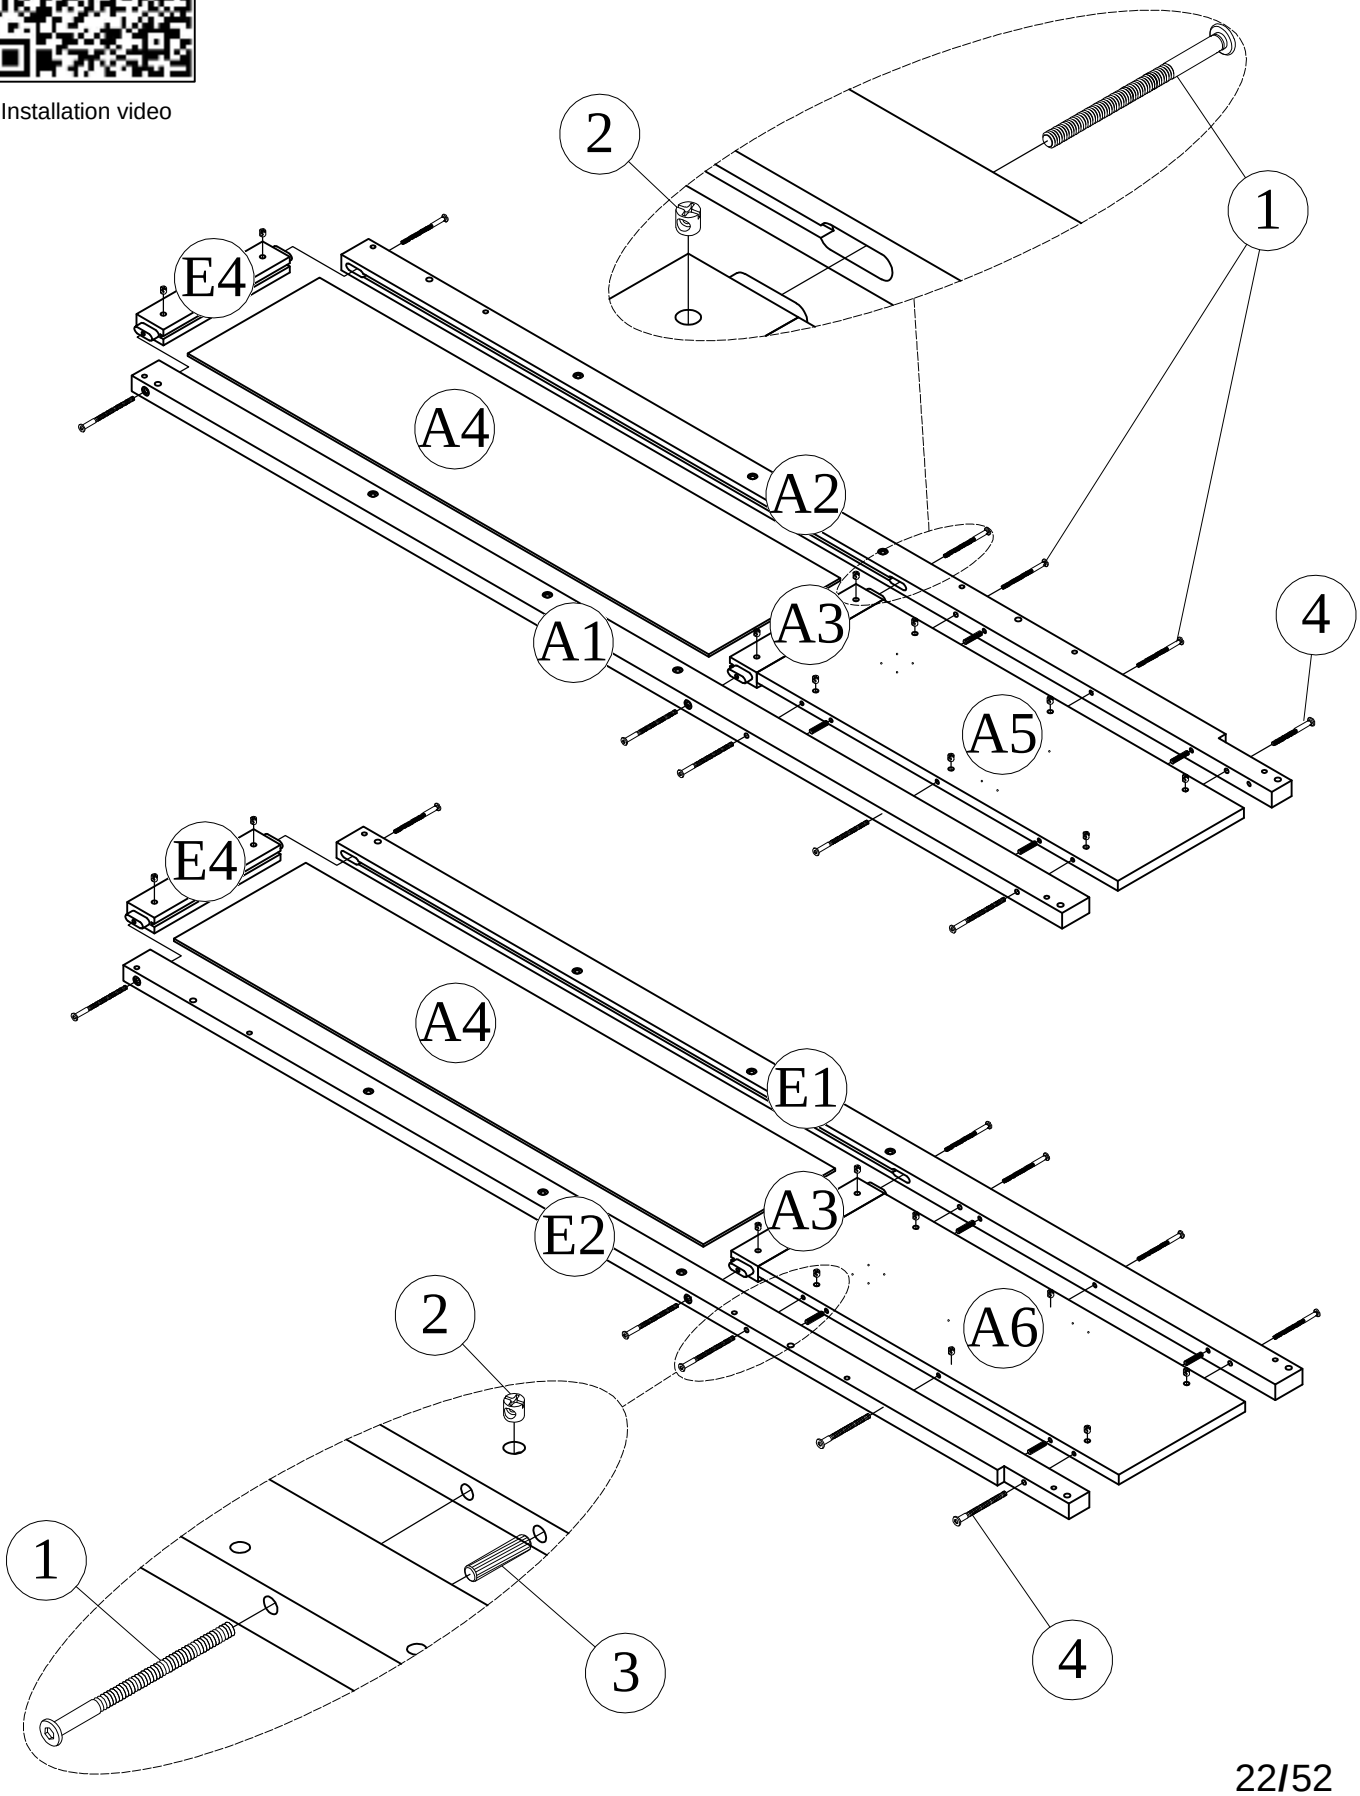


STEP2: Following below illustration.

Installation video


2	3	7
14pcs	4pcs	14pcs

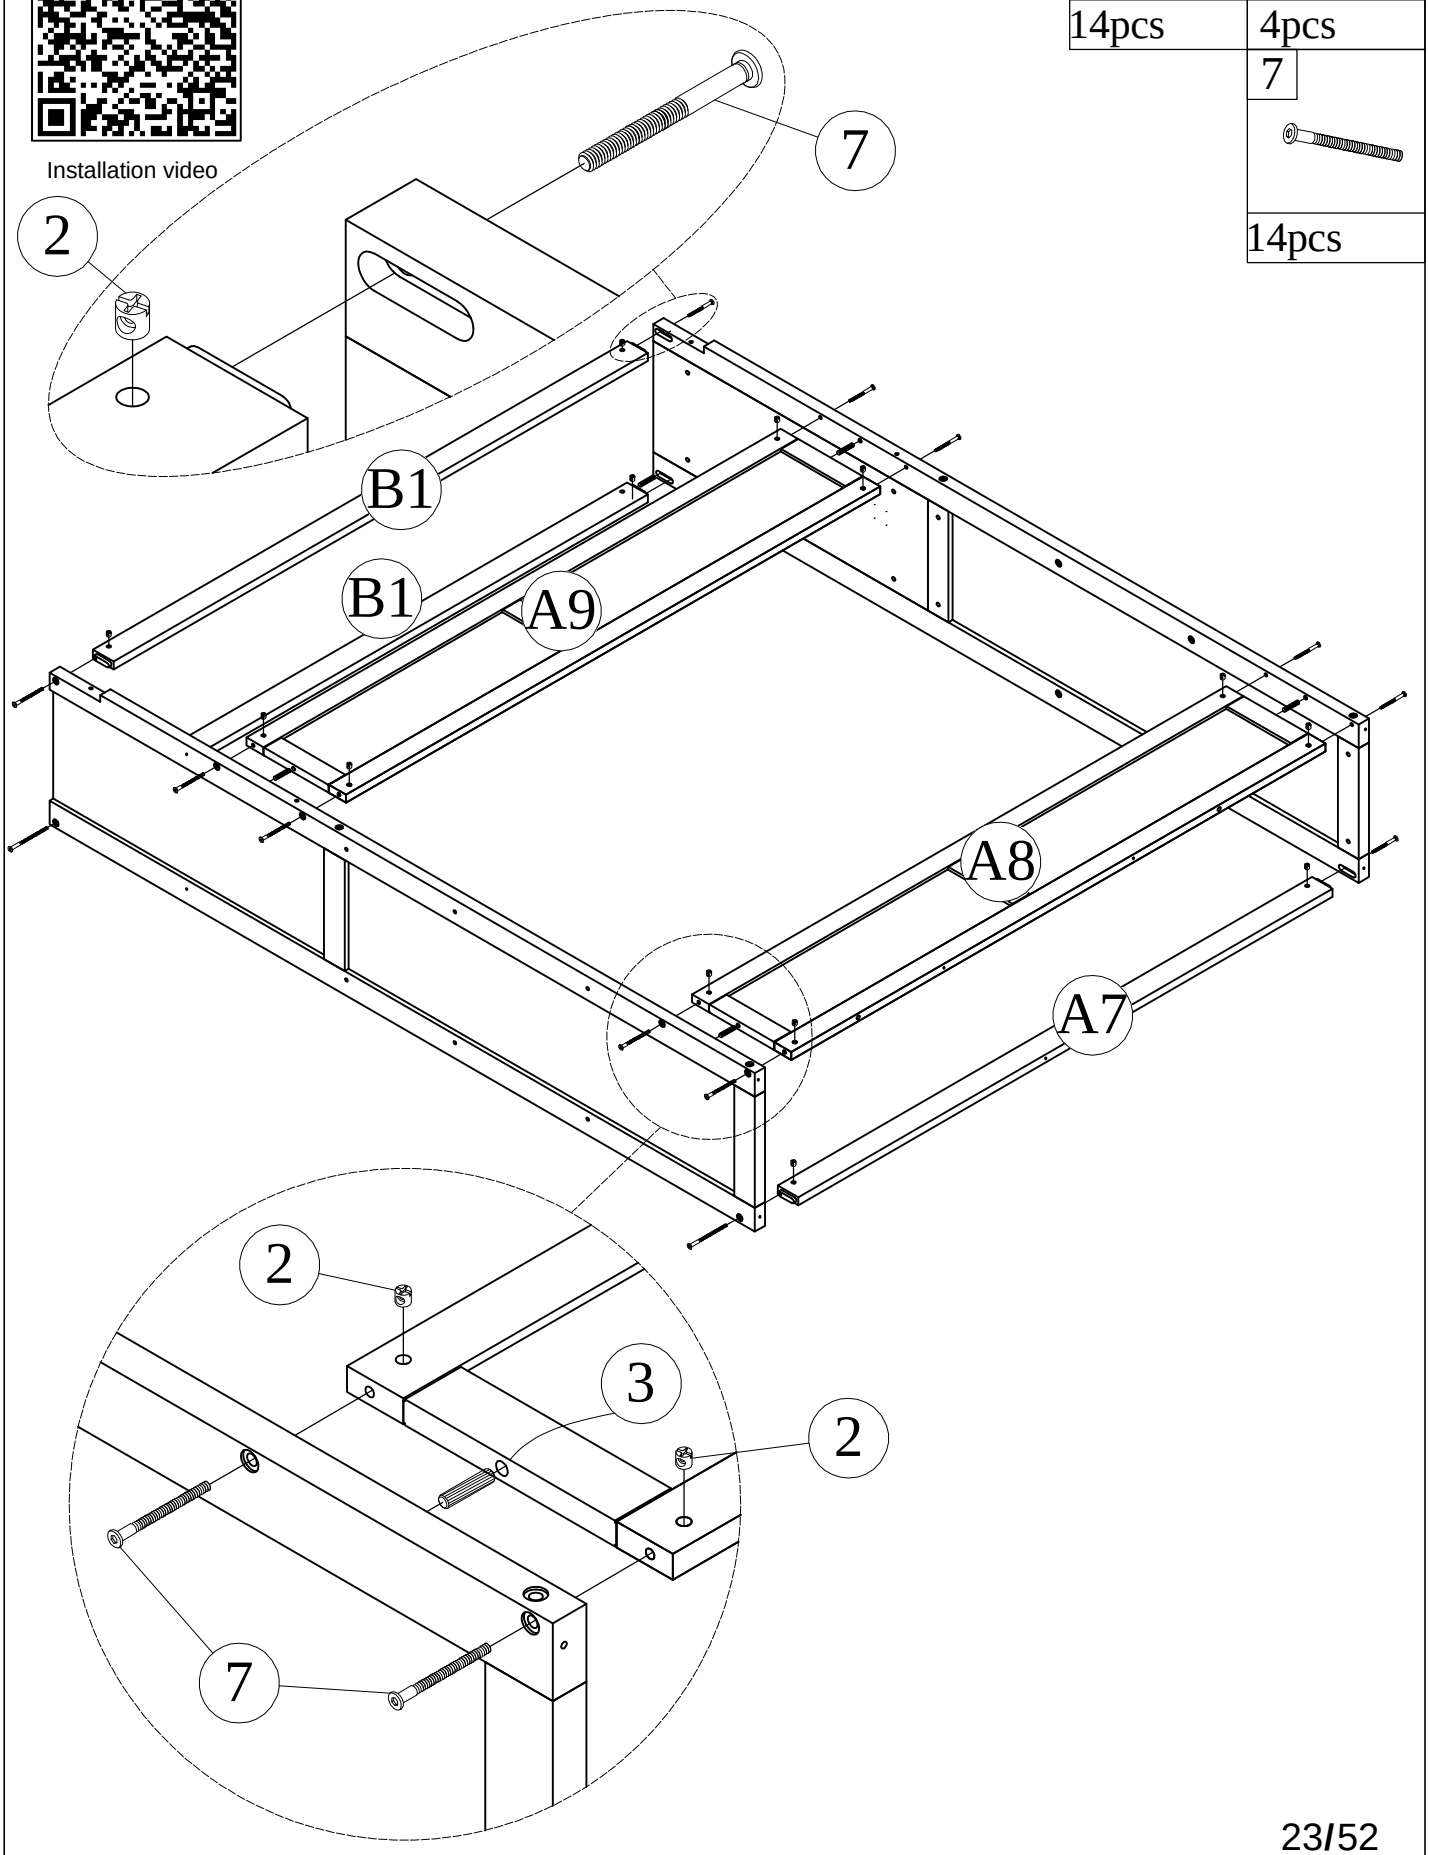

STEP3: Following below illustration.


3	15
	
6pcs	8pcs

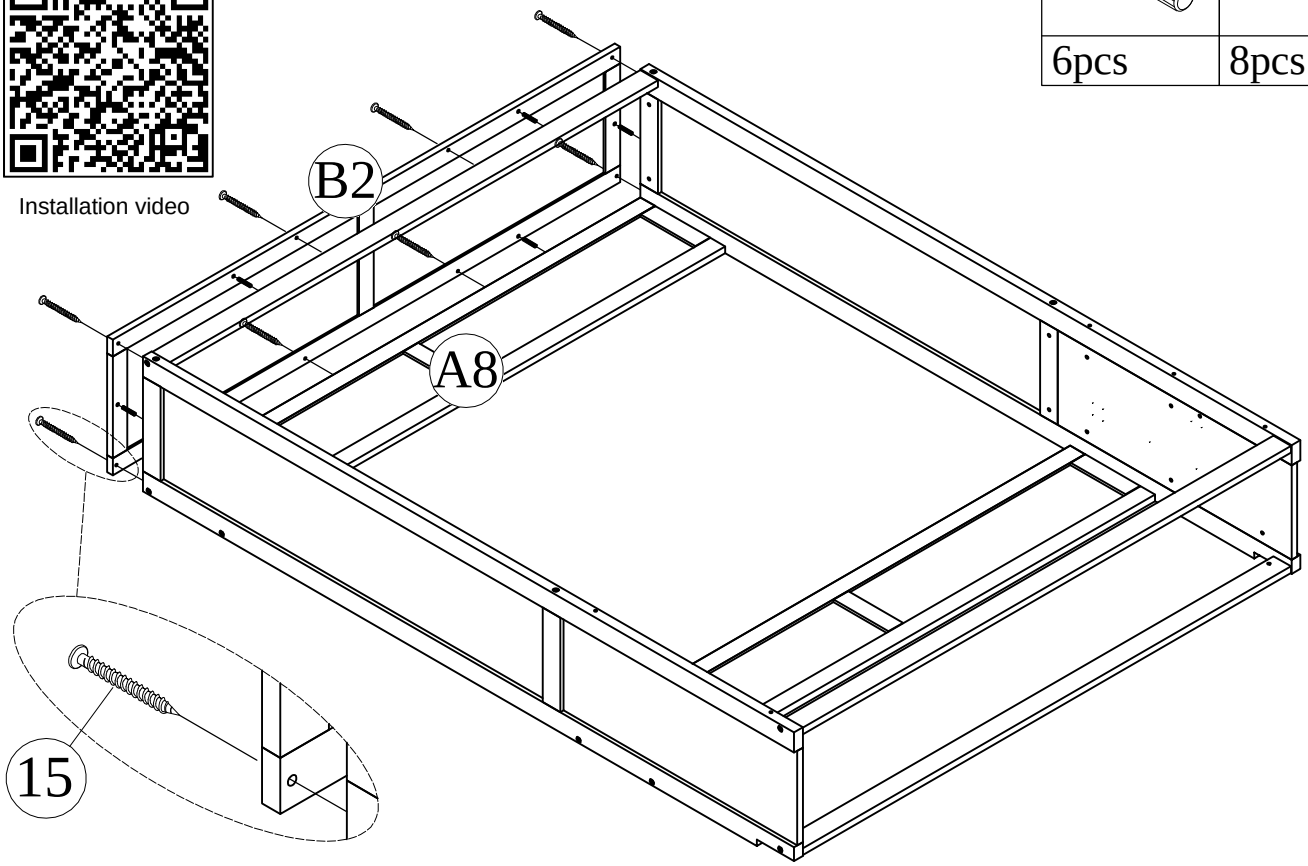Installation video





STEP4: Following below illustration.

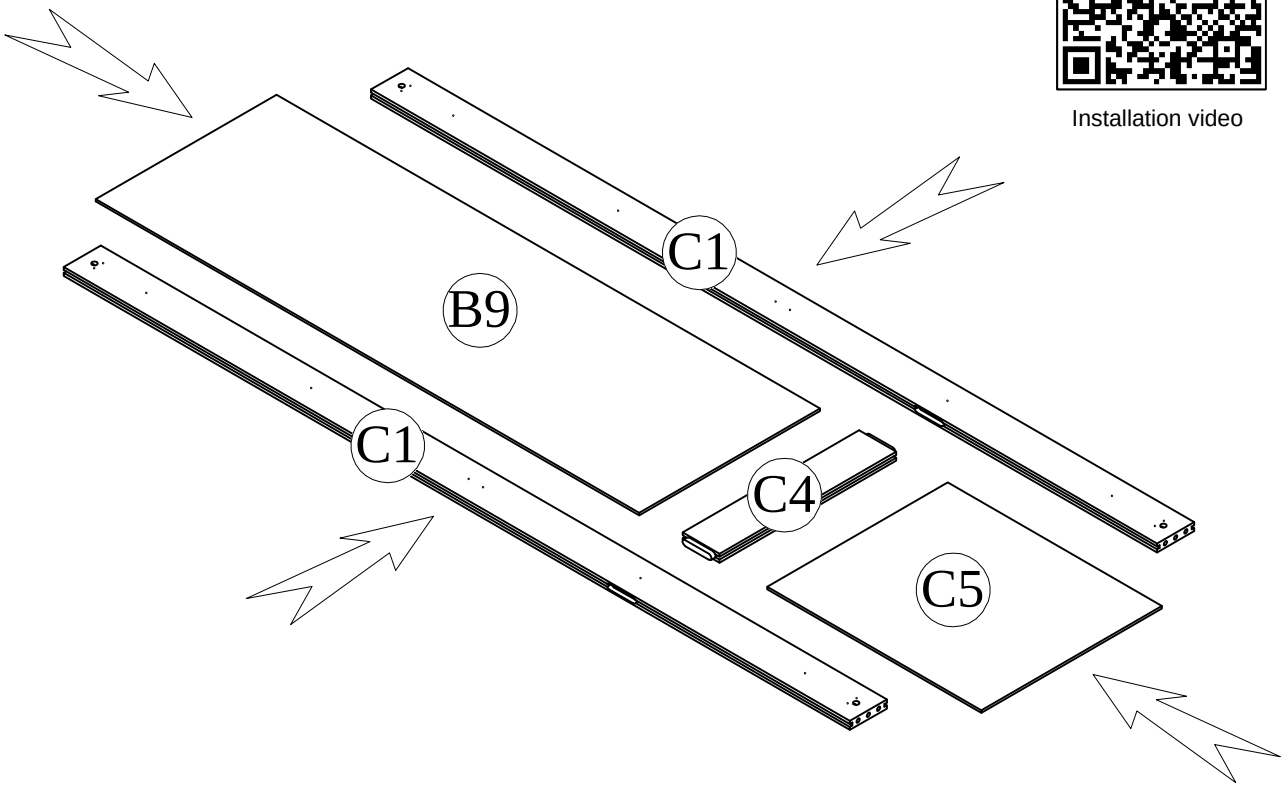
Installation video



STEP5: Following below illustration.


Installation video

3	10	11
		
8pcs	4pcs	4pcs

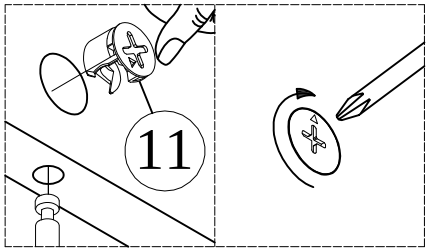

STEP6: Following below illustration.

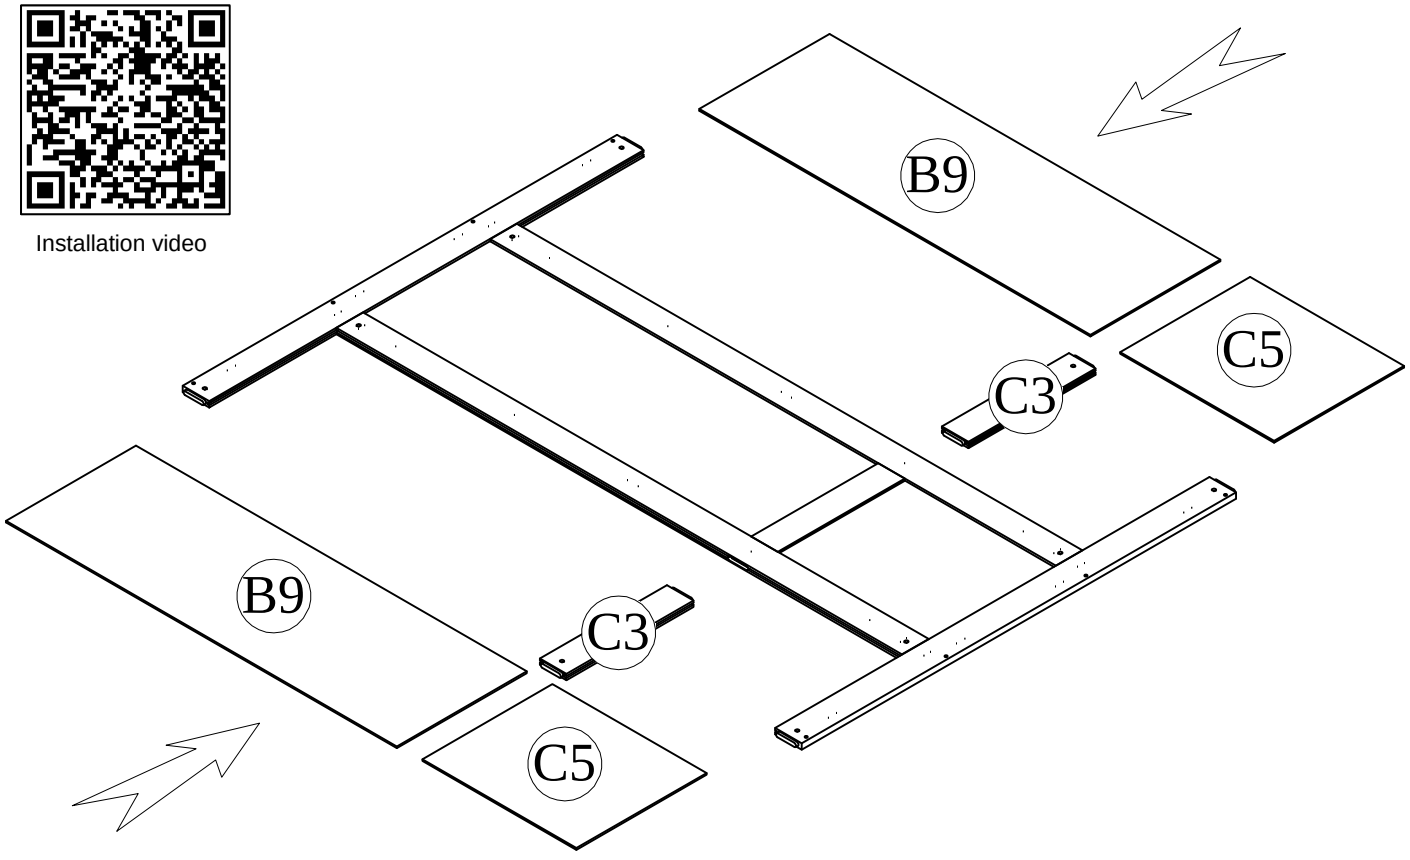
Installation video



STEP7: Following below illustration.

Installation video


2	9
4pcs	4pcs

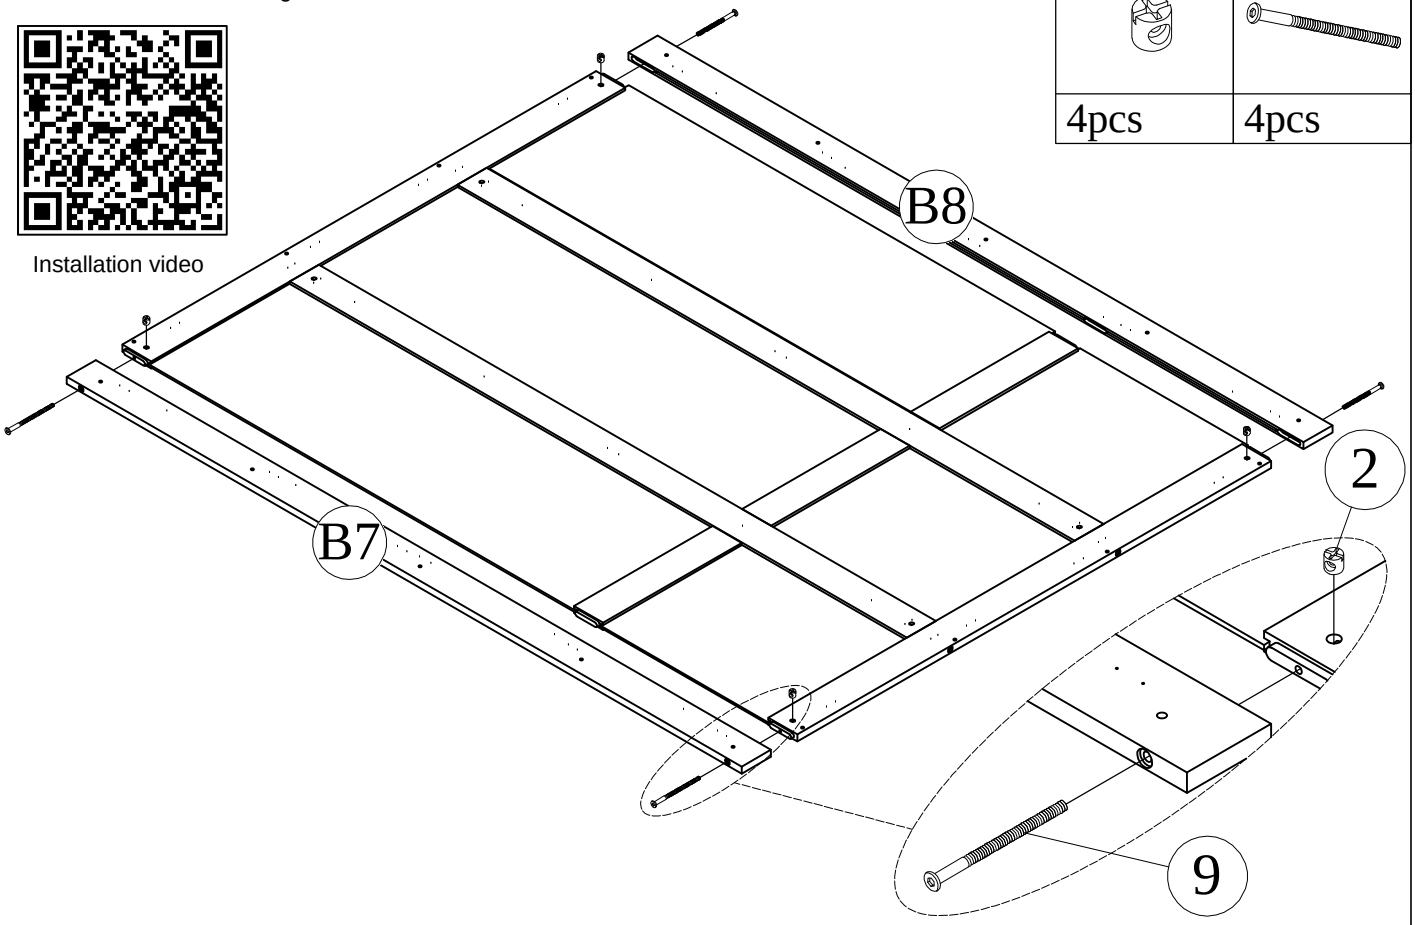


STEP8: Following below illustration.

Installation video

6	8
8pcs	32pcs

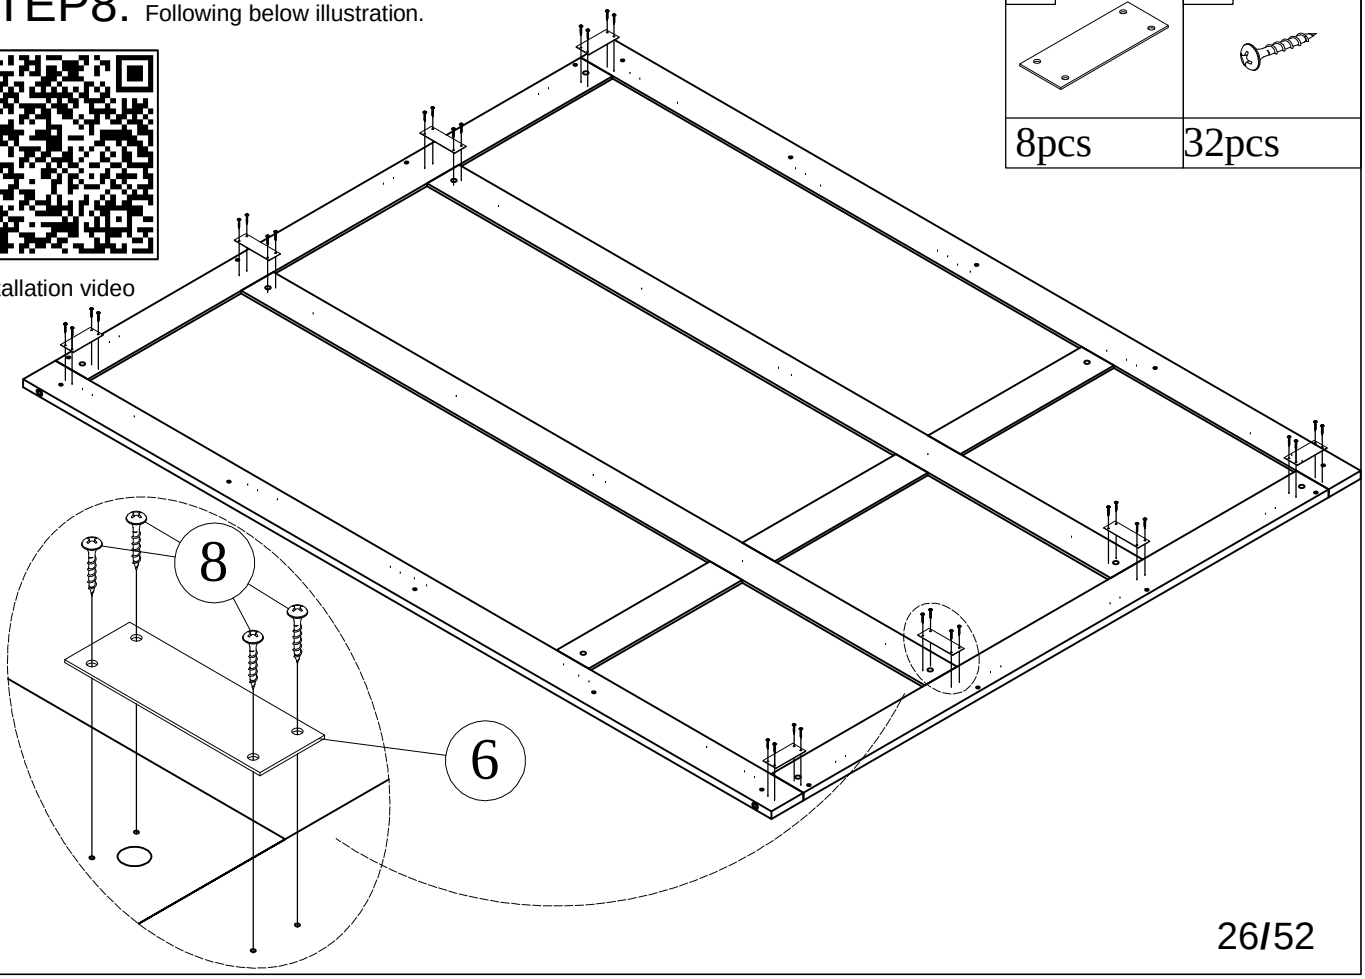


STEP9: Following below illustration.

10

18pcs

Installation video

STEP10: Following below illustration.

2	3
	
4pcs	8pcs


7


4pcs

Installation video

STEP11: Following below illustration.


Installation video

11	
	
18pcs	

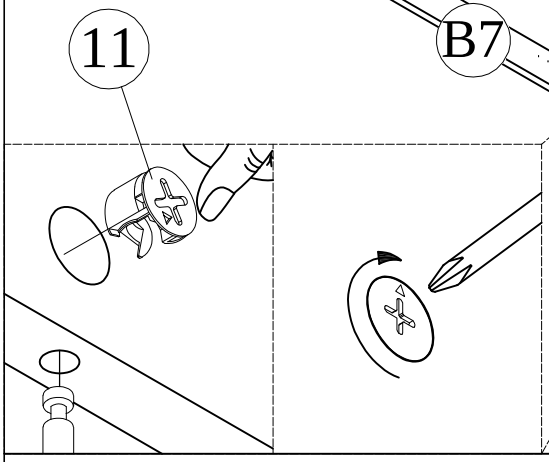


STEP12: Following below illustration.


Installation video

8	12
	
72pcs	18pcs

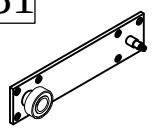
STEP13: Following below illustration.

13	31
	
8pcs	1pc

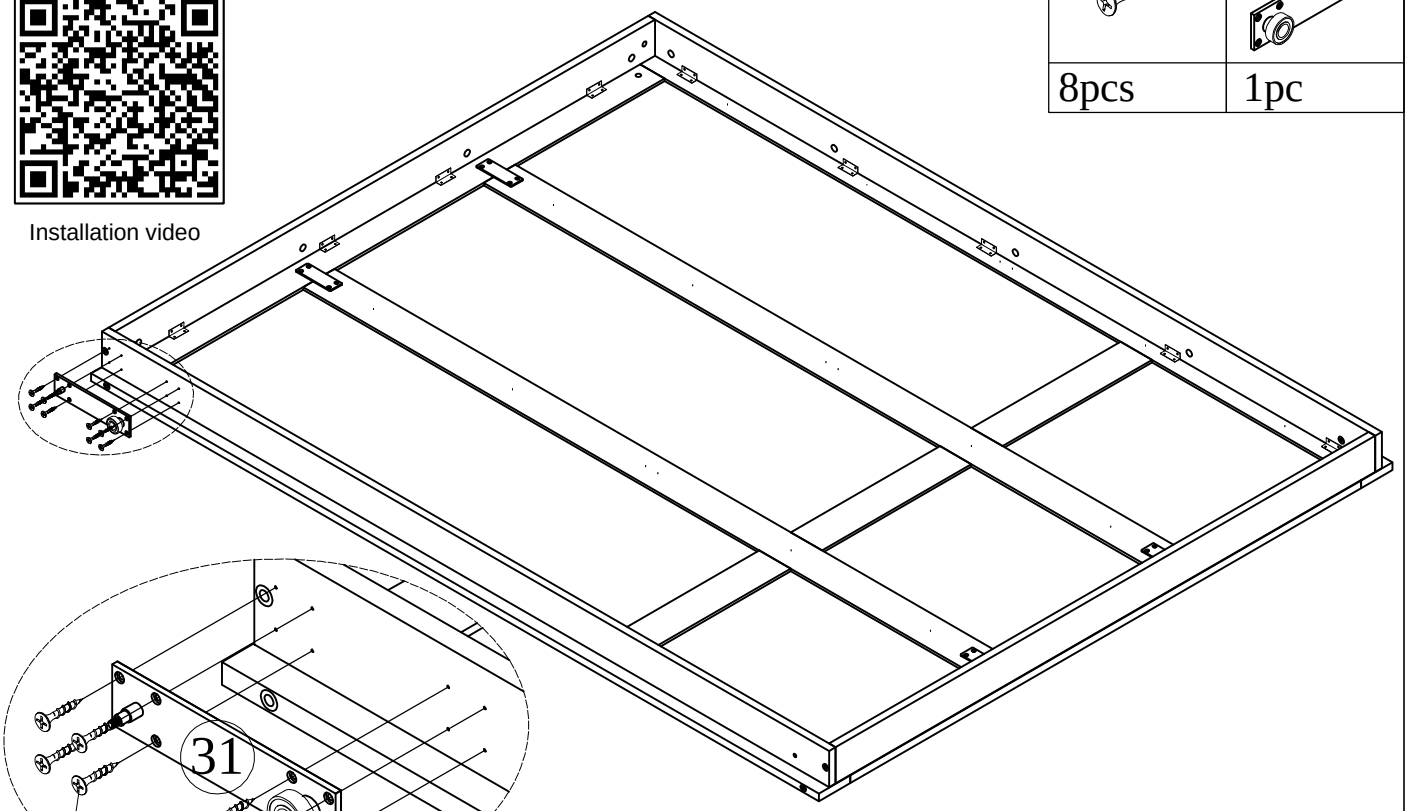Installation video



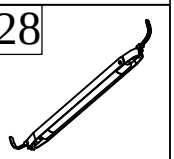
STEP14: Following below illustration.


14	28
	
1pc	1pc

CC

1pc

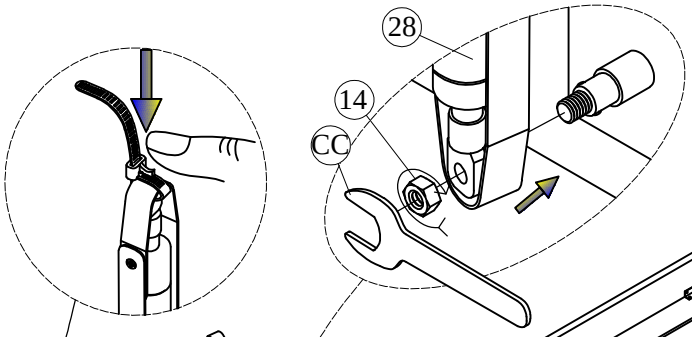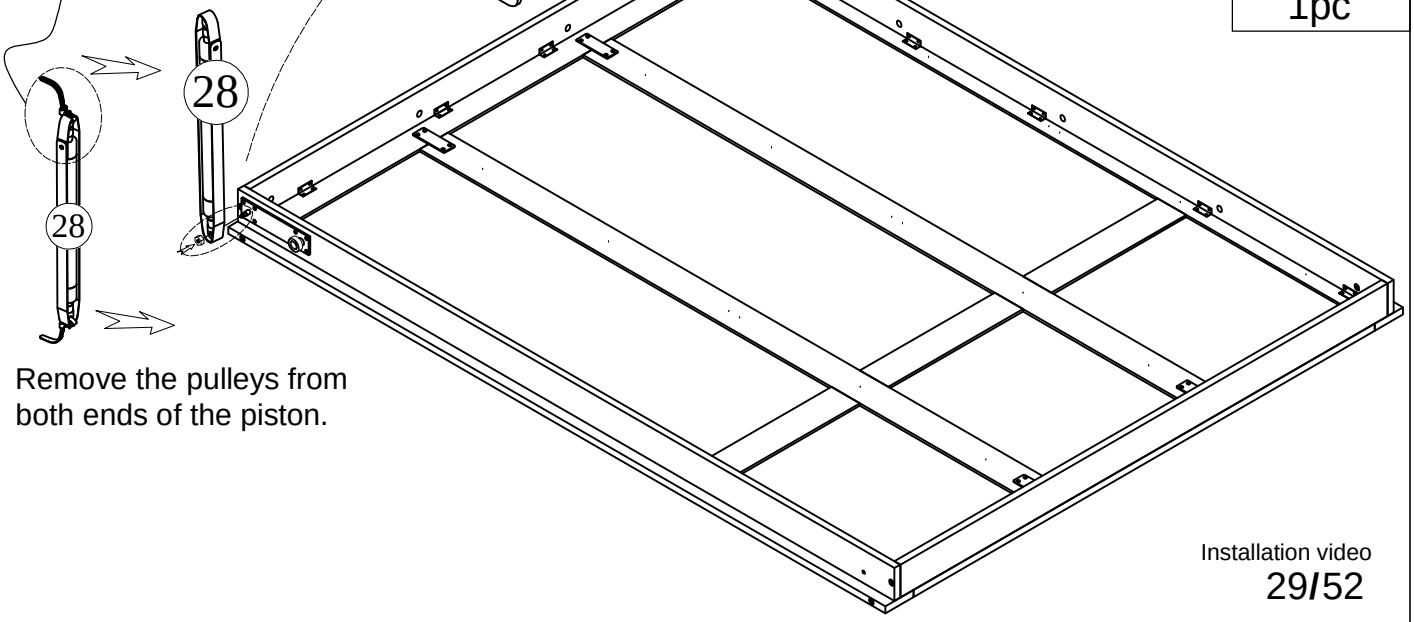Installation video






Remove the pulleys from both ends of the piston.

Installation video

STEP15: Following below illustration.

13	31
8pcs	1pc

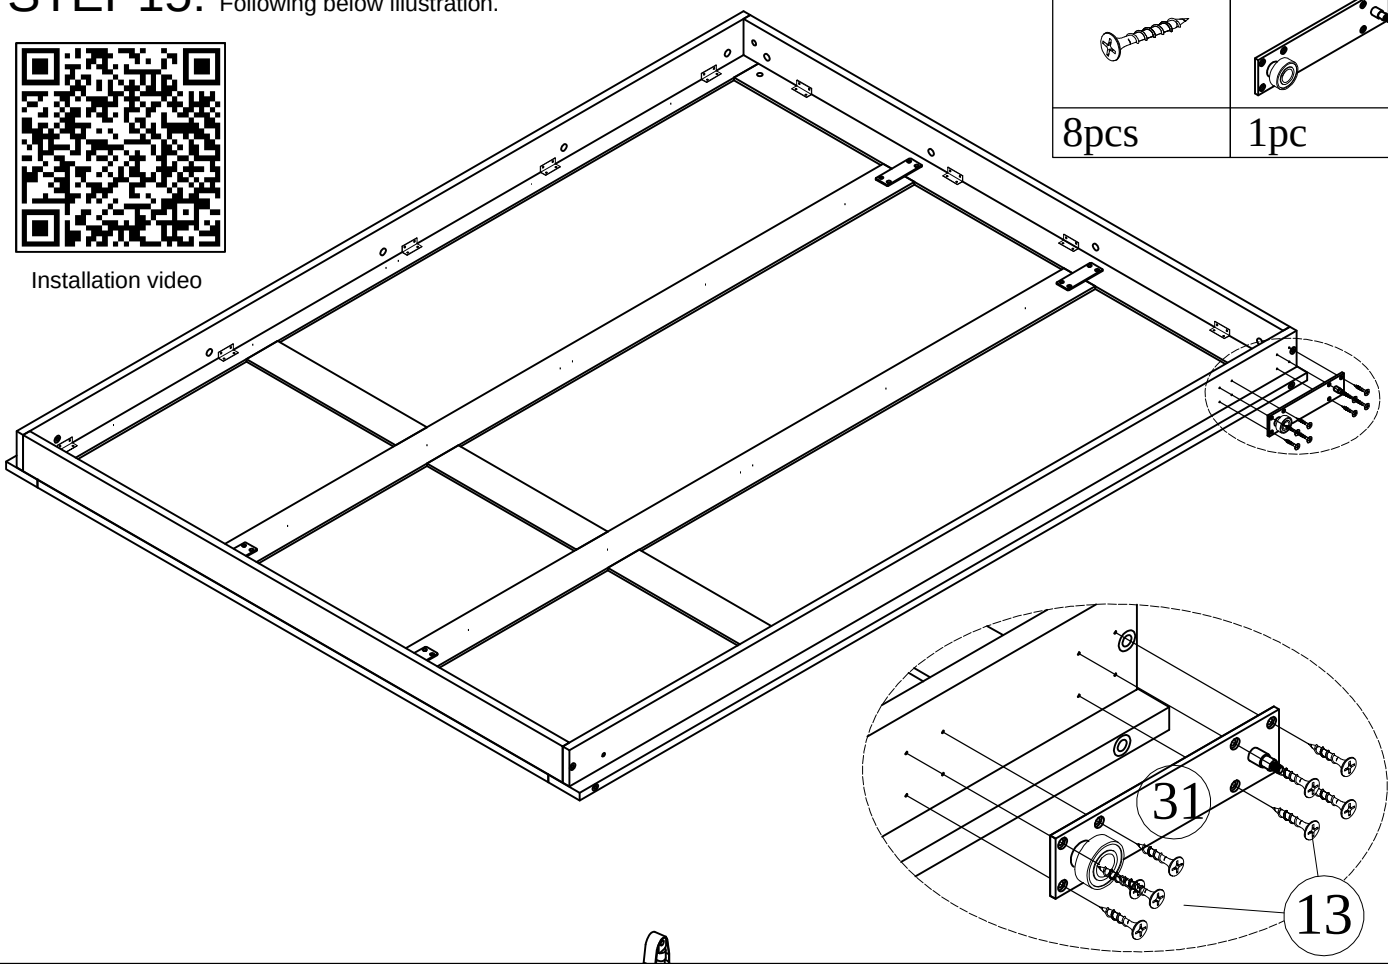
Installation video



STEP16: Following below illustration.

CC	14	28
1pc	1pc	1pc

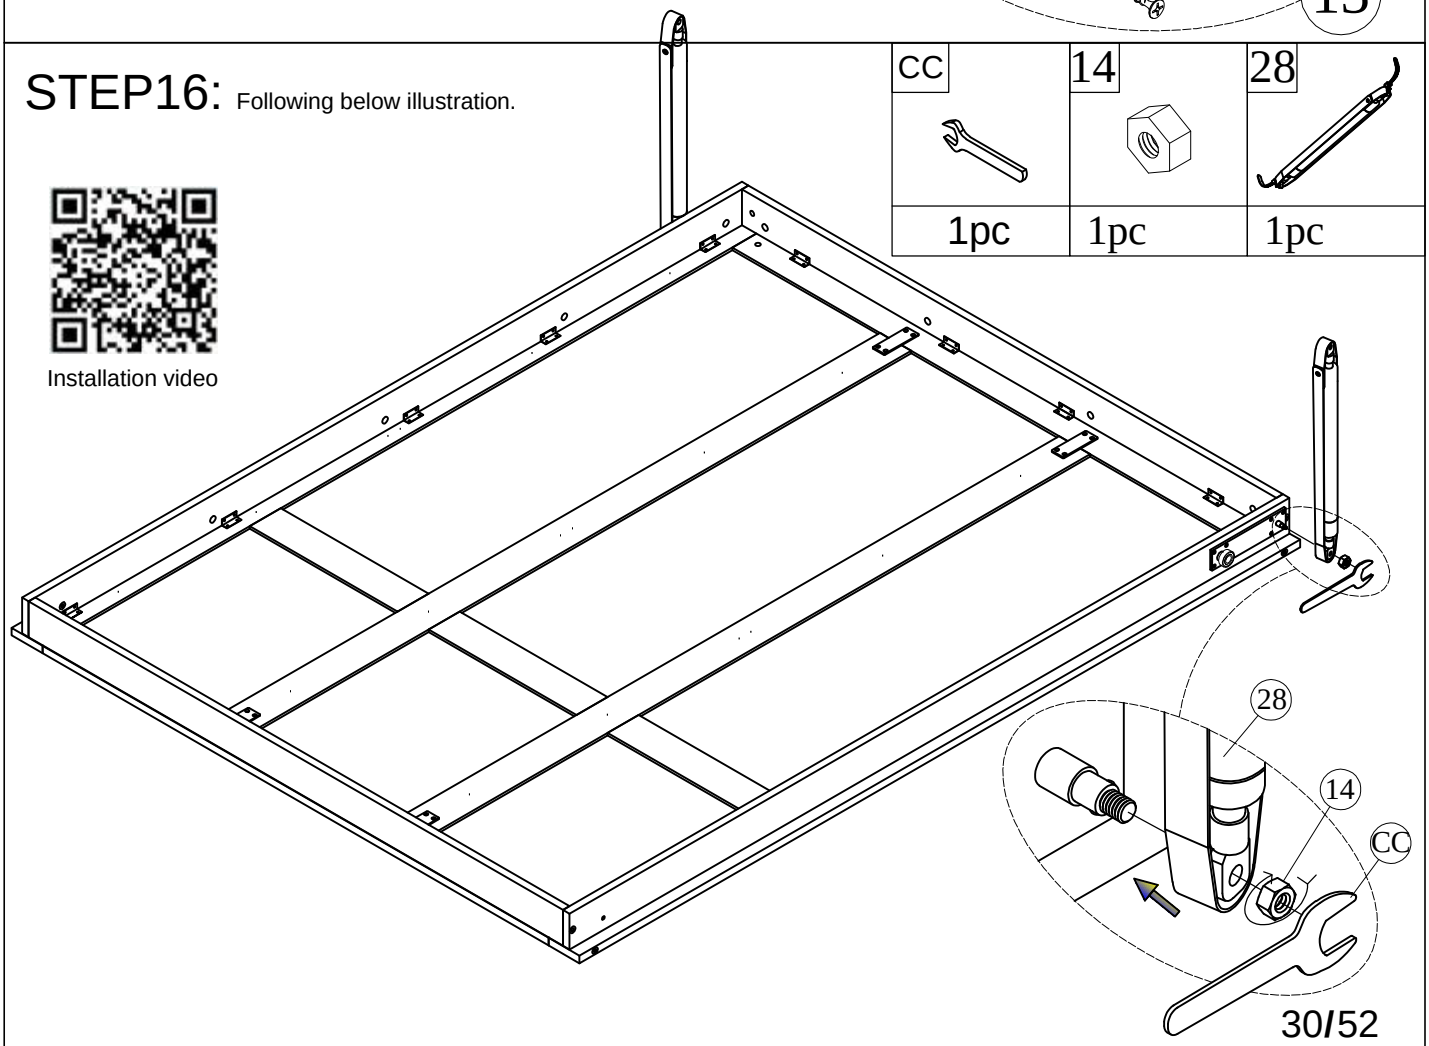
Installation video




STEP17: Following below illustration.

13	30
	
10pcs	1pc

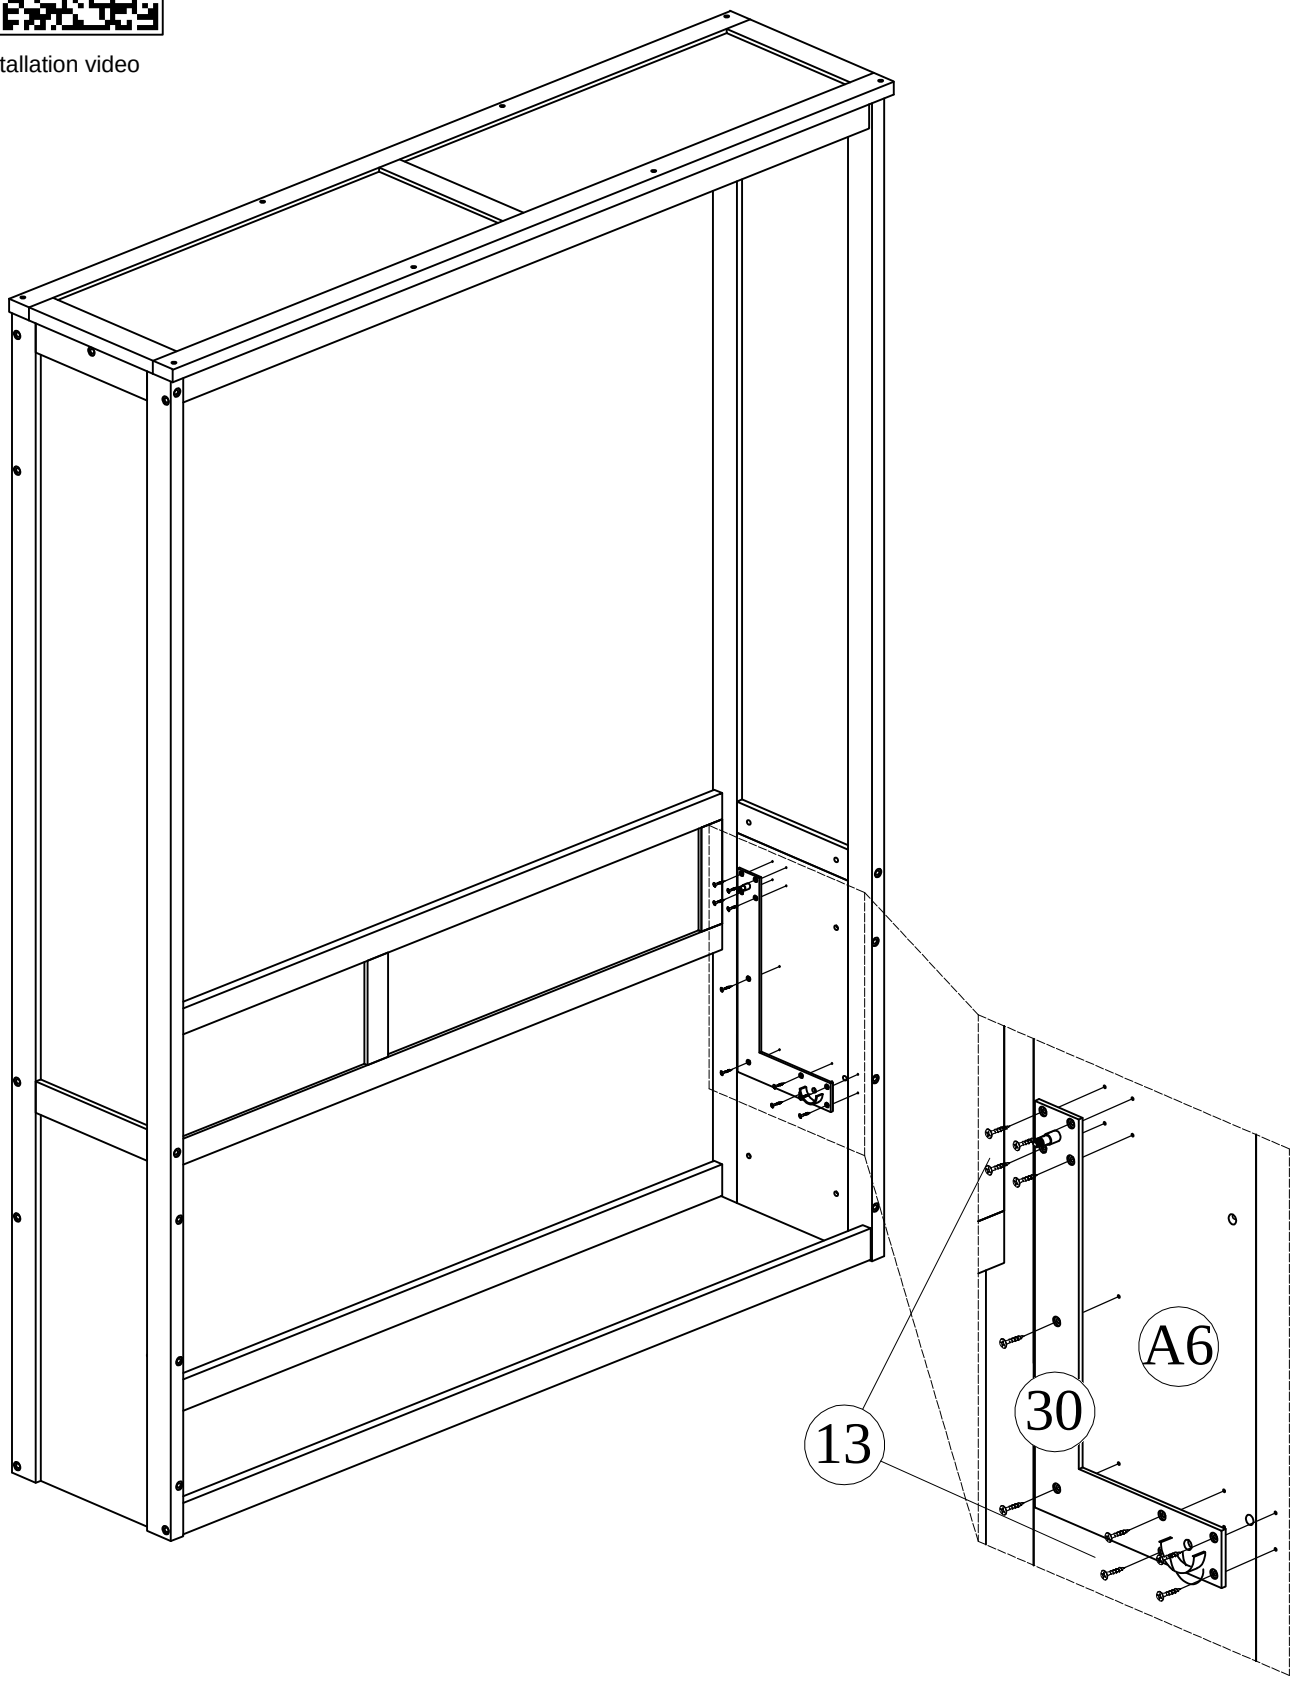
Installation video



STEP18: Following below illustration.


13	29
	
10pcs	1pc

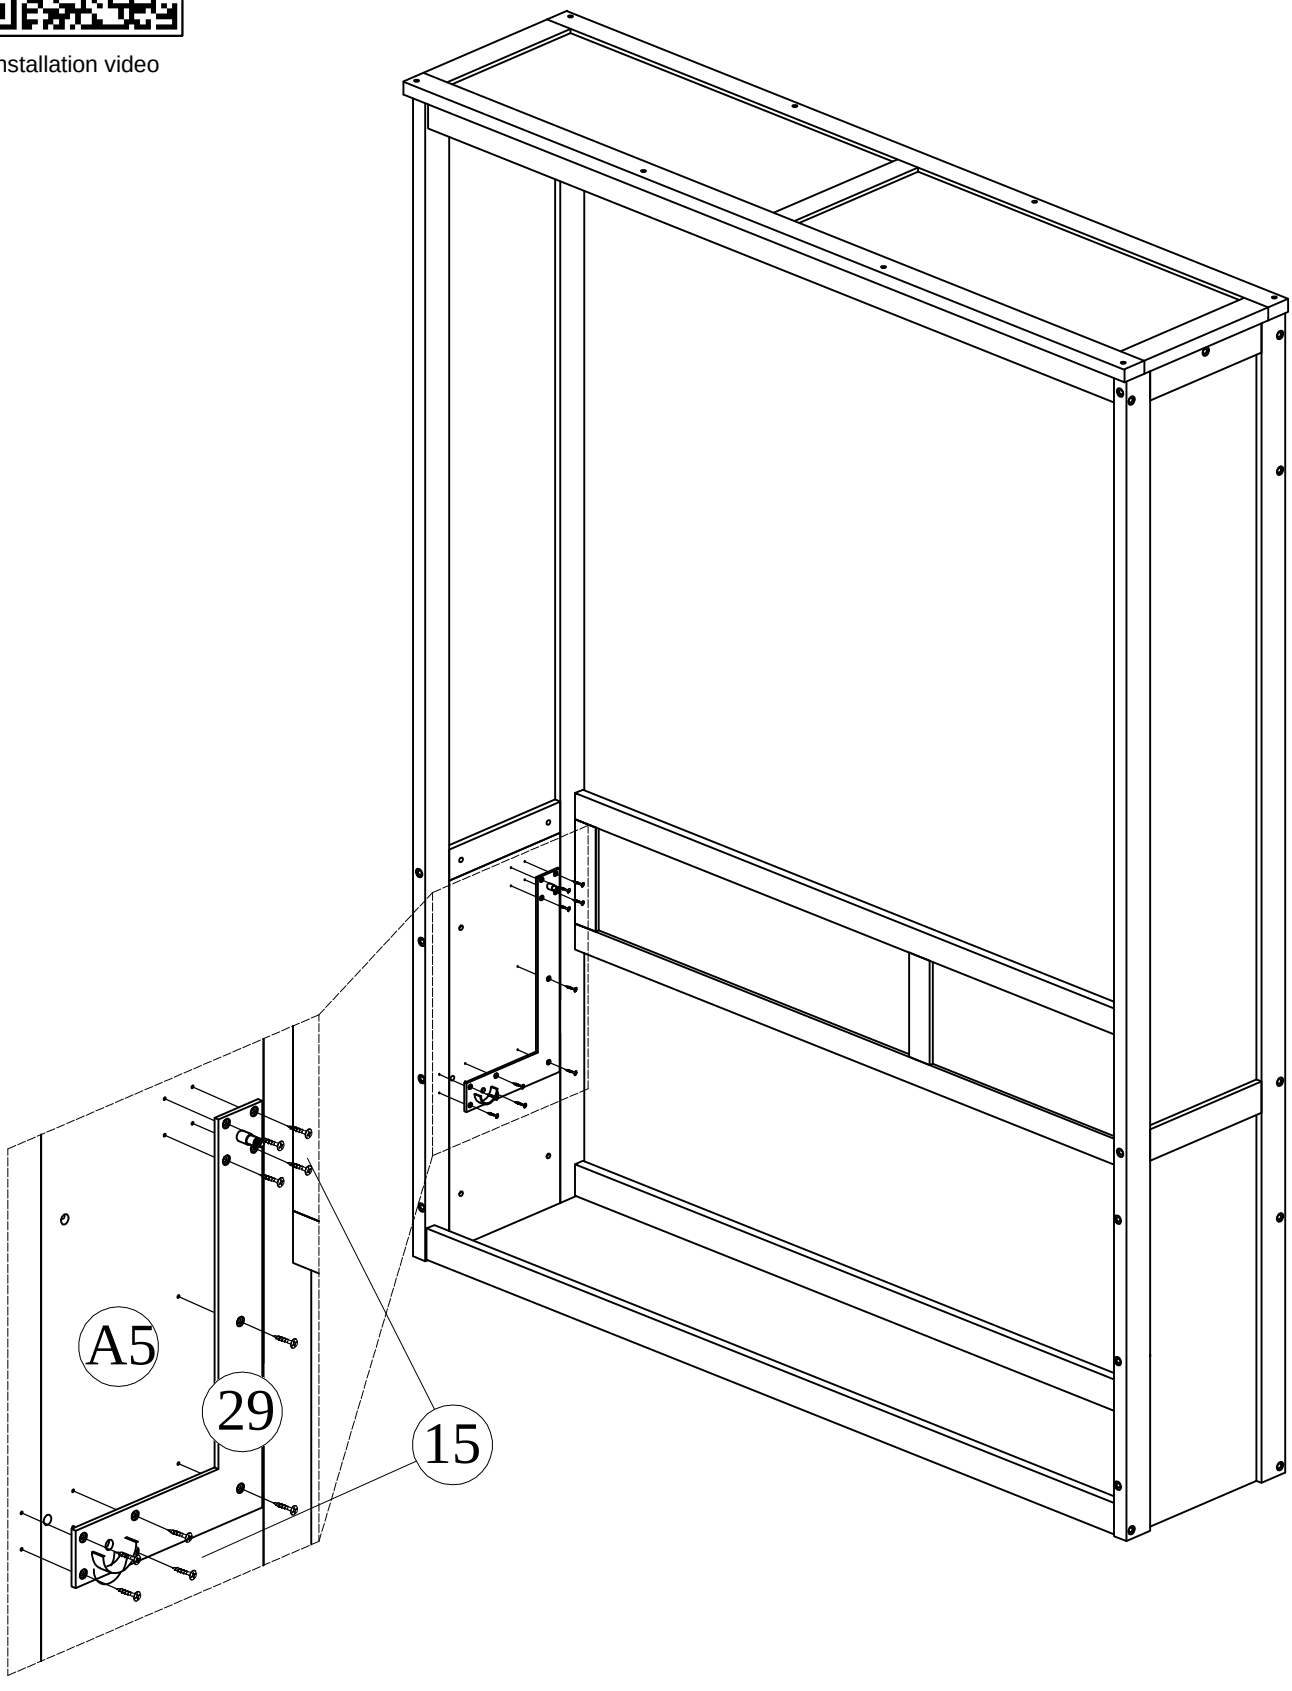Installation video




STEP19: Following below illustration.

13	32
	
4pcs	2pcs

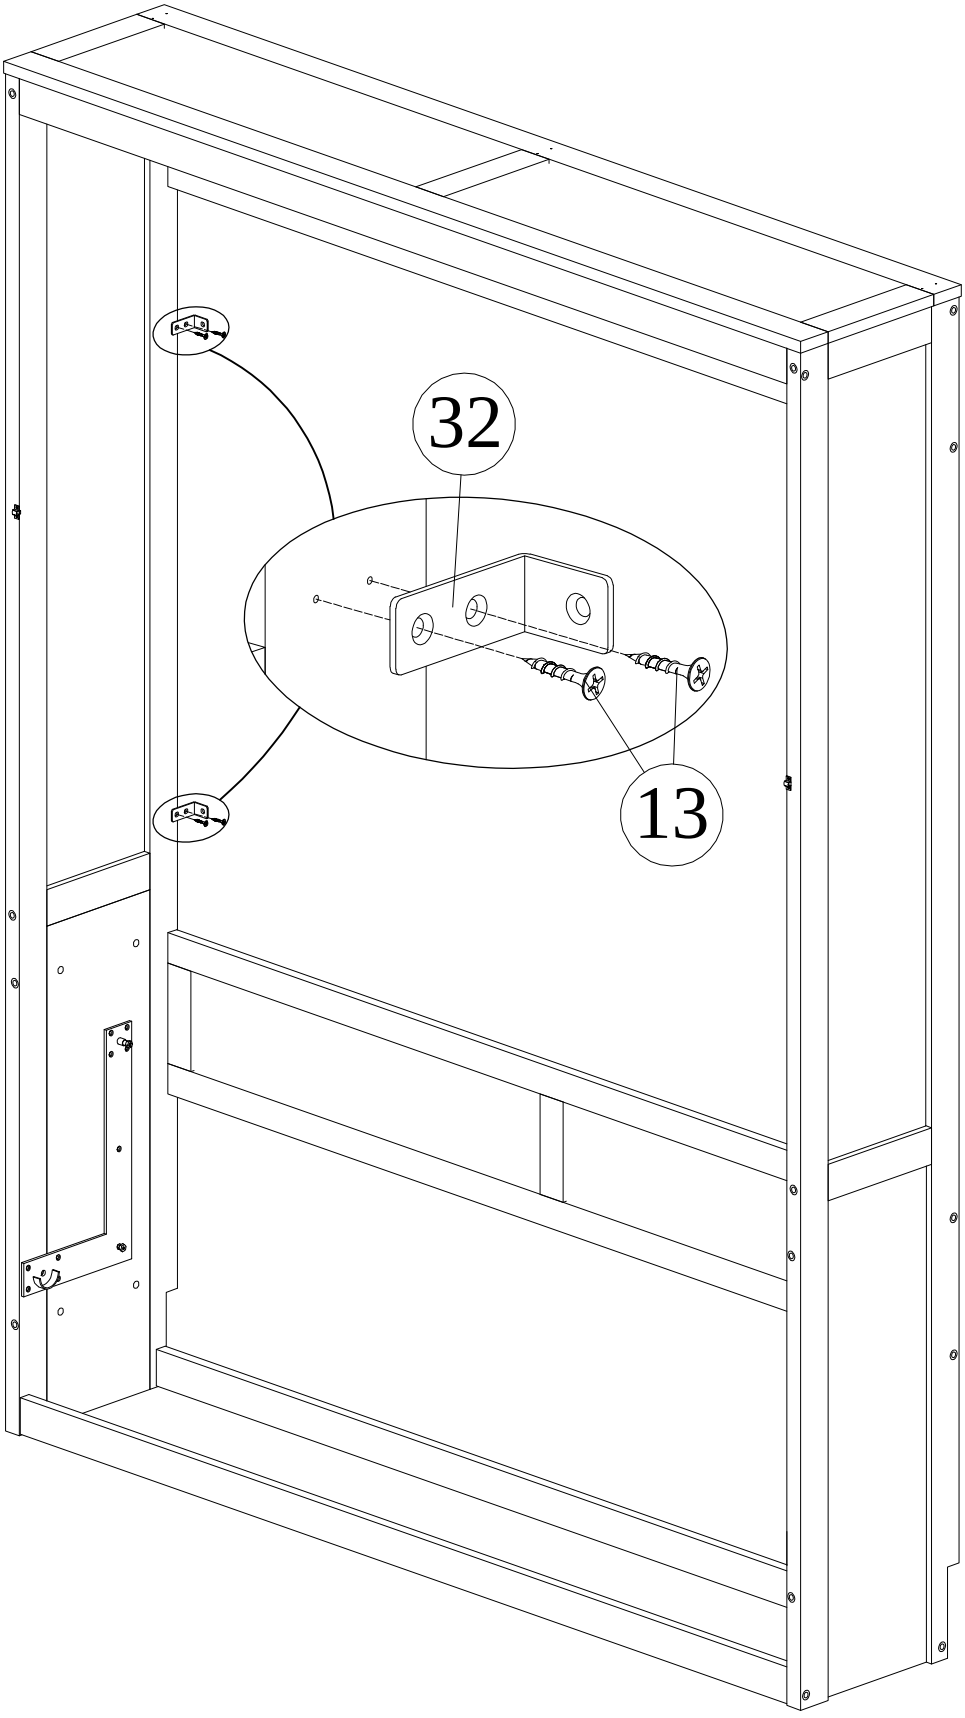


STEP20: Following below illustration.


22	13	32
3pcs	10pcs	2pcs

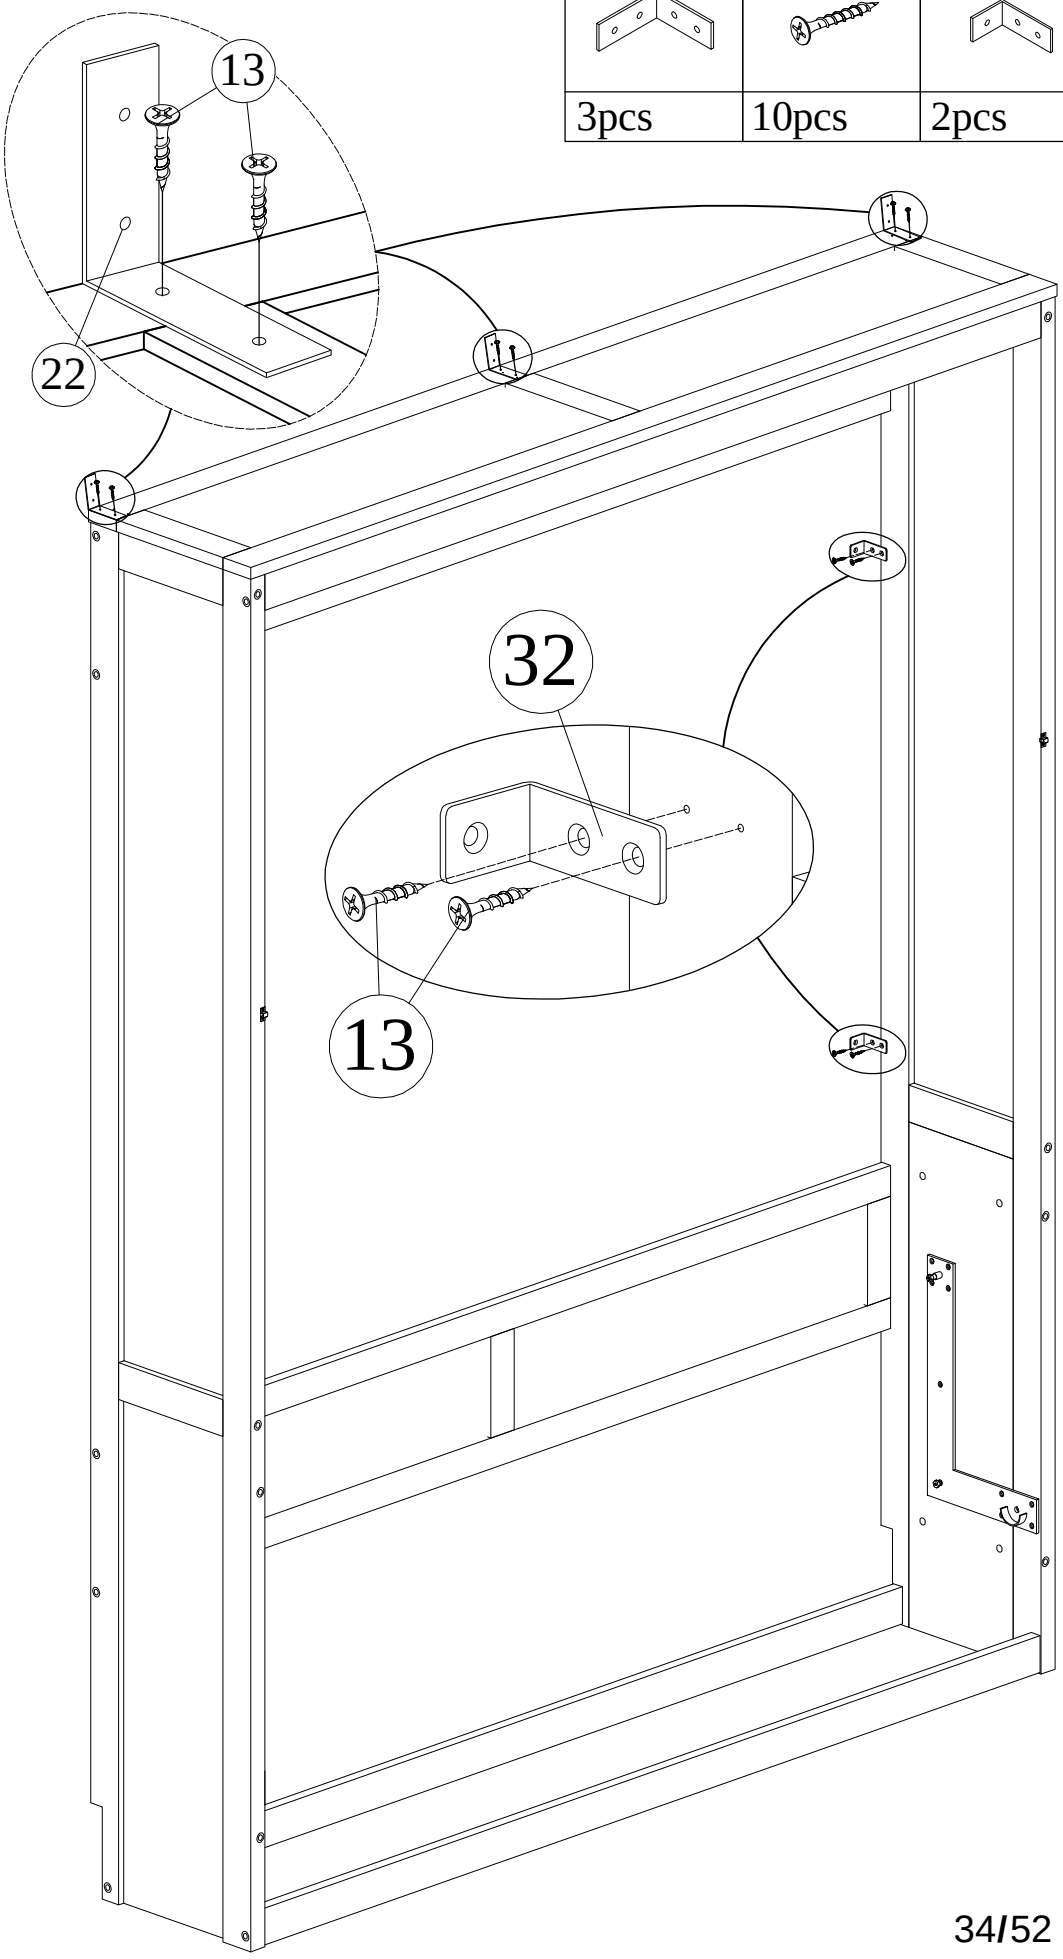

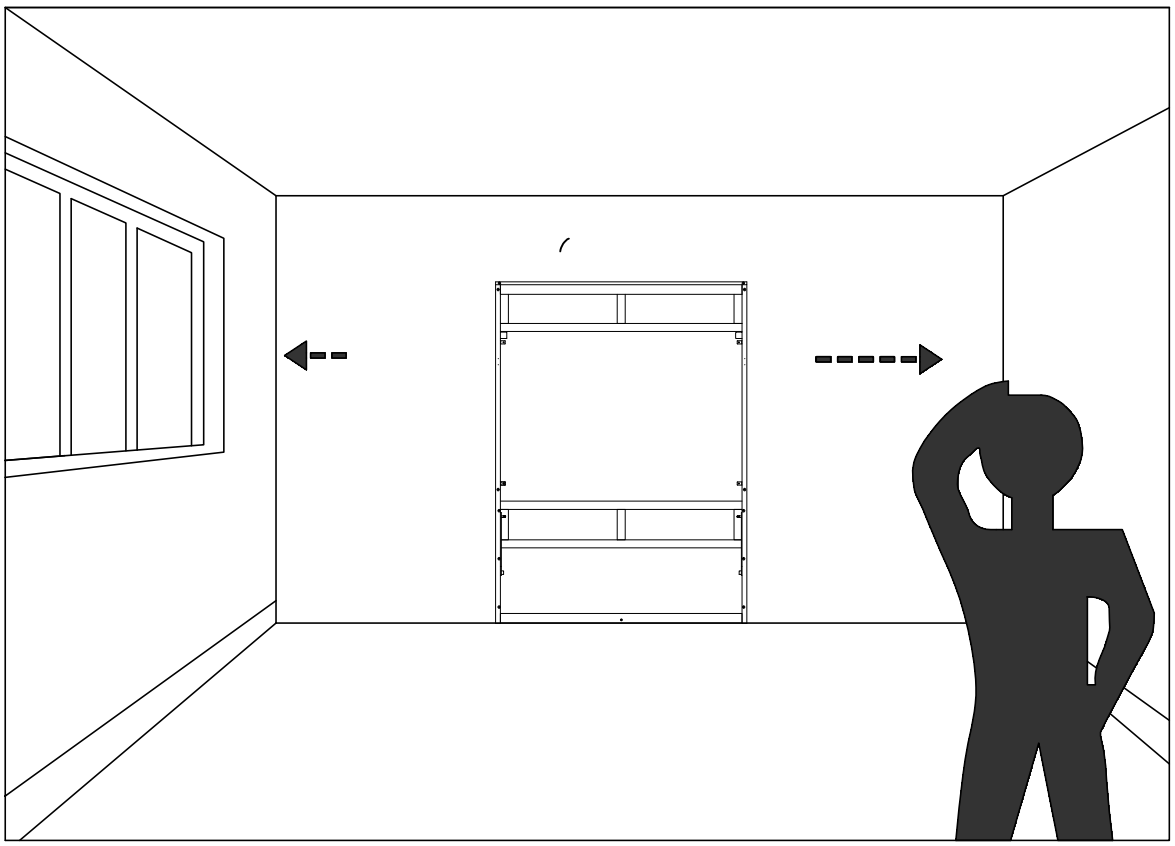
1- Determine the position of the bed in the room.



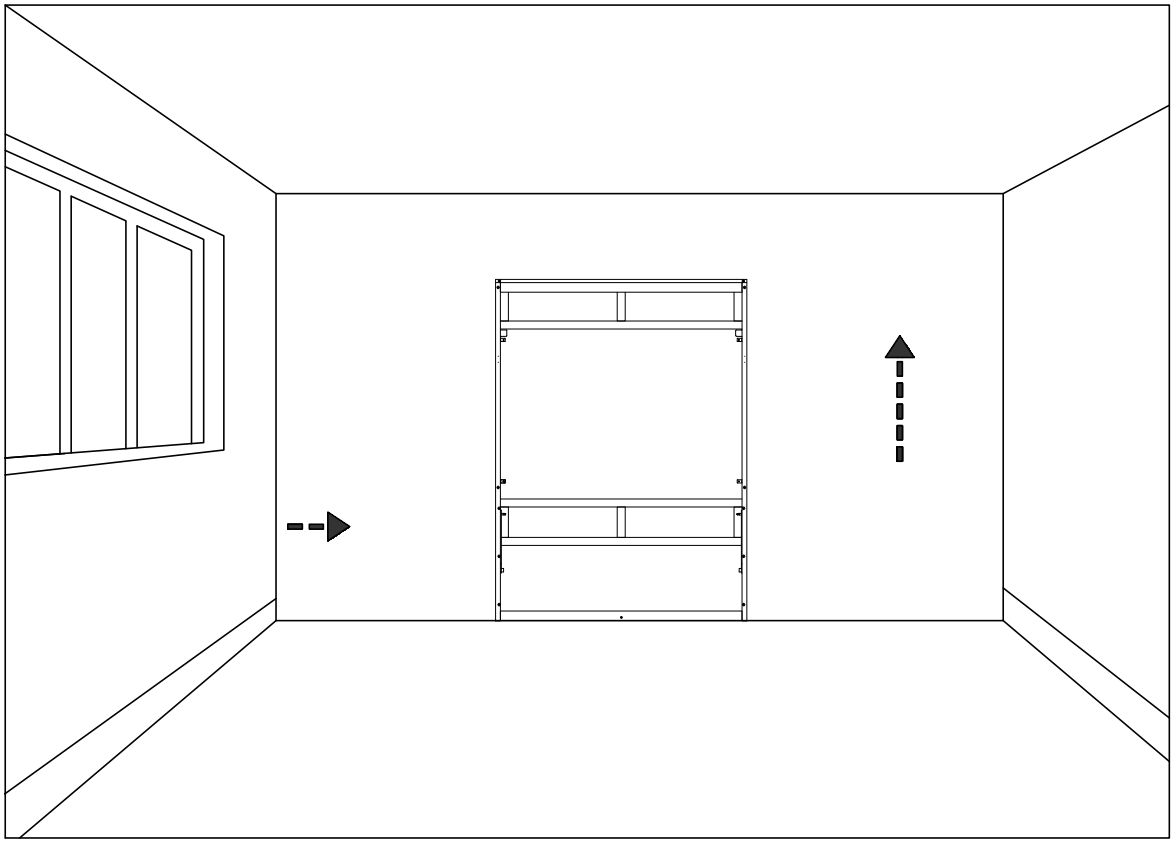
2- Put the bed back in its place. Please keep it vertical and horizontal.



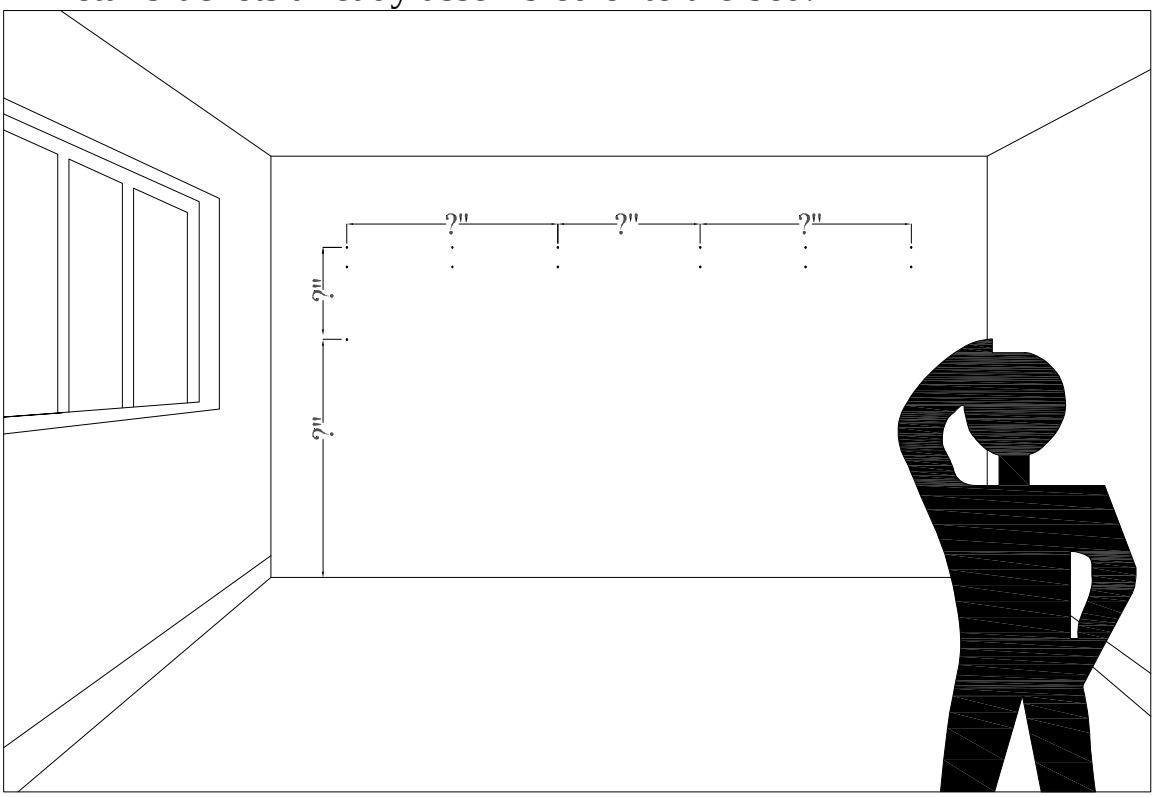3- Mark the drilling points according to the actual product and the metal brackets already assembled onto the bed.



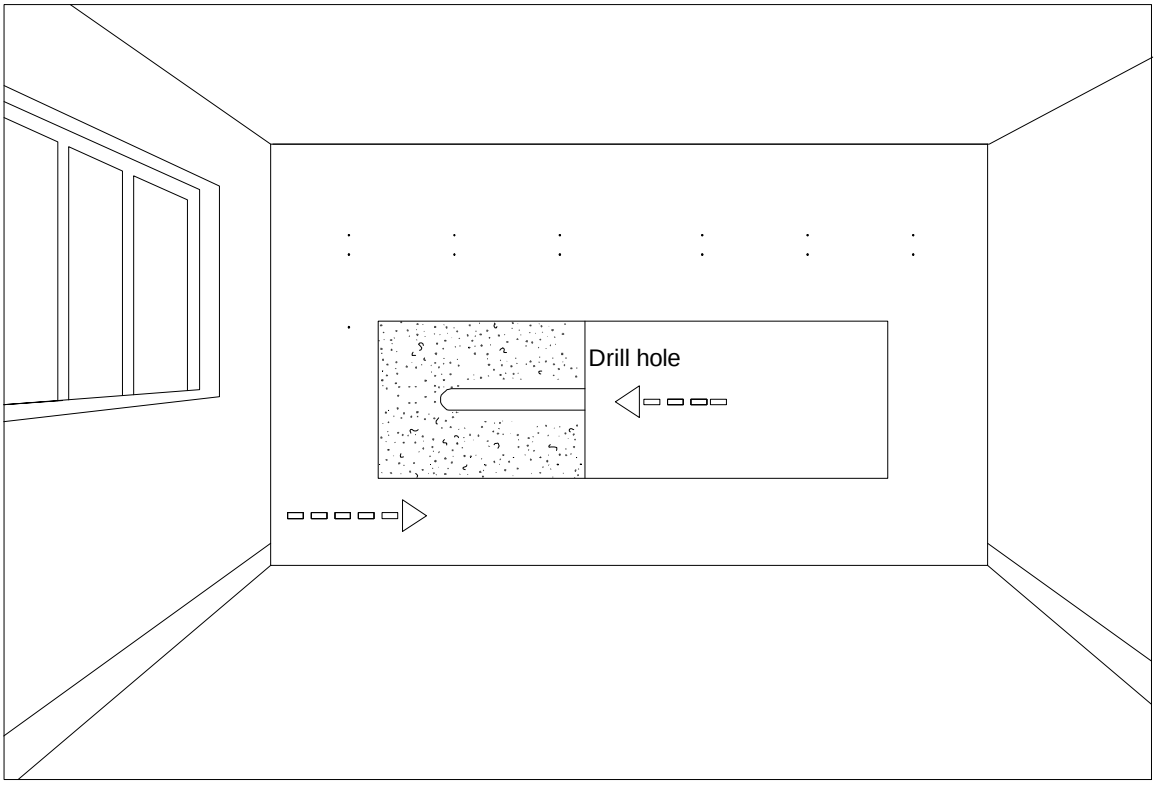
4- Drill holes at the marked points,
the holes must be sized to fit the metal anchors.




STEP-ÉTAPE-21

This accessory is for use on brick or concrete walls.

AY	CA
10pcs	1pc

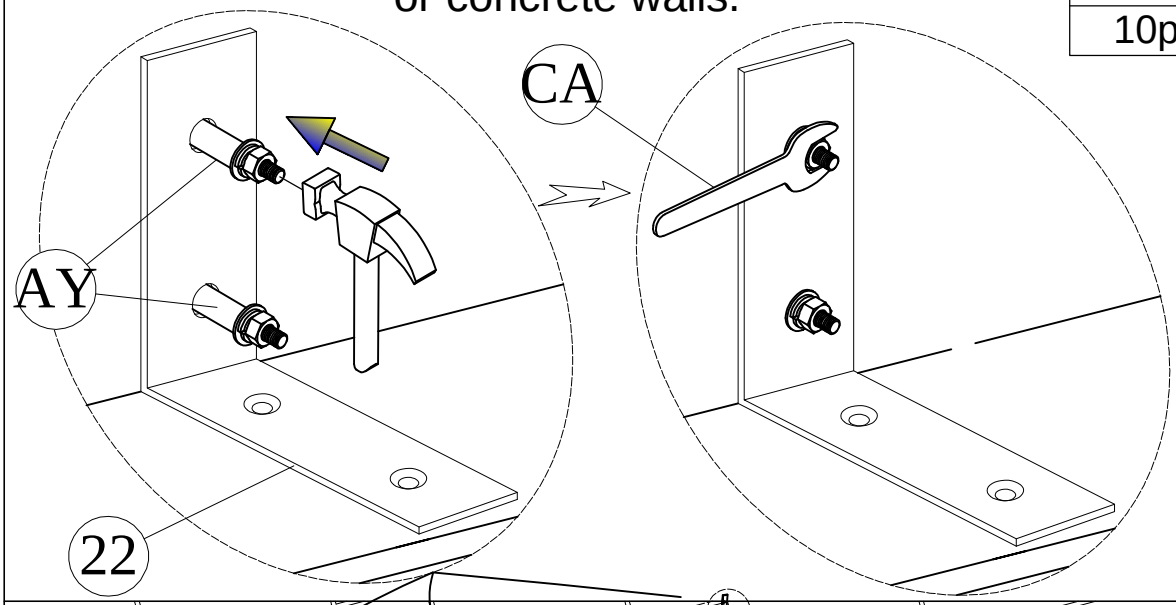

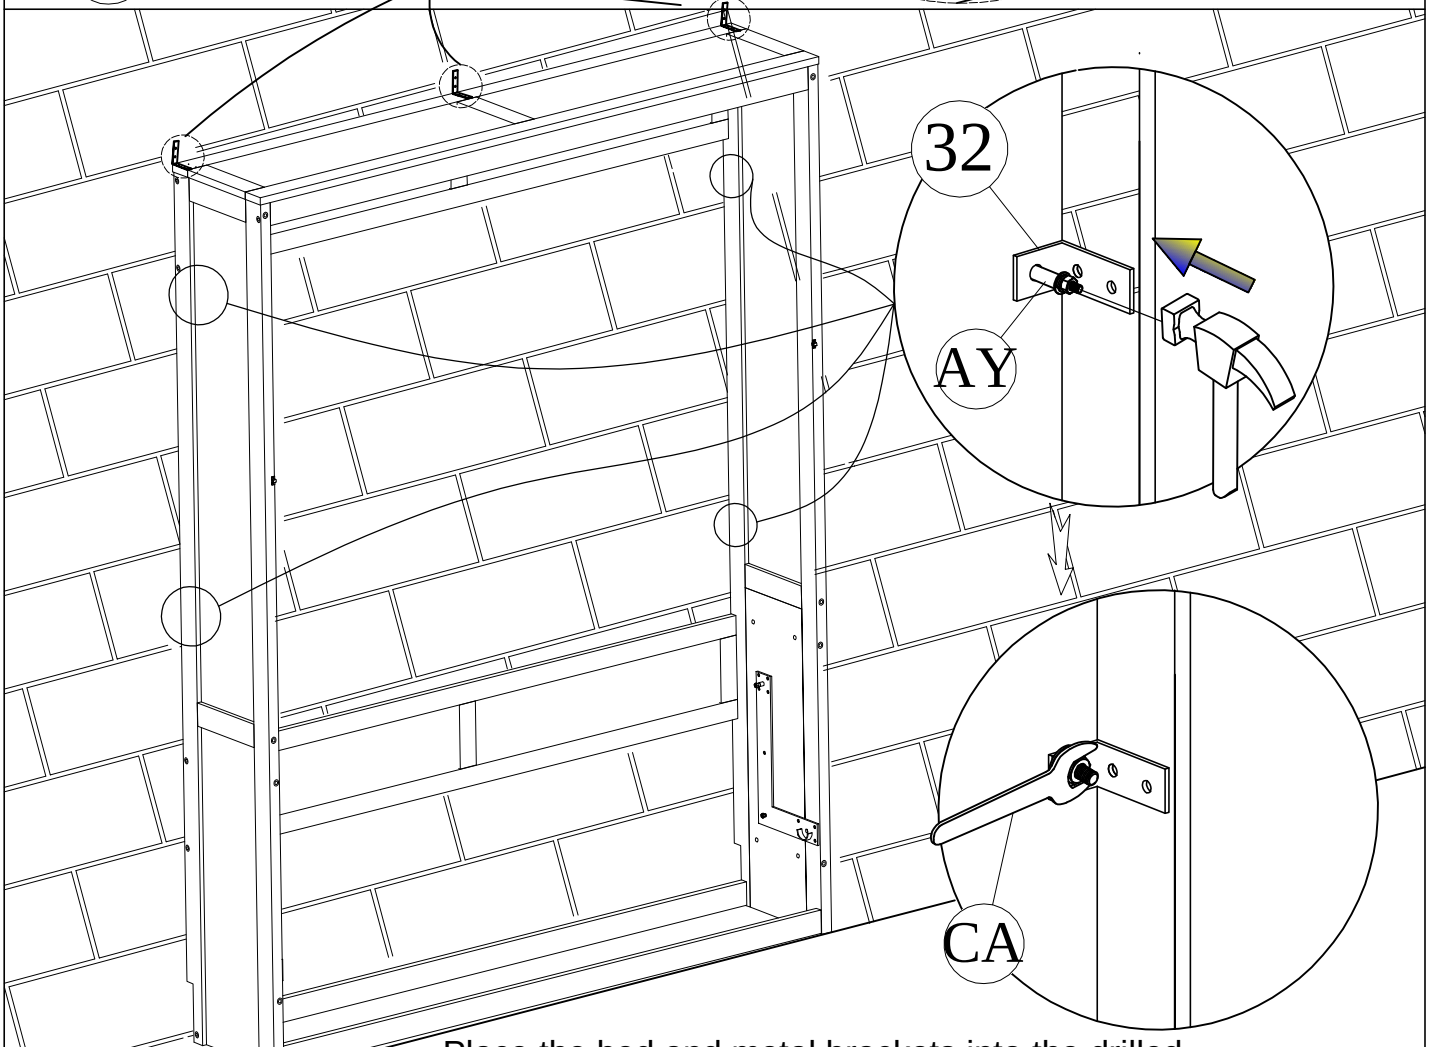



Place the bed and metal brackets into the drilled holes in the wall, then hammer in the metal anchors.


Two people are needed to assemble this part.

STEP-ÉTAPE-22

This accessory is for wooden walls.

BB	AG
	
10pcs	10pcs

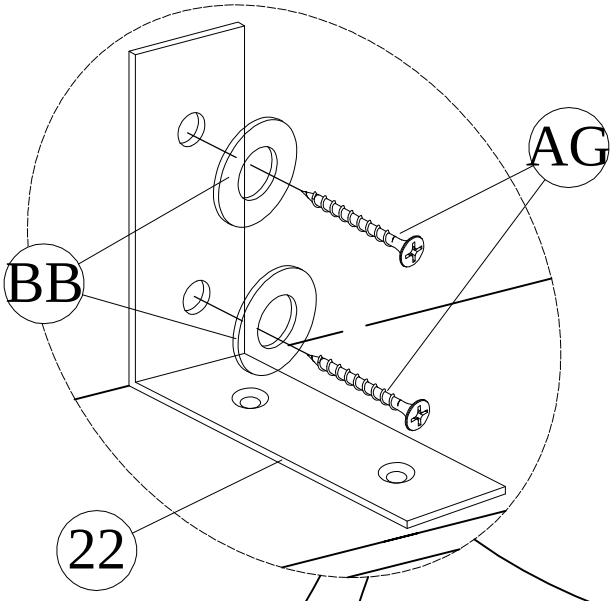

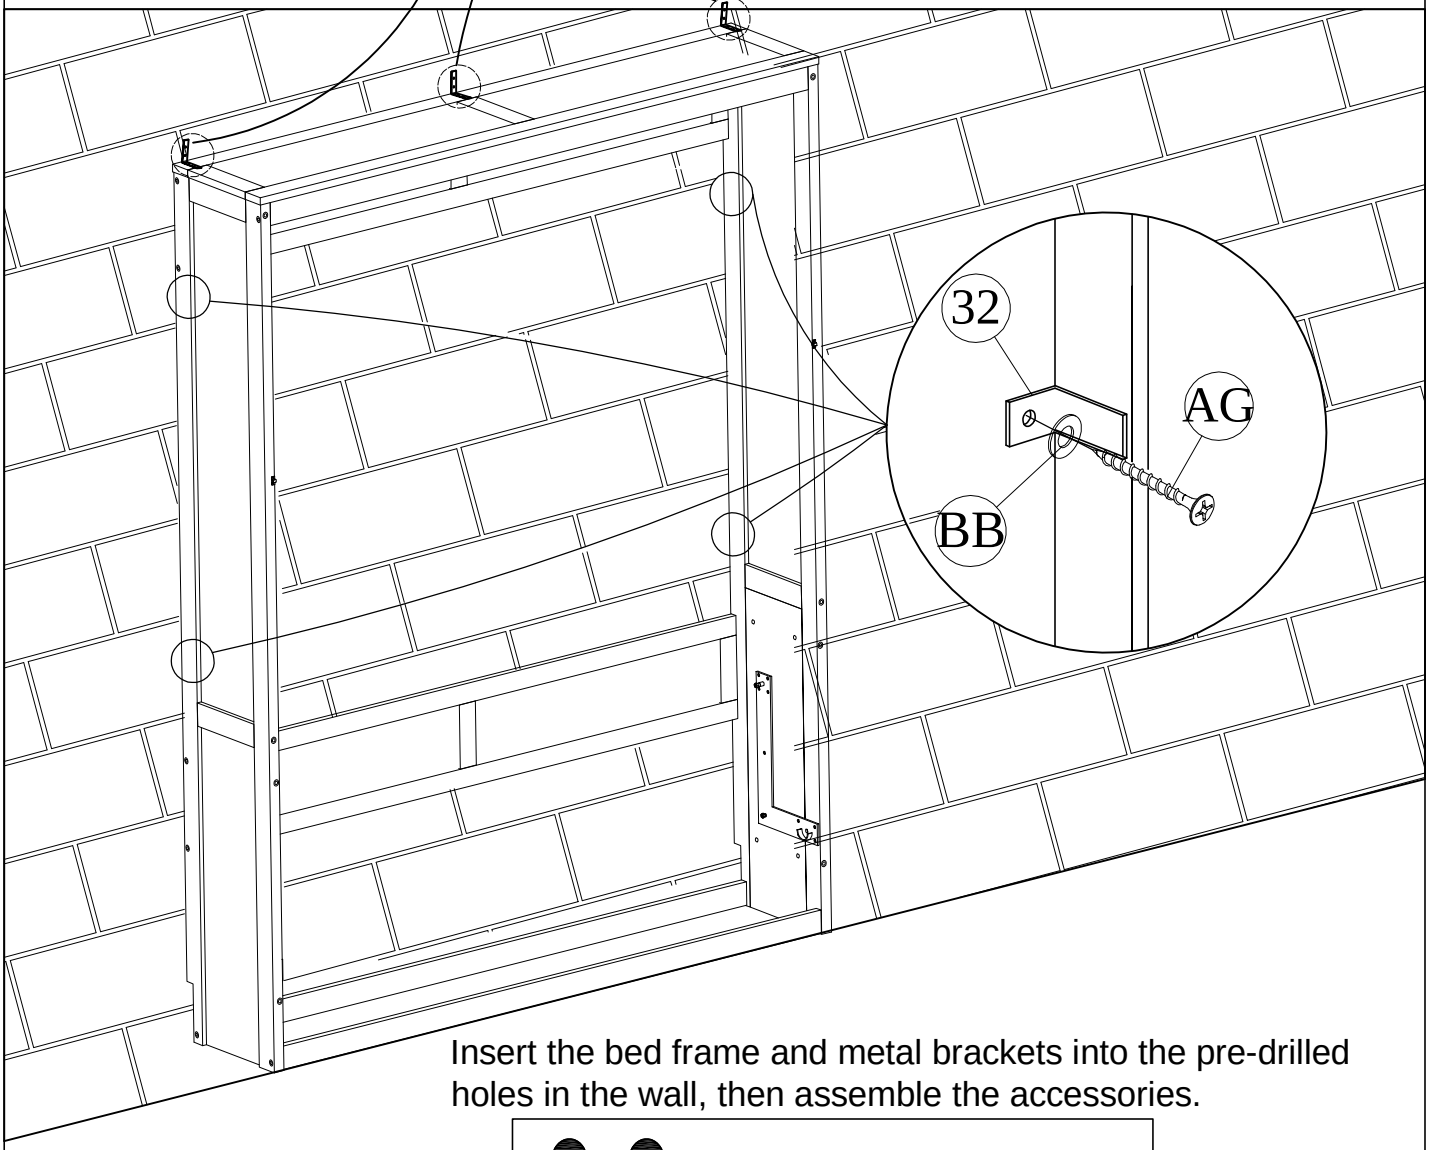

Insert the bed frame and metal brackets into the pre-drilled holes in the wall, then assemble the accessories.




Two people are needed to assemble this part.

STEP23: Following below illustration.

16	
	2pcs

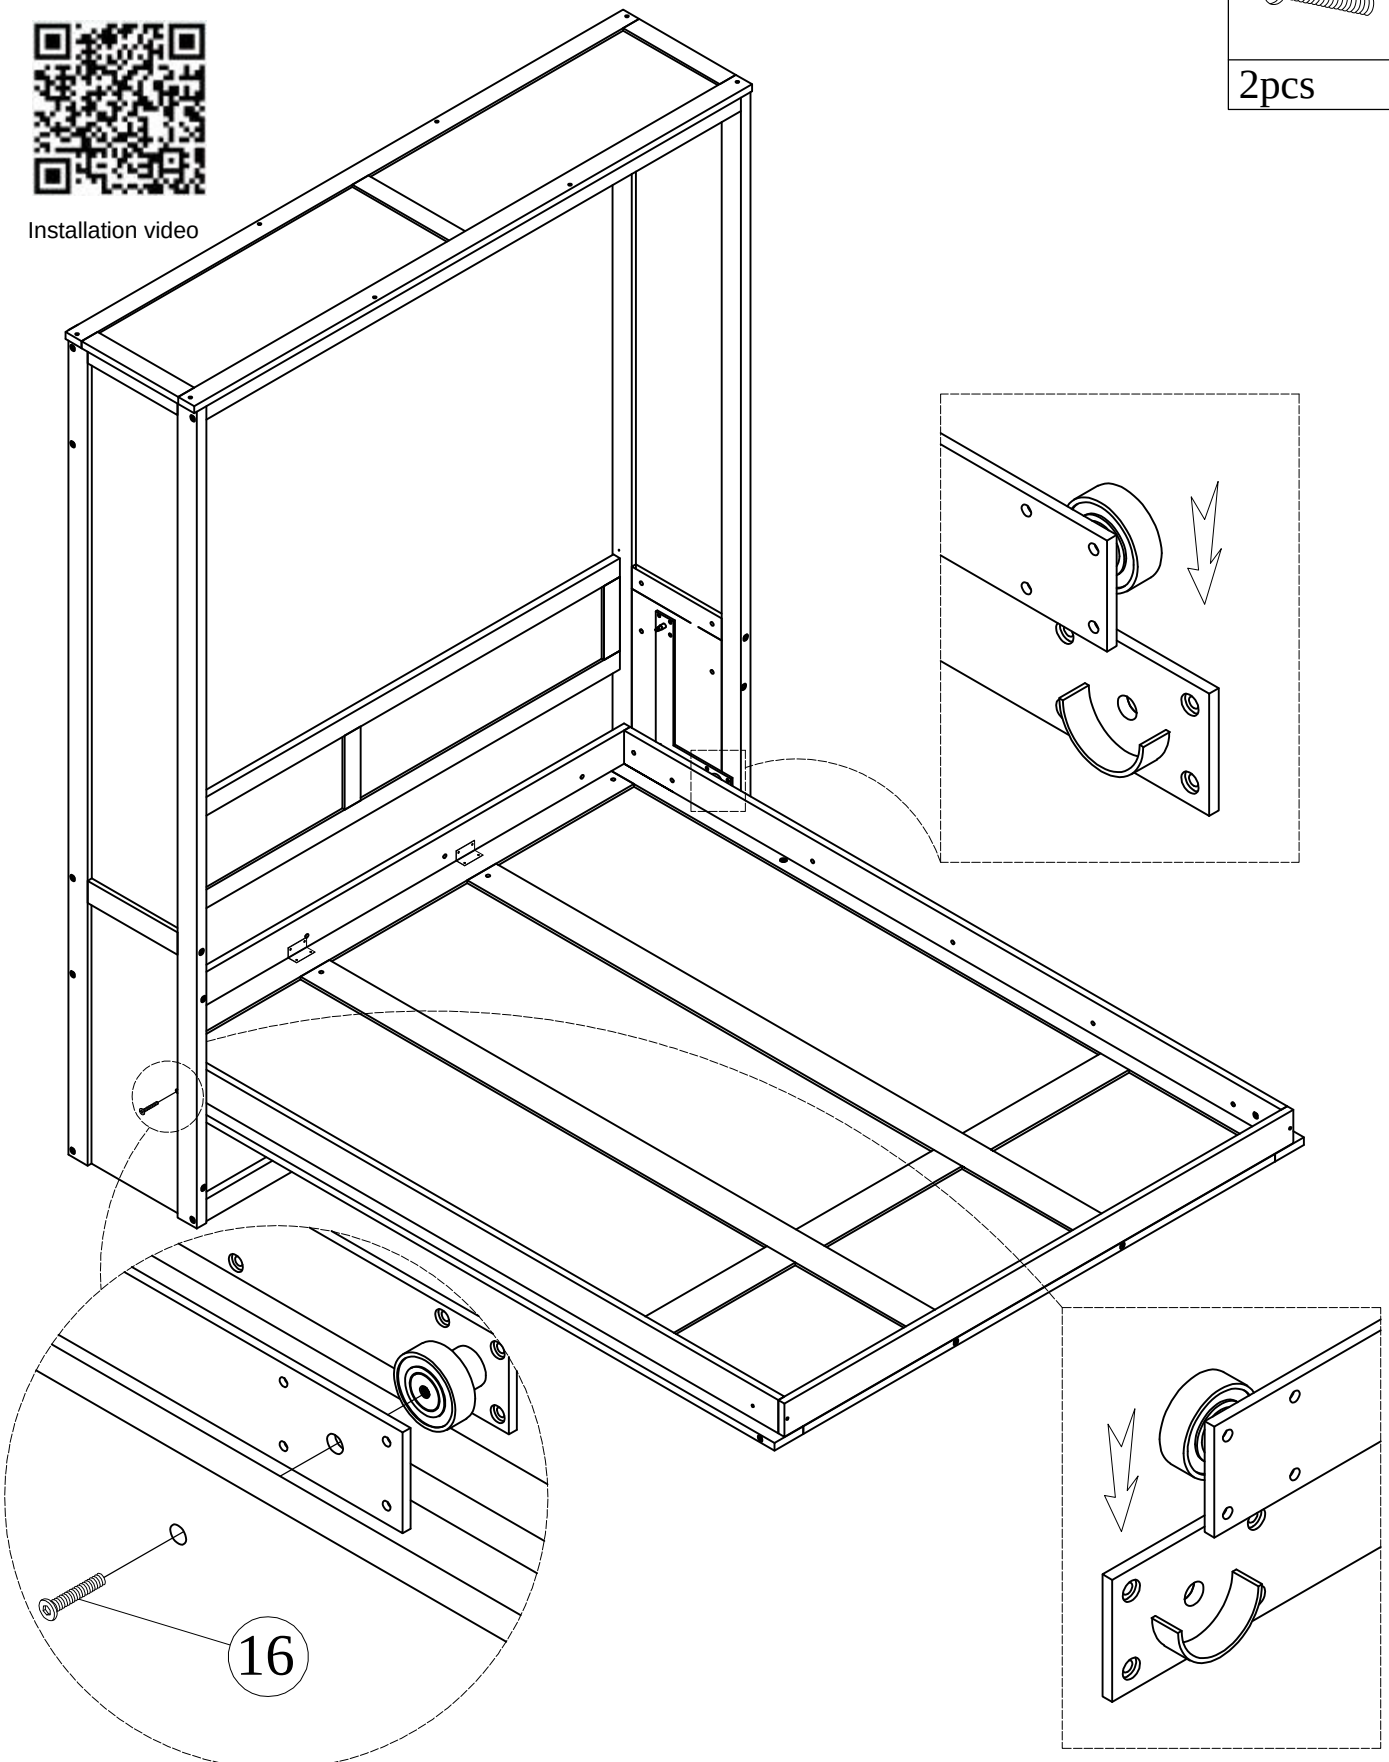Installation video




Two people are needed to assemble this part.

STEP24: Following below illustration.

Installation video

17	18	19
2pcs	2pcs	2pcs

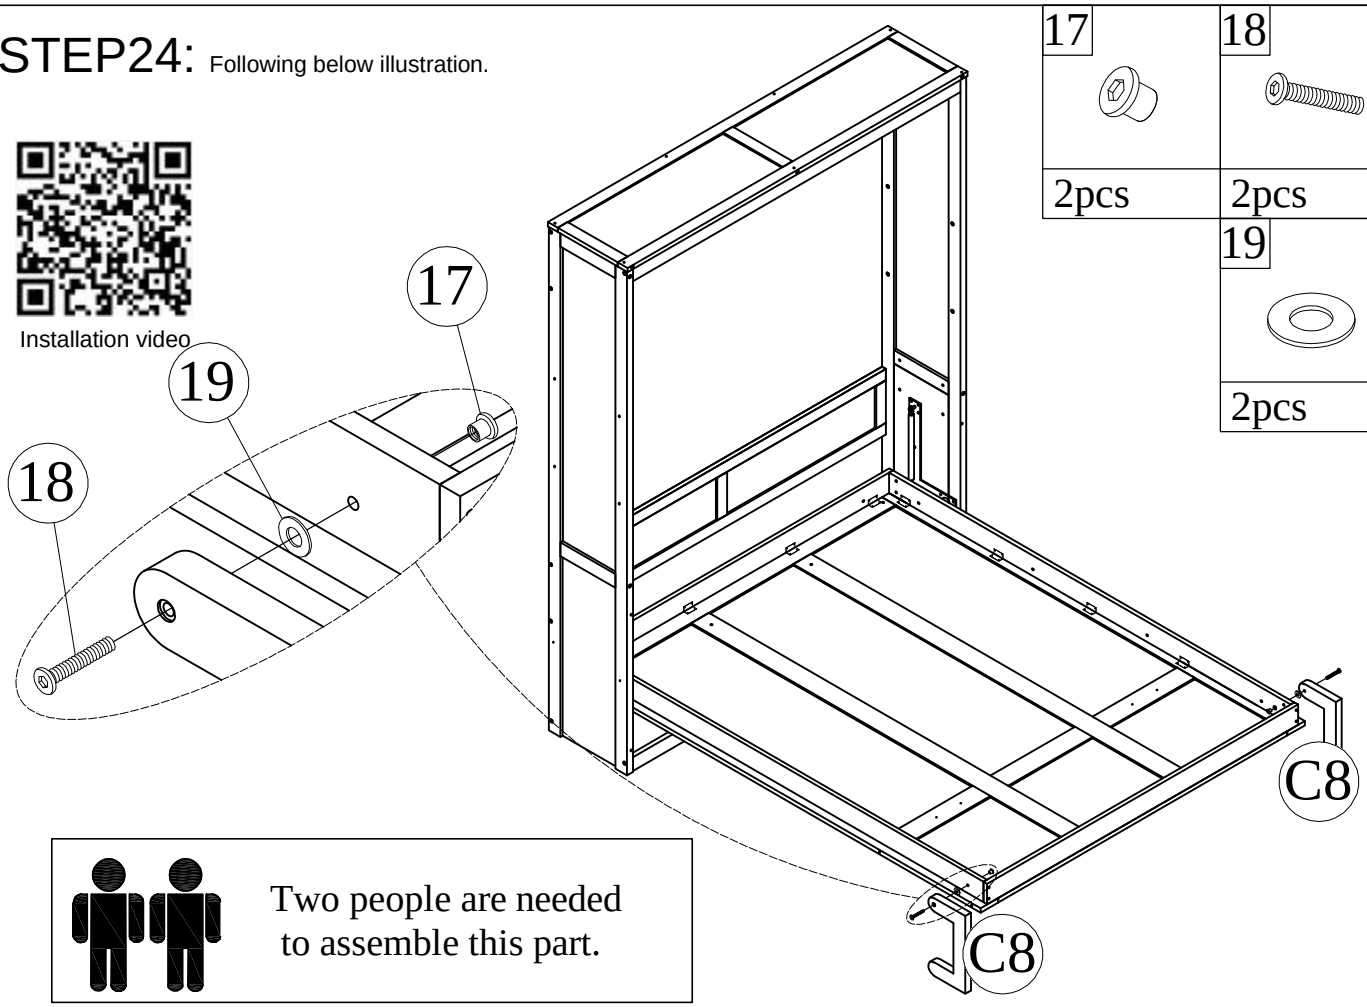


Two people are needed to assemble this part.

STEP25: Following below illustration.

Installation video


20	21
2pcs	4pcs

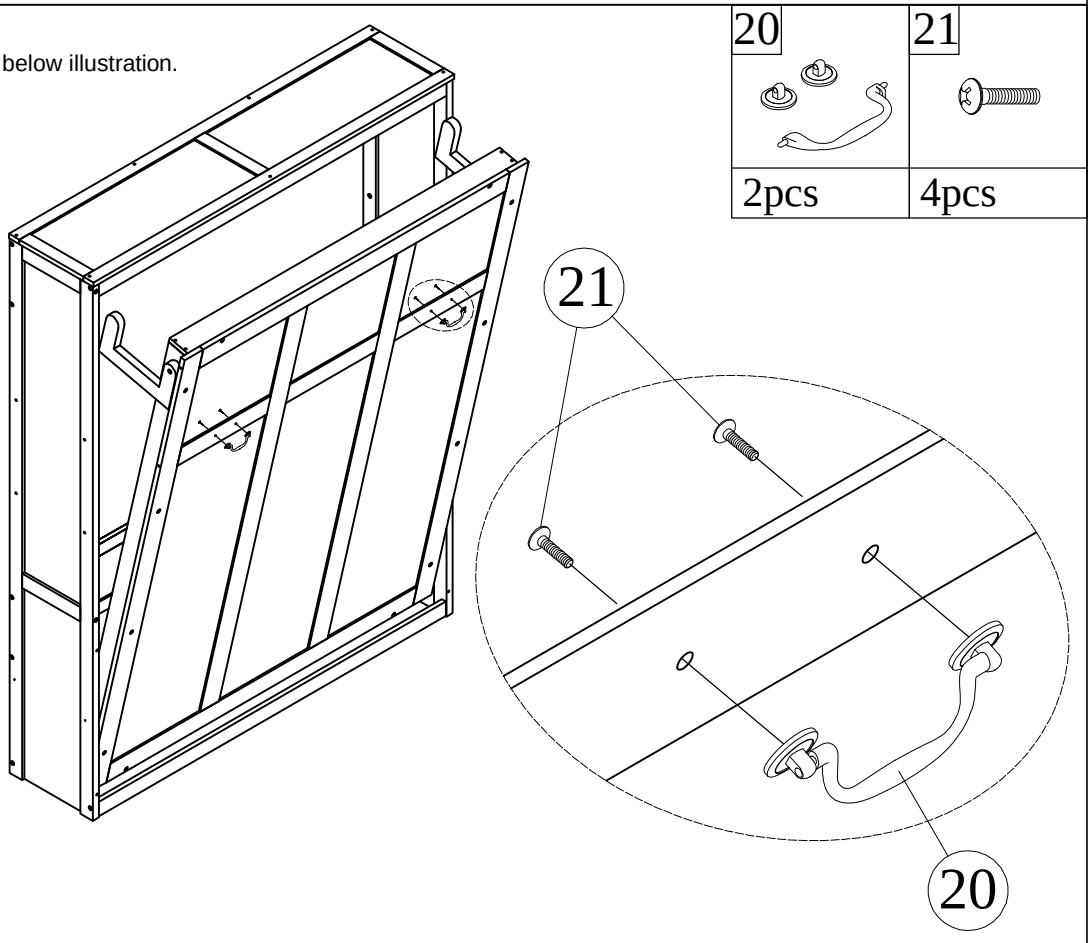

STEP26: Following below illustration.

CC	14
1pc	1pc

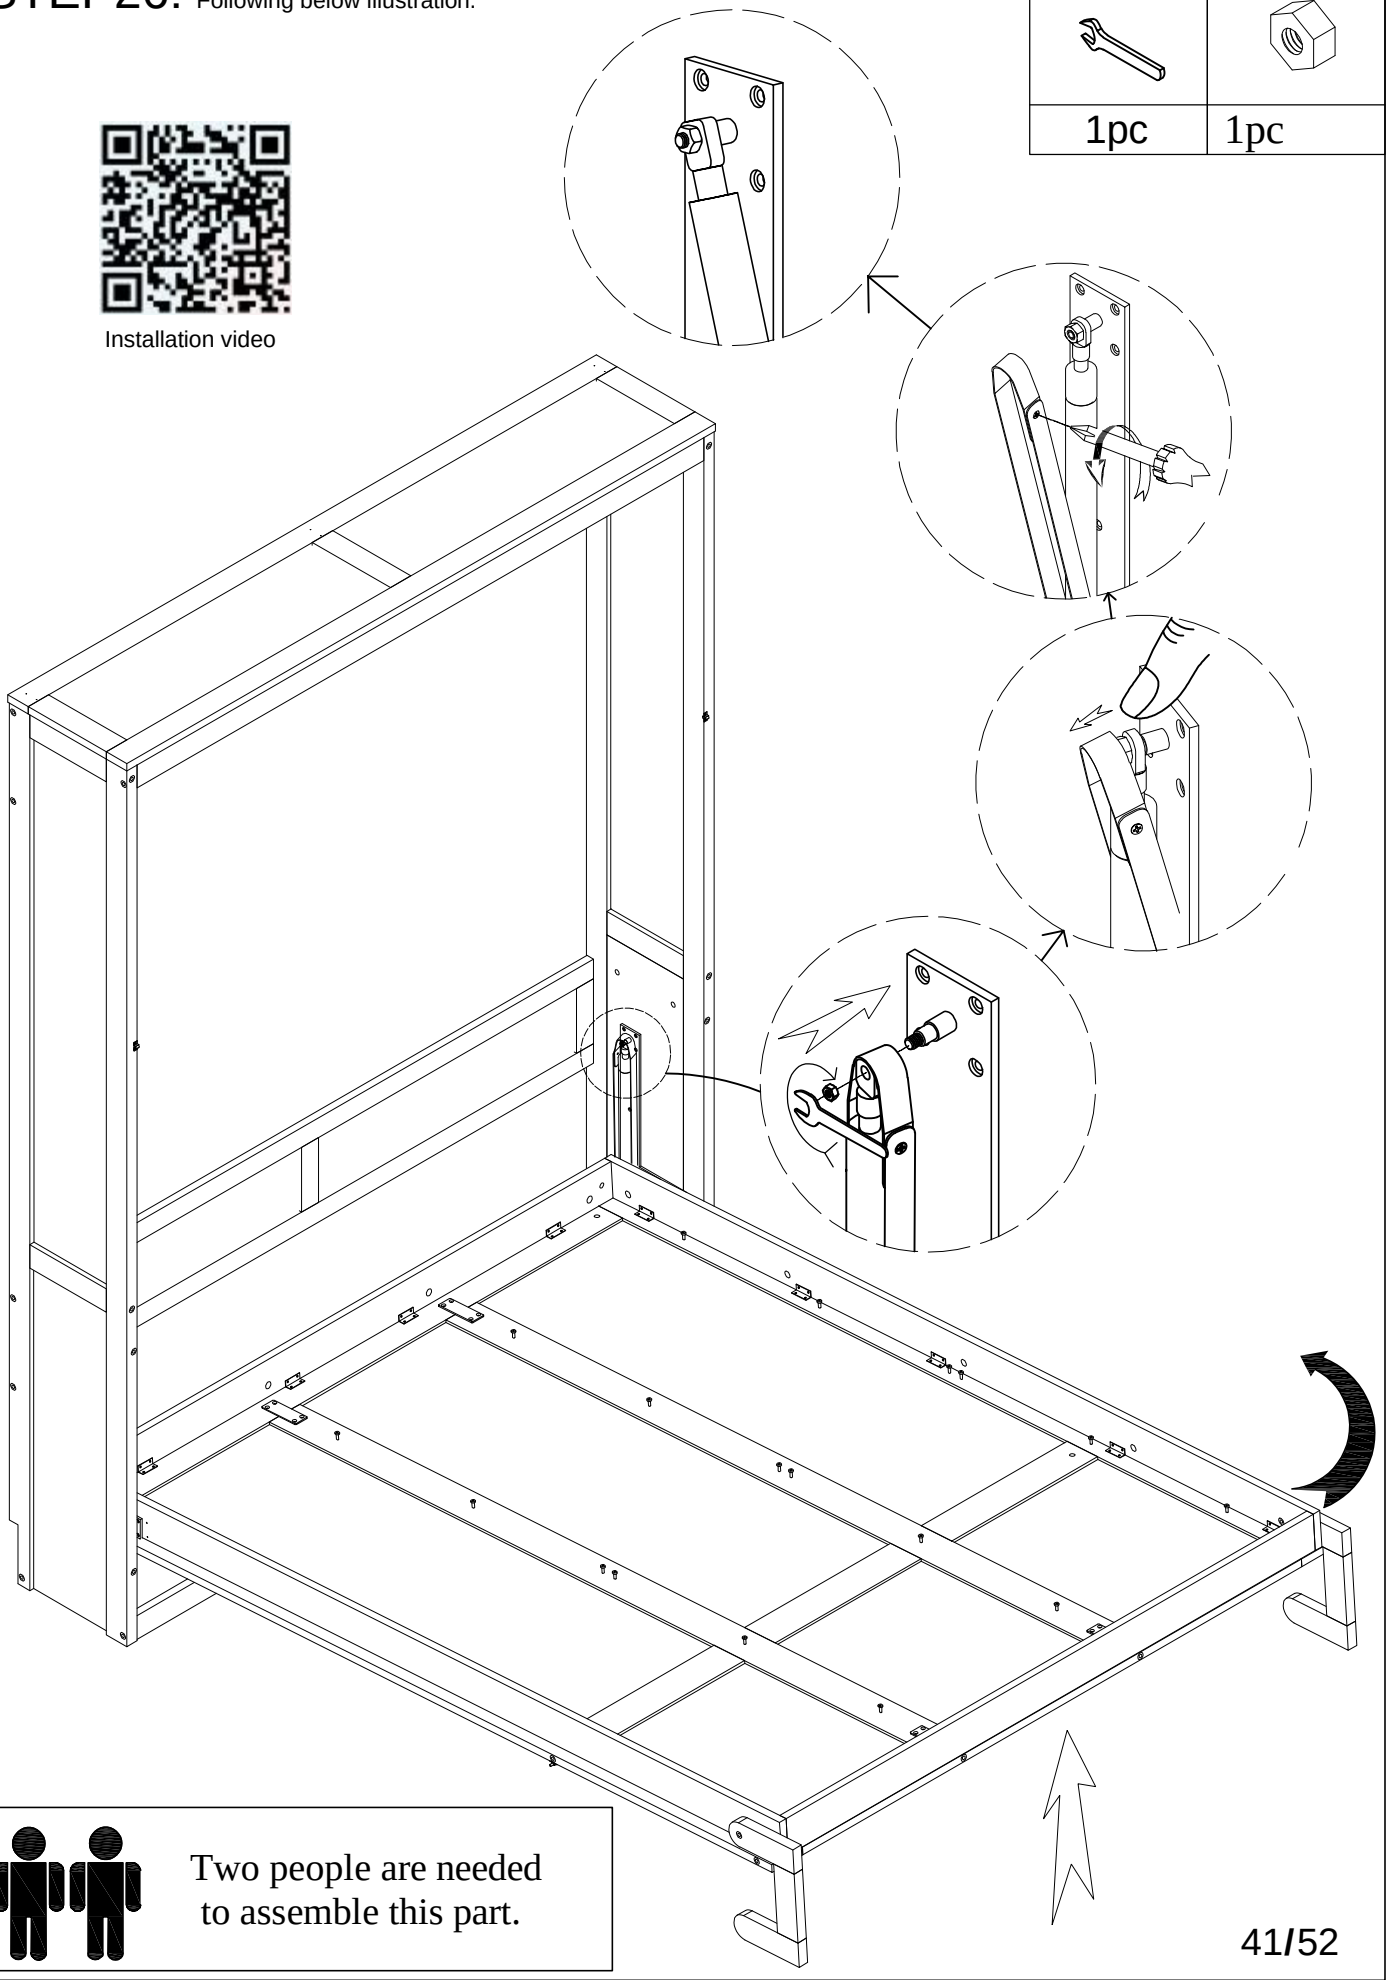Installation video




Two people are needed to assemble this part.

STEP27: Following below illustration.

CC	14
1pc	1pc

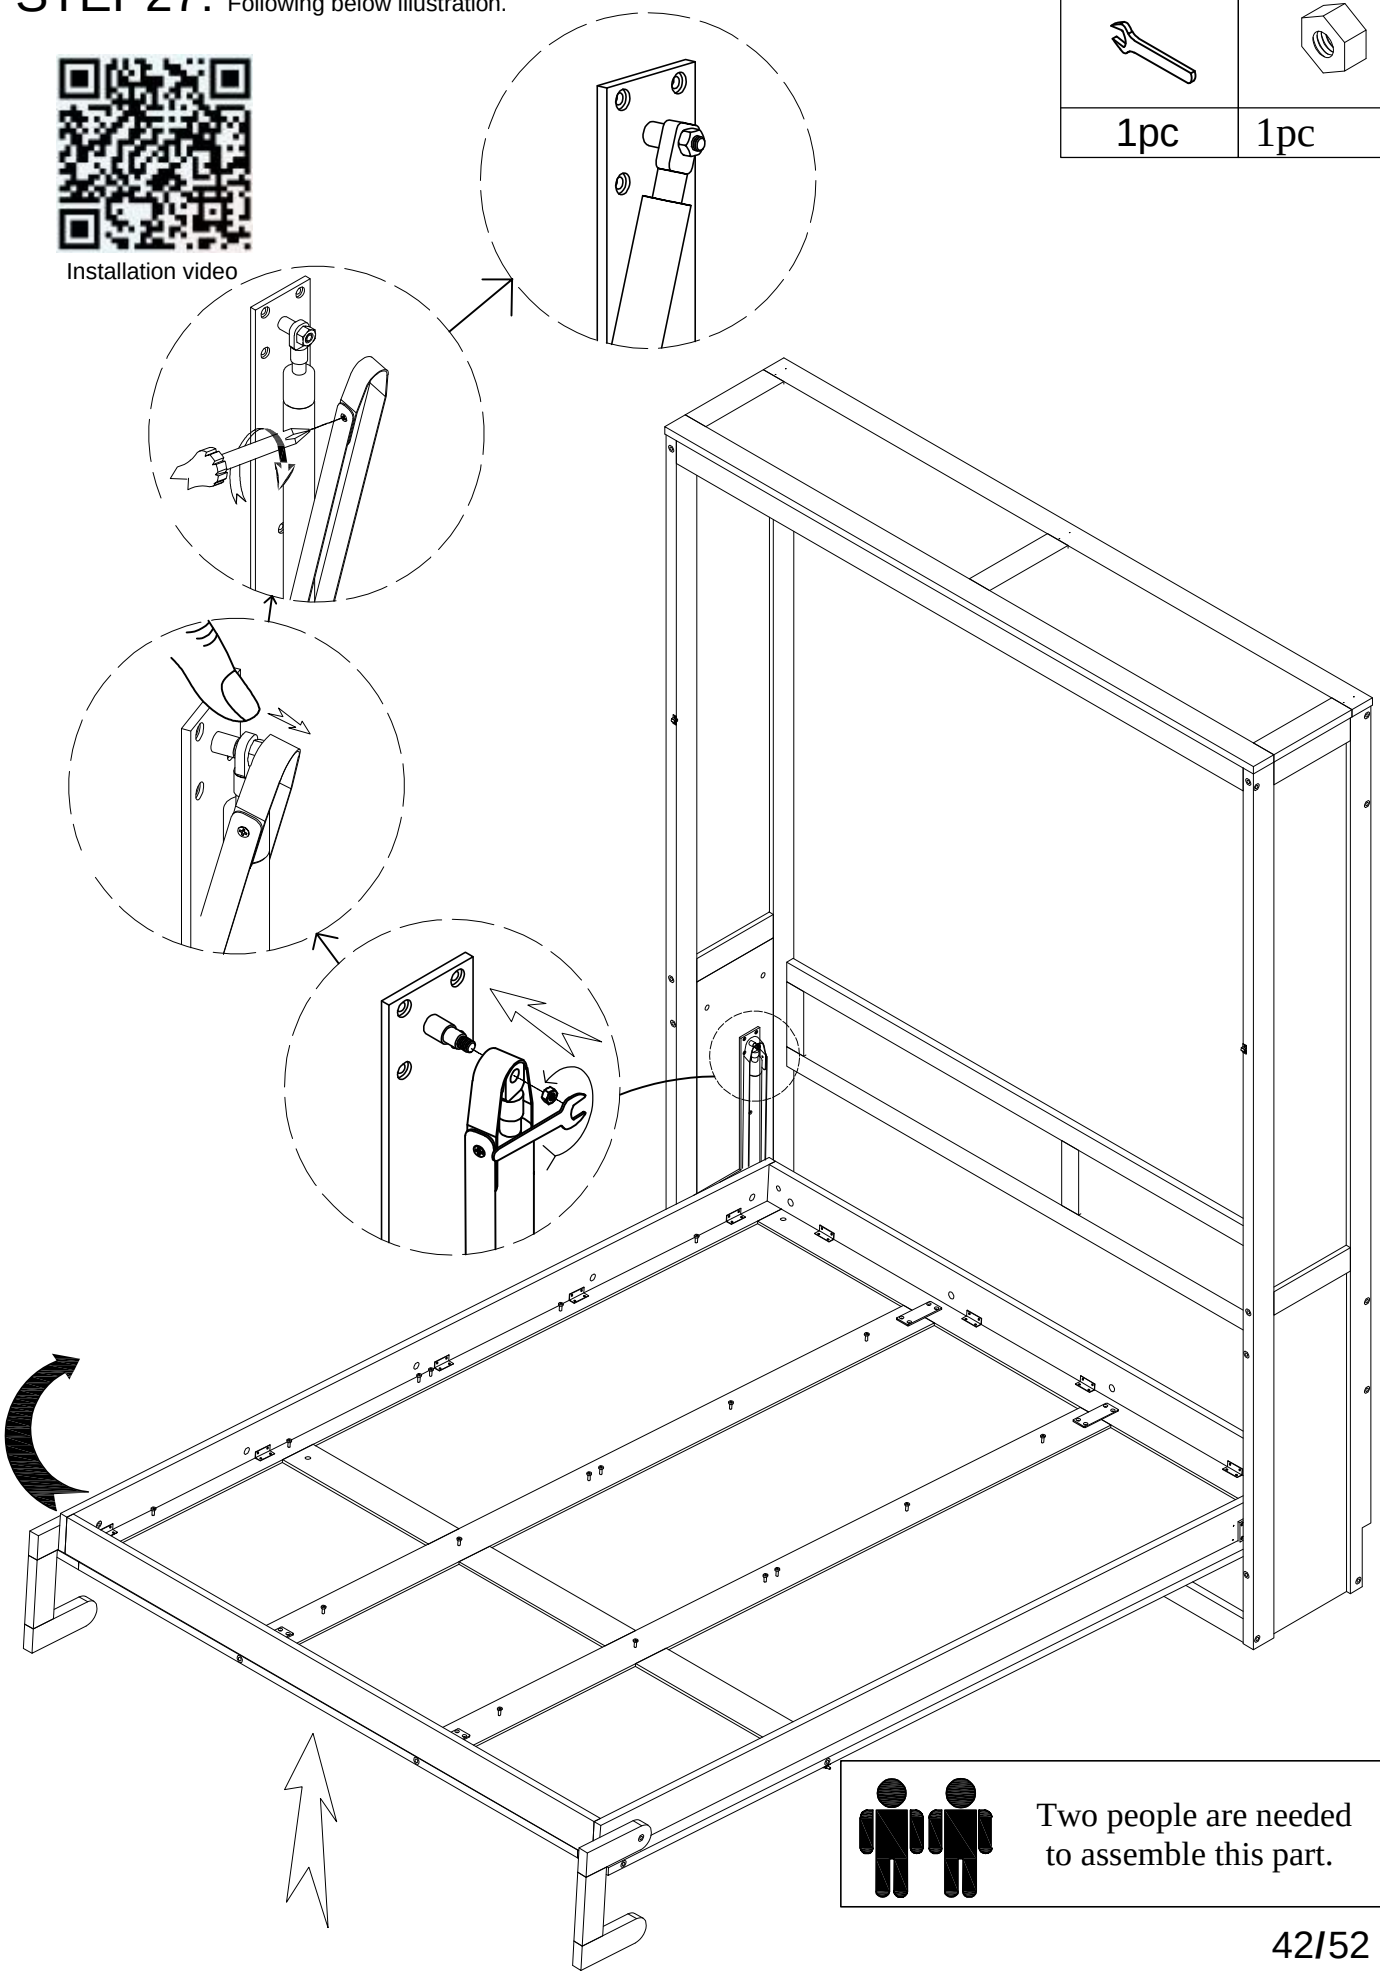
Installation video




Two people are needed to assemble this part.

STEP28: Following below illustration.

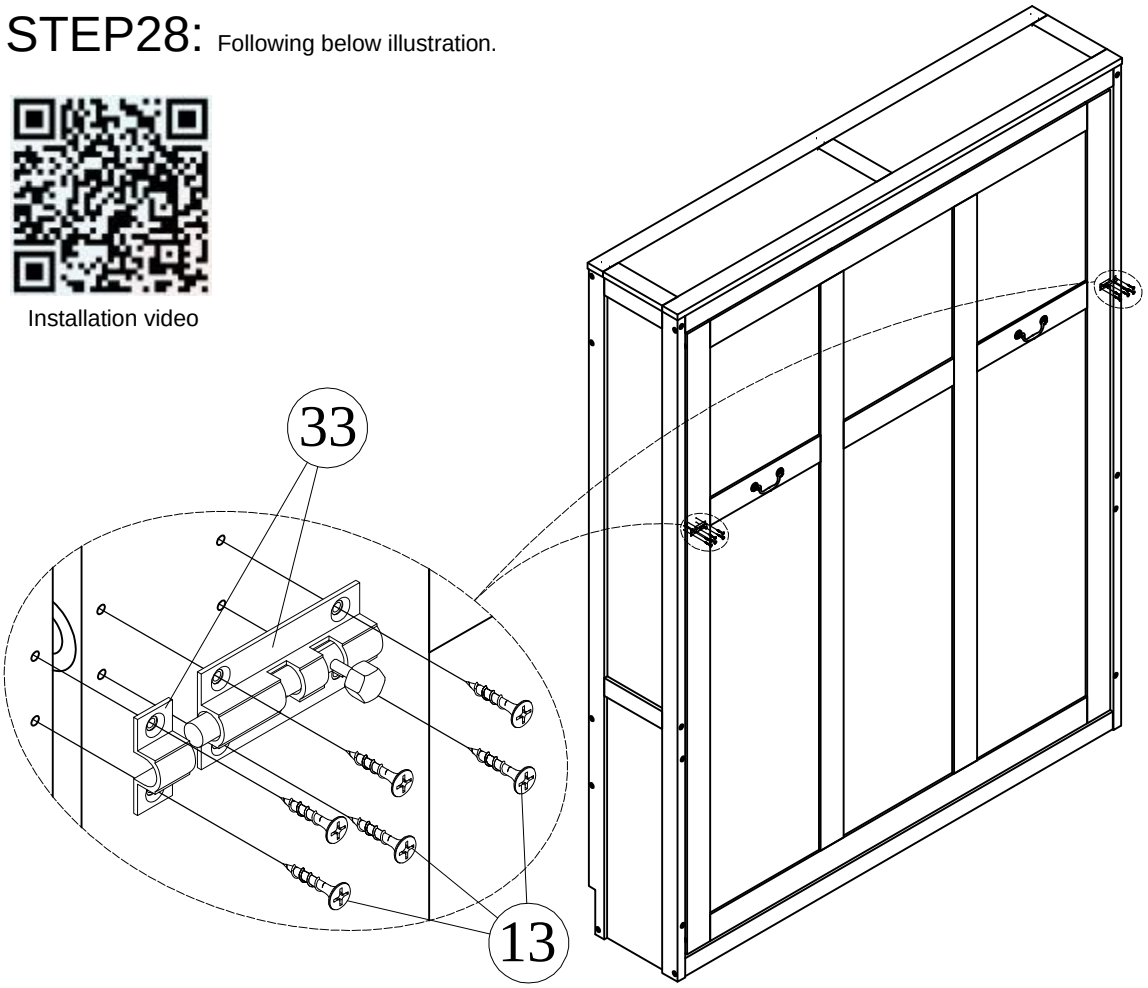Installation video




13



12pcs

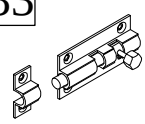
33




2pcs

STEP29: Following below illustration.

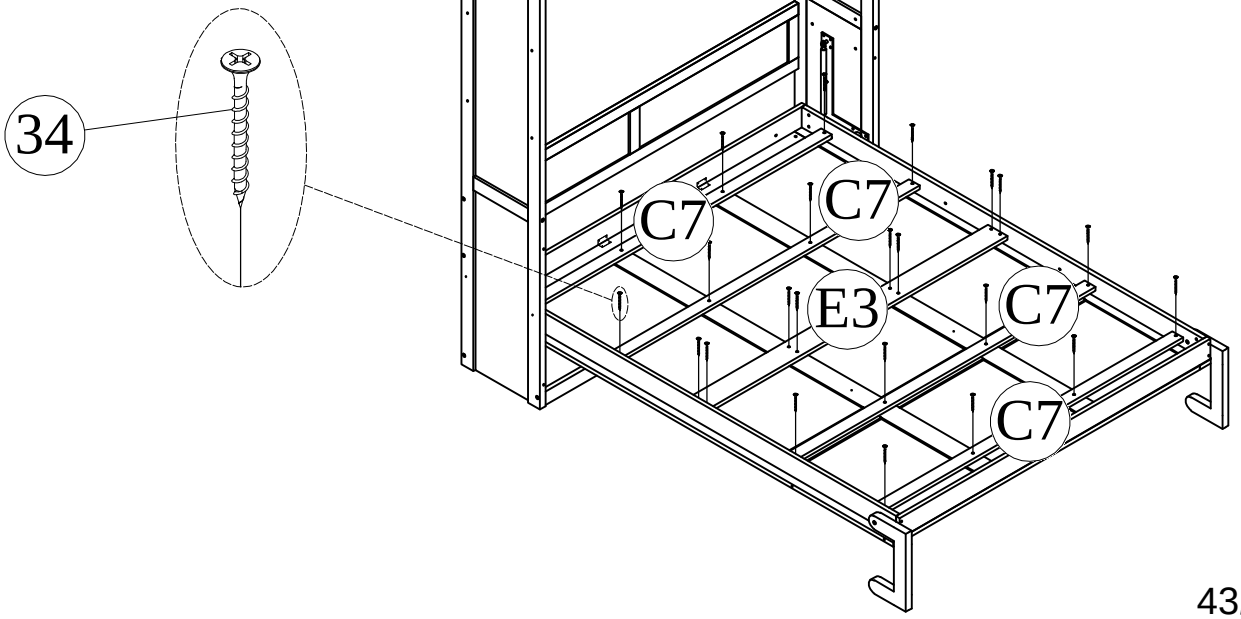Installation video




34



24pcs

STEP30: Following below illustration.

2	3	24
44pcs	28pcs	44pcs

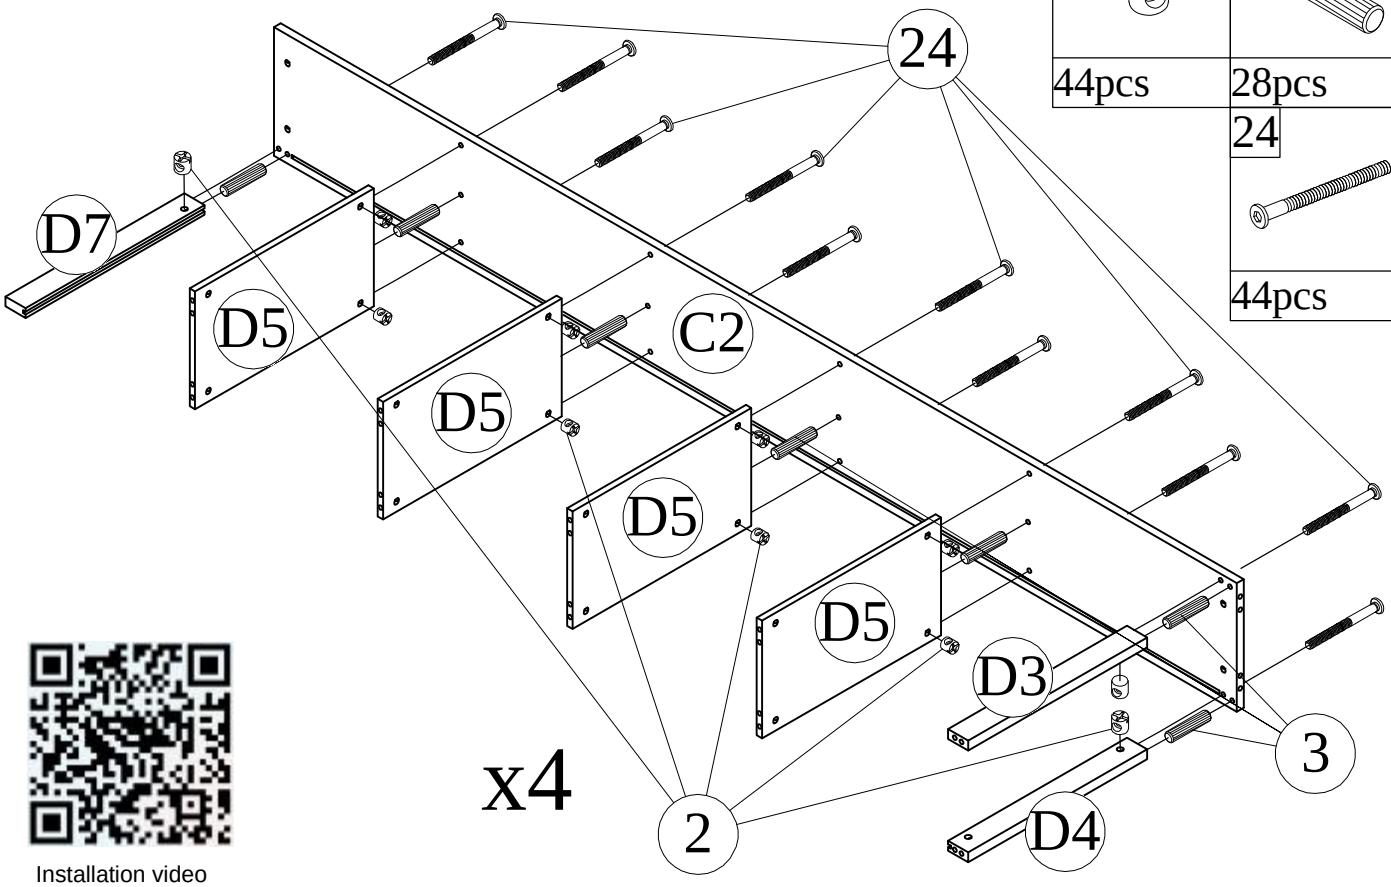


Installation video

STEP31: Following below illustration.

2	3	24
44pcs	28pcs	44pcs

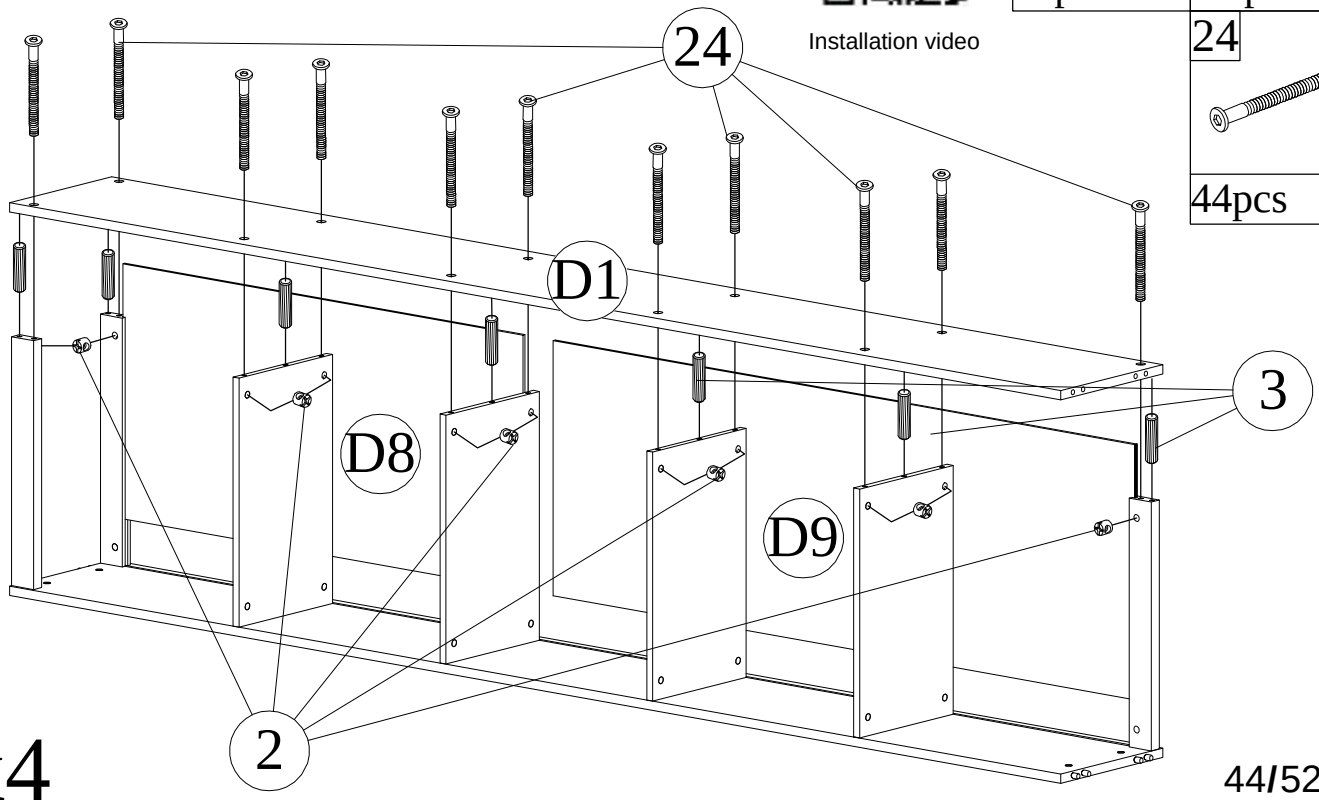
Installation video



STEP32: Following below illustration.

36	25	27
4pcs	8pcs	48pcs

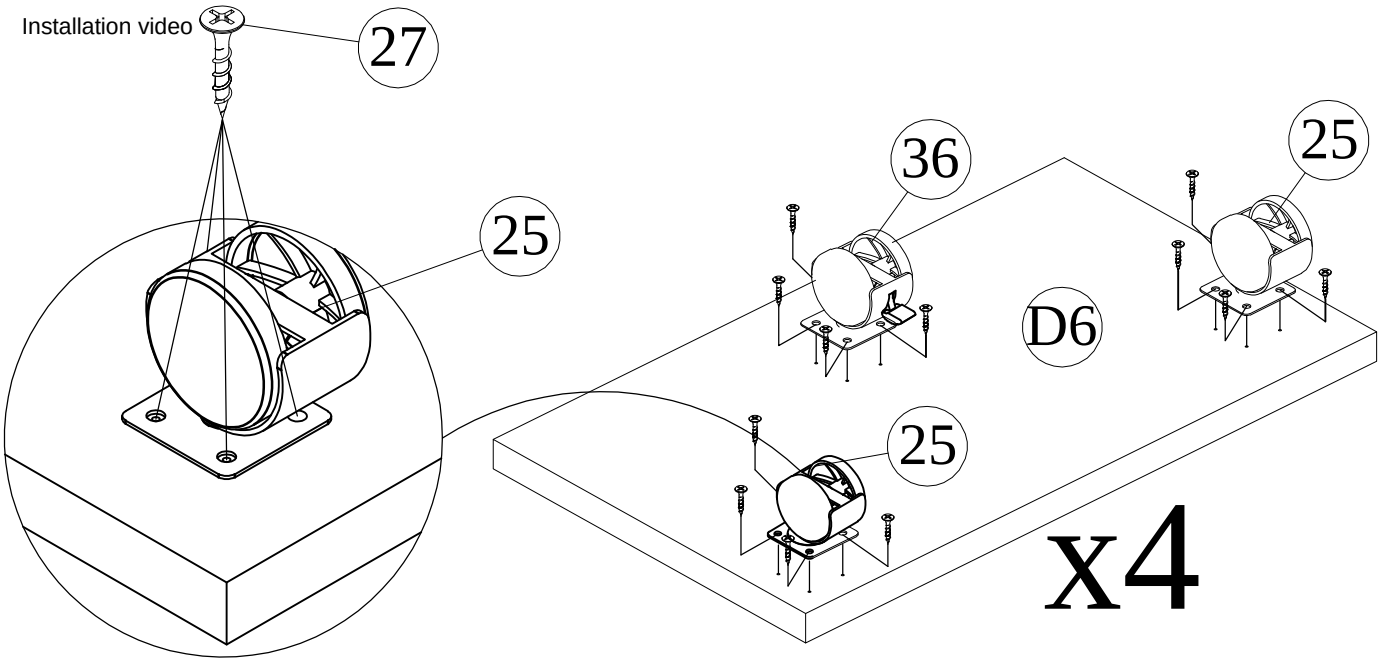
Installation video



STEP33: Following below illustration.

2	3	5	24
32pcs	16pcs	8pcs	32pcs

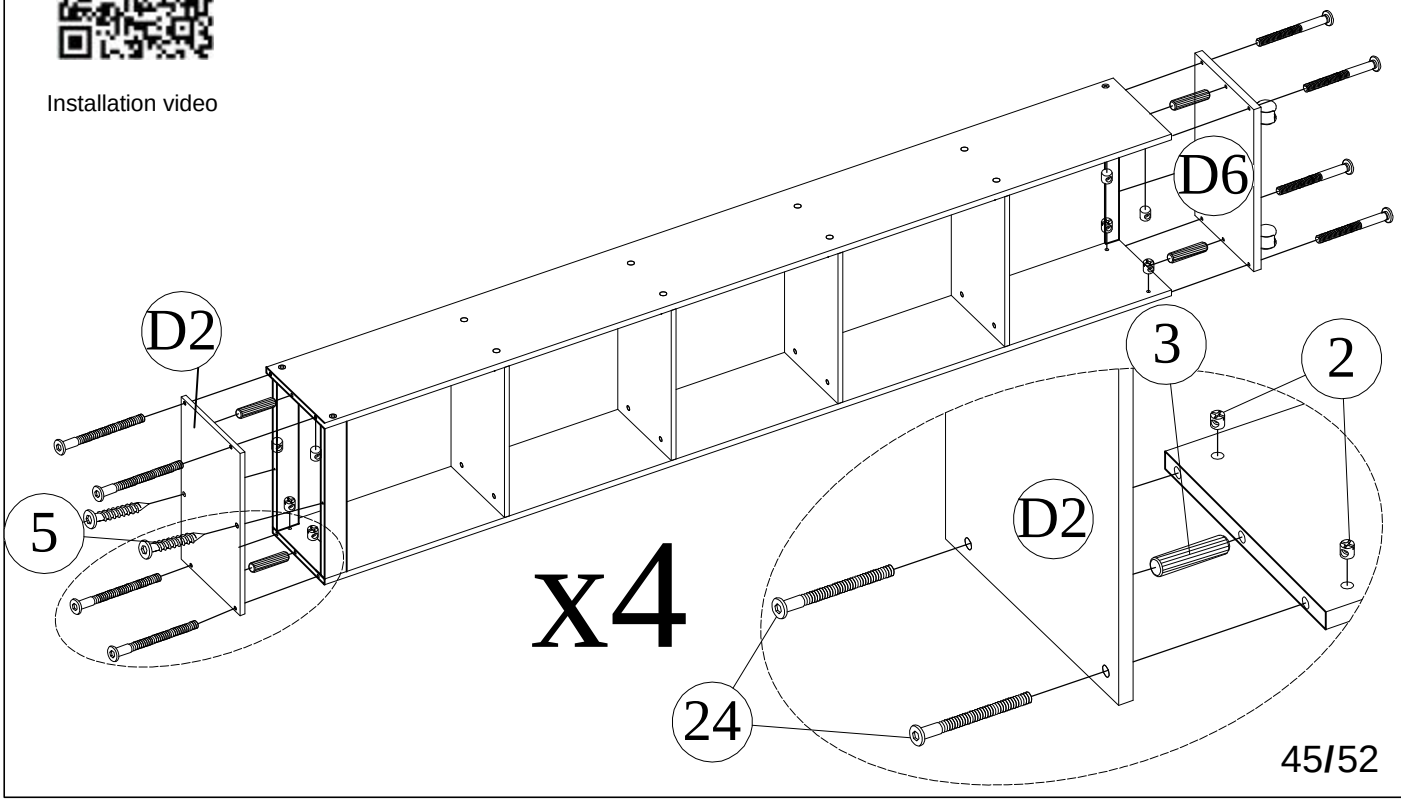
Installation video



STEP34: Following below illustration.

26	27
8pcs	24pcs

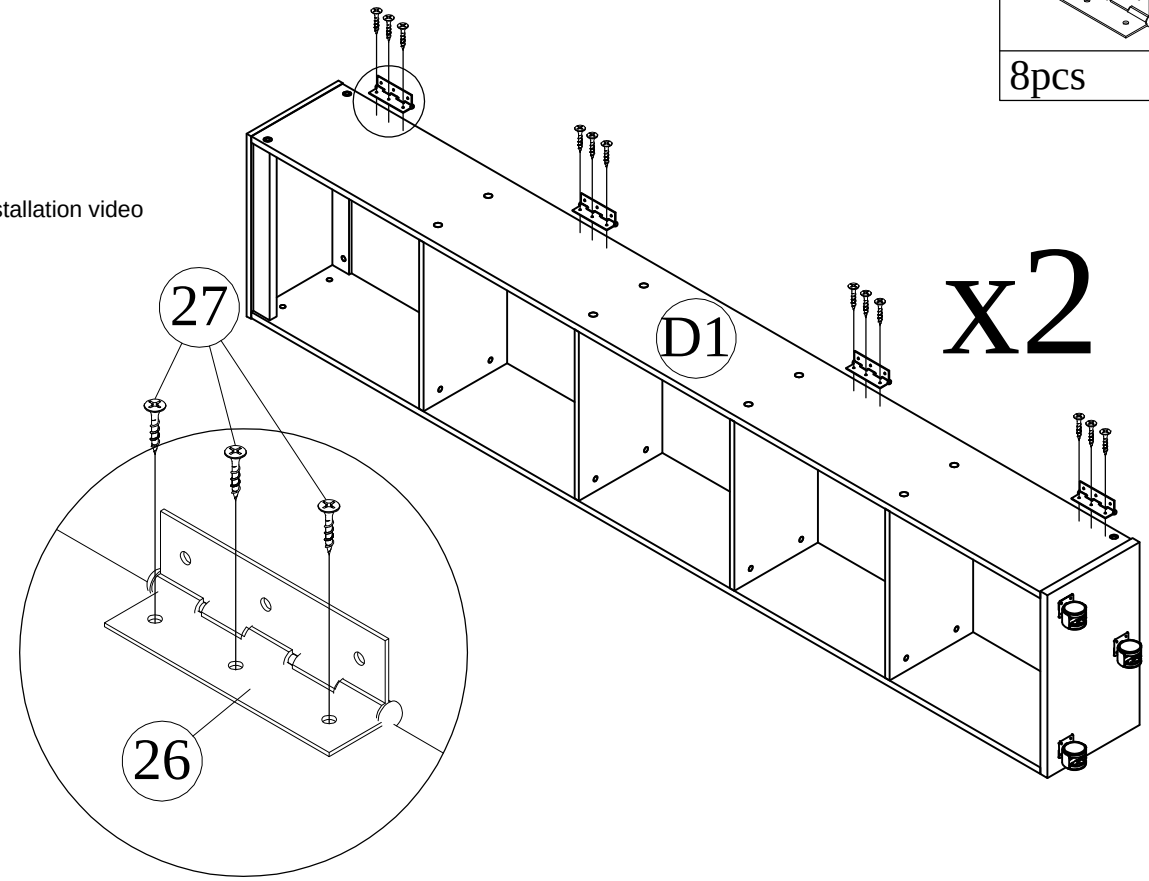
Installation video



STEP35: Following below illustration.


26	27
8pcs	24pcs

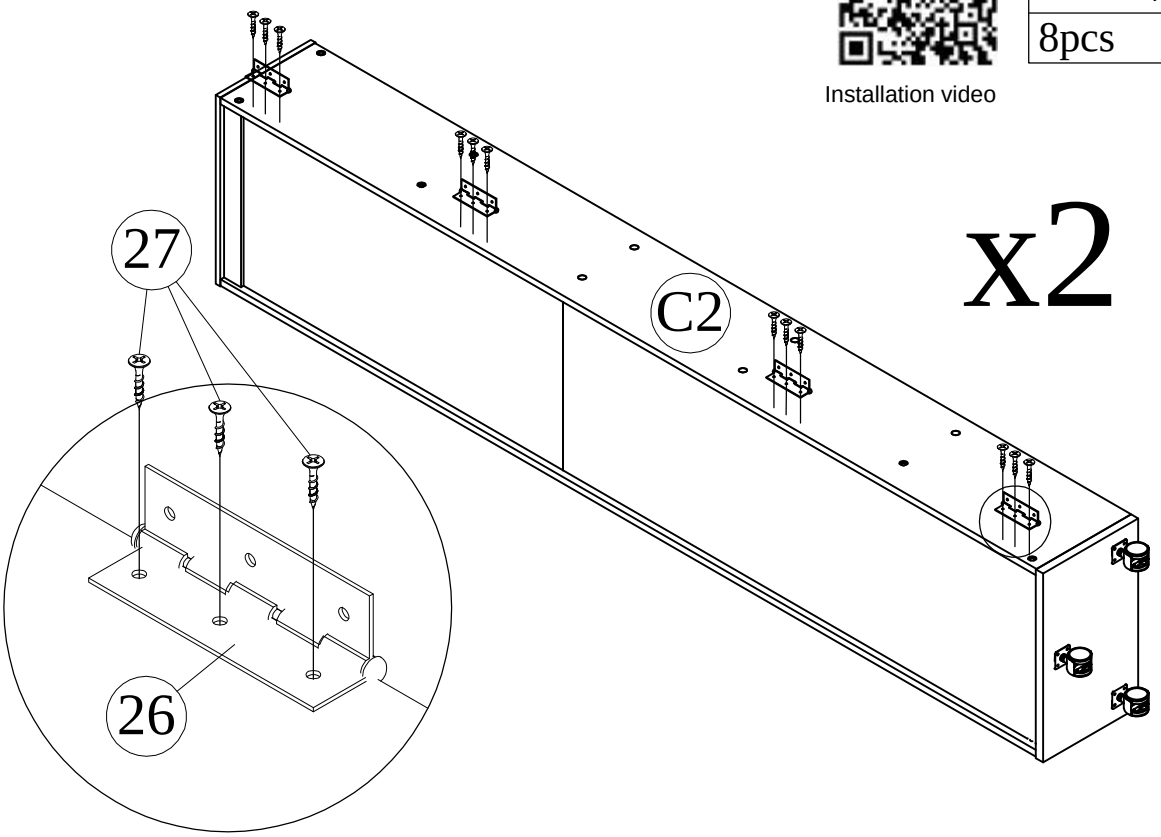Installation video




STEP36: Following below illustration.

27




12pcs

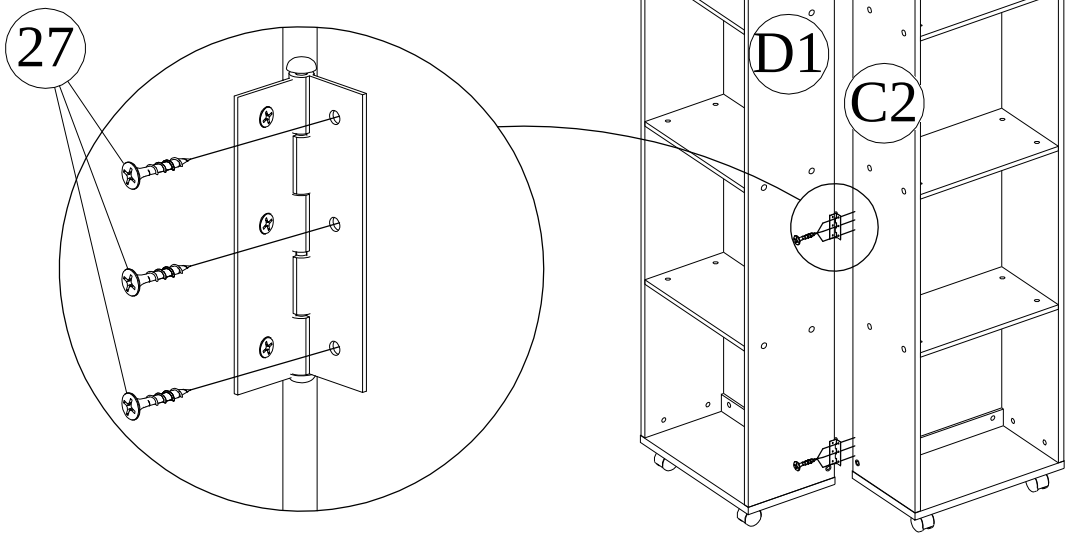Installation video




STEP37: Following below illustration.

27



12pcs

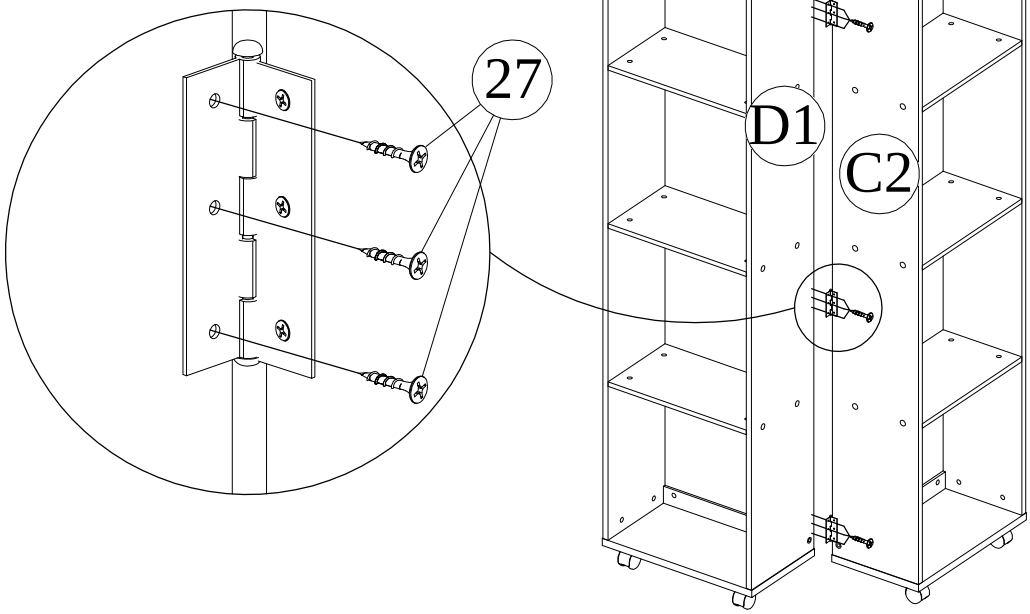
Installation video



STEP38: Following below illustration.

Installation video

27	
	12pcs

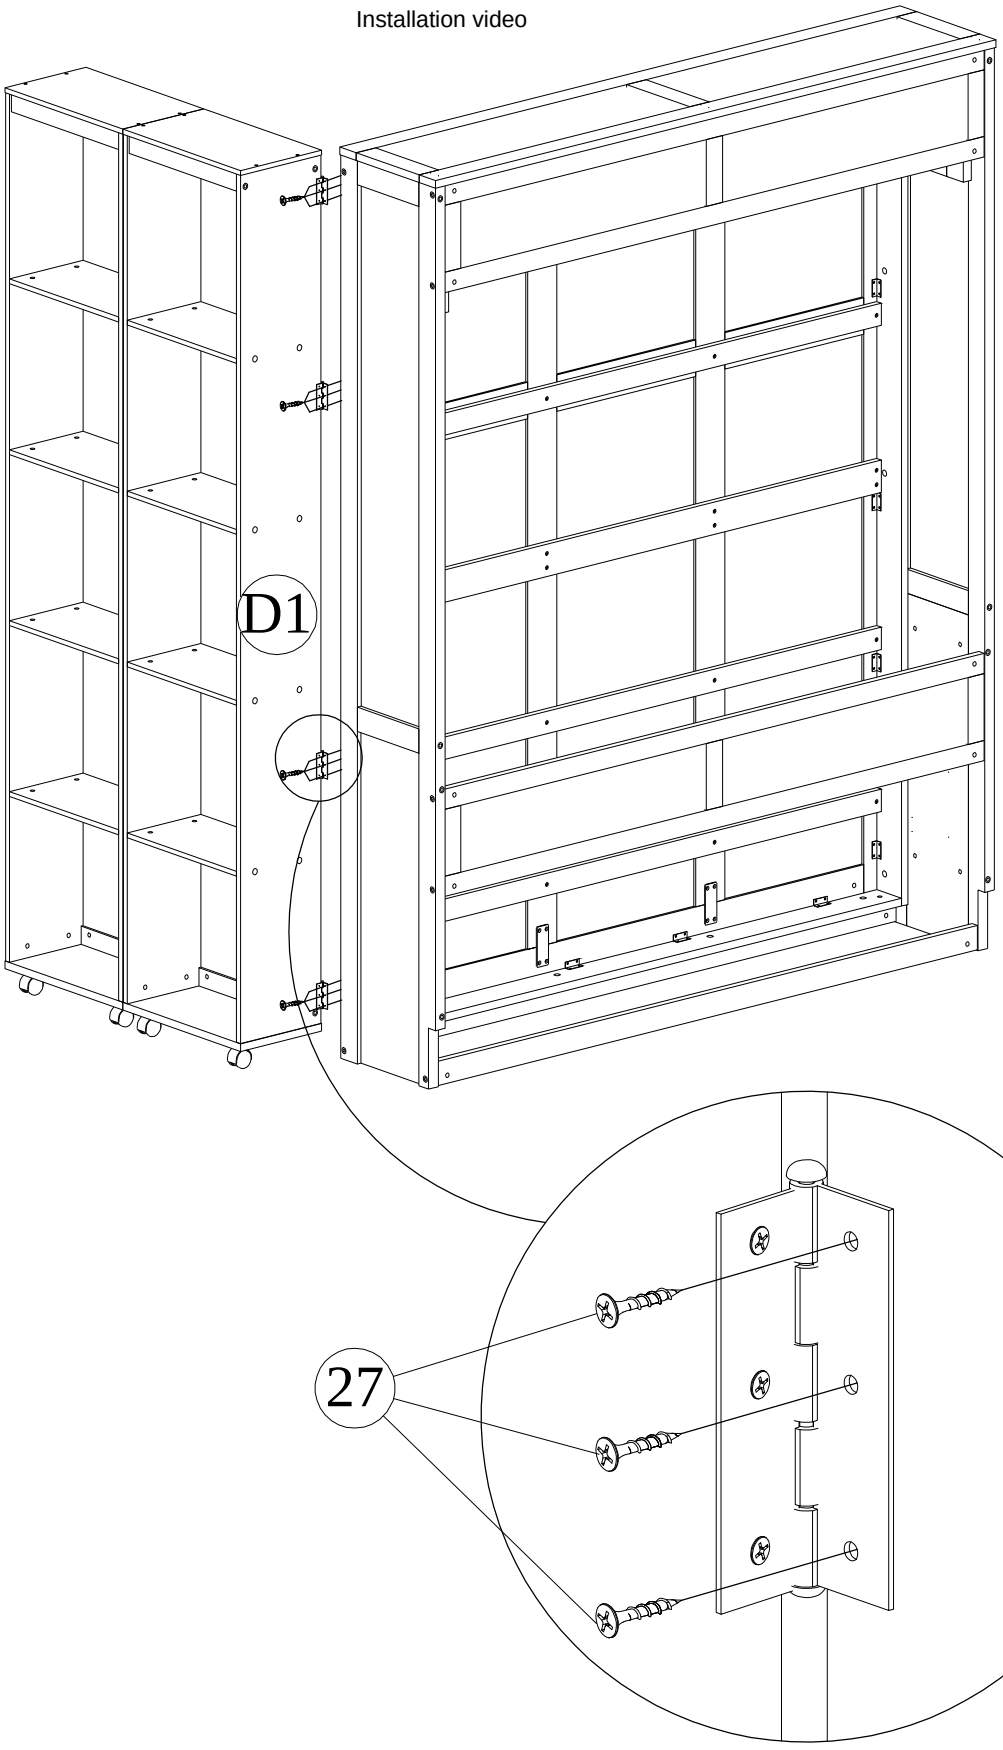


STEP39: Following below illustration.

27




12pcs

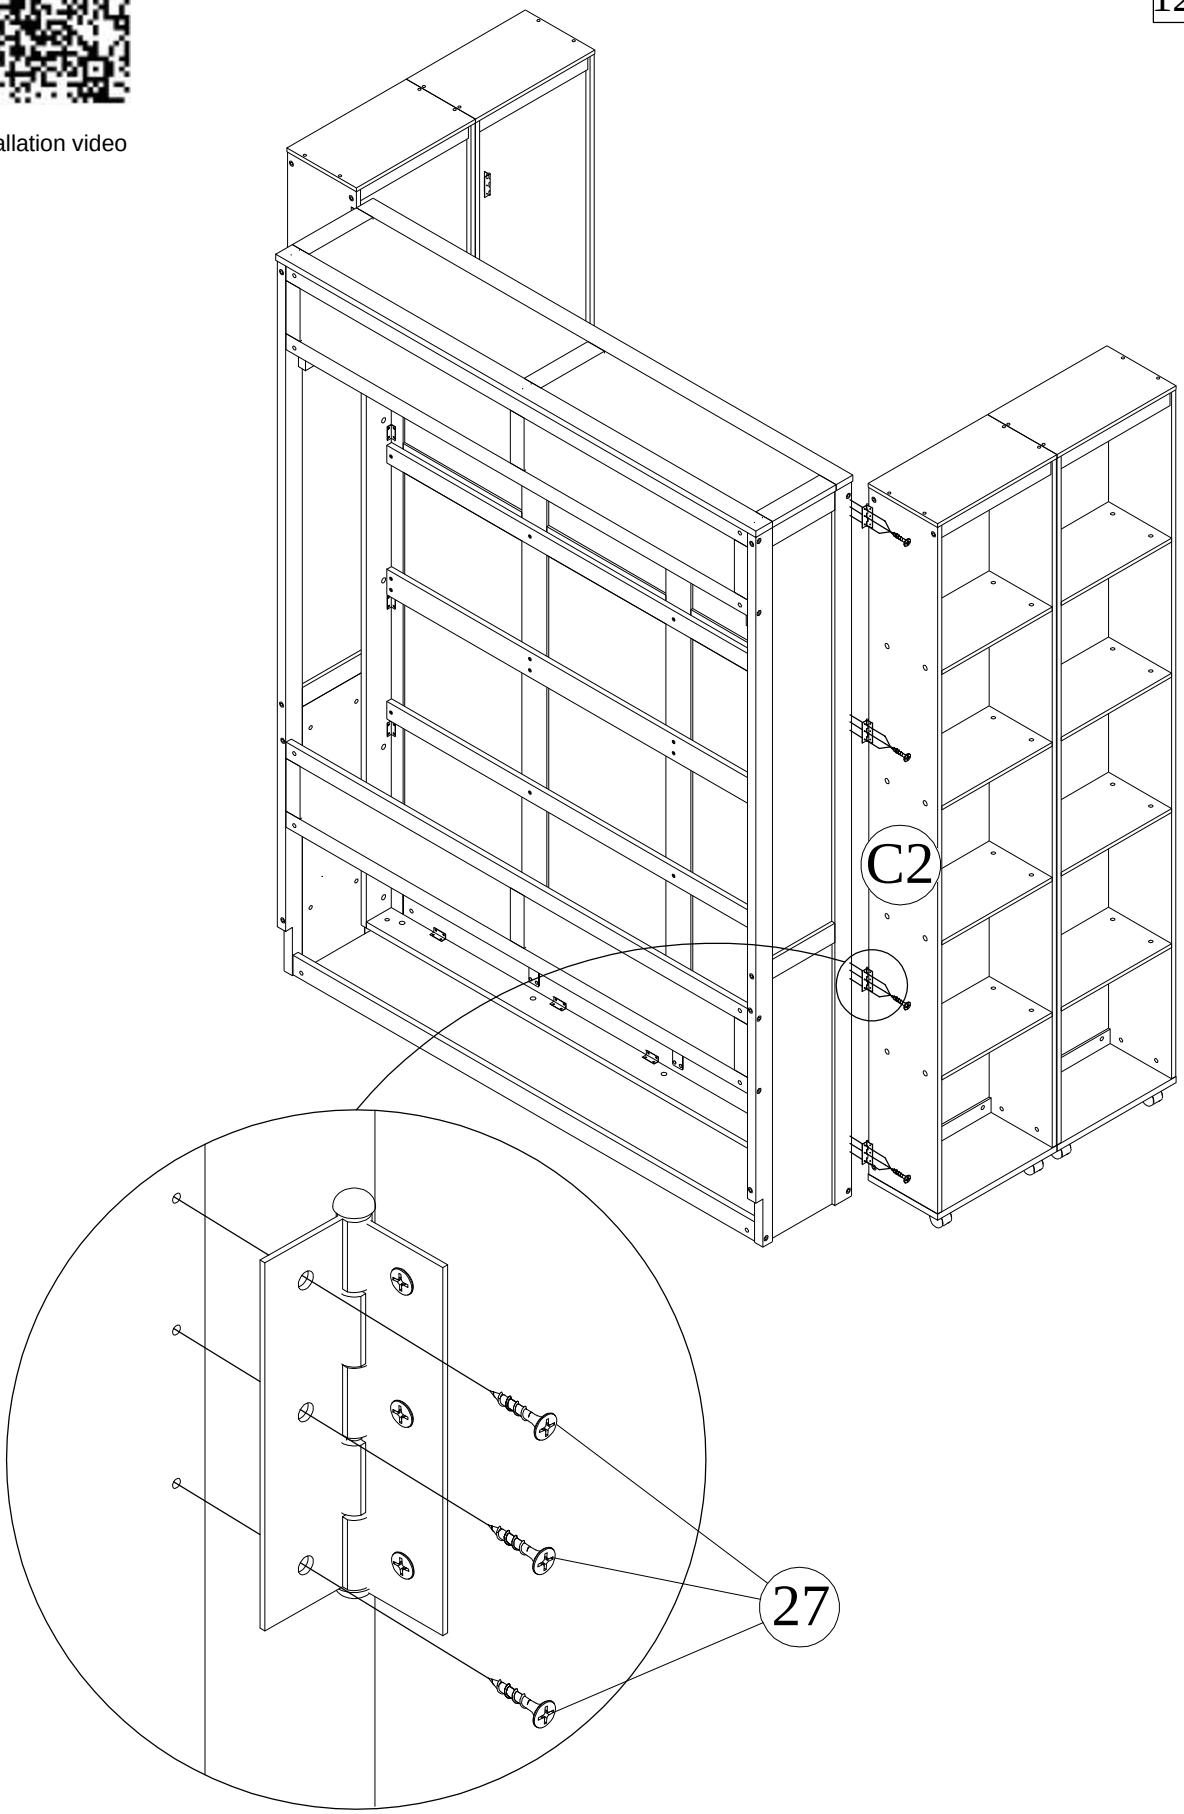
Installation video




OPTION 1: FINISH

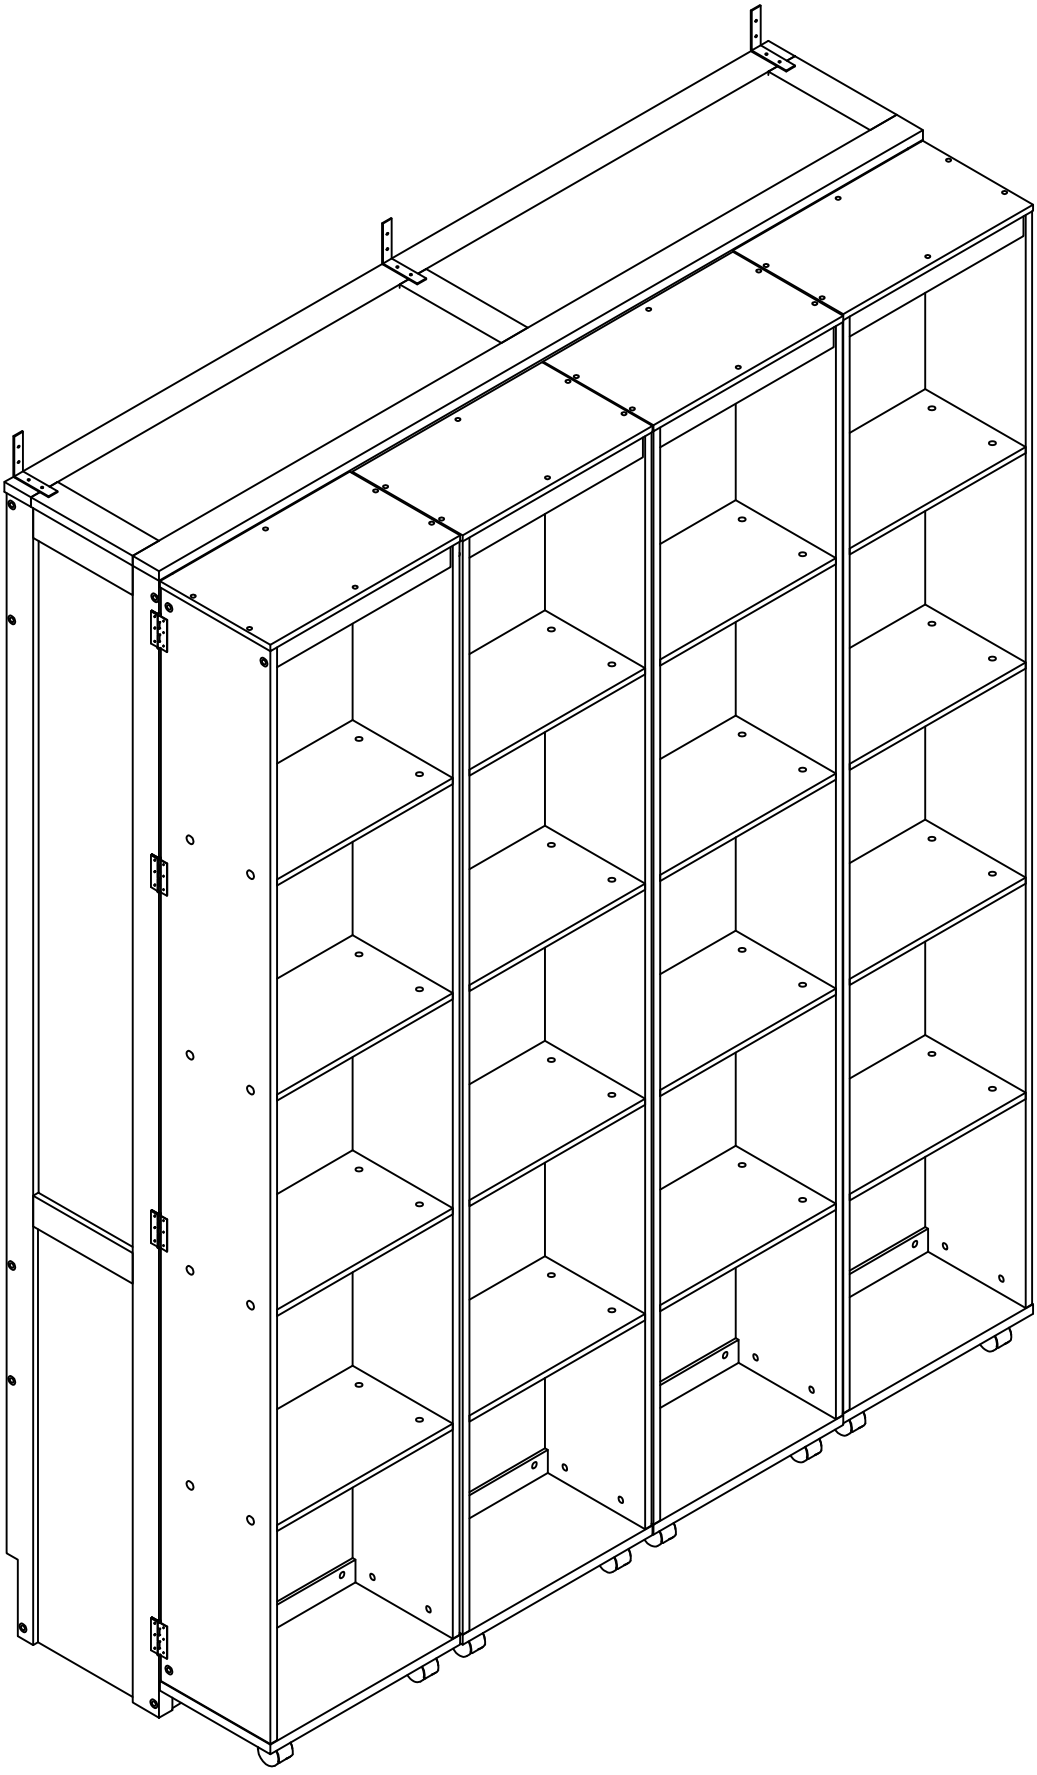

OPTION 2: Step 1

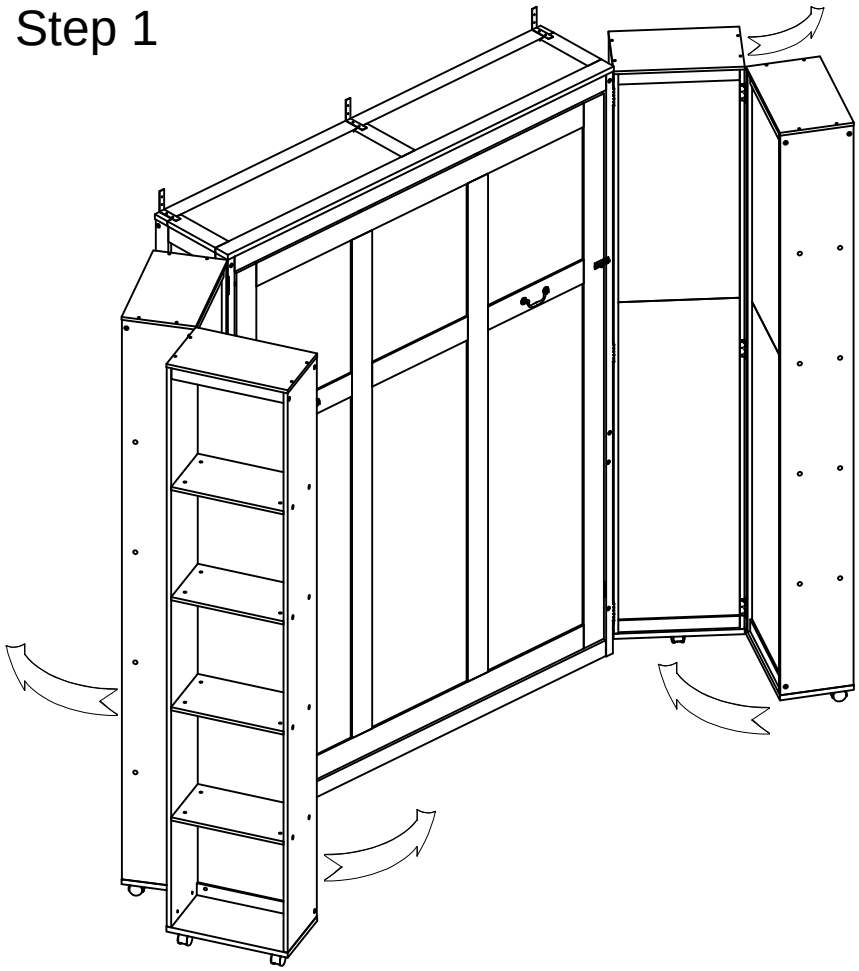

OPTION 2: Step 2

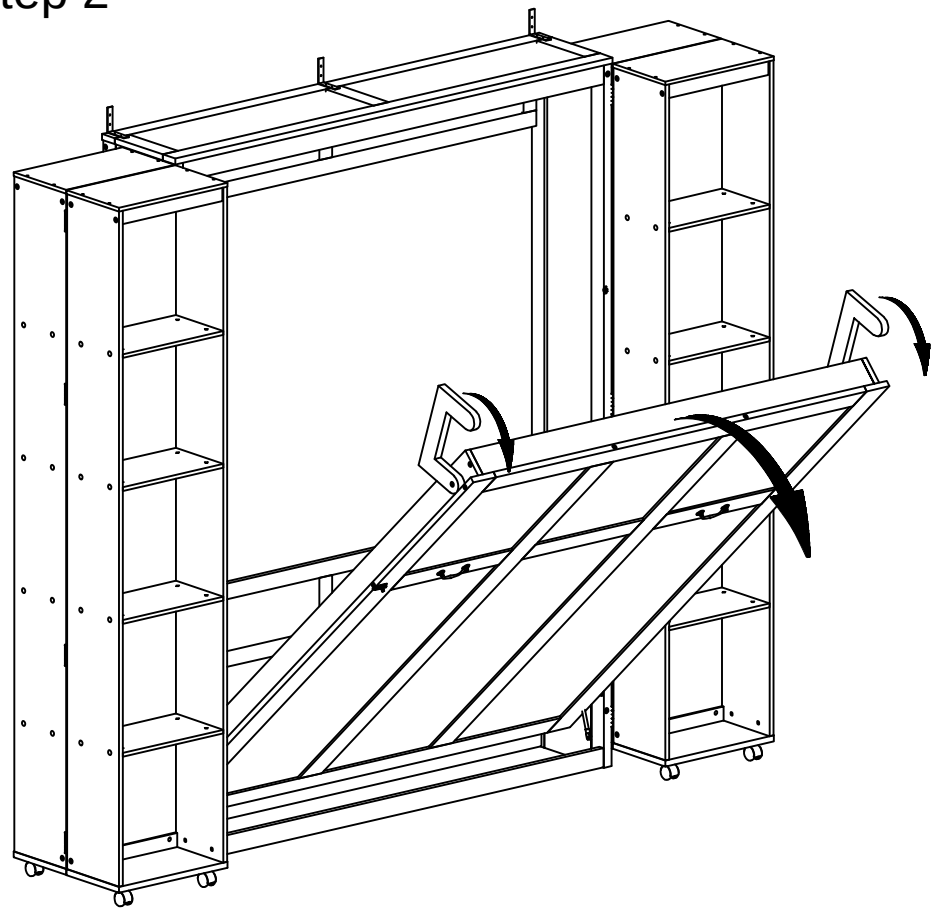

OPTION 2: FINISH

