
domi
outdoor living

10'x14' Metal Patio Gazebo

ASSEMBLY MANUAL

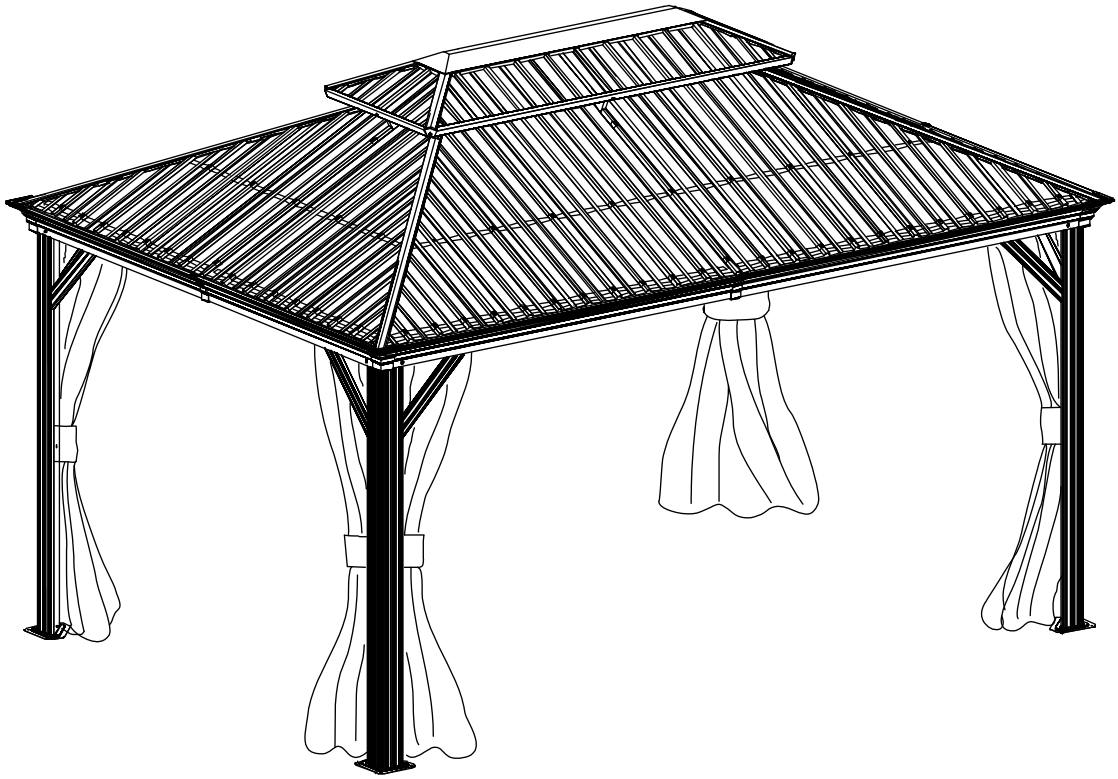

MODEL#: LGMF8220C

Missing part? Damaged? Contact us via email at

service@domioutdoorliving.com

www.domioutdoorliving.com

© Copyright 2023–2025 domioutdoorliving LLC. All Rights Reserved.

Pre-assembly



1.Two or more people are required for assembly.



2.You will need one or more stepladders.



3. Wearing protective gloves is recommended.



4.You may need a safety hat.



5.Please use a Phillips screw driver.



6.For ease of construction, you may need a drill.



7.You may need a safety goggle.



8.Do not fully tighten screws prior to complete assembly.

Warning & Attention

-Try to assemble this product on the flat ground, otherwise it is difficult to carry out;


-It would be much easier to assemble the product with three or more people;


-After assembly, please check whether all screws are tightened, to prevent parts from falling apart.

⚠Use bolts to secure the frame to the ground to against the strong wind.

IMPORTANT: A gaze may entail to purchase a municipal permit or be subject to specific building codes. It is the consumer's responsibility to inform themselves of any restrictions.


1

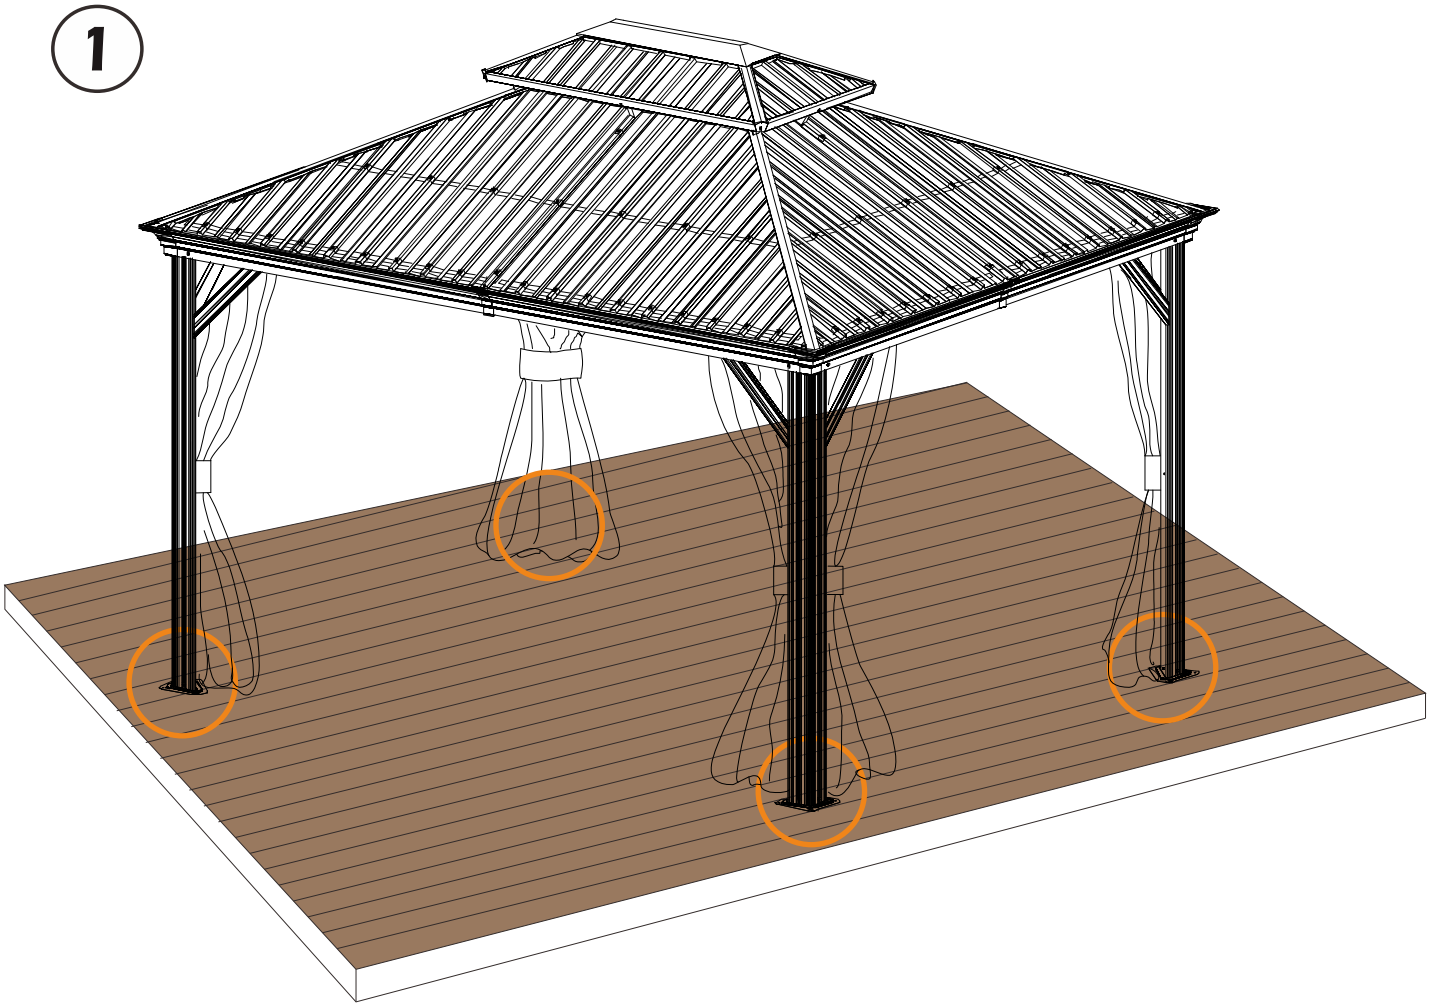





x12


If the deck is hard wood and the depth of it is over 3 inch, you can use **5/16 in. ×4 in. Structural Wood Screw** to mount the gazebo.

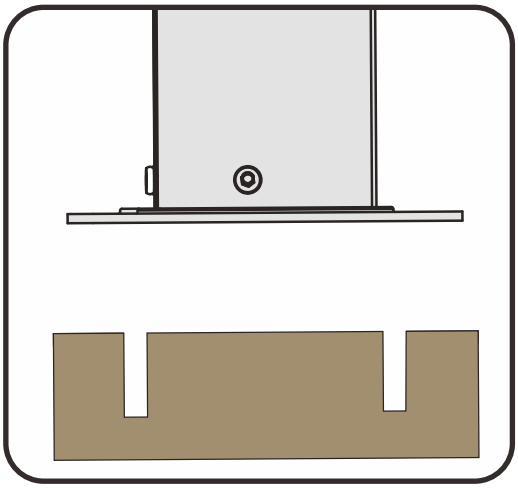

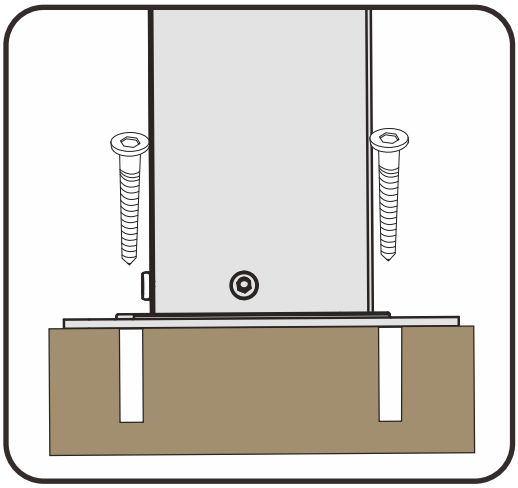

2

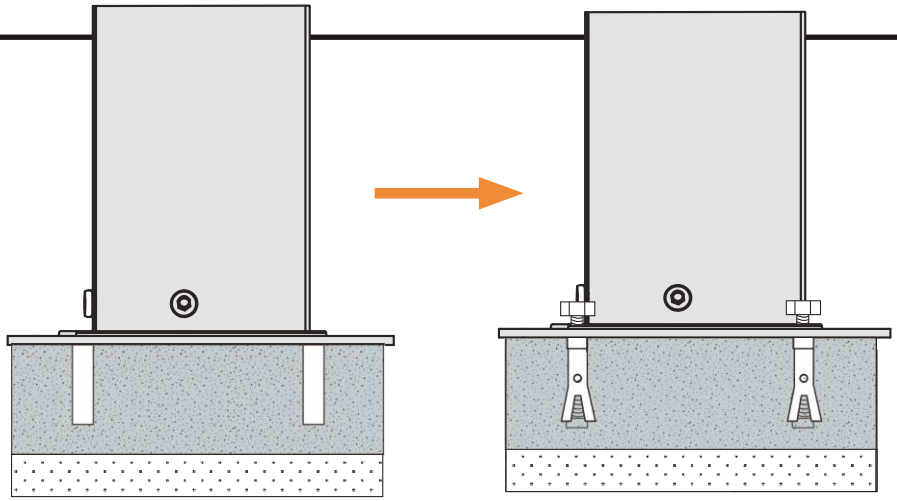

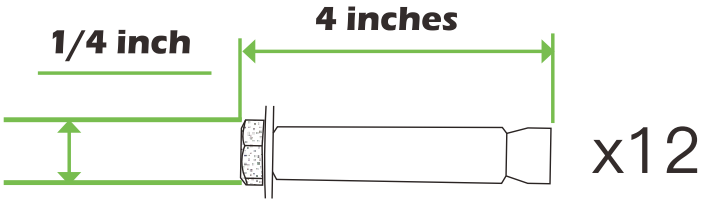



x12

If the ground is concreted and the depth of it is over 3 inch, you can use 1/4 inch expansion bolts to mount the gazebo

3



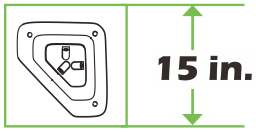


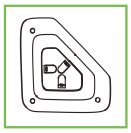






Or you can make a concrete footing for gazebo, **15×15×15 inches** is recommended.use expansion bolts to mount the pergola like (2) shows.


IMPORTANT:
Anchor is not recommended

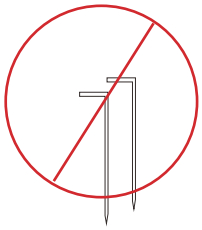










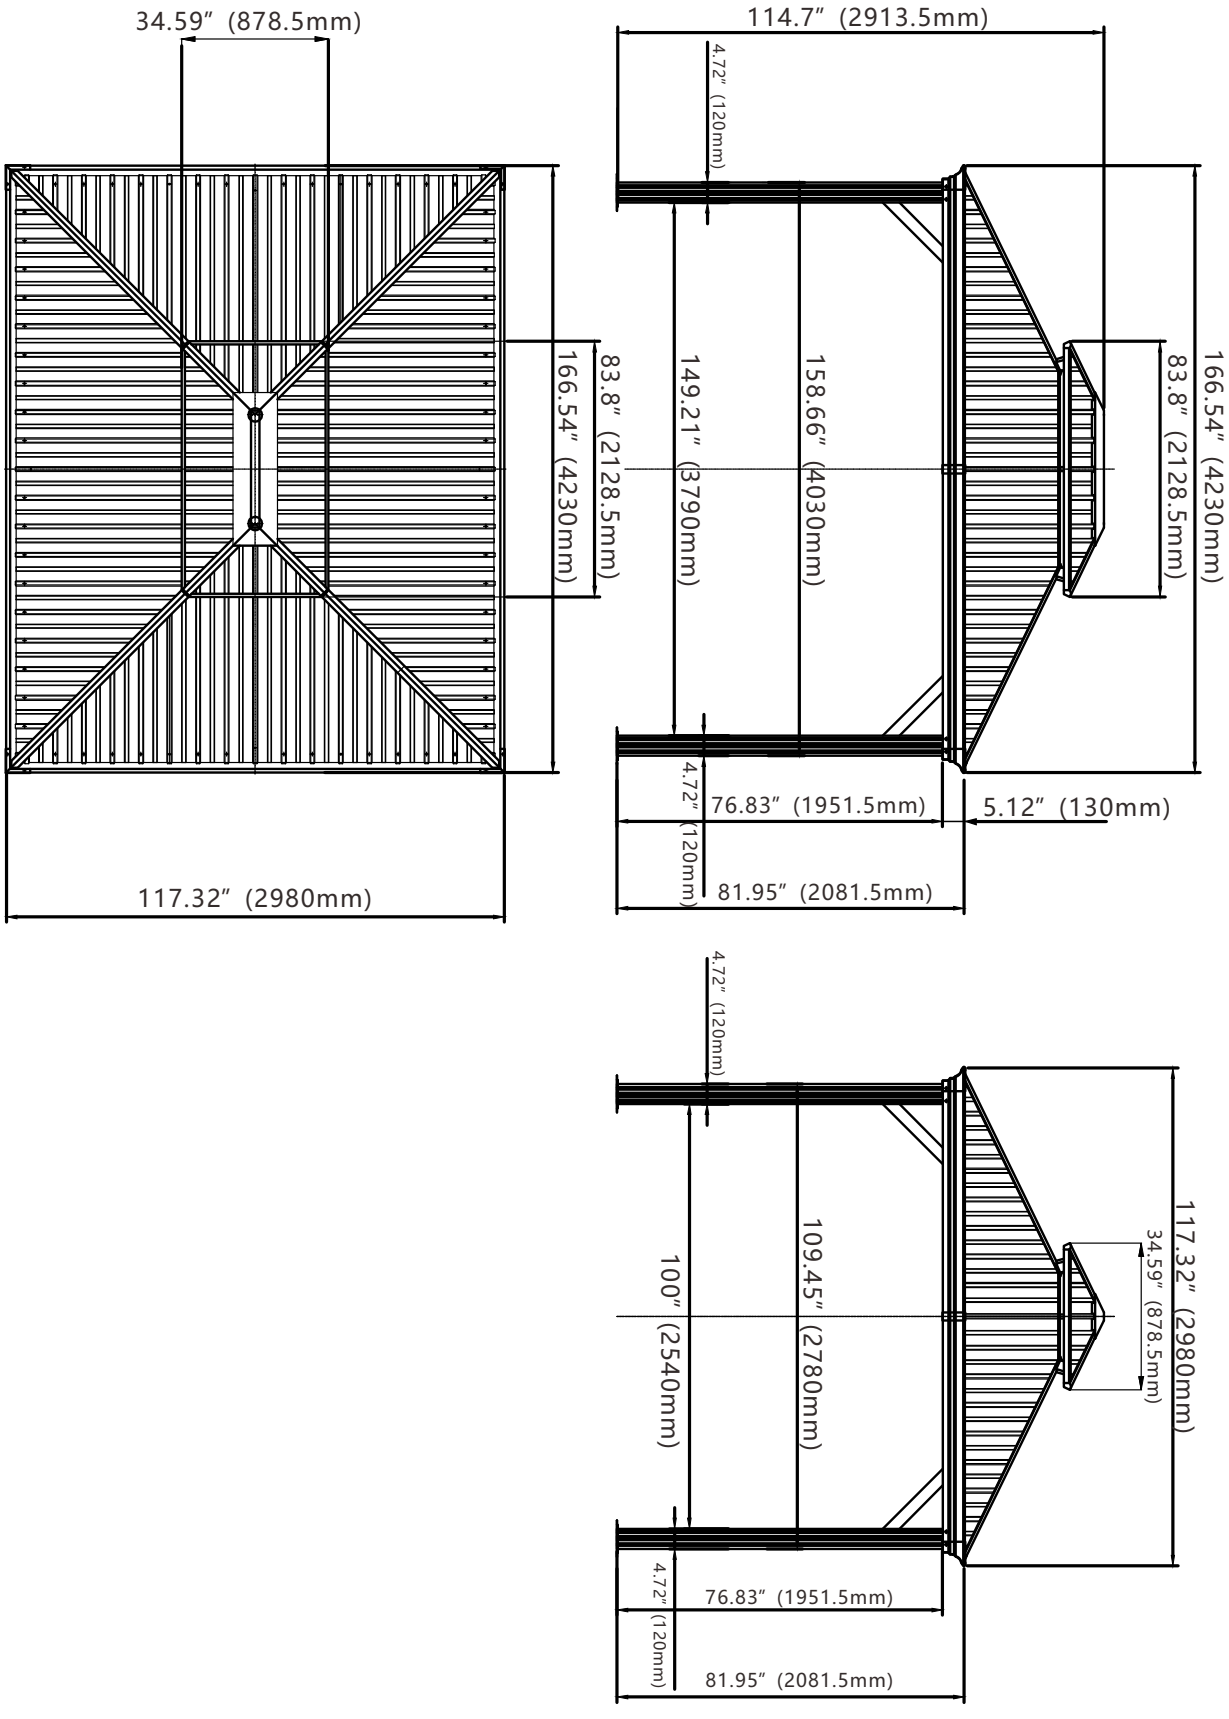

34.59″ (878.5mm)
114.7″ (2913.5mm)
4.72″ (120mm)
166.54″ (4230mm)
83.8″ (2128.5mm)
149.21″ (3790mm)
158.66″ (4030mm)
166.54″ (4230mm)
83.8″ (2128.5mm)
4.72″ (120mm)
76.83″ (1951.5mm)
5.12″ (130mm)
4.72″ (120mm)
81.95″ (2081.5mm)
117.32″ (2980mm)
4.72″ (120mm)
117.32″ (2980mm)
34.59″ (878.5mm)
109.45″ (2780mm)
100″ (2540mm)
4.72″ (120mm)
76.83″ (1951.5mm)
4.72″ (120mm)
81.95″ (2081.5mm)

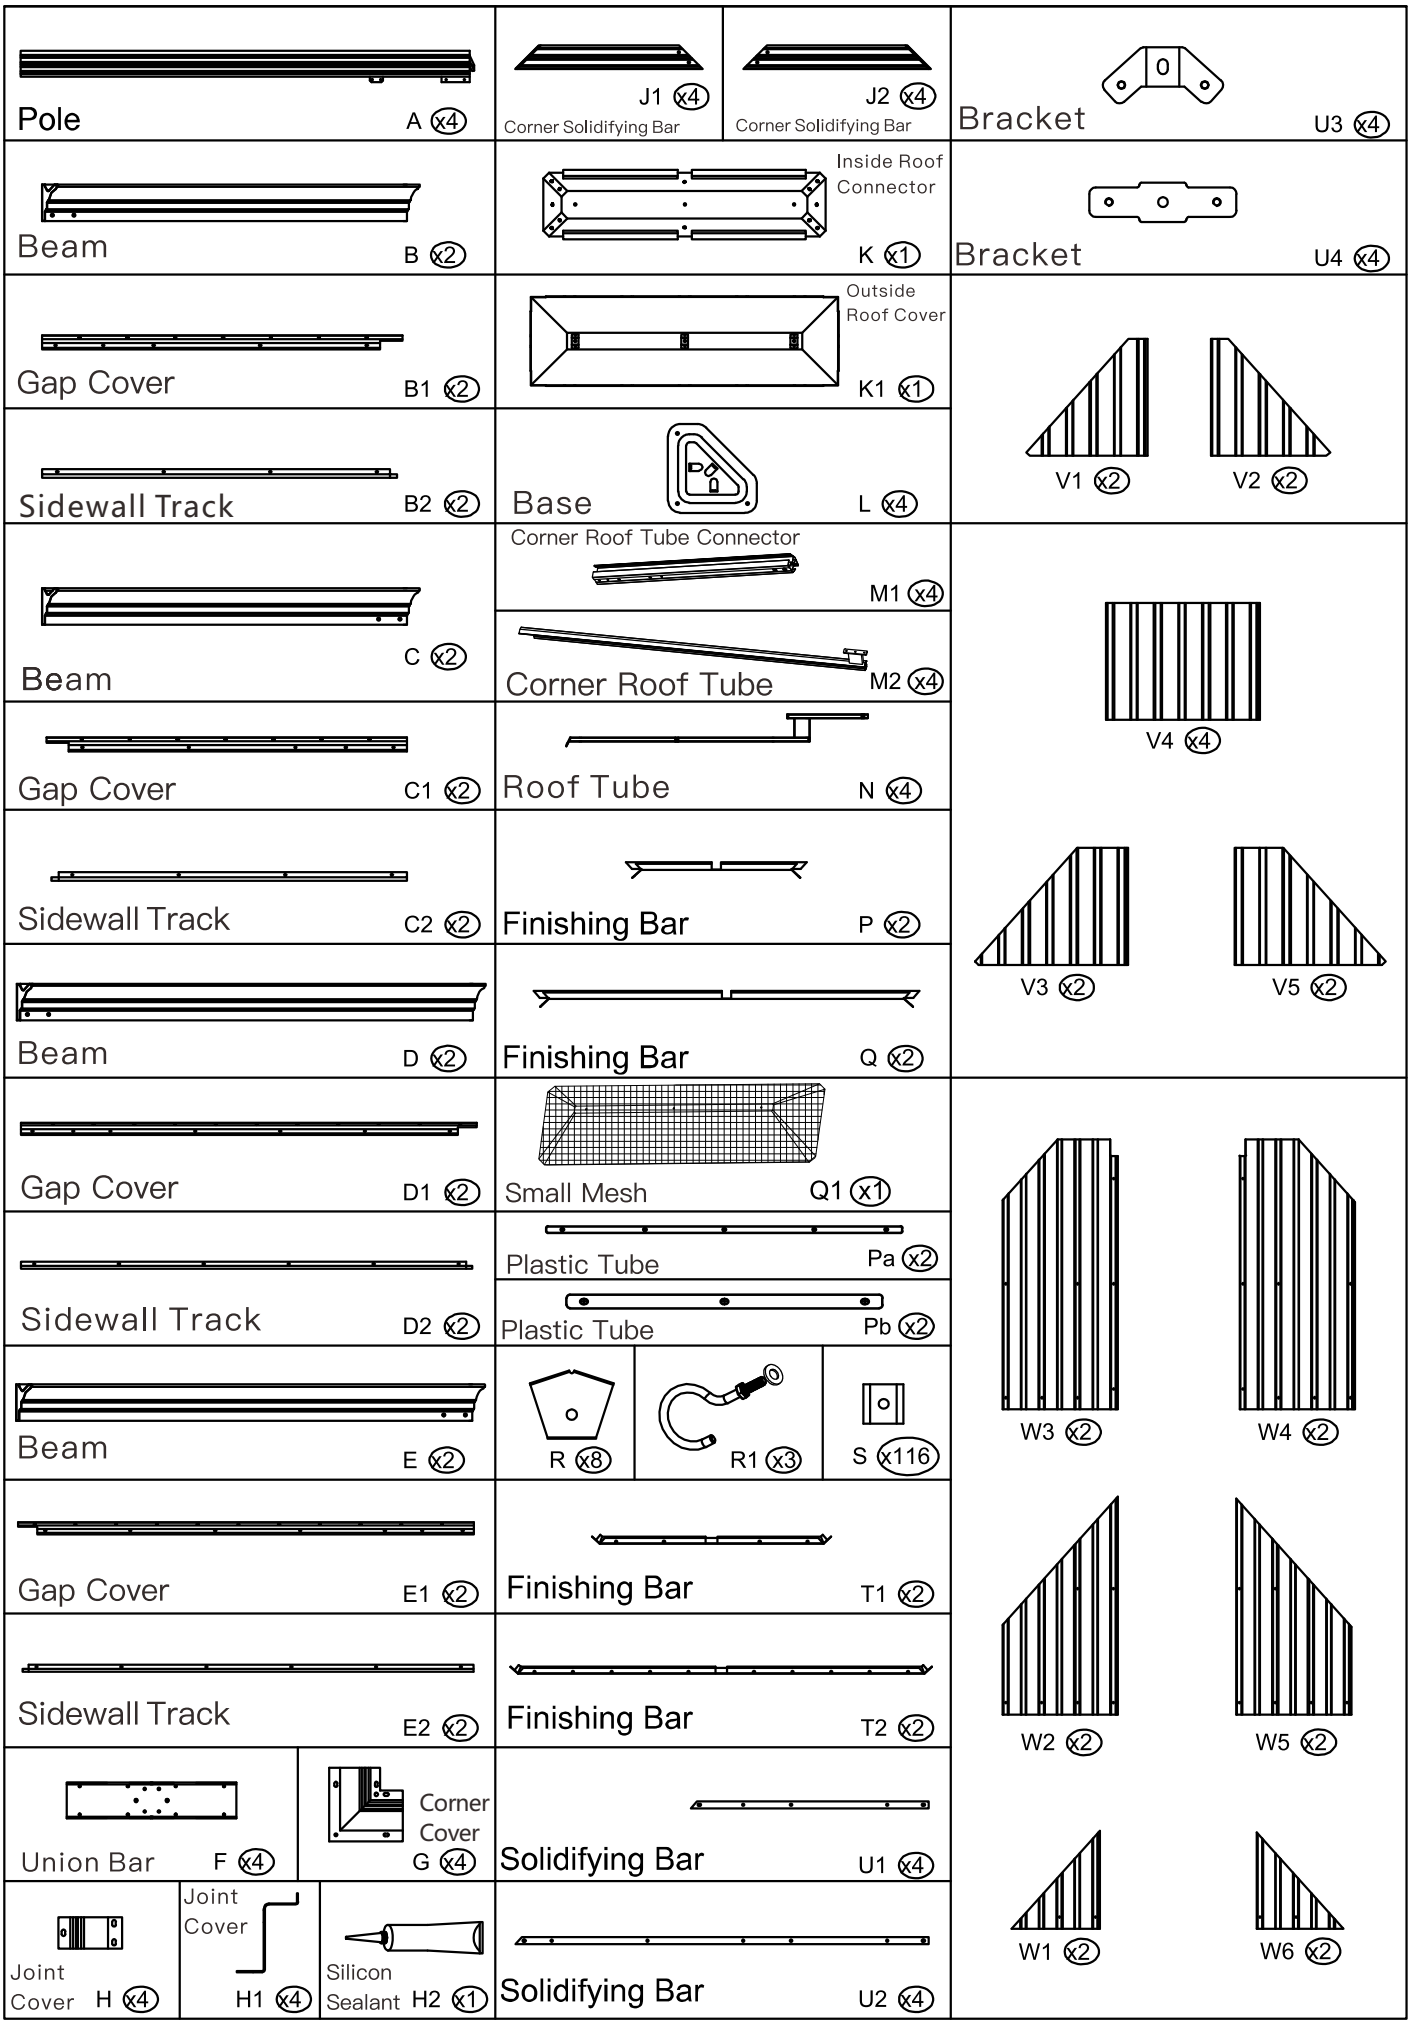

Pole A x4
J1 x4
Corner Solidifying Bar
J2 x4
Corner Solidifying Bar
Bracket U3 x4
Beam B x2
Inside Roof Connector
K x1
Bracket U4 x4
Gap Cover B1 x2
Outside Roof Cover
K1 x1
Sidewall Track B2 x2
Base L x4
V1 x2
V2 x2
Corner Roof Tube Connector
M1 x4
Beam C x2
Corner Roof Tube M2 x4
V4 x4
Gap Cover C1 x2
Roof Tube N x4
Sidewall Track C2 x2
Finishing Bar P x2
V3 x2
V5 x2
Beam D x2
Finishing Bar Q x2
Gap Cover D1 x2
Small Mesh Q1 x1
Plastic Tube Pa x2
Sidewall Track D2 x2
Plastic Tube Pb x2
Beam E x2
R x8
R1 x3
S x116
W3 x2
W4 x2
Gap Cover E1 x2
Finishing Bar T1 x2
Sidewall Track E2 x2
Finishing Bar T2 x2
W2 x2
W5 x2
Union Bar F x4
Corner Cover G x4
Solidifying Bar U1 x4
Joint Cover H x4
Joint Cover H1 x4
Silicon Sealant H2 x1
Solidifying Bar U2 x4
W1 x2
W6 x2

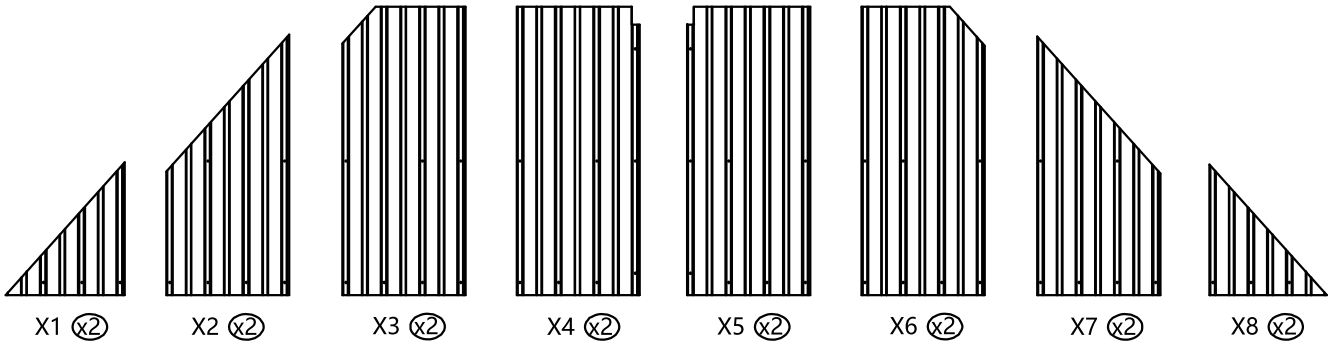


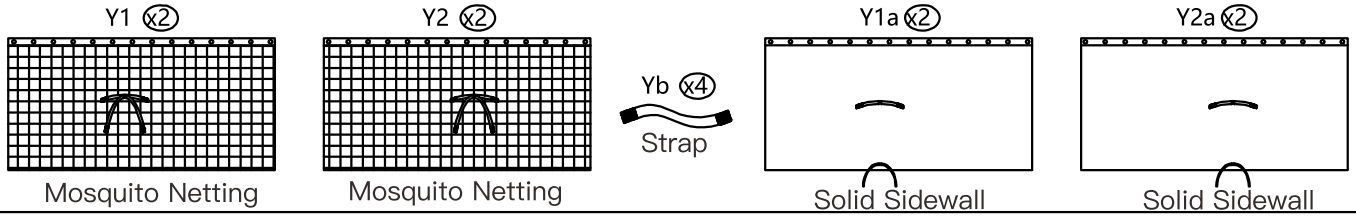




	M6x16	1# x200
	M6x20	2# x24
		3# x16
	Plastic Hook	4# x112
	**M6x28**	5# x72
	**M6x45**	6# x8
	**M6x50**	7# x32
	**M5x16**	8# x4
	ST4.8 **x13**	9# x24
	M6x25	10# x4
	M6x12	11# x12
	ST6.3*15	12# x12




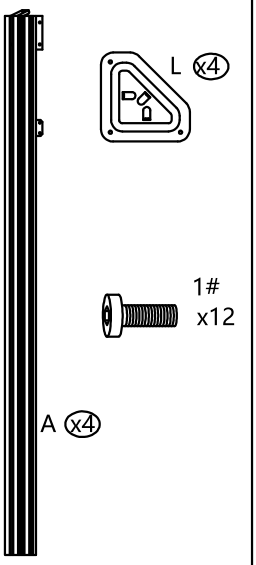


Assemble the Poles:


Attach Base #L to
Pole #A with 3 Bolts #1.

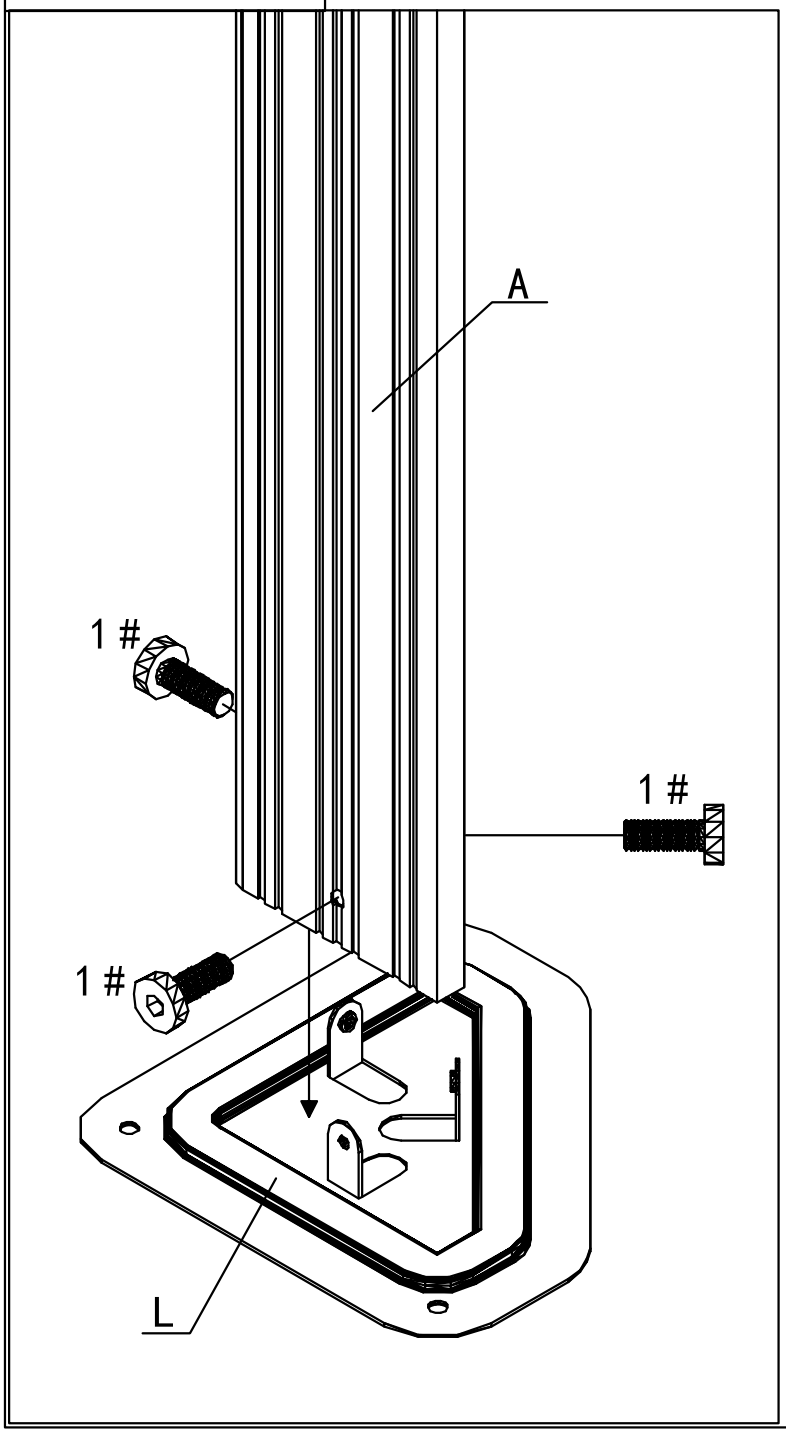


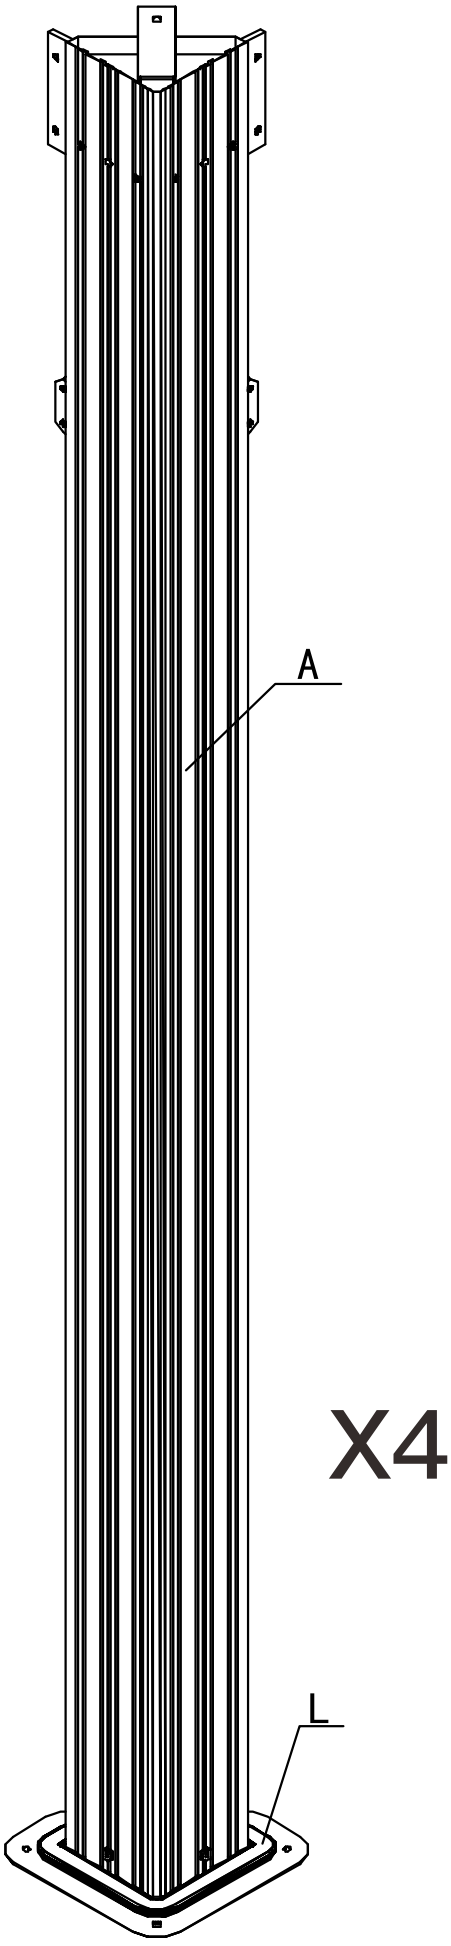


X4

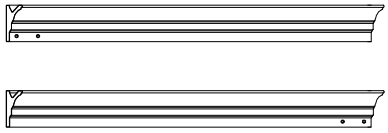







Assemble the Beams:

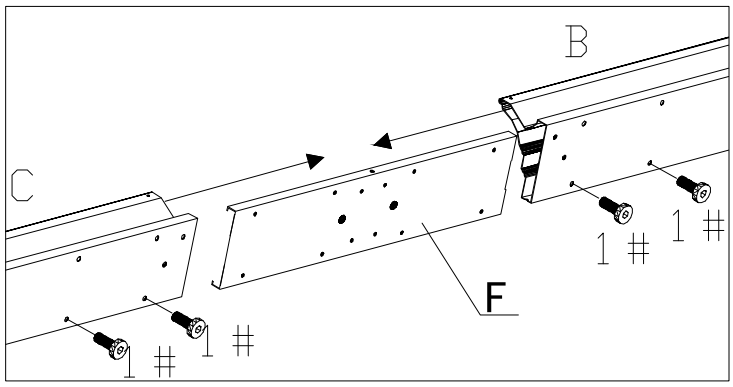



(1)Insert Union Bar #F into Beam #C, and secure with 2 Bolts #1.
(2)Insert the other side of Union Bar #F into Beam #B and secure with 2 Bolts #1.
Repeat the above procedures to assemble the other Beam #C and #B.

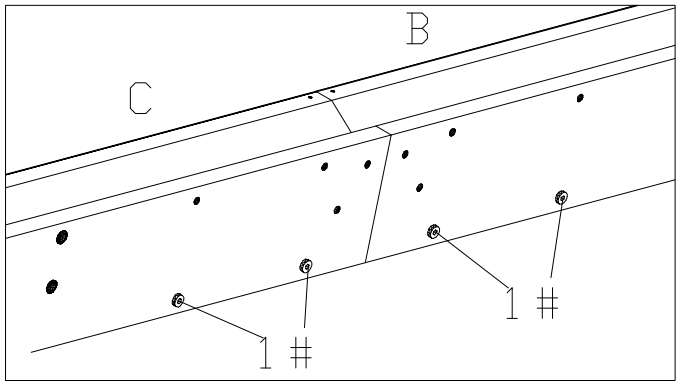


TIPS: It's a normal situation that there's a gap between the 2 beams, please use silicone sealant (part #H2) and Joint Cover #H to affix the gap.(see Page5-2)

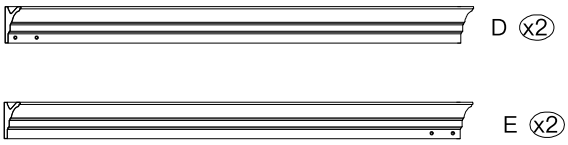






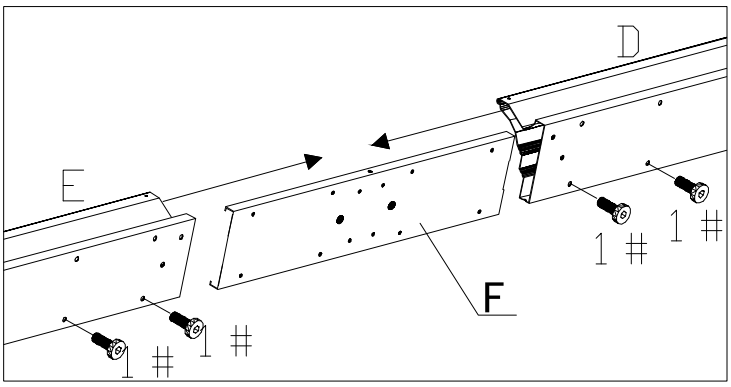



(1)Insert Union Bar #F into Beam #E, and secure with 2 Bolts #1.
(2)Insert the other side of Union Bar #F into Beam #D and secure with 2 Bolts #1.


Repeat the above procedures to assemble the other Beam #E and #D.

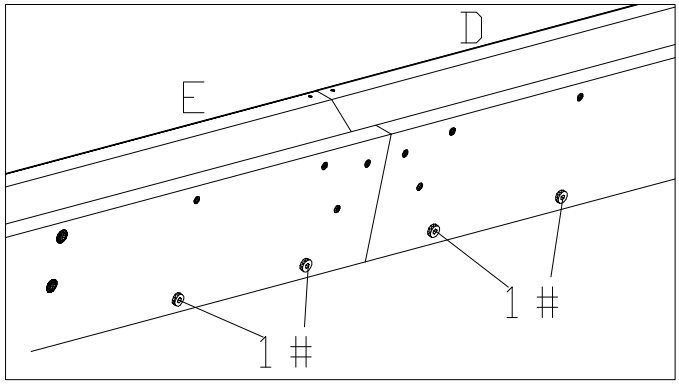

TIPS: It's a normal situation that there's a gap between the 2 beams, please use silicone sealant (part #H2) and Joint Cover #H to affix the gap.(see Page5-2)

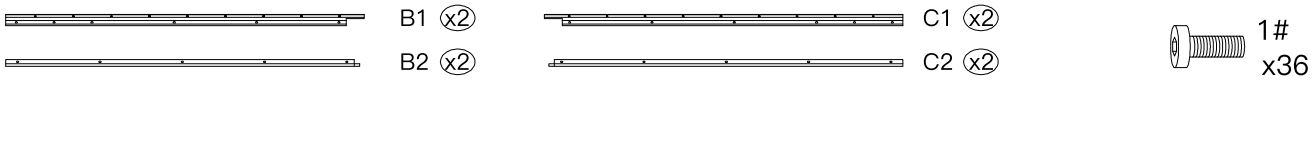

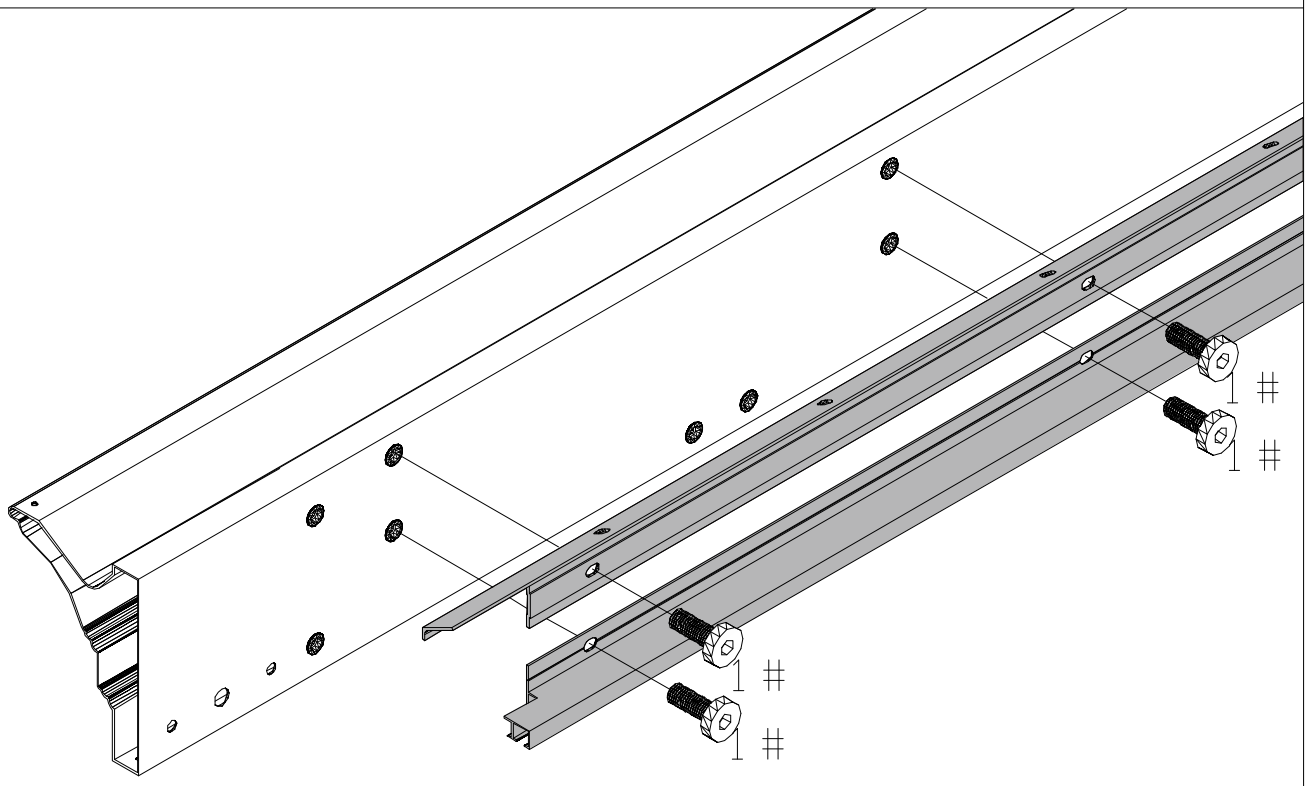


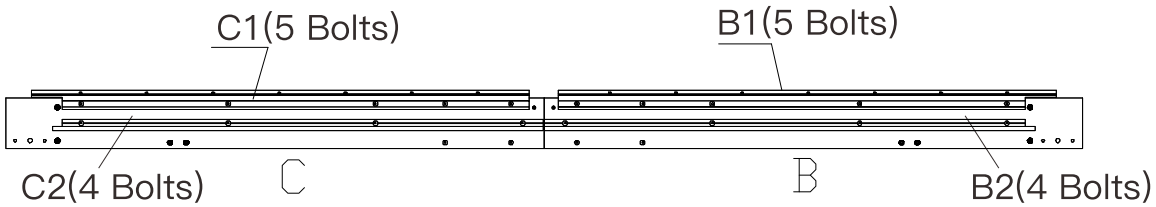



X2


(1)Use 5 Bolts #1 to secure the Gap Cover #C1 to the Beam #C as shown;
(2)Use 4 Bolts #1 to secure the Track #C2 to the Beam #C as shown;
(3)Use 5 Bolts #1 to secure the Gap Cover #B1 to the Beam #B as shown;
(4)Use 4 Bolts #1 to secure the Track #B2 to the Beam #B as shown.

Repeat the same steps to assemble the other Gap Covers (#C1, #B1) and Sidewall Tracks (#C2, #B2).

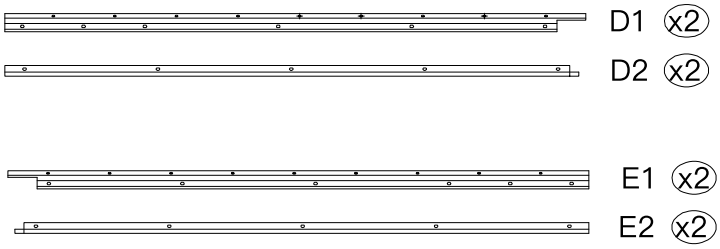



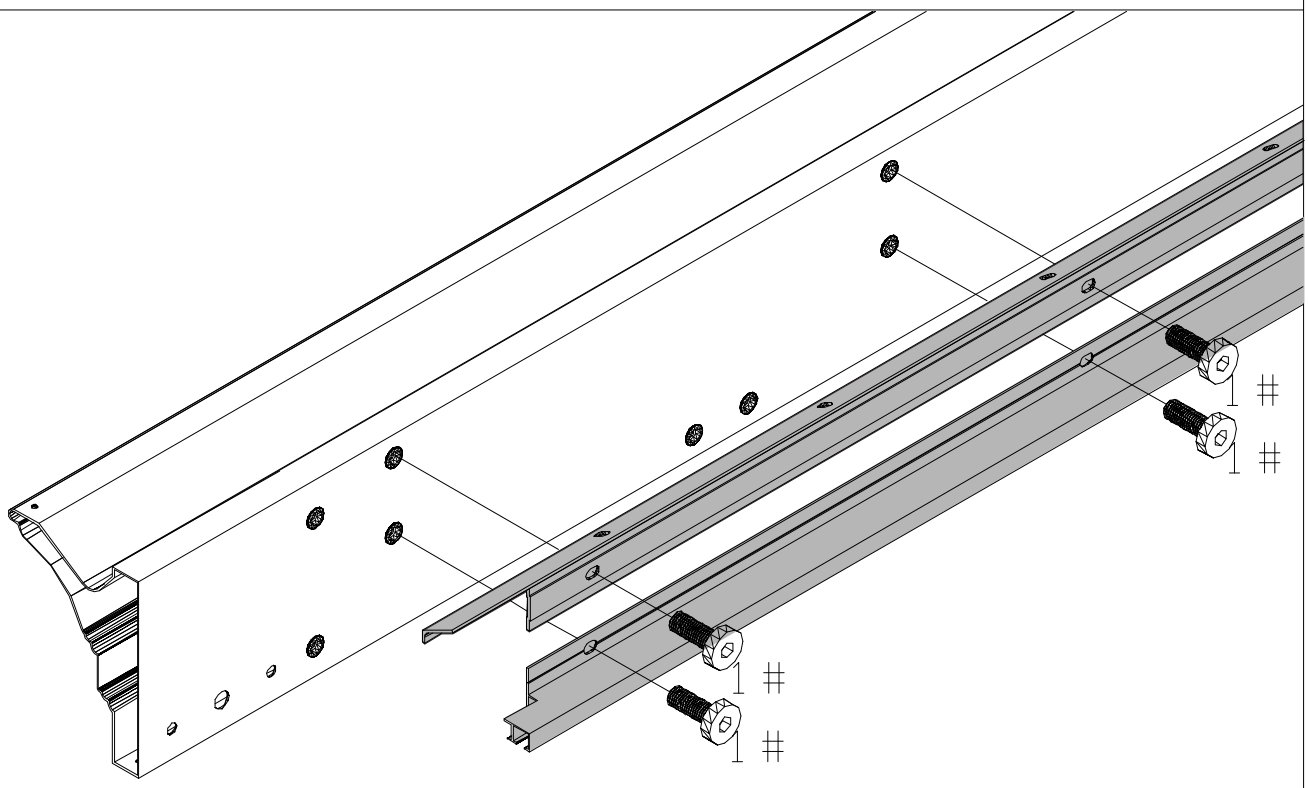

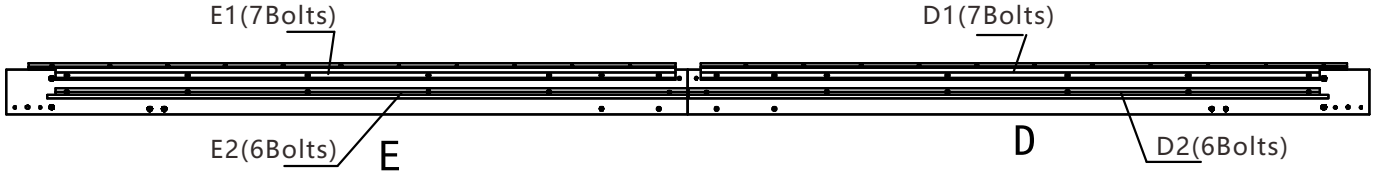


X2

(1)Use 7 Bolts #1 to secure the Gap Cover #E1 to the Beam #E as shown;
(2)Use 6 Bolts #1 to secure the Track #E2 to the Beam #E as shown;
(3)Use 7 Bolts #1 to secure the Gap Cover #D1 to the Beam #D as shown;
(4)Use 6 Bolts #1 to secure the Track #D2 to the Beam #D as shown.
Repeat the same steps to assemble the other Gap Covers (#E1, #D1) and Sidewall Tracks (#E2, #D2).


2# x16

3# x16

Assemble the Frame:

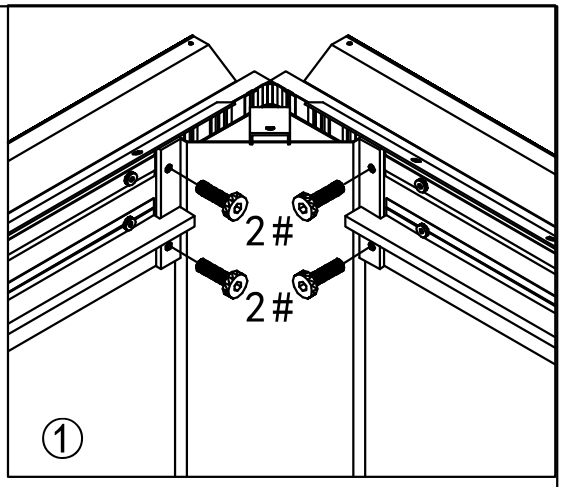



INSIDE VIEW

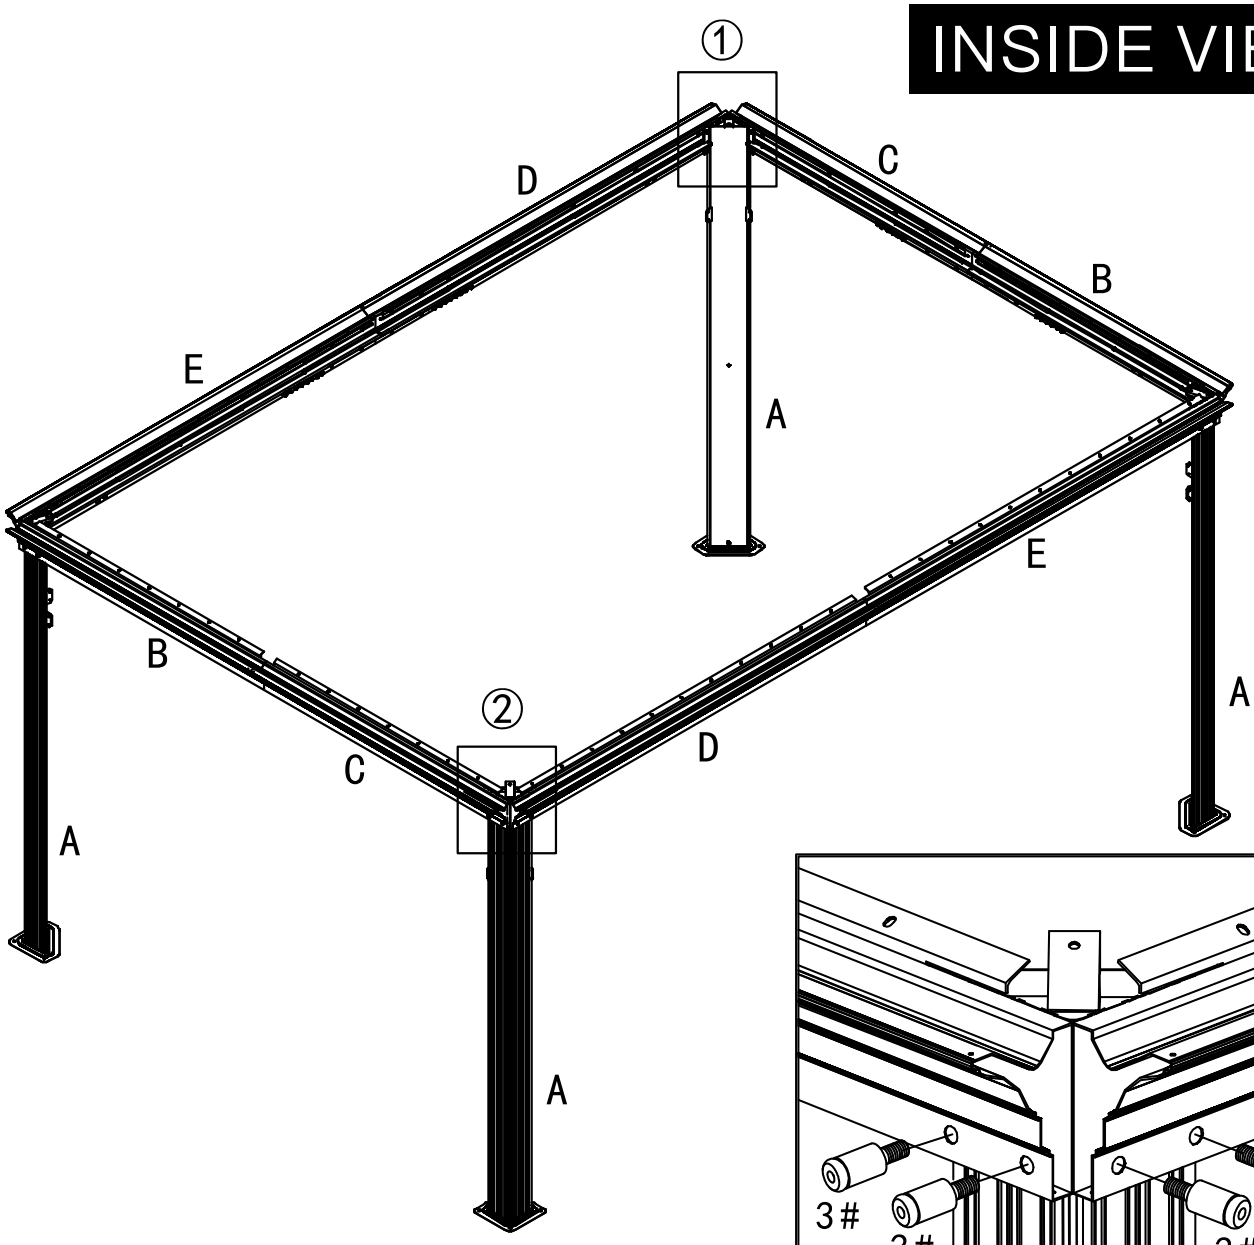

OUTSIDE VIEW


Please don't tighten all bolts.



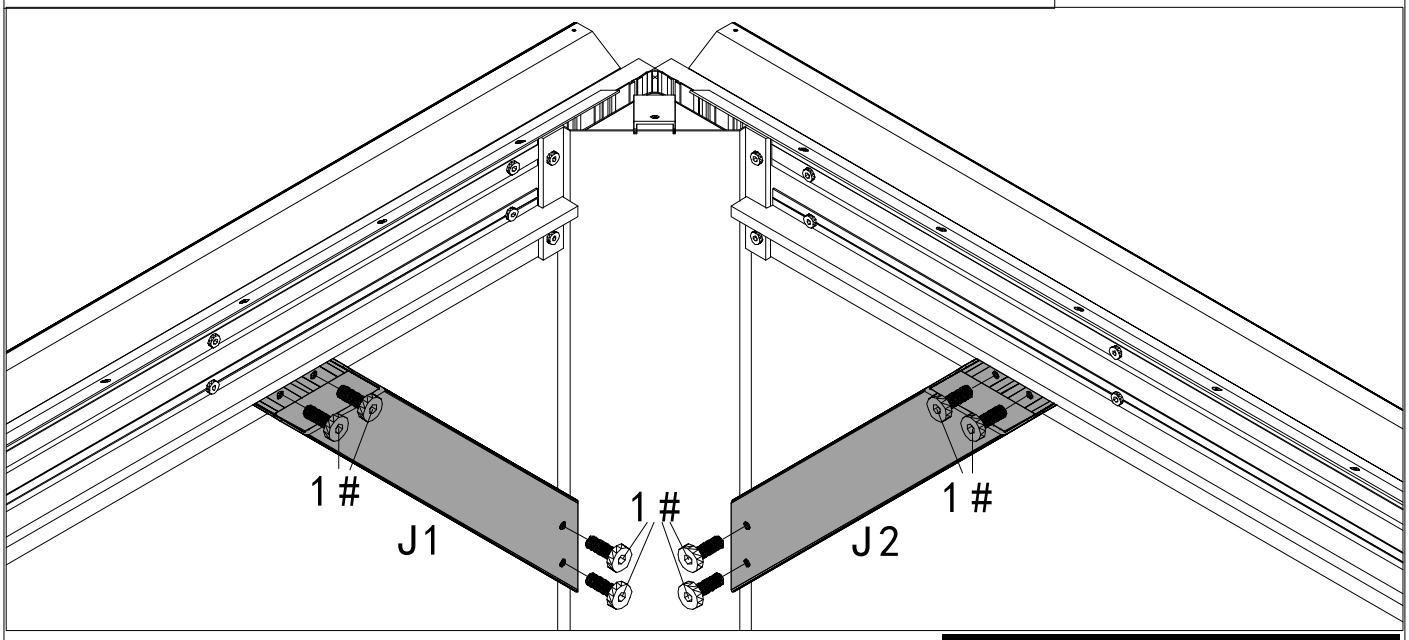


Corner Solidifying Bar Assembly:

INSIDE VIEW

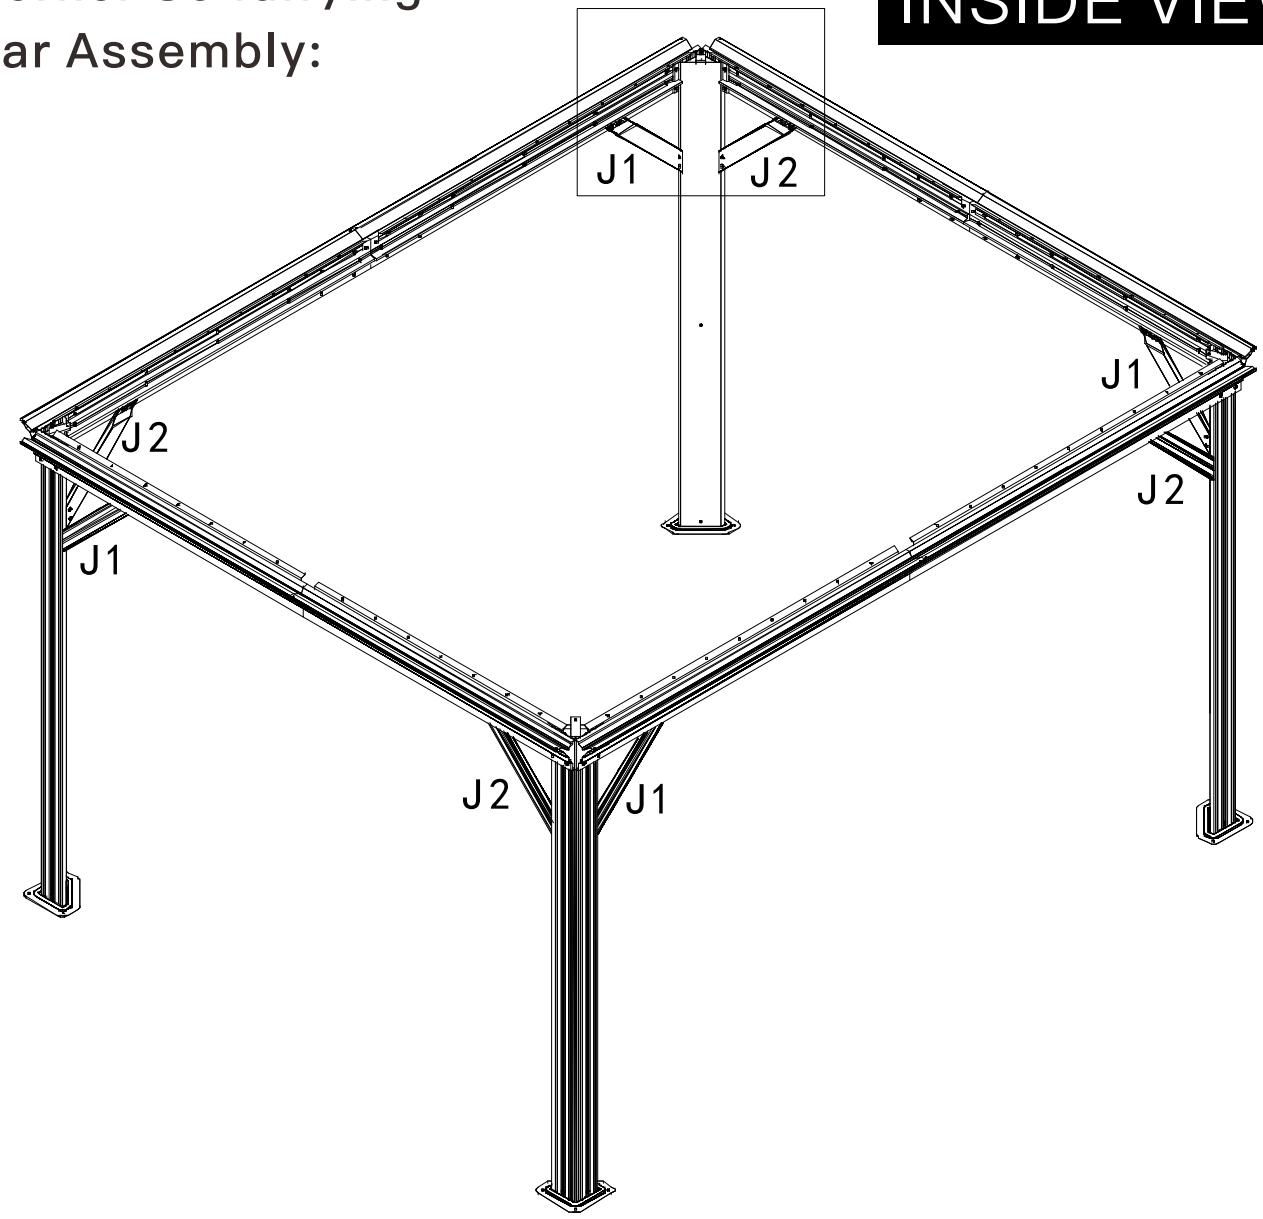





G x4



9#
x16

Corner Cover & Joint Cover Assembly:

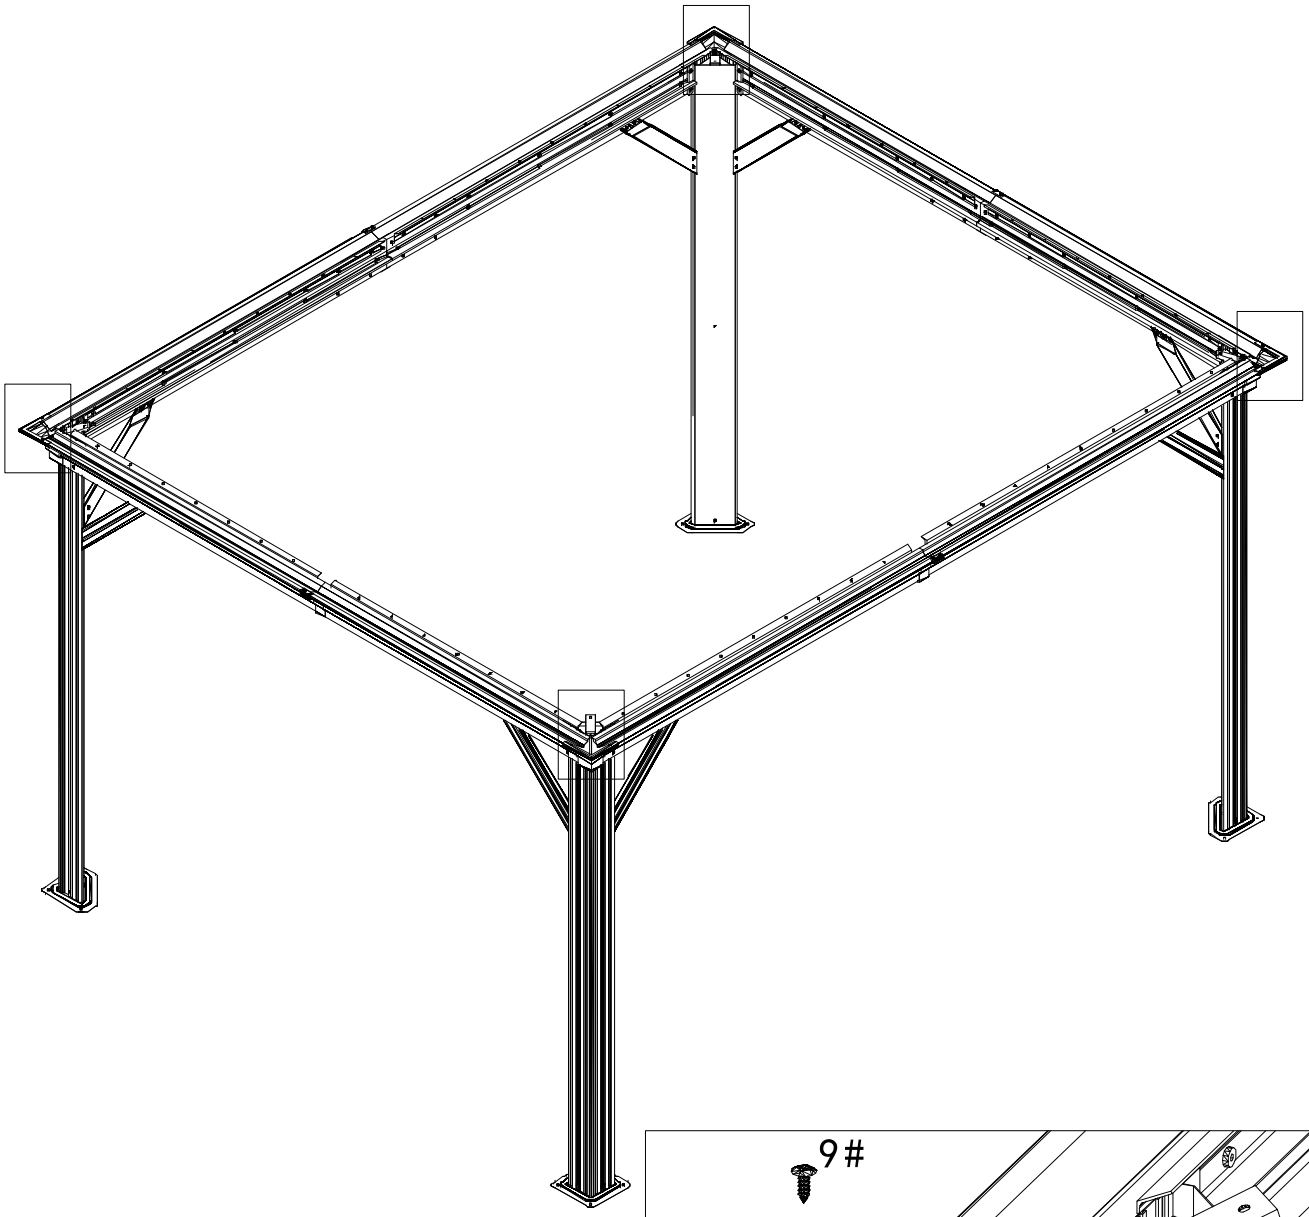

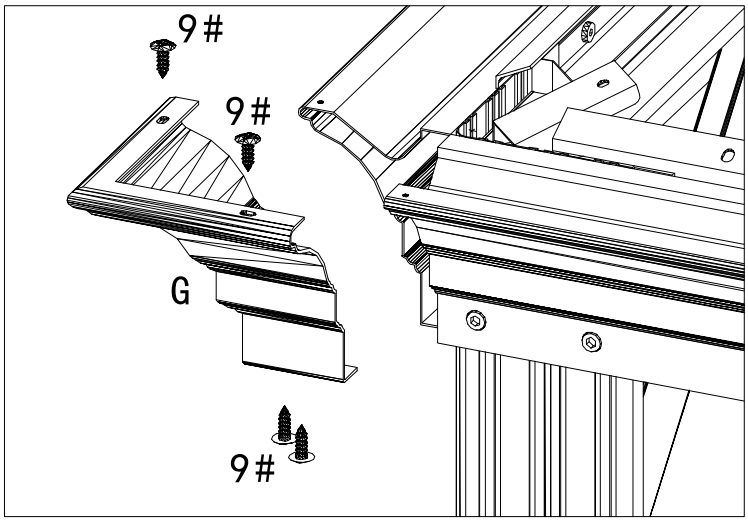




H x4





9#
x8




H2 x1


Use 5mm silicone sealant(part #H2) and Joint Cover #H to affix the gap.

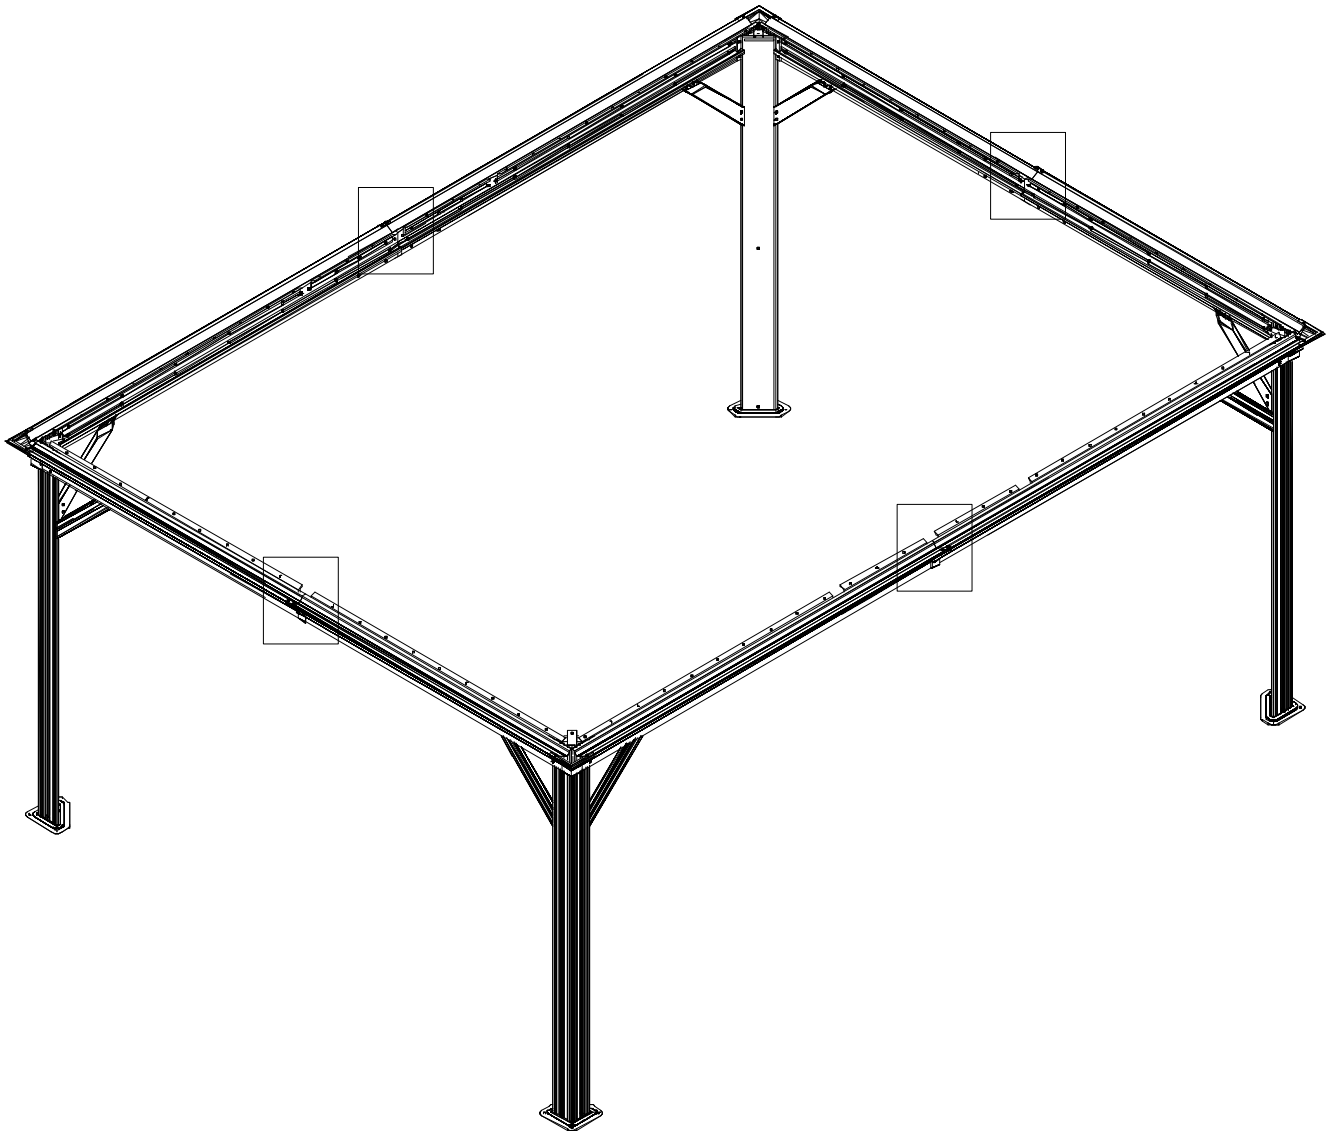

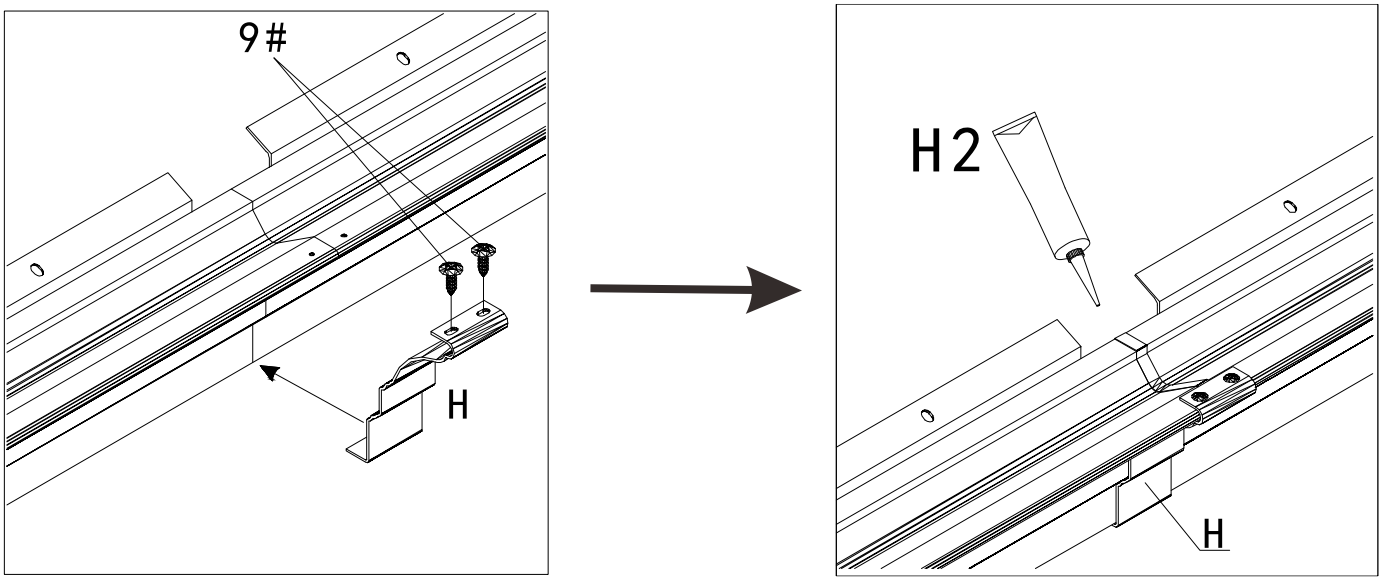



4#
x48




H1 (x2)





8#
x2

(1)Slide the plastic hooks to the double-rail track#C2&B2 (each slot should slide 6 plastic hooks).


(2)Use Bolt #8 to secure the Joint Cover #H & H1 to the beam.

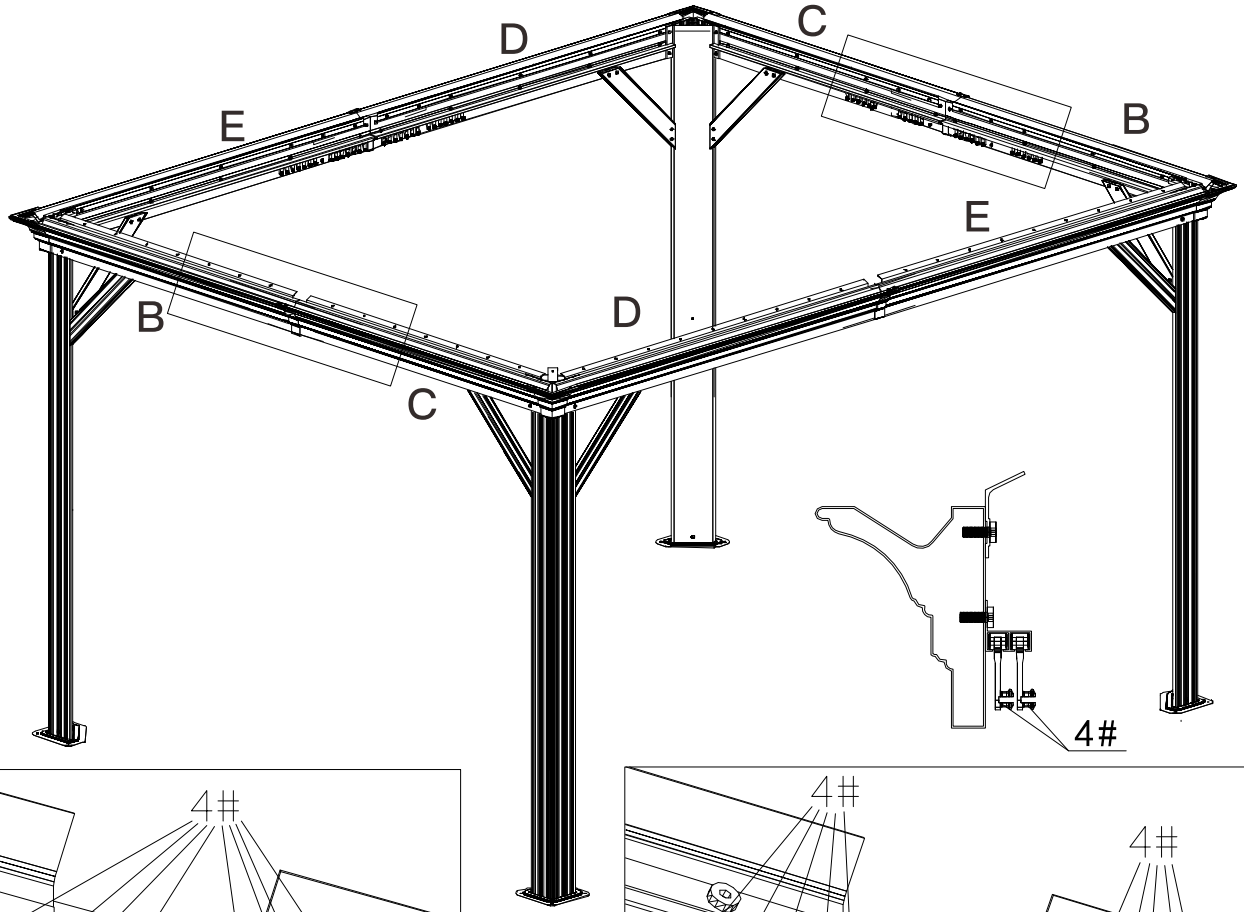


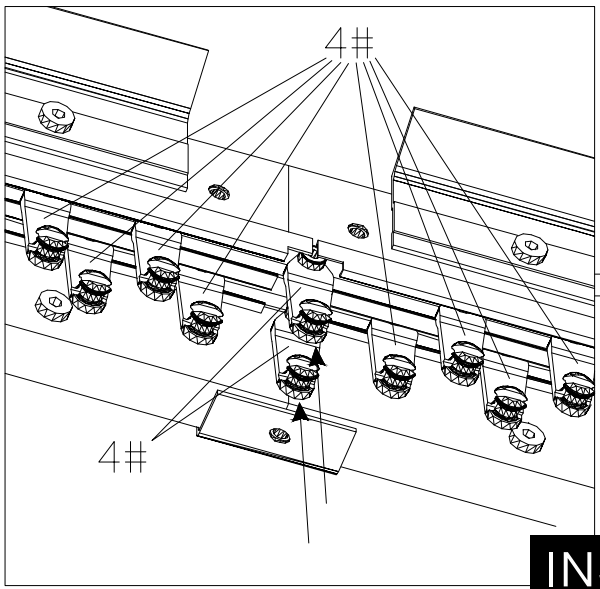

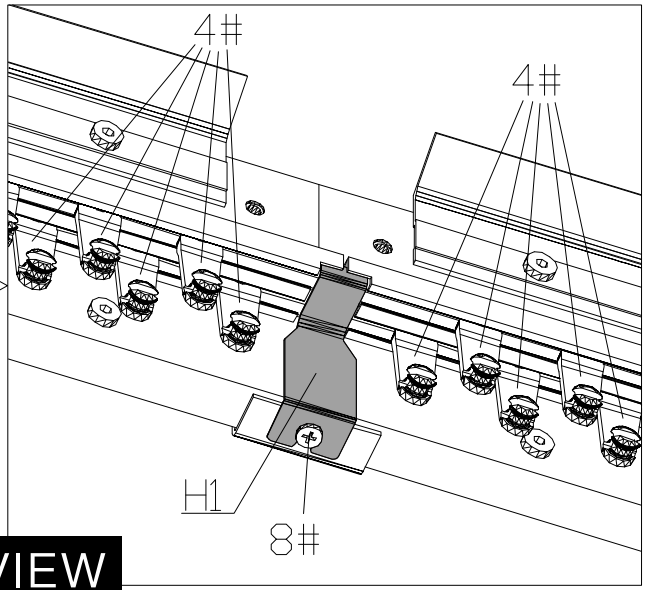


INSIDE VIEW

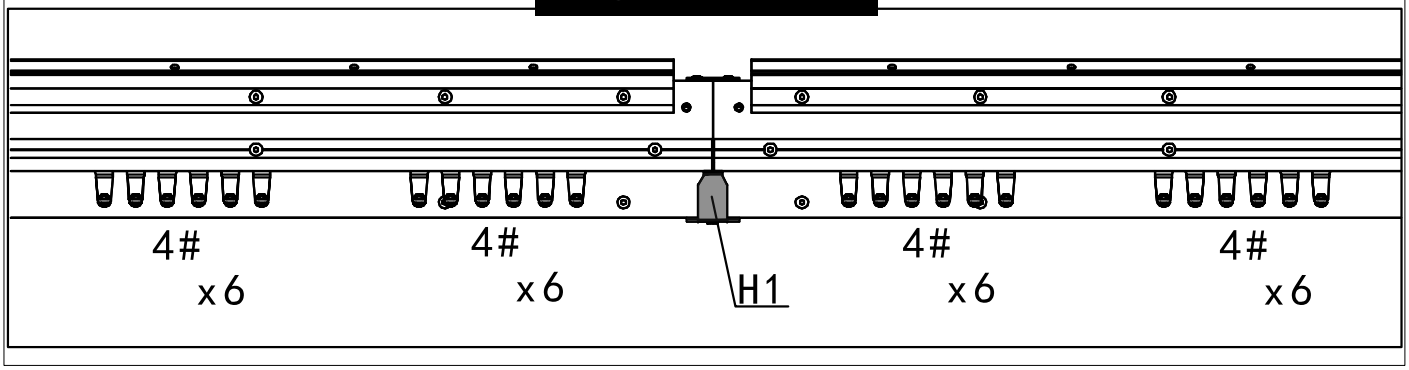



 4# x64	 H1 (x2)	 8# x2


(1)Slide the plastic hooks to the double-rail track#E2&D2 (each slot should slide 8 plastic hooks).

(2)Use Bolt #8 to secure the Joint Cover #H & H1 to the beam.

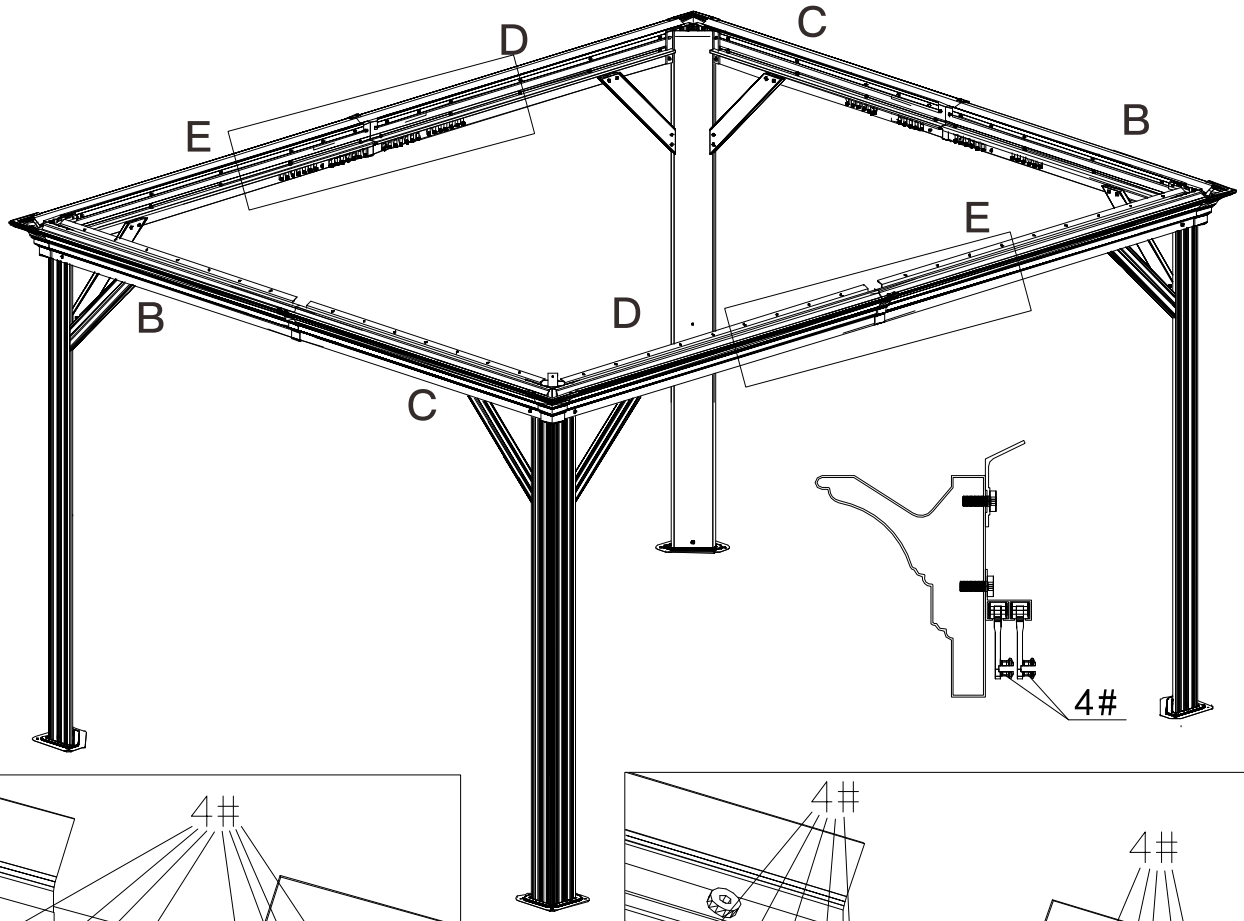

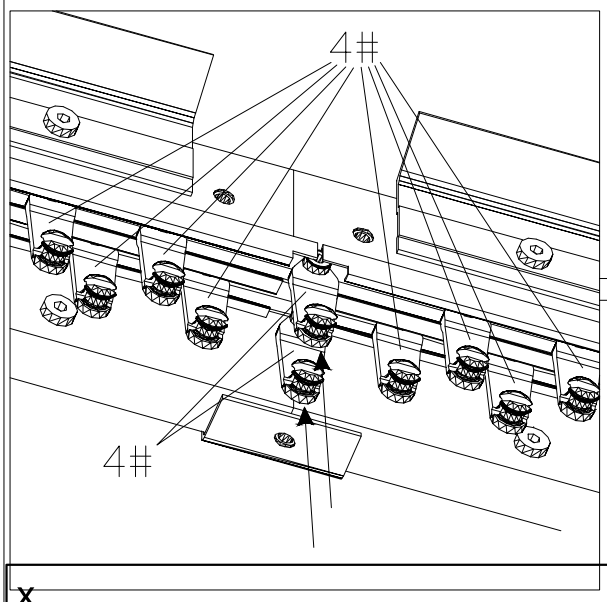

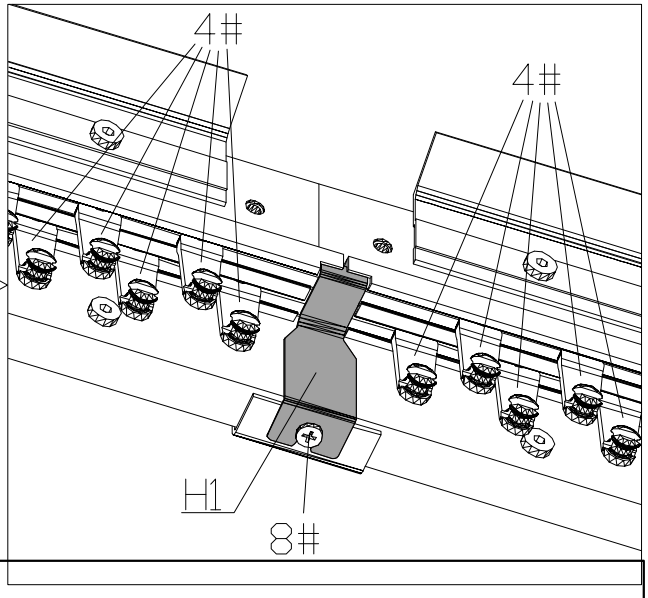

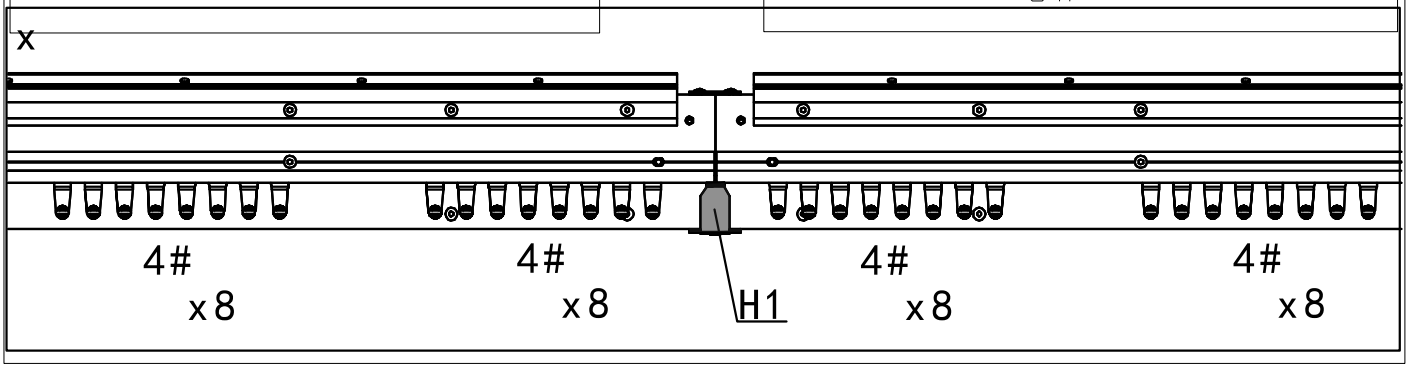




M1 x4




M2 x4




2#
x8

CORNER ROOF TUBE ASSEMBLY:

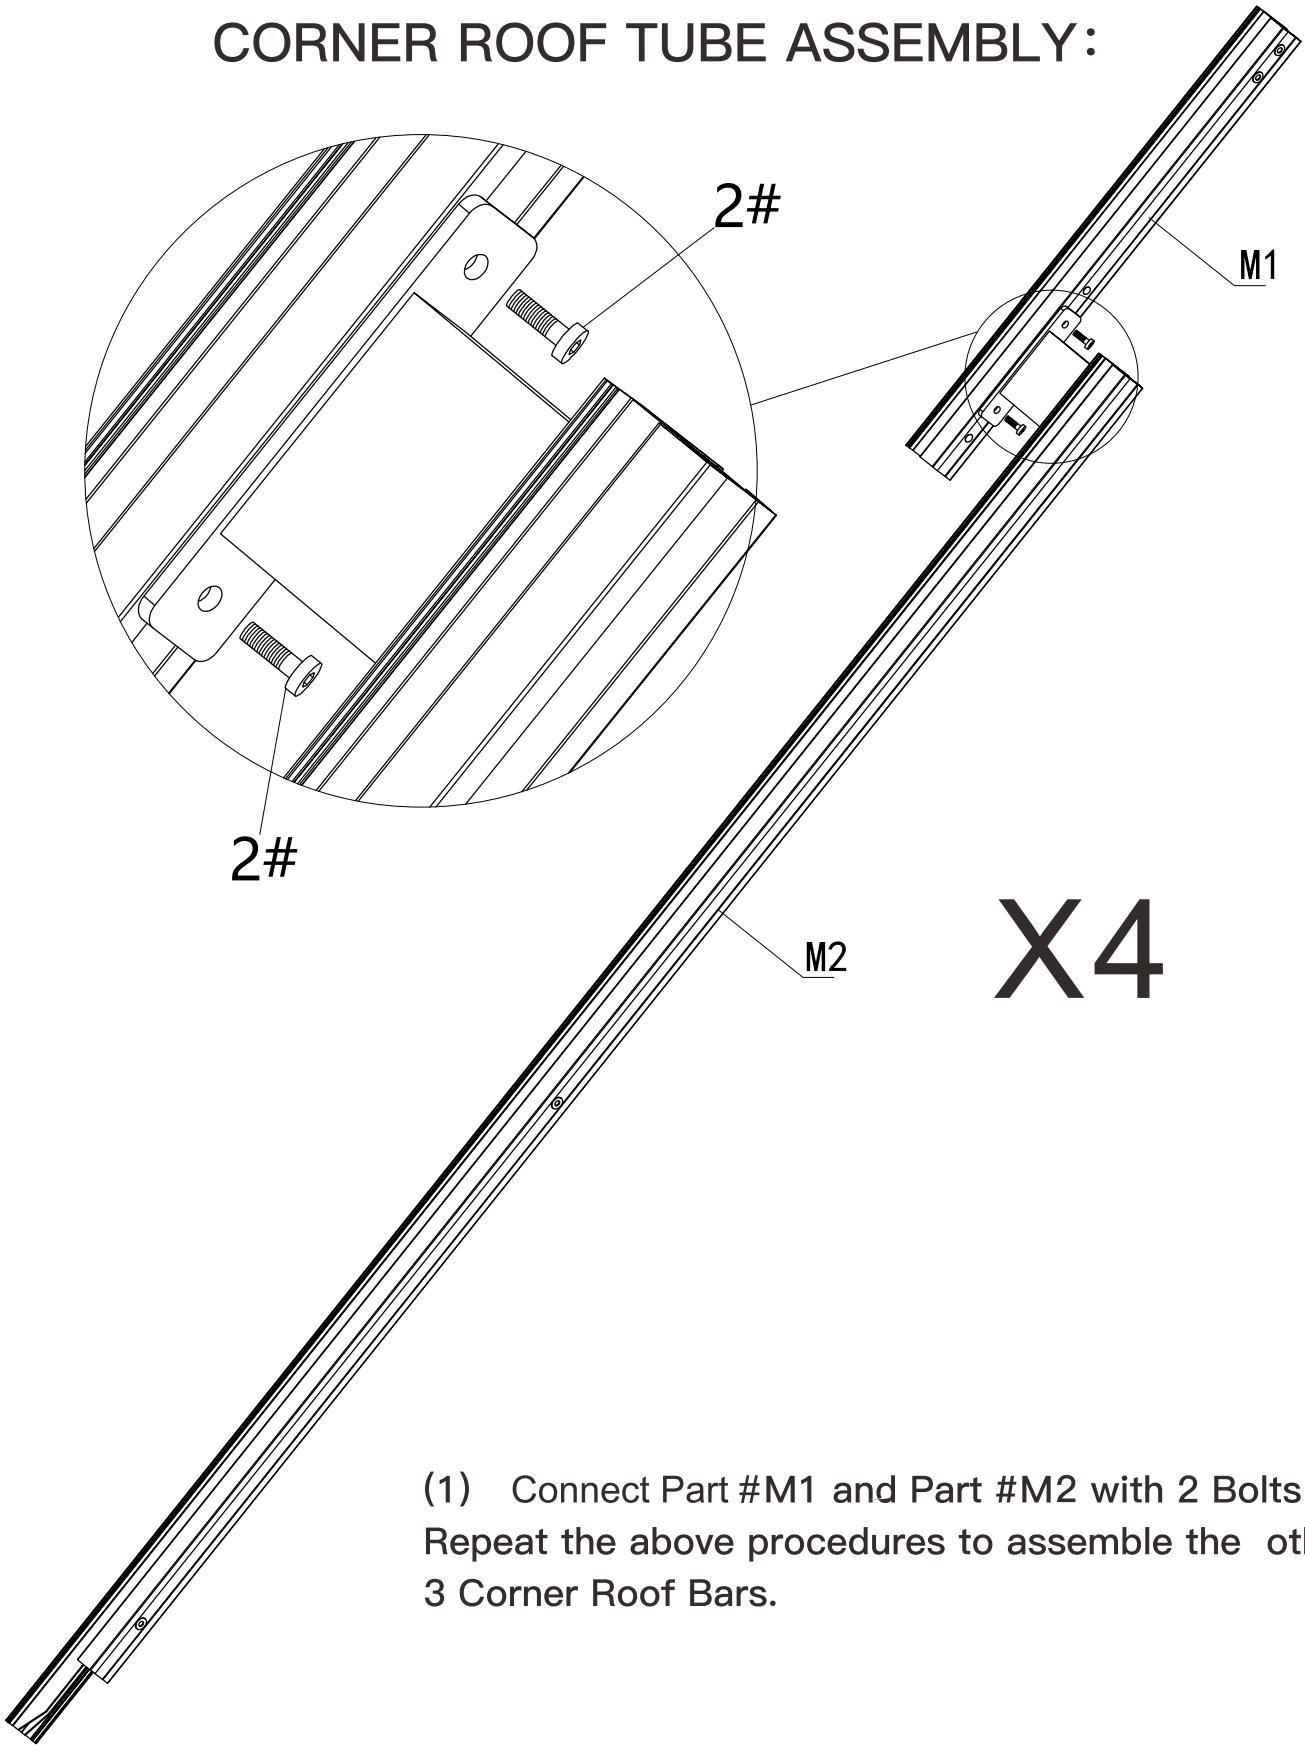



(1) Connect Part #M1 and Part #M2 with 2 Bolts #2. Repeat the above procedures to assemble the other 3 Corner Roof Bars.




K x1

CORNER ROOF TUBE AND INSIDE ROOF CONNECTOR ASSEMBLY:

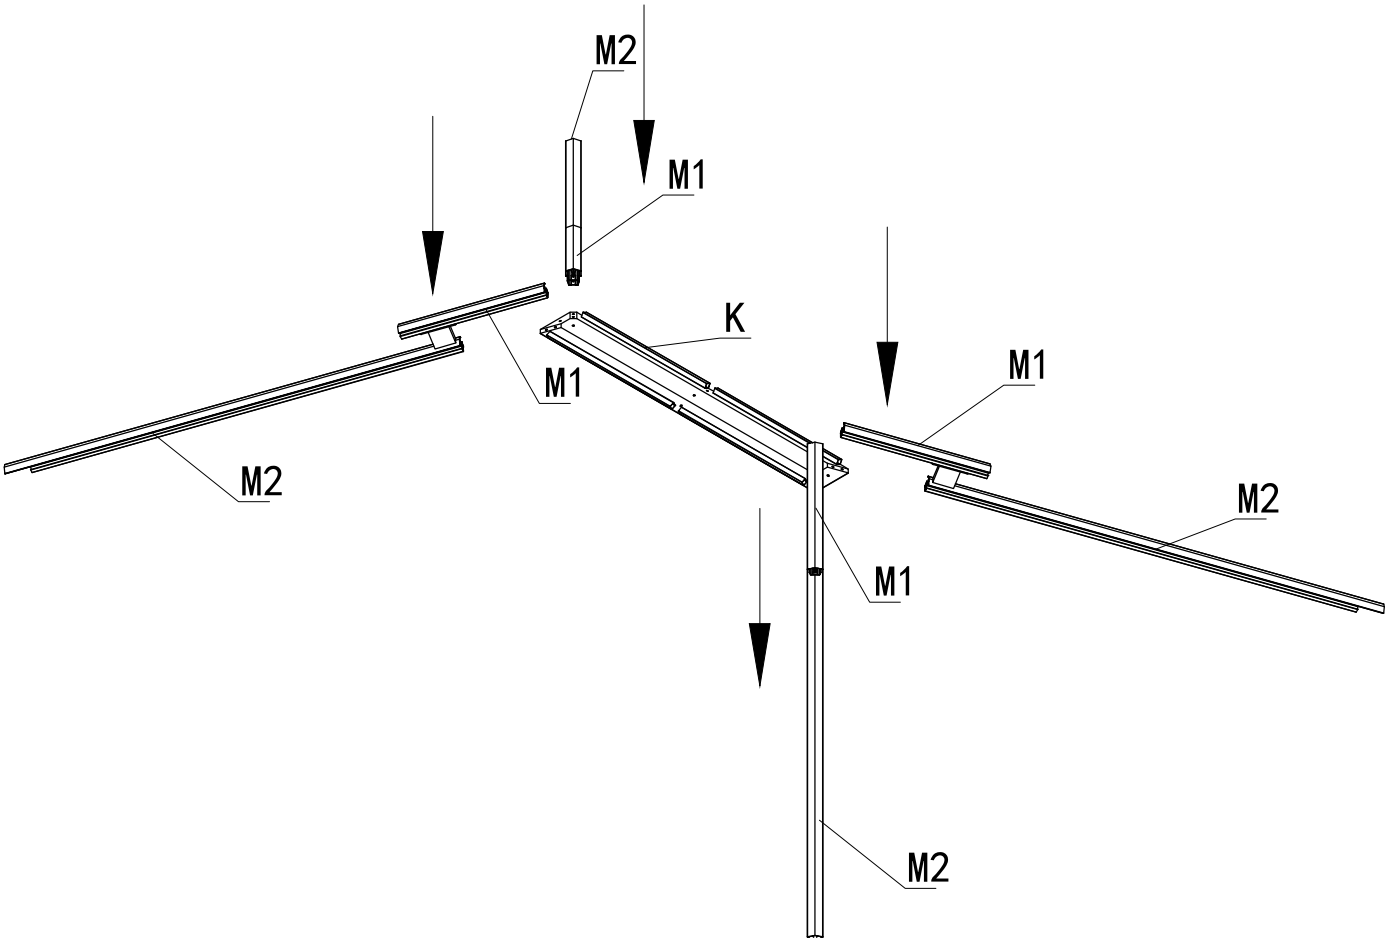





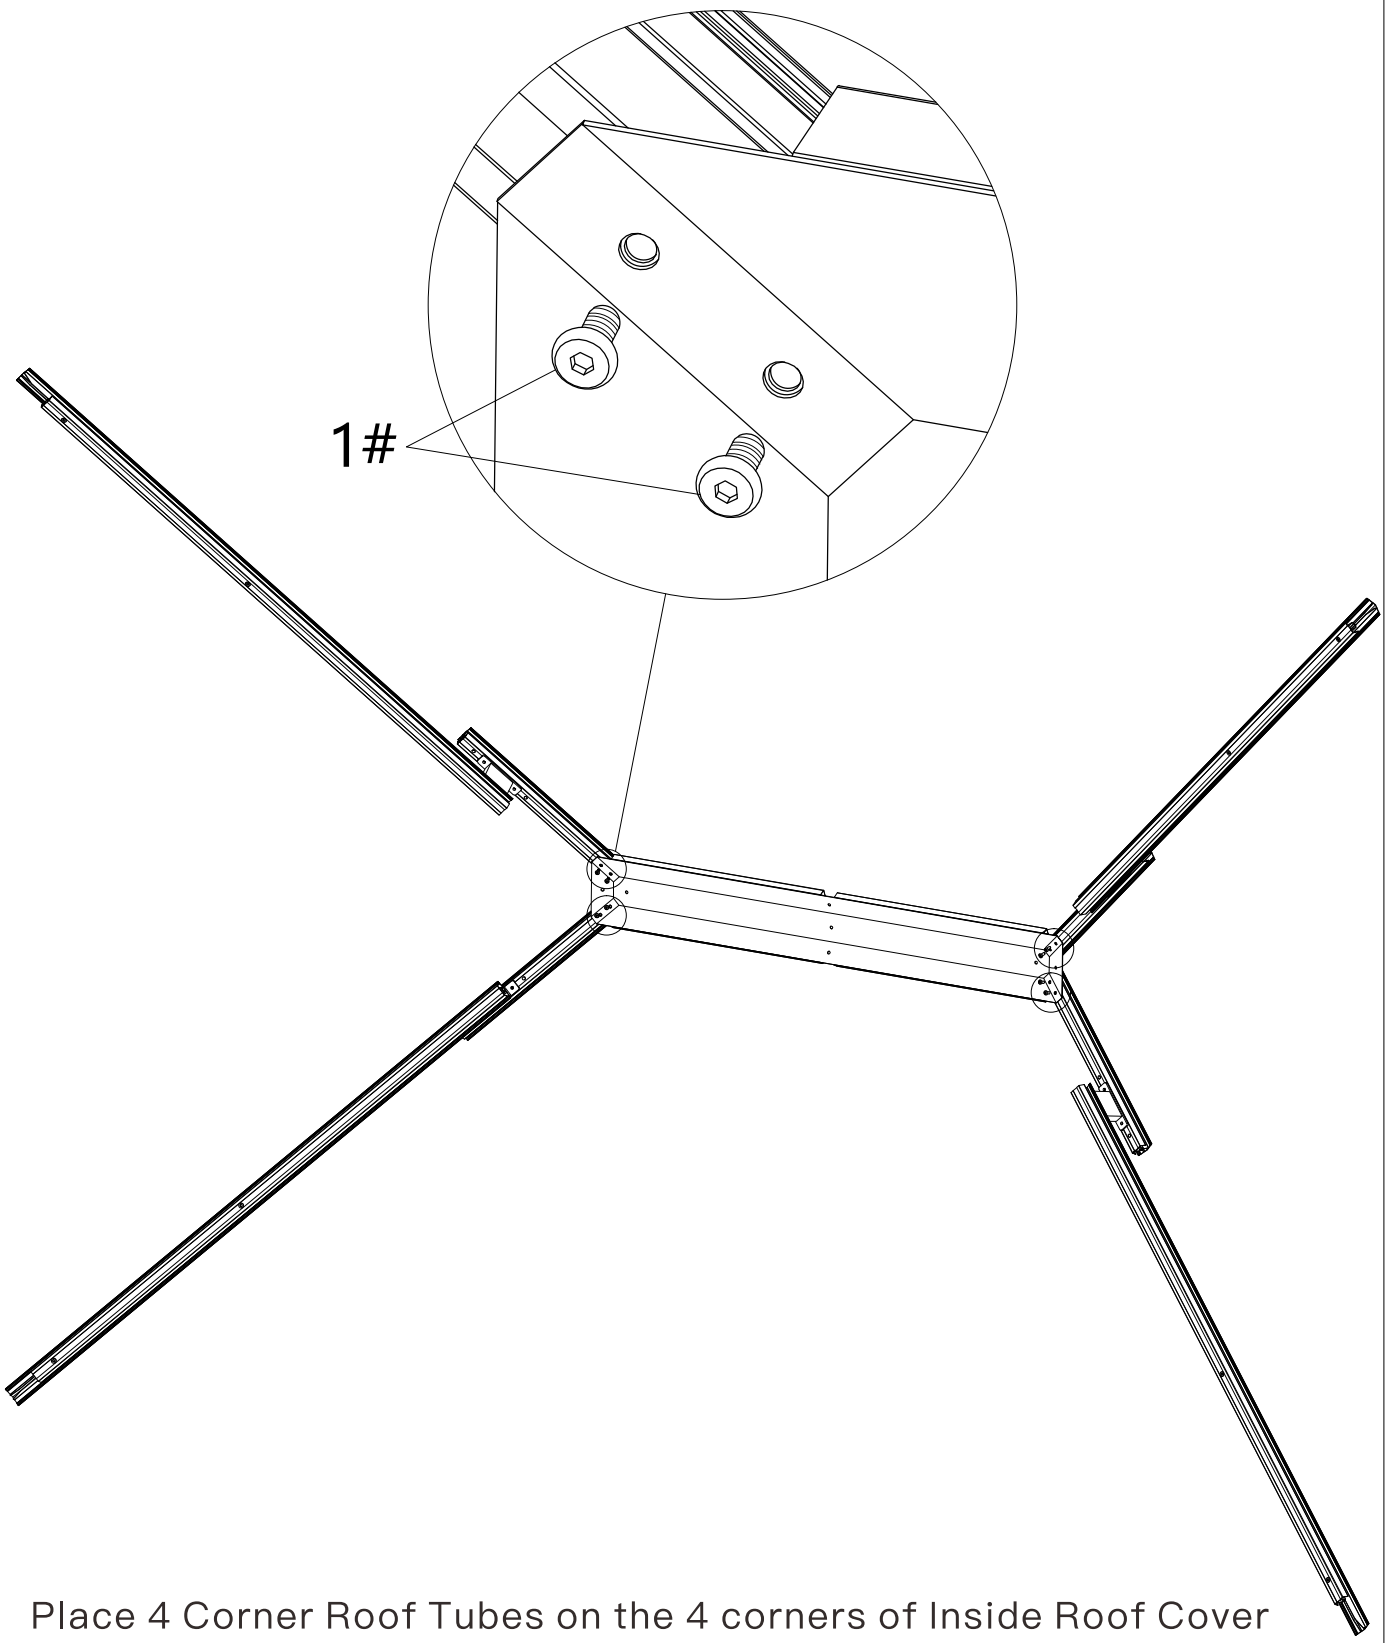


Place 4 Corner Roof Tubes on the 4 corners of Inside Roof Cover #K, secure with 8 Bolts #1 (from bottom to top).

Lift 4 corner roof Tubes and inside roof connector to the top of the frame.(You may need 2 people and 2 ladder).

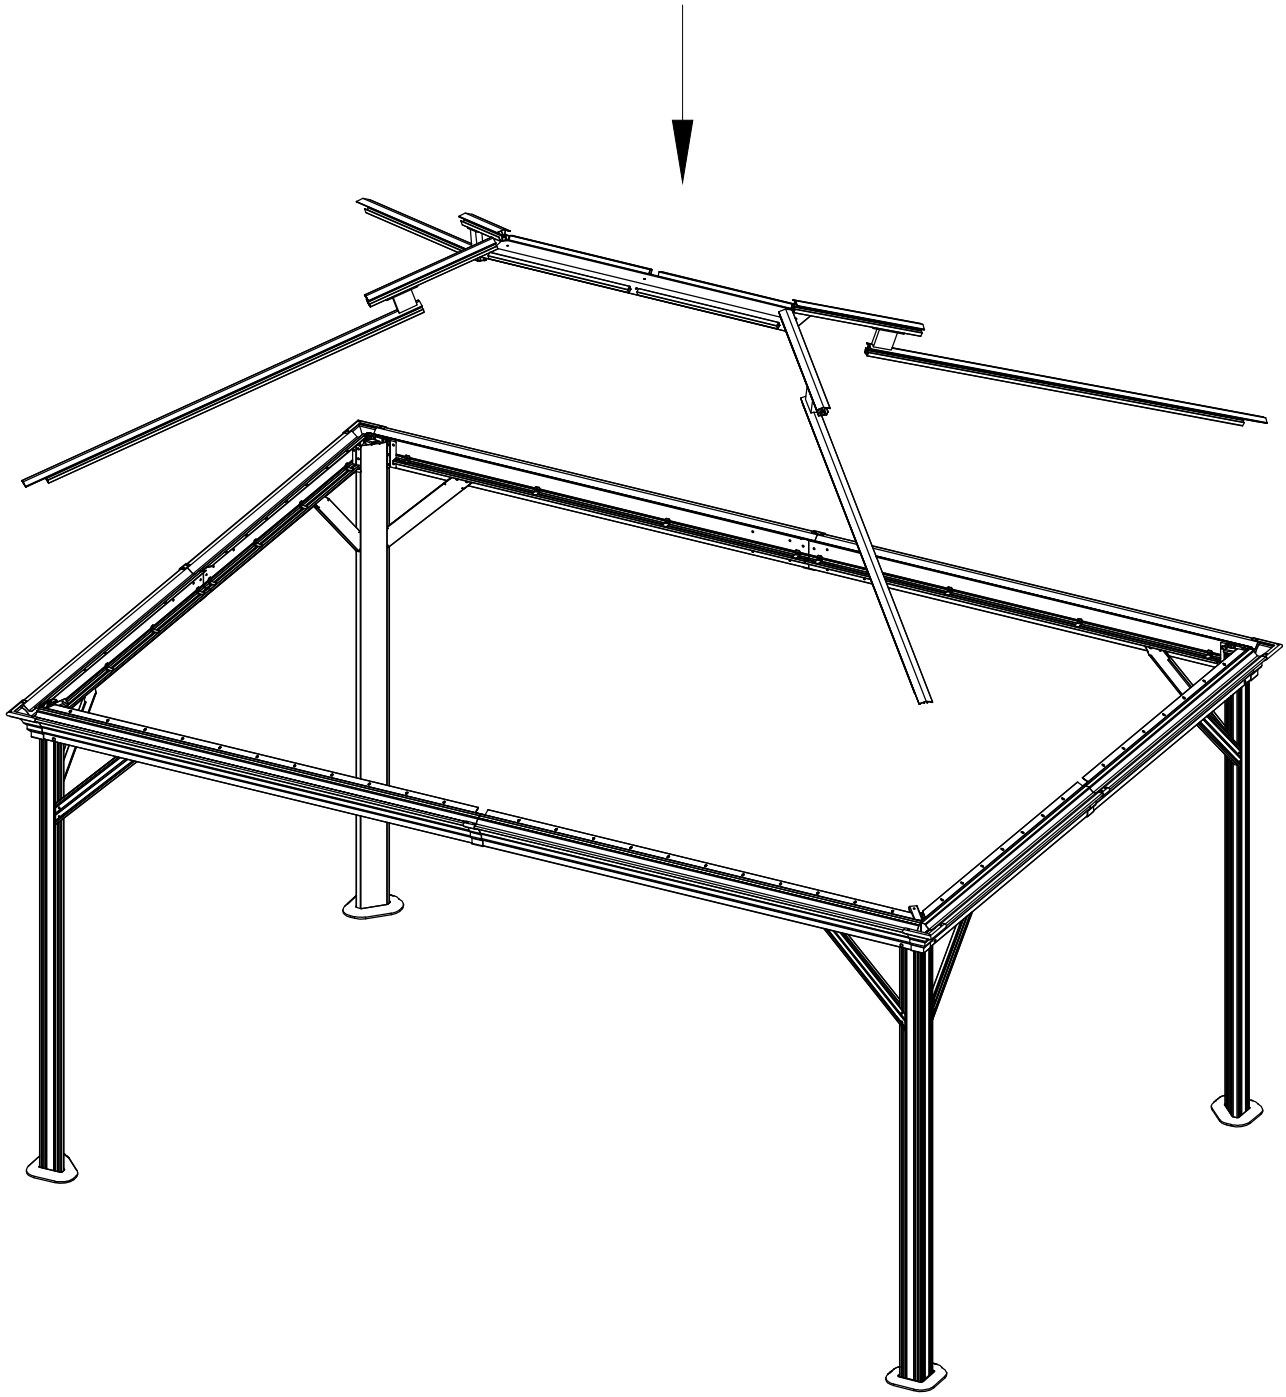




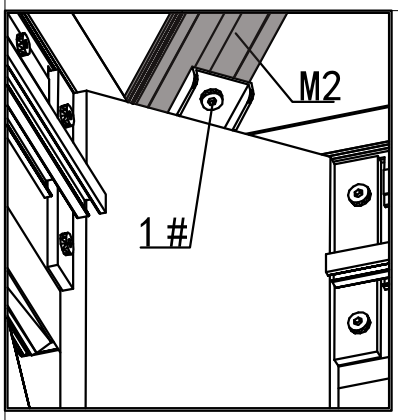


INSIDE VIEW


Place 4 Part #M2 on the Poles; Secure with 4 Bolts #1.

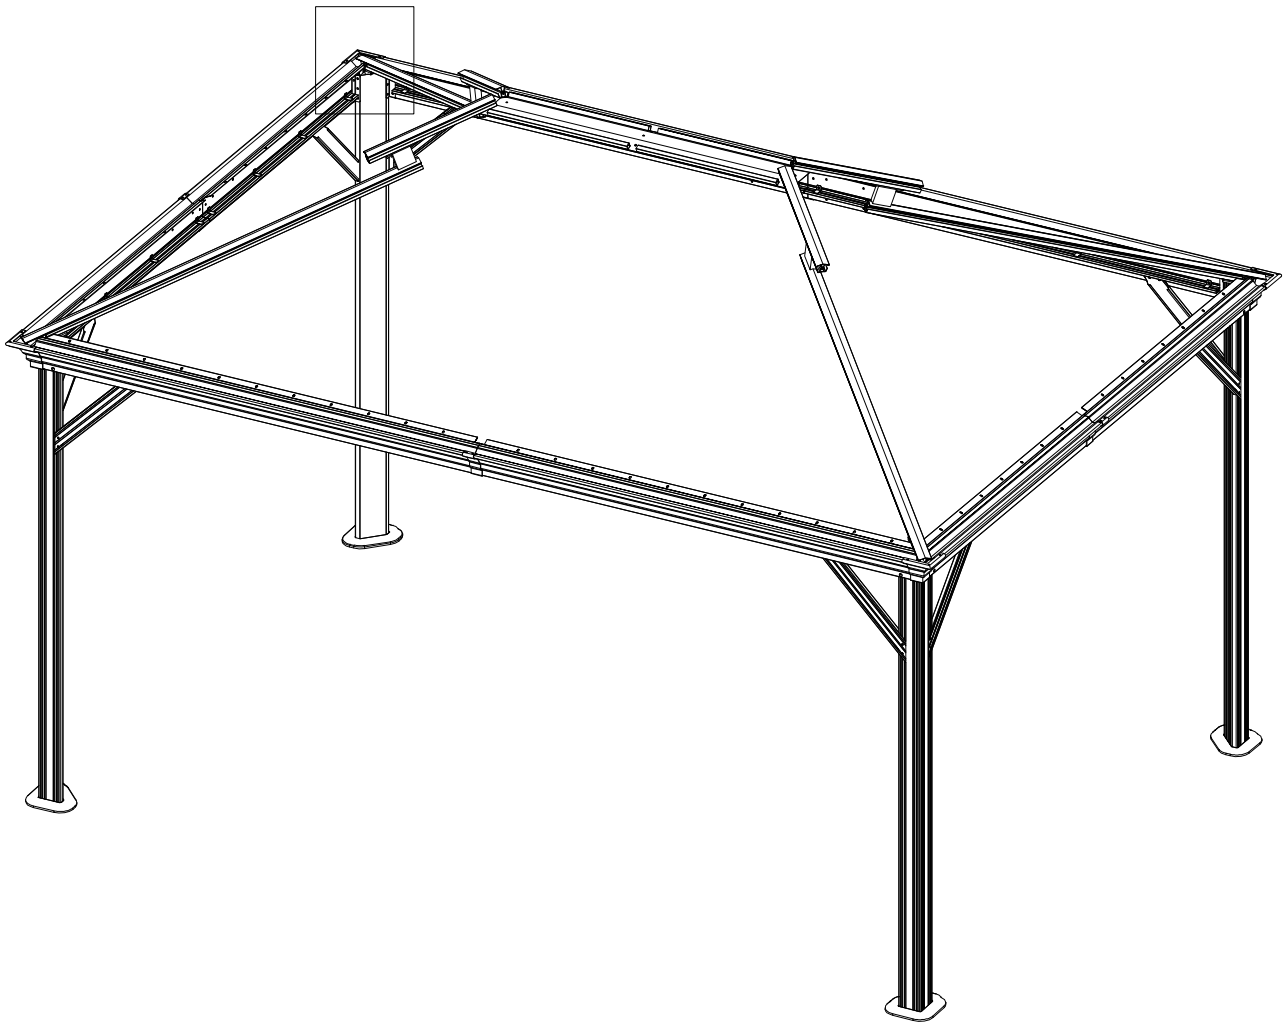

Please have a freestanding ladder ready at the center of the gazebo.



N x4

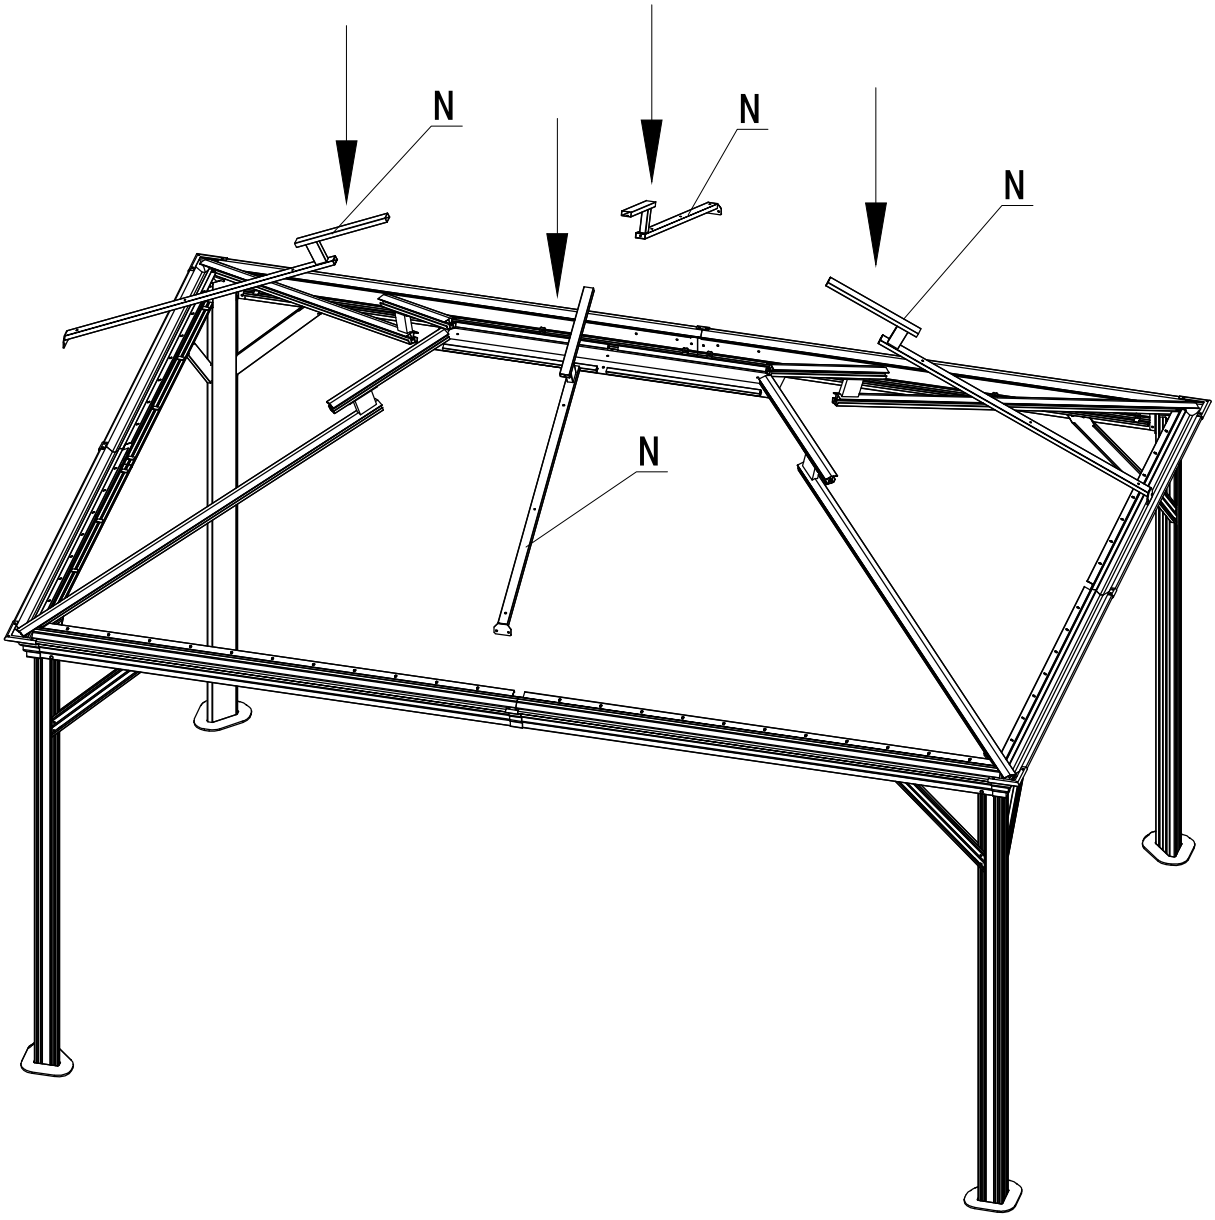




MIDDLE ROOF TUBE ASSEMBLY:


(1)Place Middle Roof Tube #N on Inside Roof Connector ,secure with Bolt #1 (from bottom to top).

(1)Connect Middle Roof Tube #N and the Assembled Beam with 2 Bolts #1.

Repeat the above procedures to assemble the other sides.

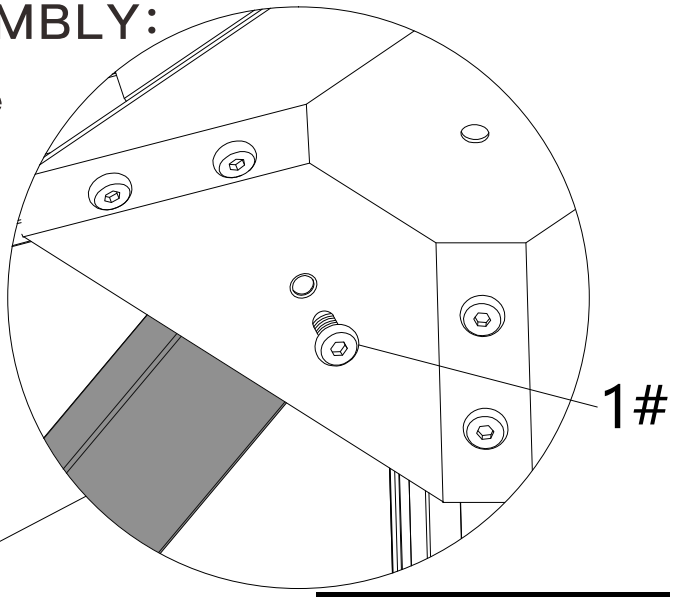


Bottom View

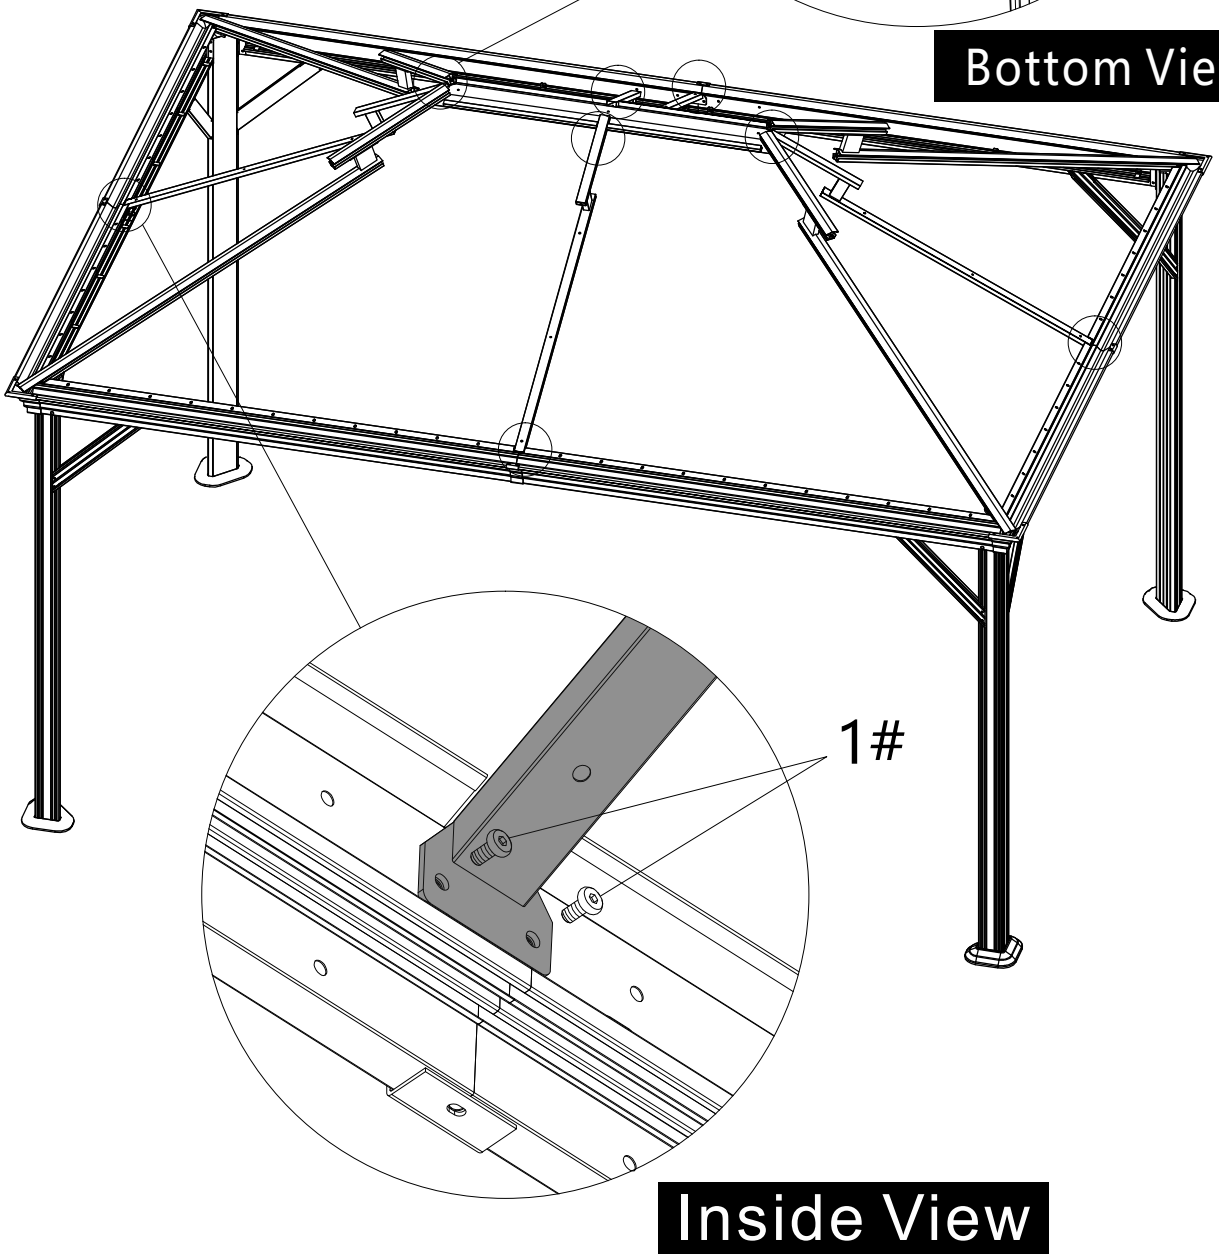


Inside View


Check the the frame as pictures below shows.

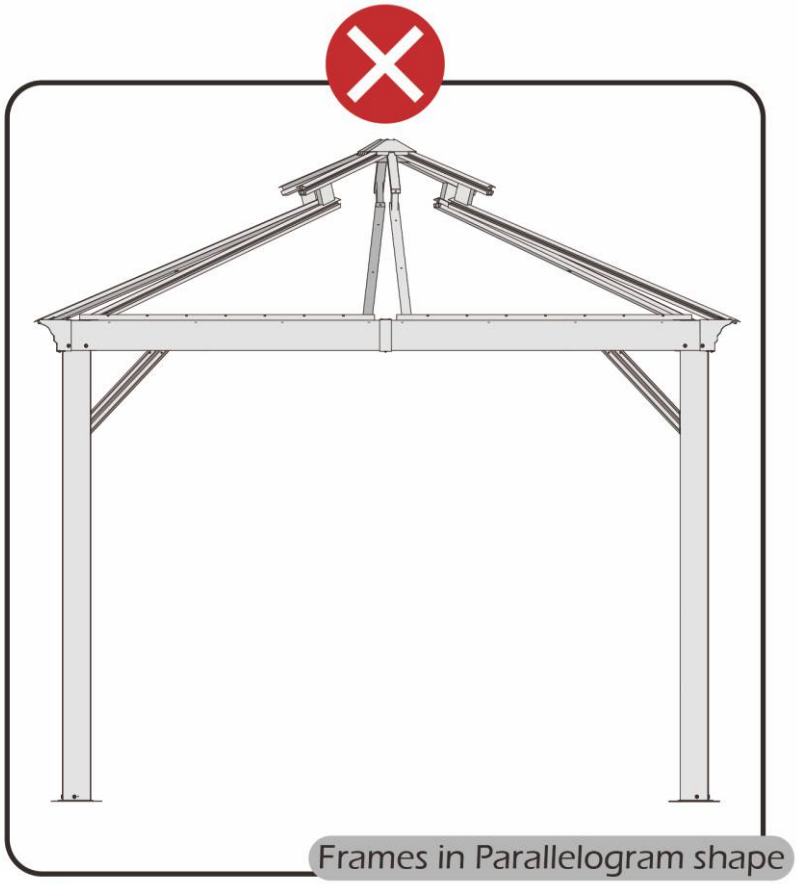


Frames in Parallelogram shape

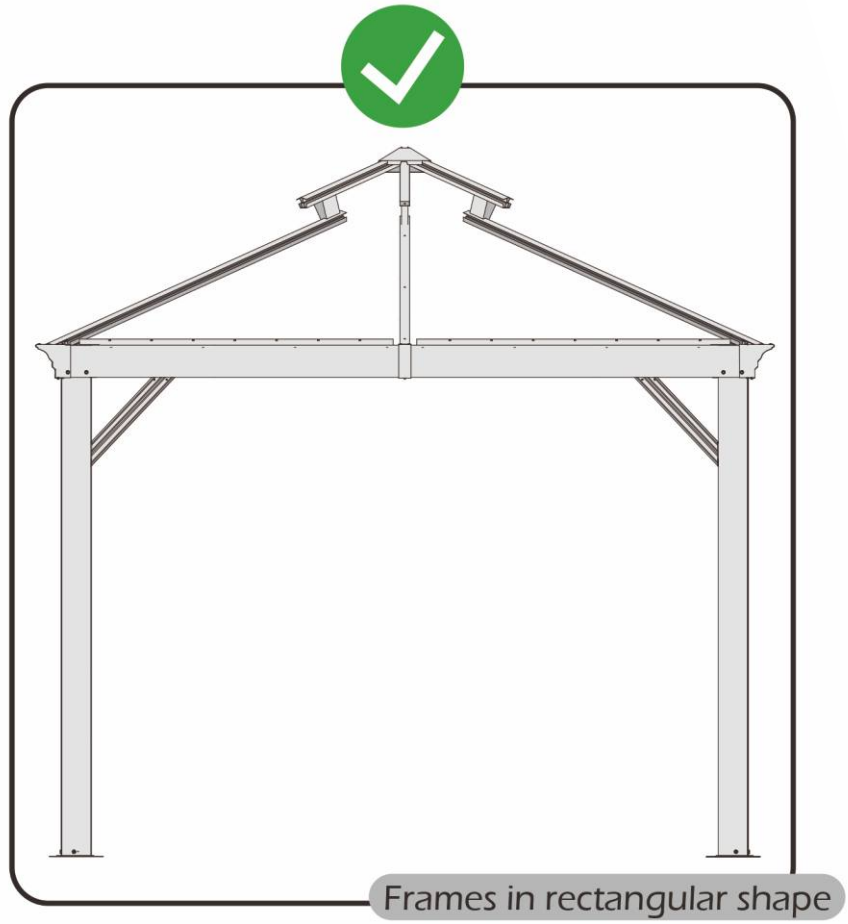


Frames in rectangular shape



Q1 x1





Pa x2



Pb x2

PLASTIC BAR ASSEMBLY :

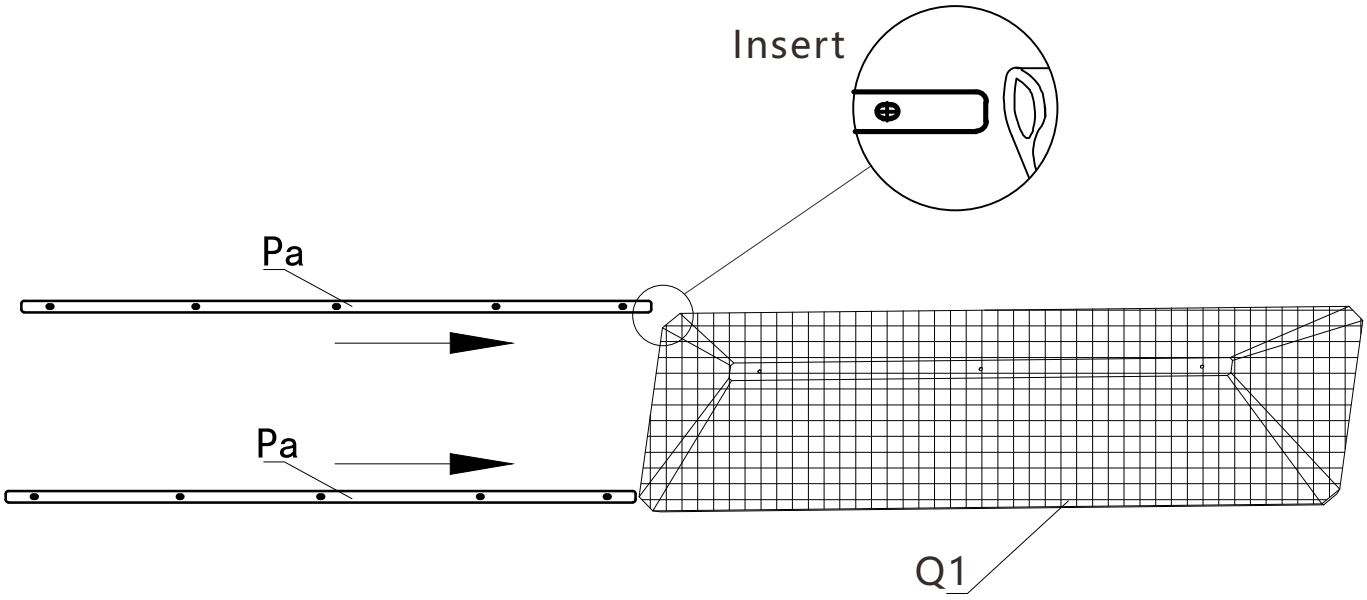

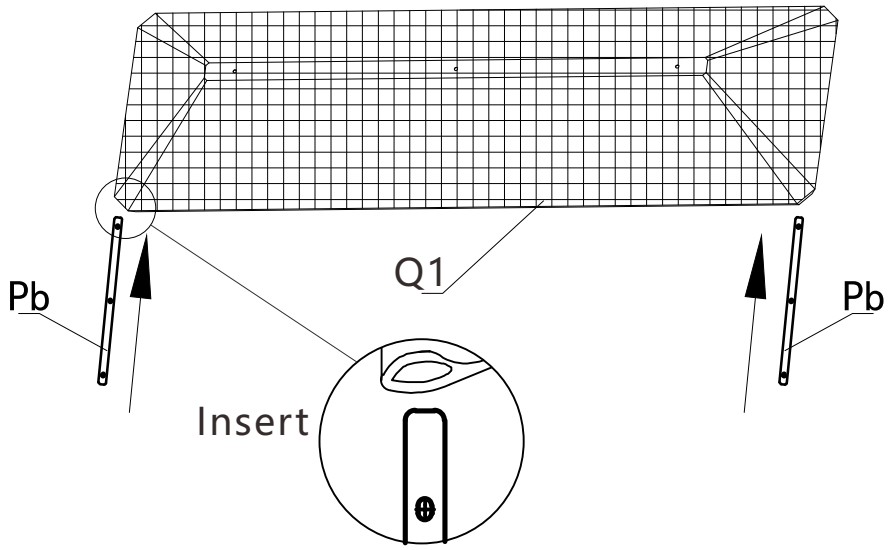



K1 x①





R1 x③


OUTSIDE ROOF COVER AND MESH ASSEMBLY :


(1) Place the Outside Roof Cover #k1 on the inside Roof Cover.


(2) Align the holes, and use 3 Hooks #R1 to secure Mesh #Q1 to the inside Roof Cover (From Bottom to Top).

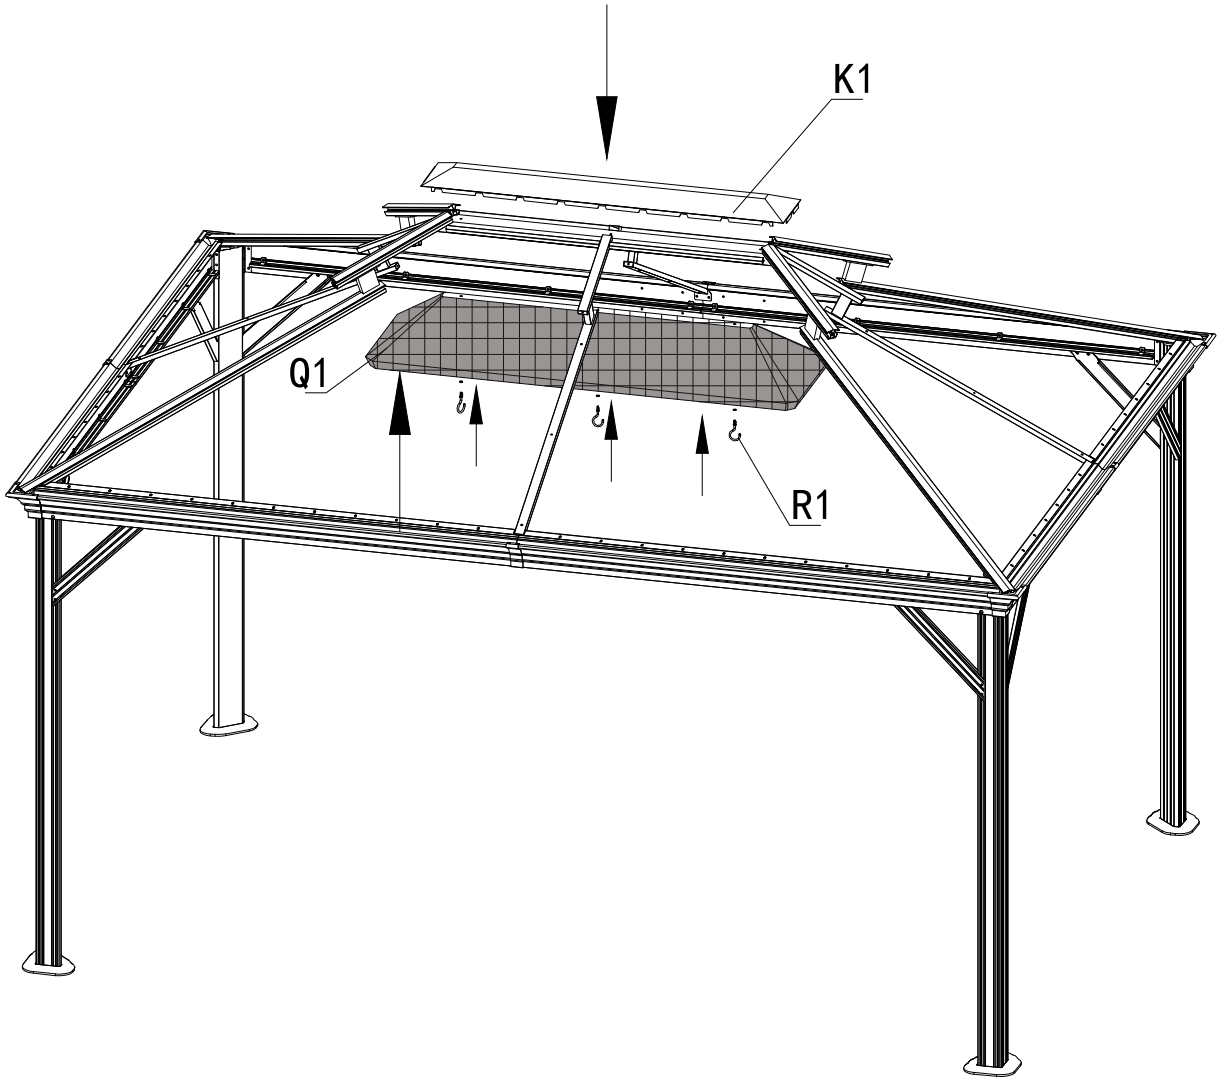


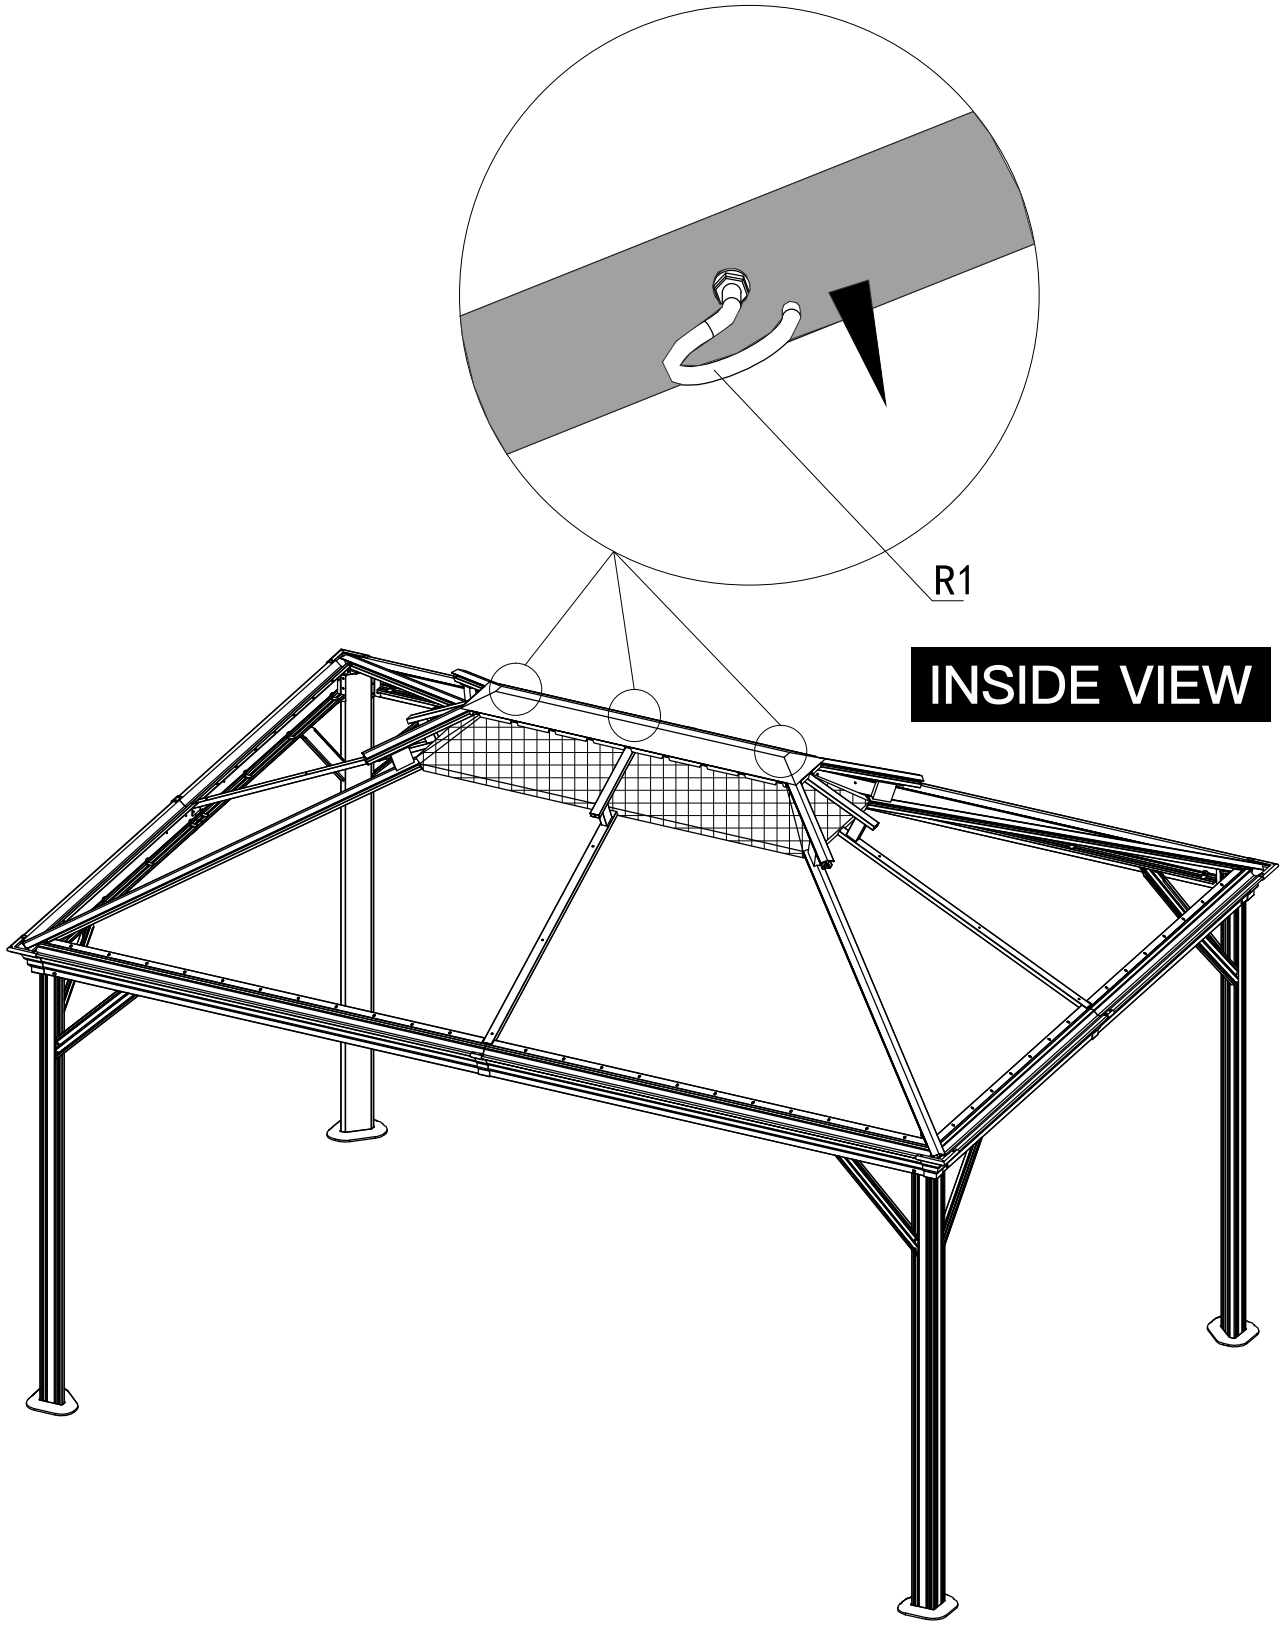
R1
INSIDE VIEW





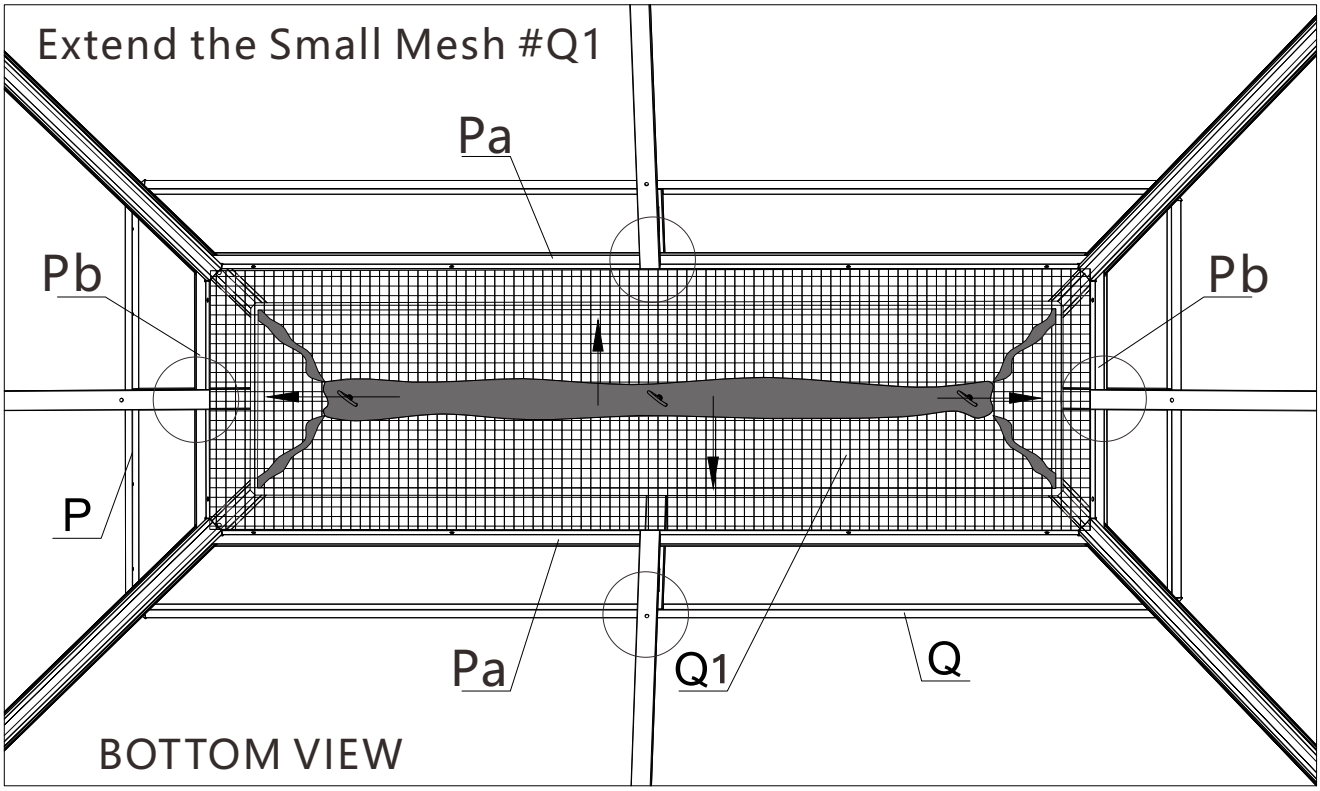


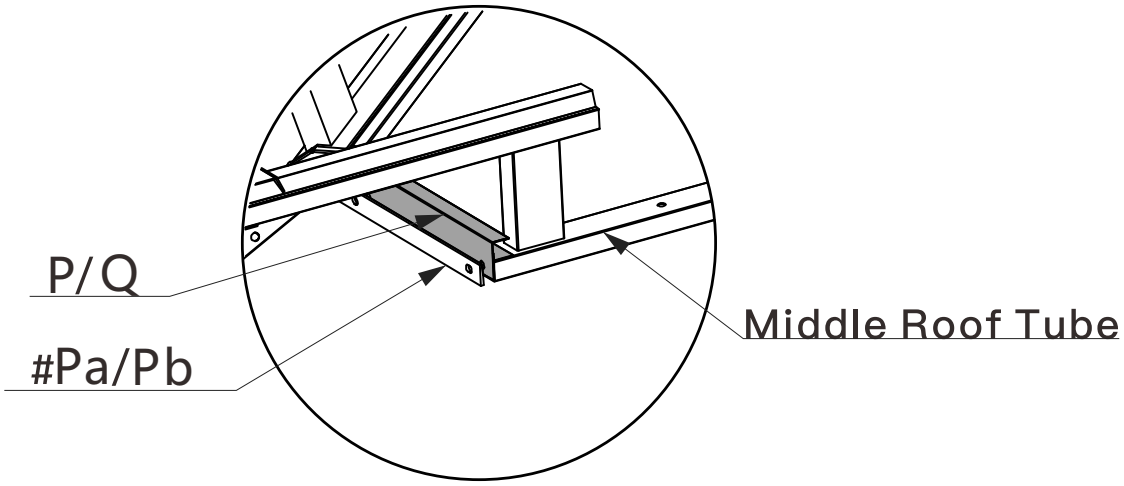


Please do not pull plastic bar out when installing it with # P , Q on the middle roof tube.





BOTTOM VIEW

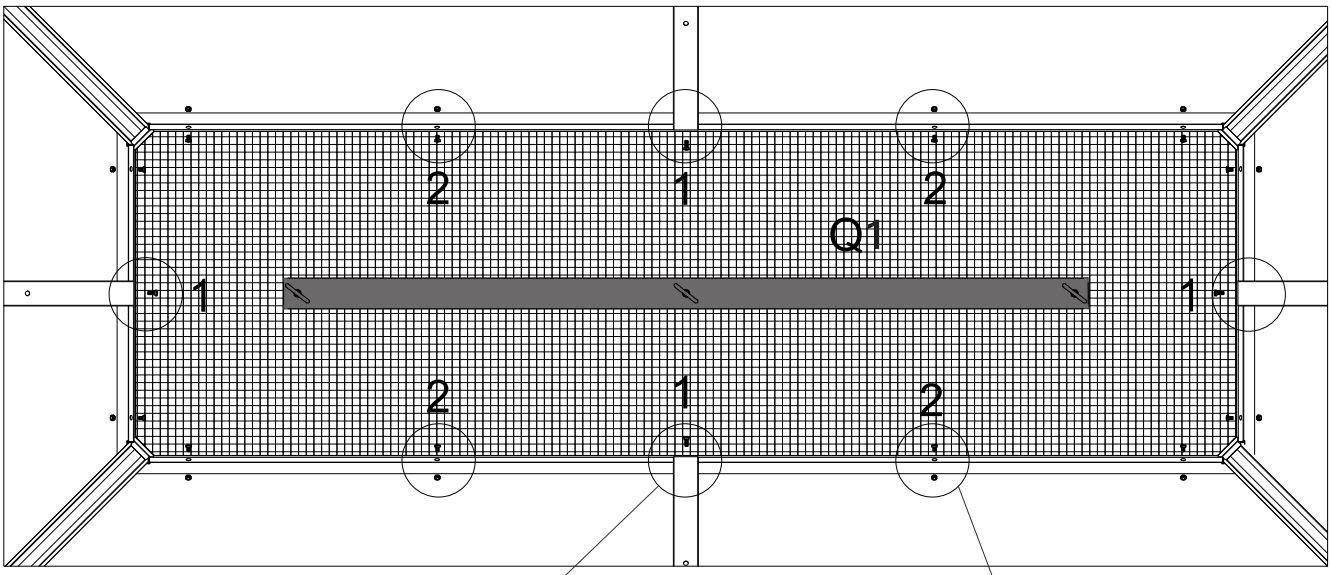


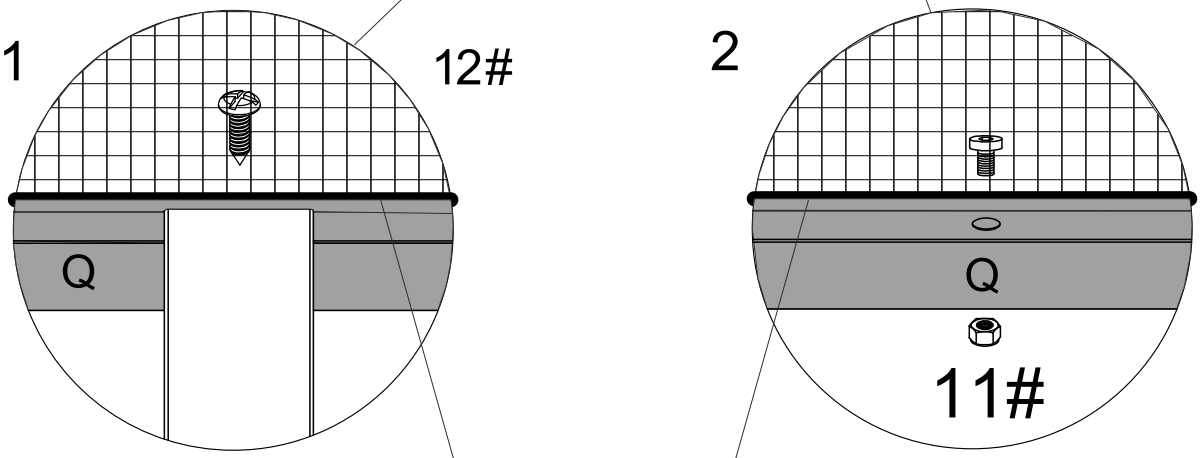


Plastic Bar
in the mesh








FINISHING END #R ASSEMBLY:

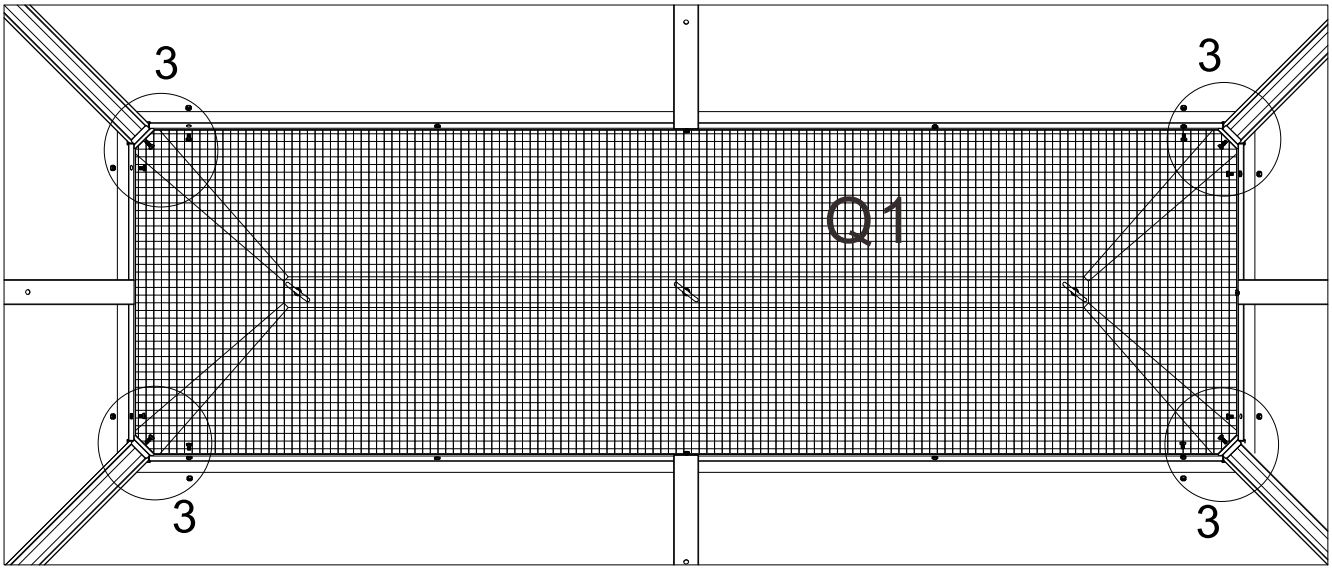


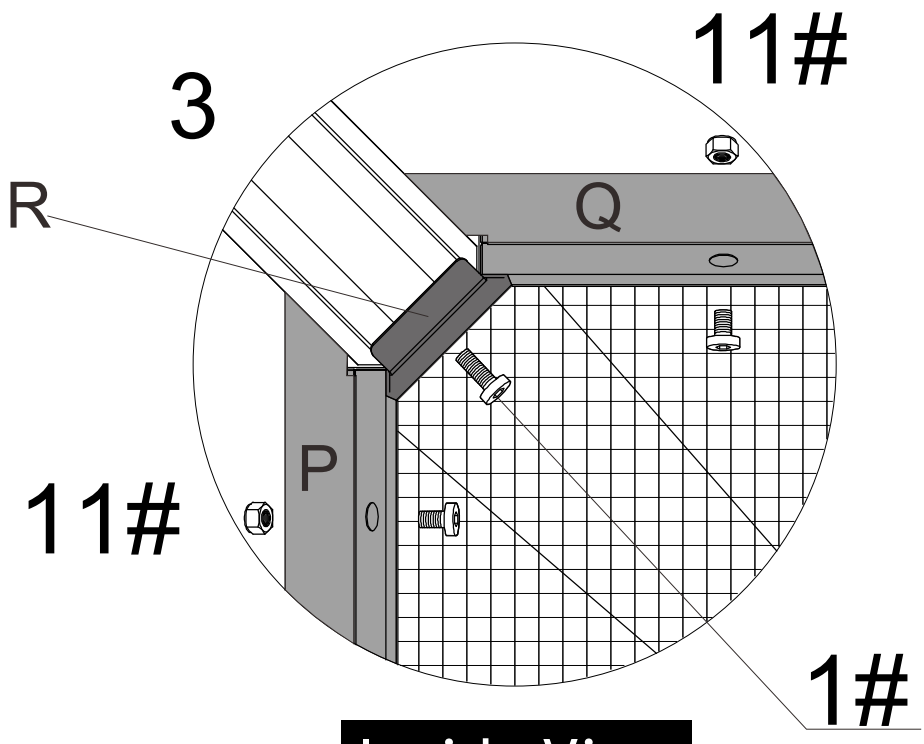

Inside View


Plastic Bar in the mesh


P/Q

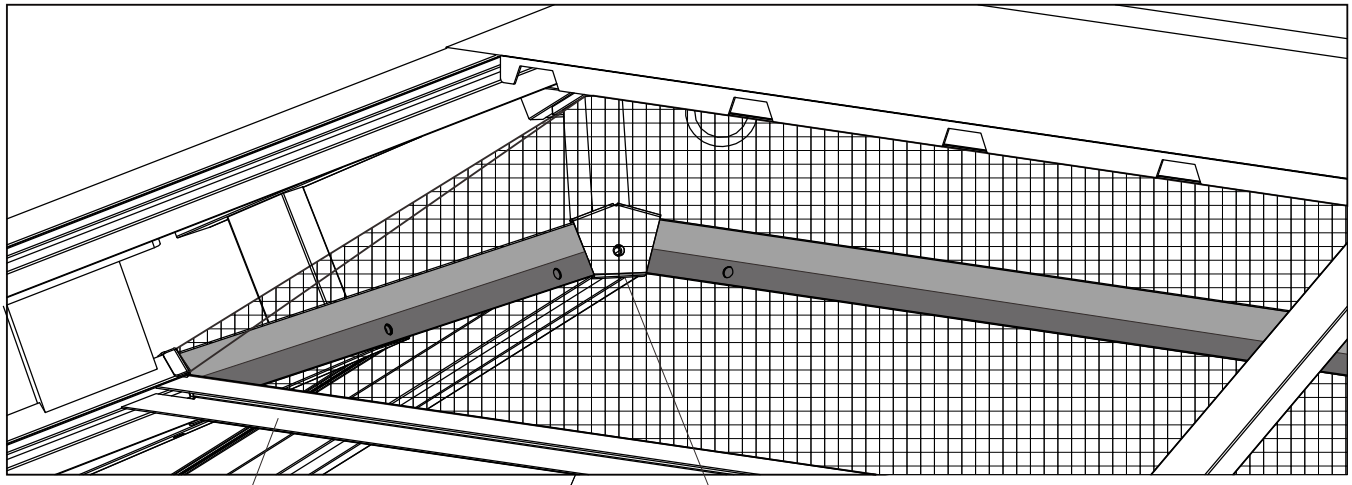



Q

R

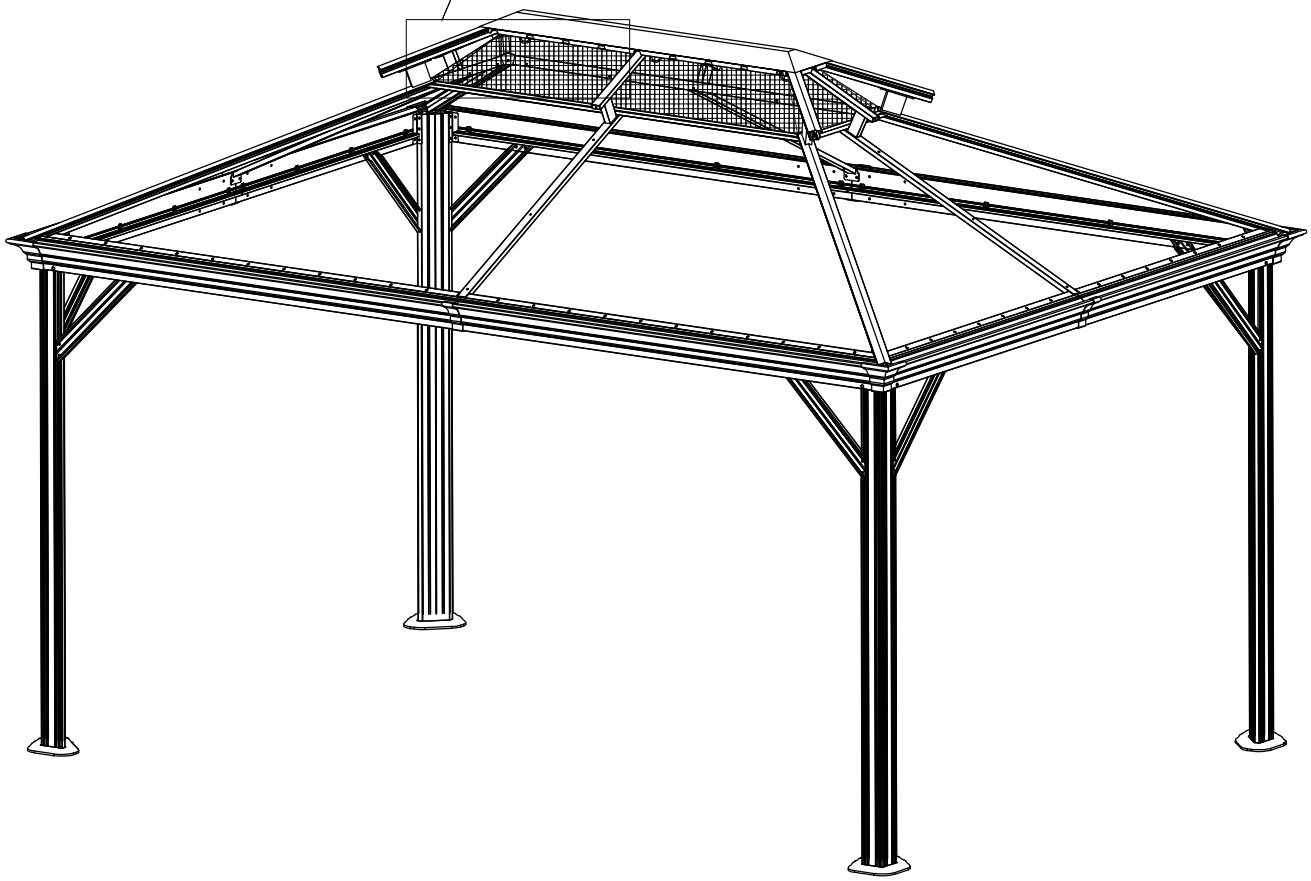


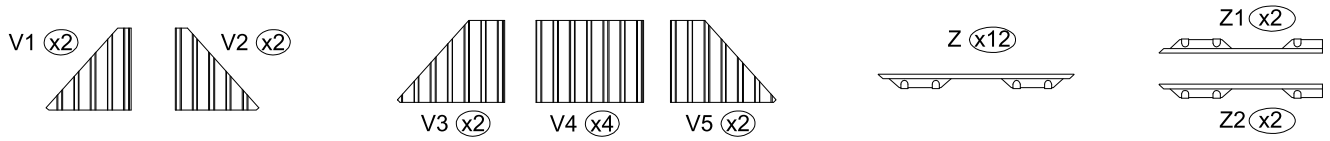


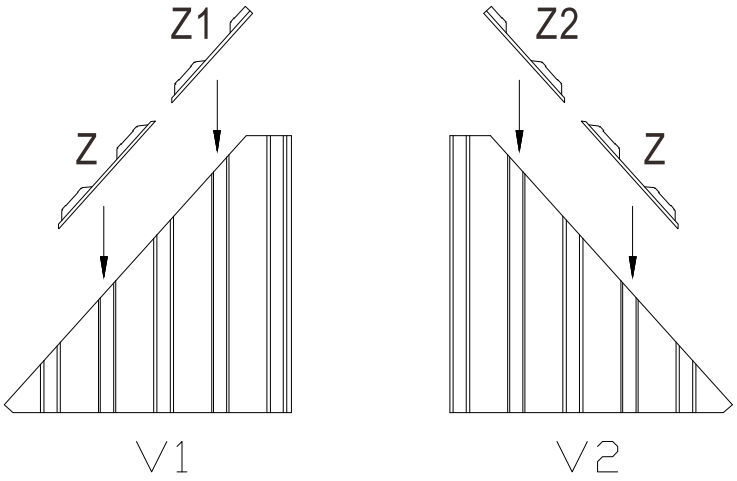

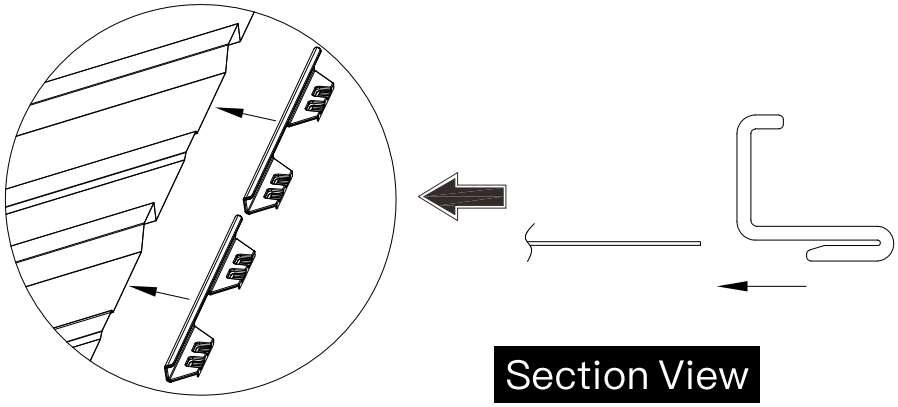


Section View

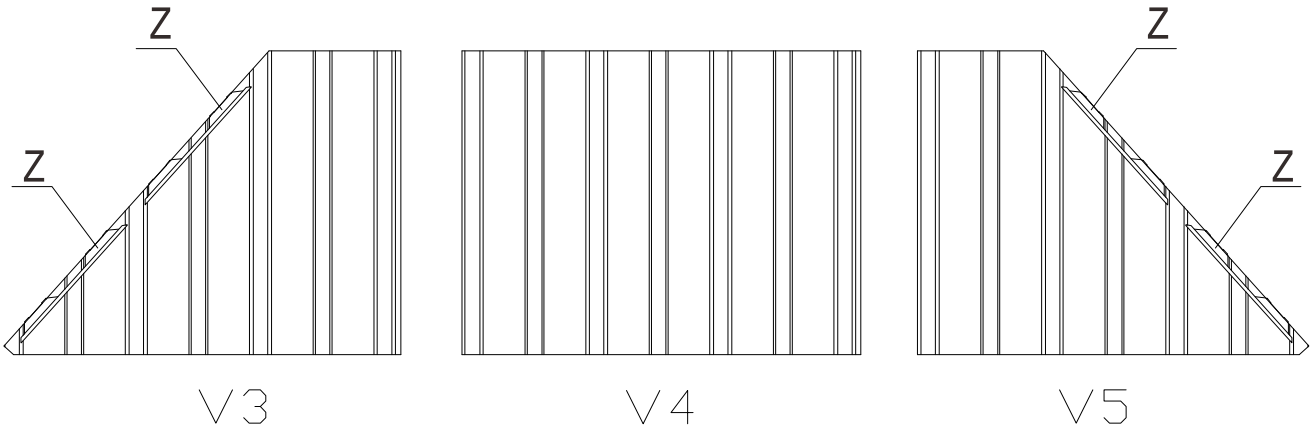


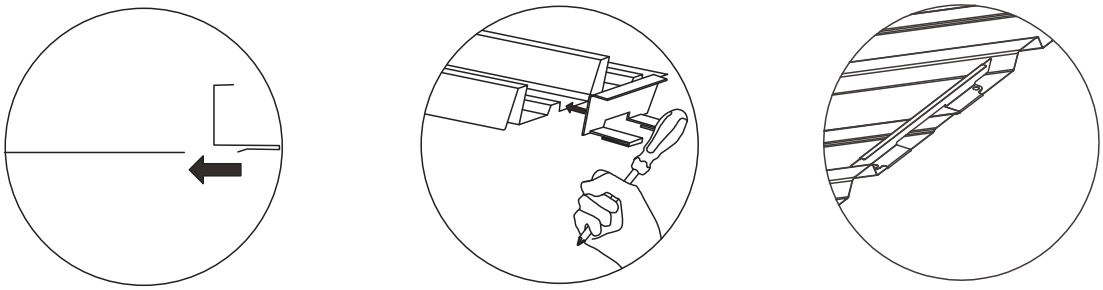


Attach Part #Z, #Z1 & #Z2 by lightly tapping with screwdriver.
Please install Plastic Clips in strict accordance with the instructions.

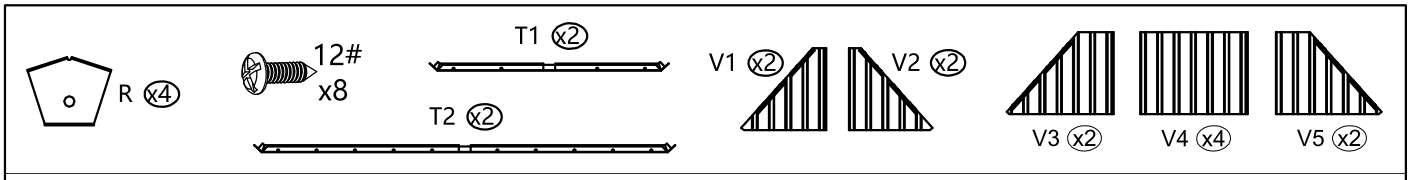



SMALL ROOF PANEL AND FINISHING BAR ASSEMBLY:

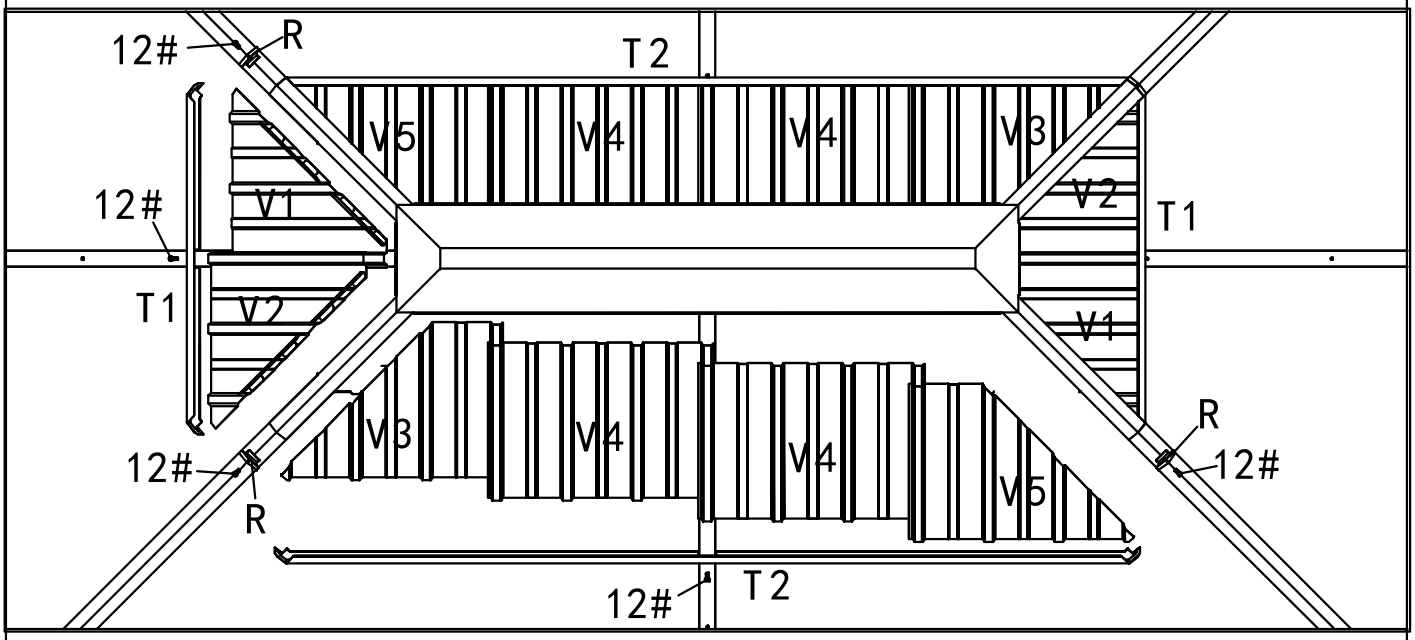

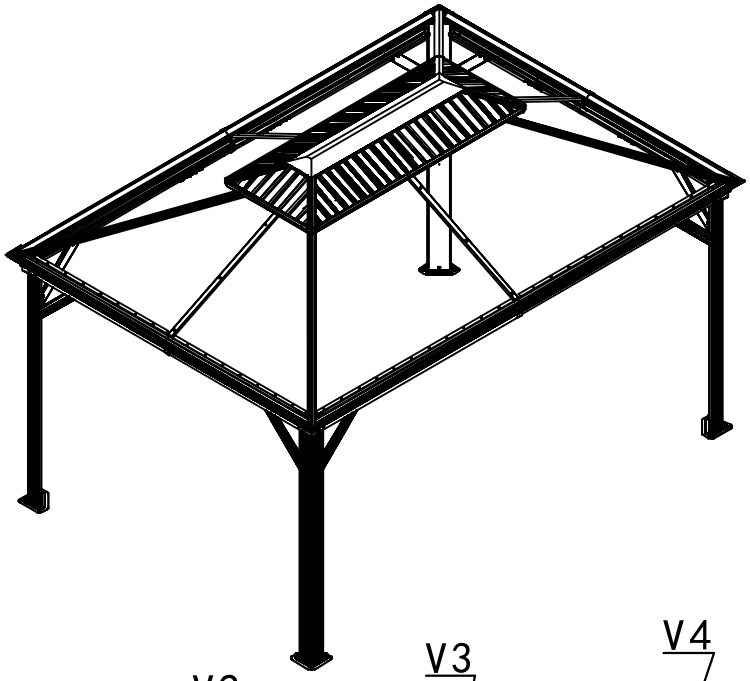


If you can't install #V4, push the Outside Roof Cover up and try to insert them again.

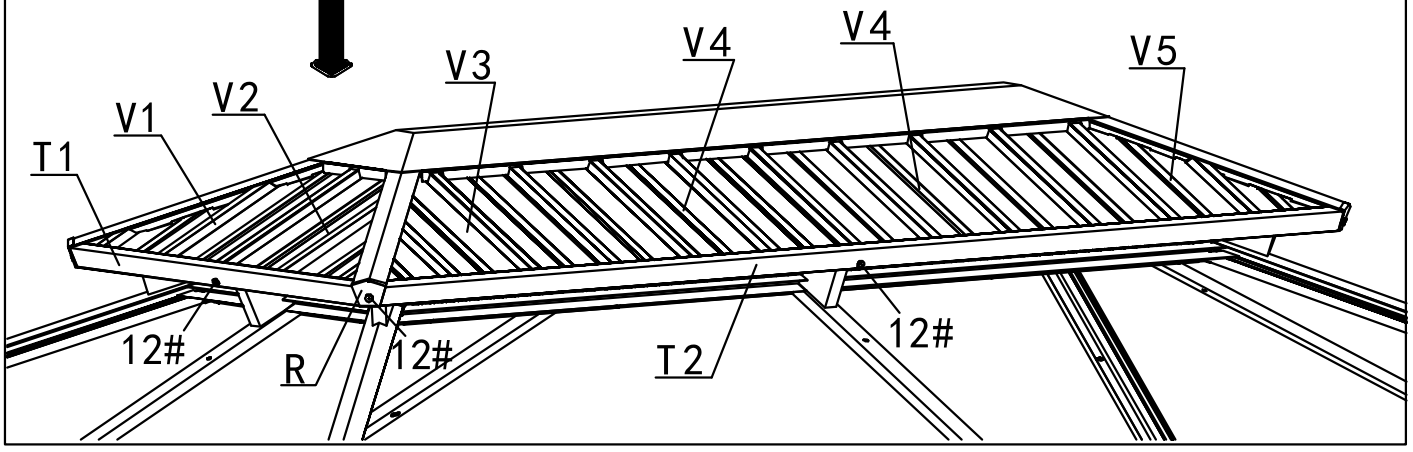






SOLIDIFYING BAR ASSEMBLY:

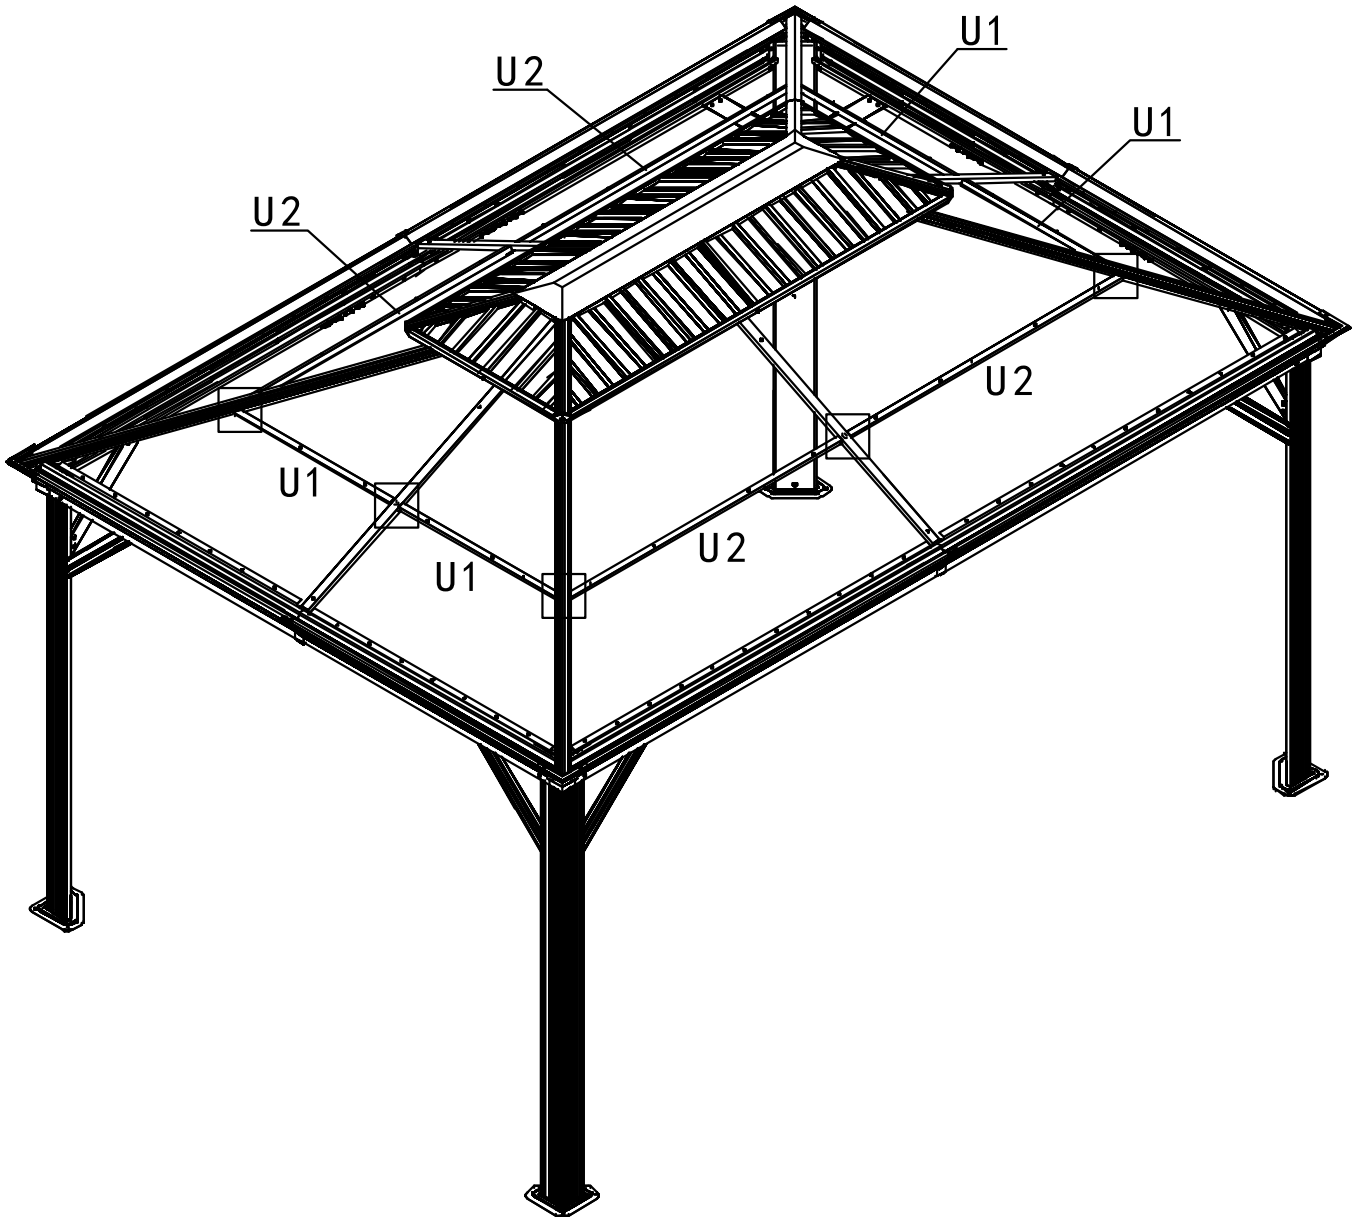



Inside View

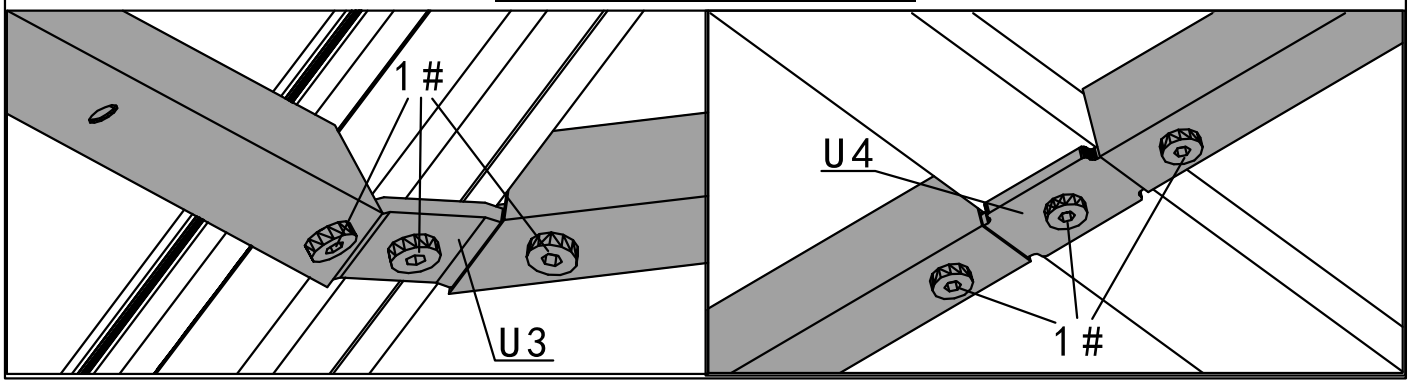

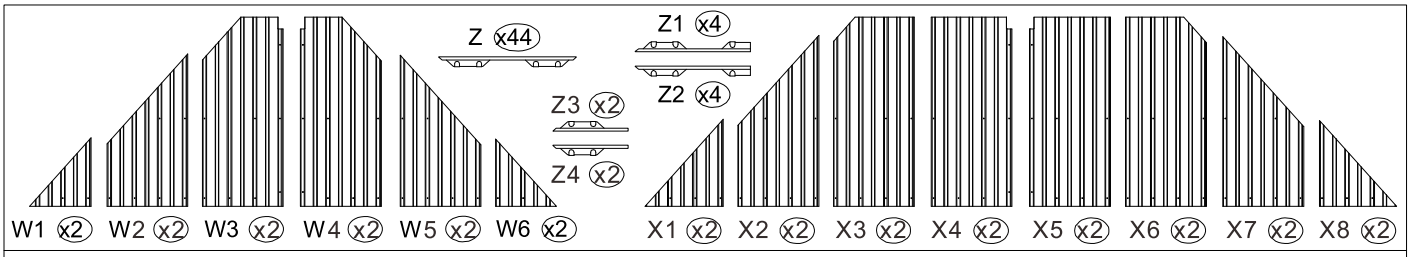


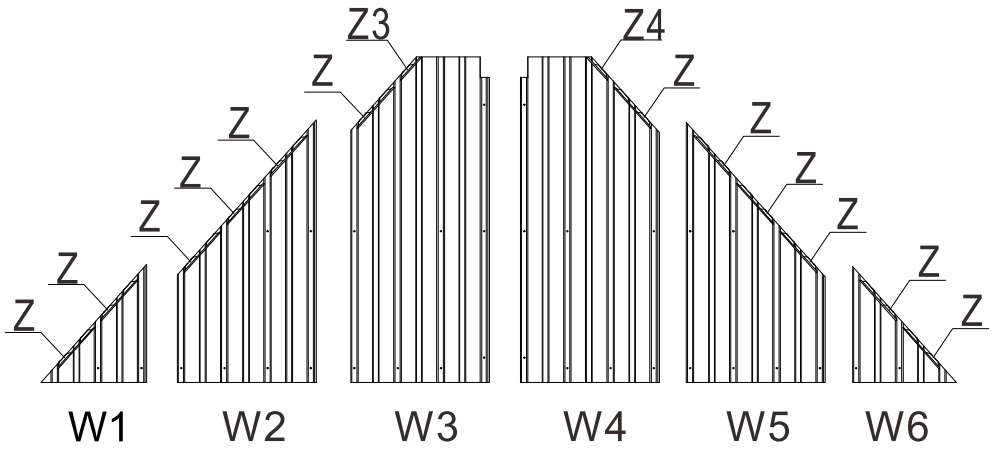

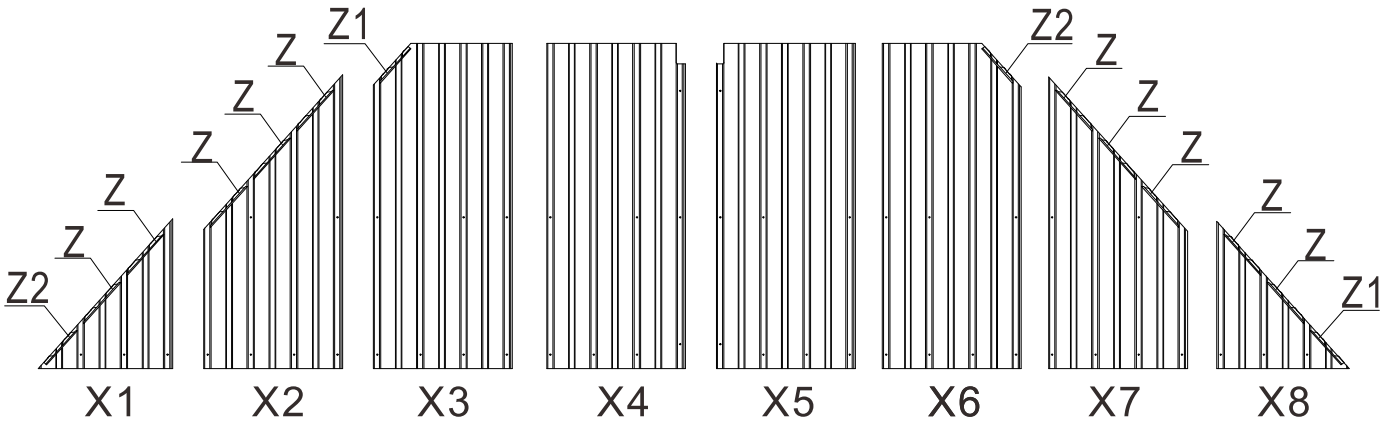


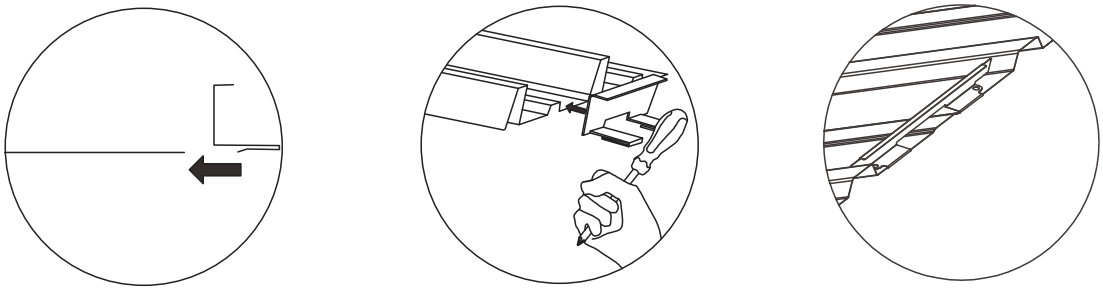


Attach Part #Z, #Z1,#Z2,Z3&Z4 by lightly tapping with screwdriver.

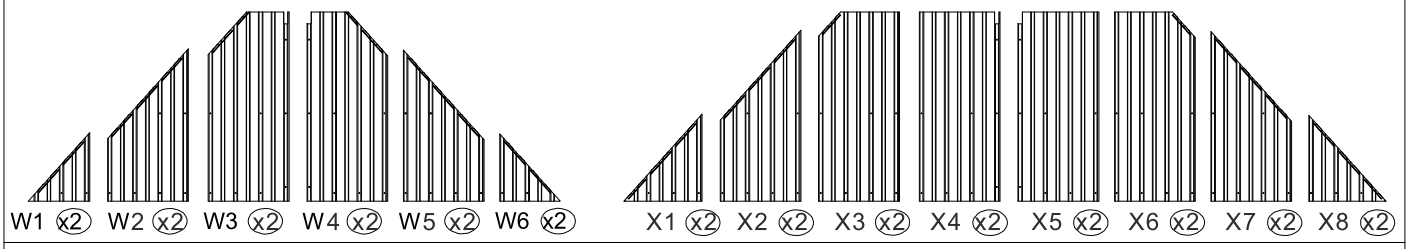



Install the Middle Panels (#X4 ,X5 or #W3,W4) first, then the small panels on the edge.

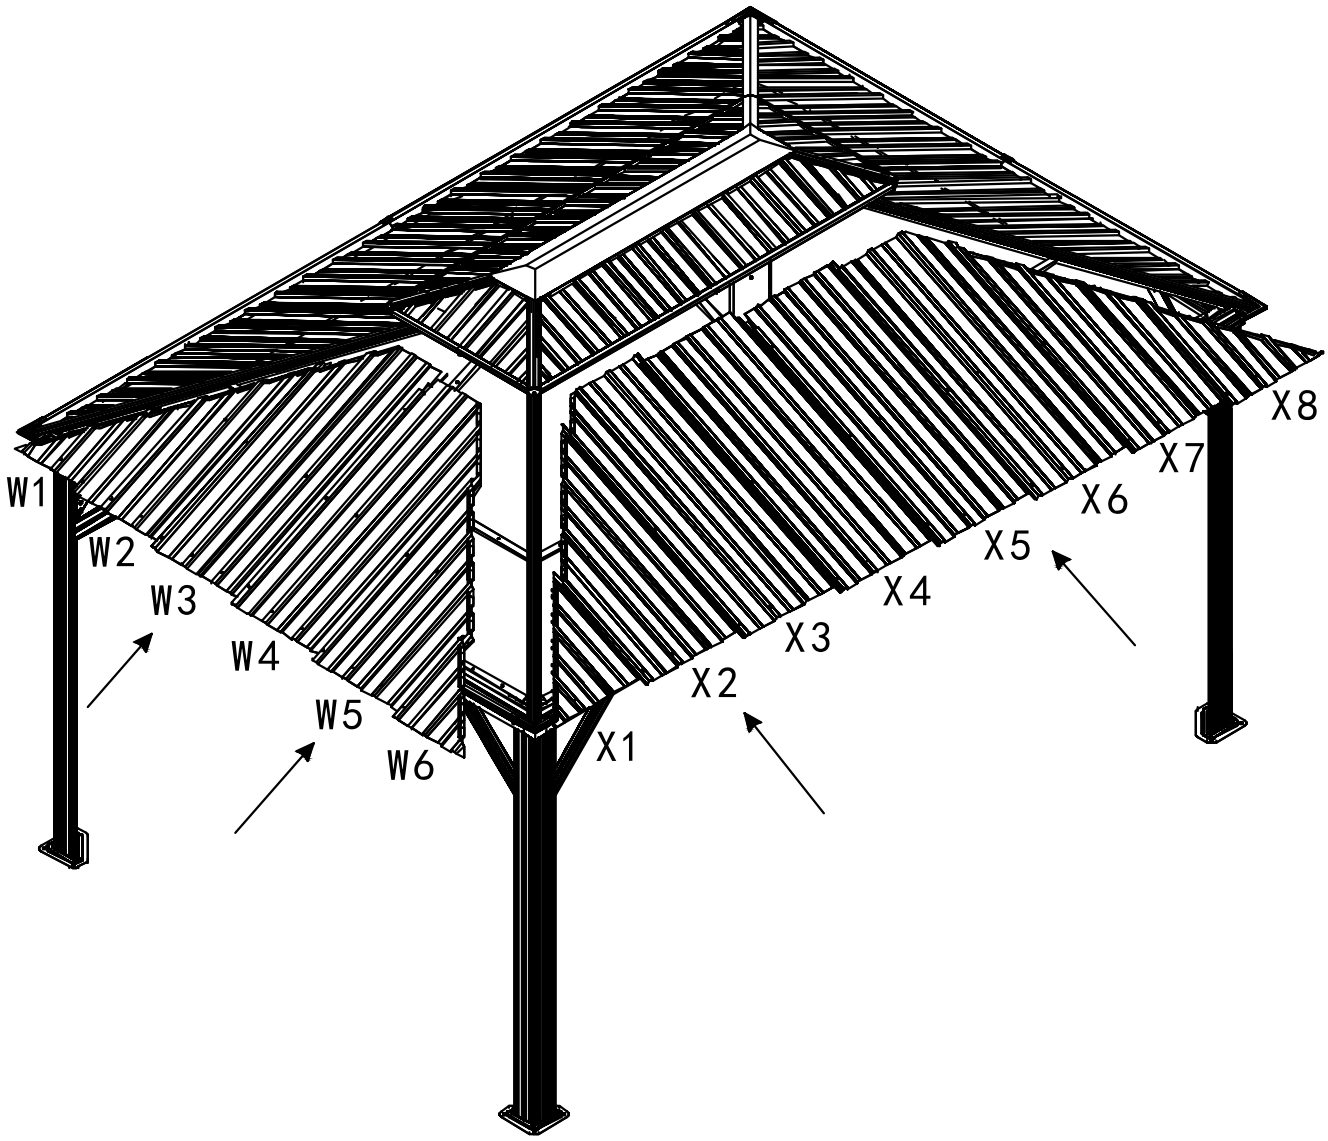



The Rubber Spacer #S should be assembled when installing the roof panels; please see the next page.

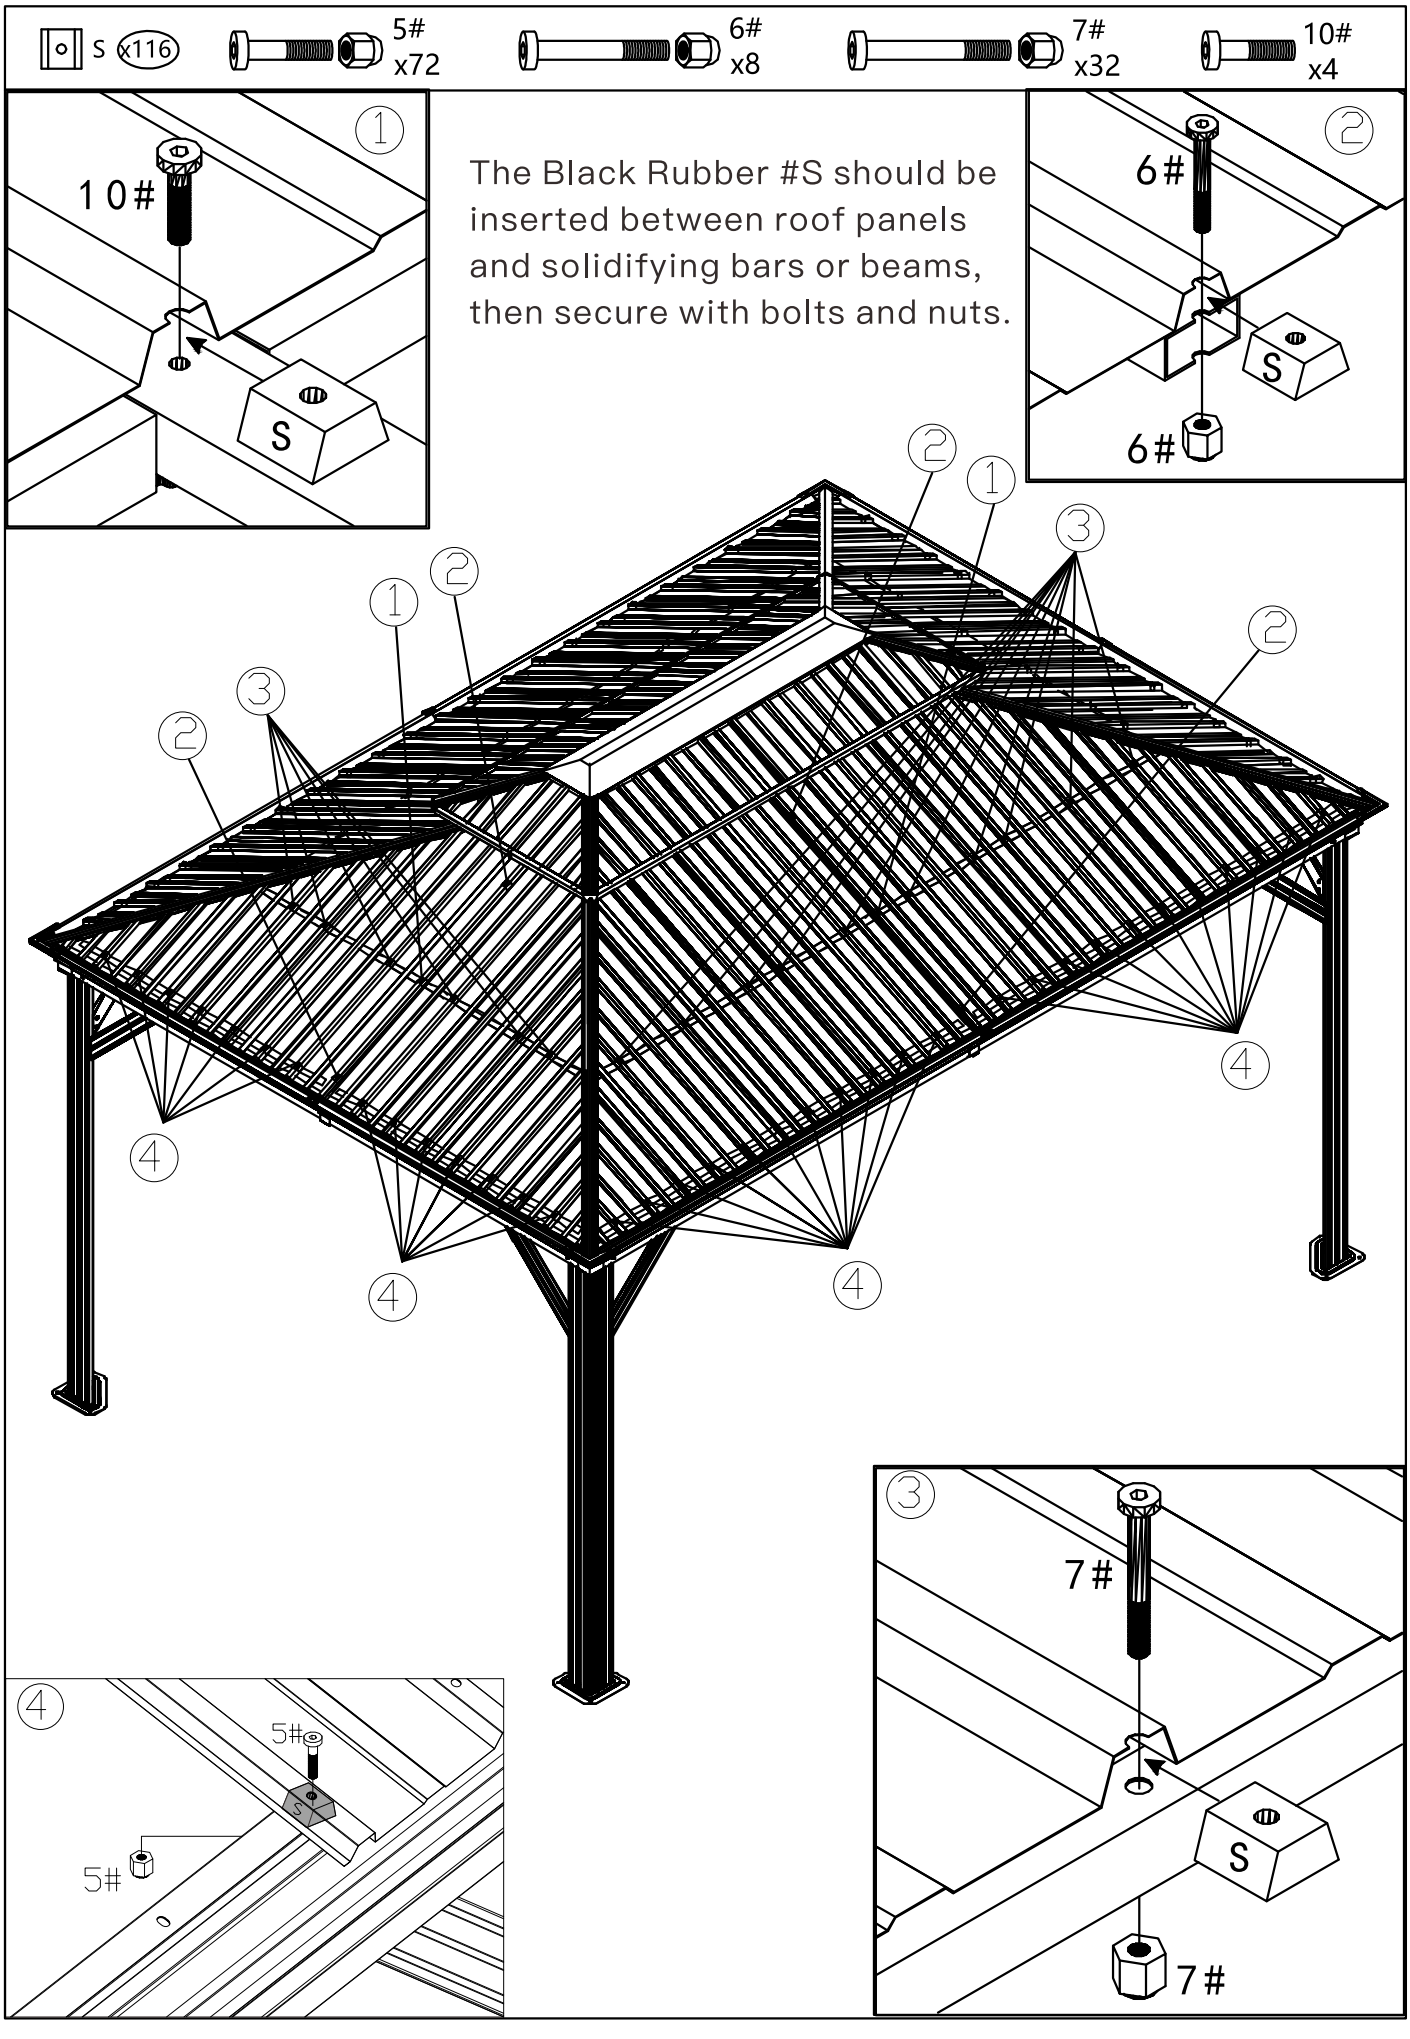
S x116
5# x72
6# x8
7# x32
10# x4
1
10#
S
The Black Rubber #S should be inserted between roof panels and solidifying bars or beams, then secure with bolts and nuts.
2
6#
S
6#
2
1
3
2
1
2
3
2
4
4
4
4
3
7#
S
7#
4
5#
S
5#

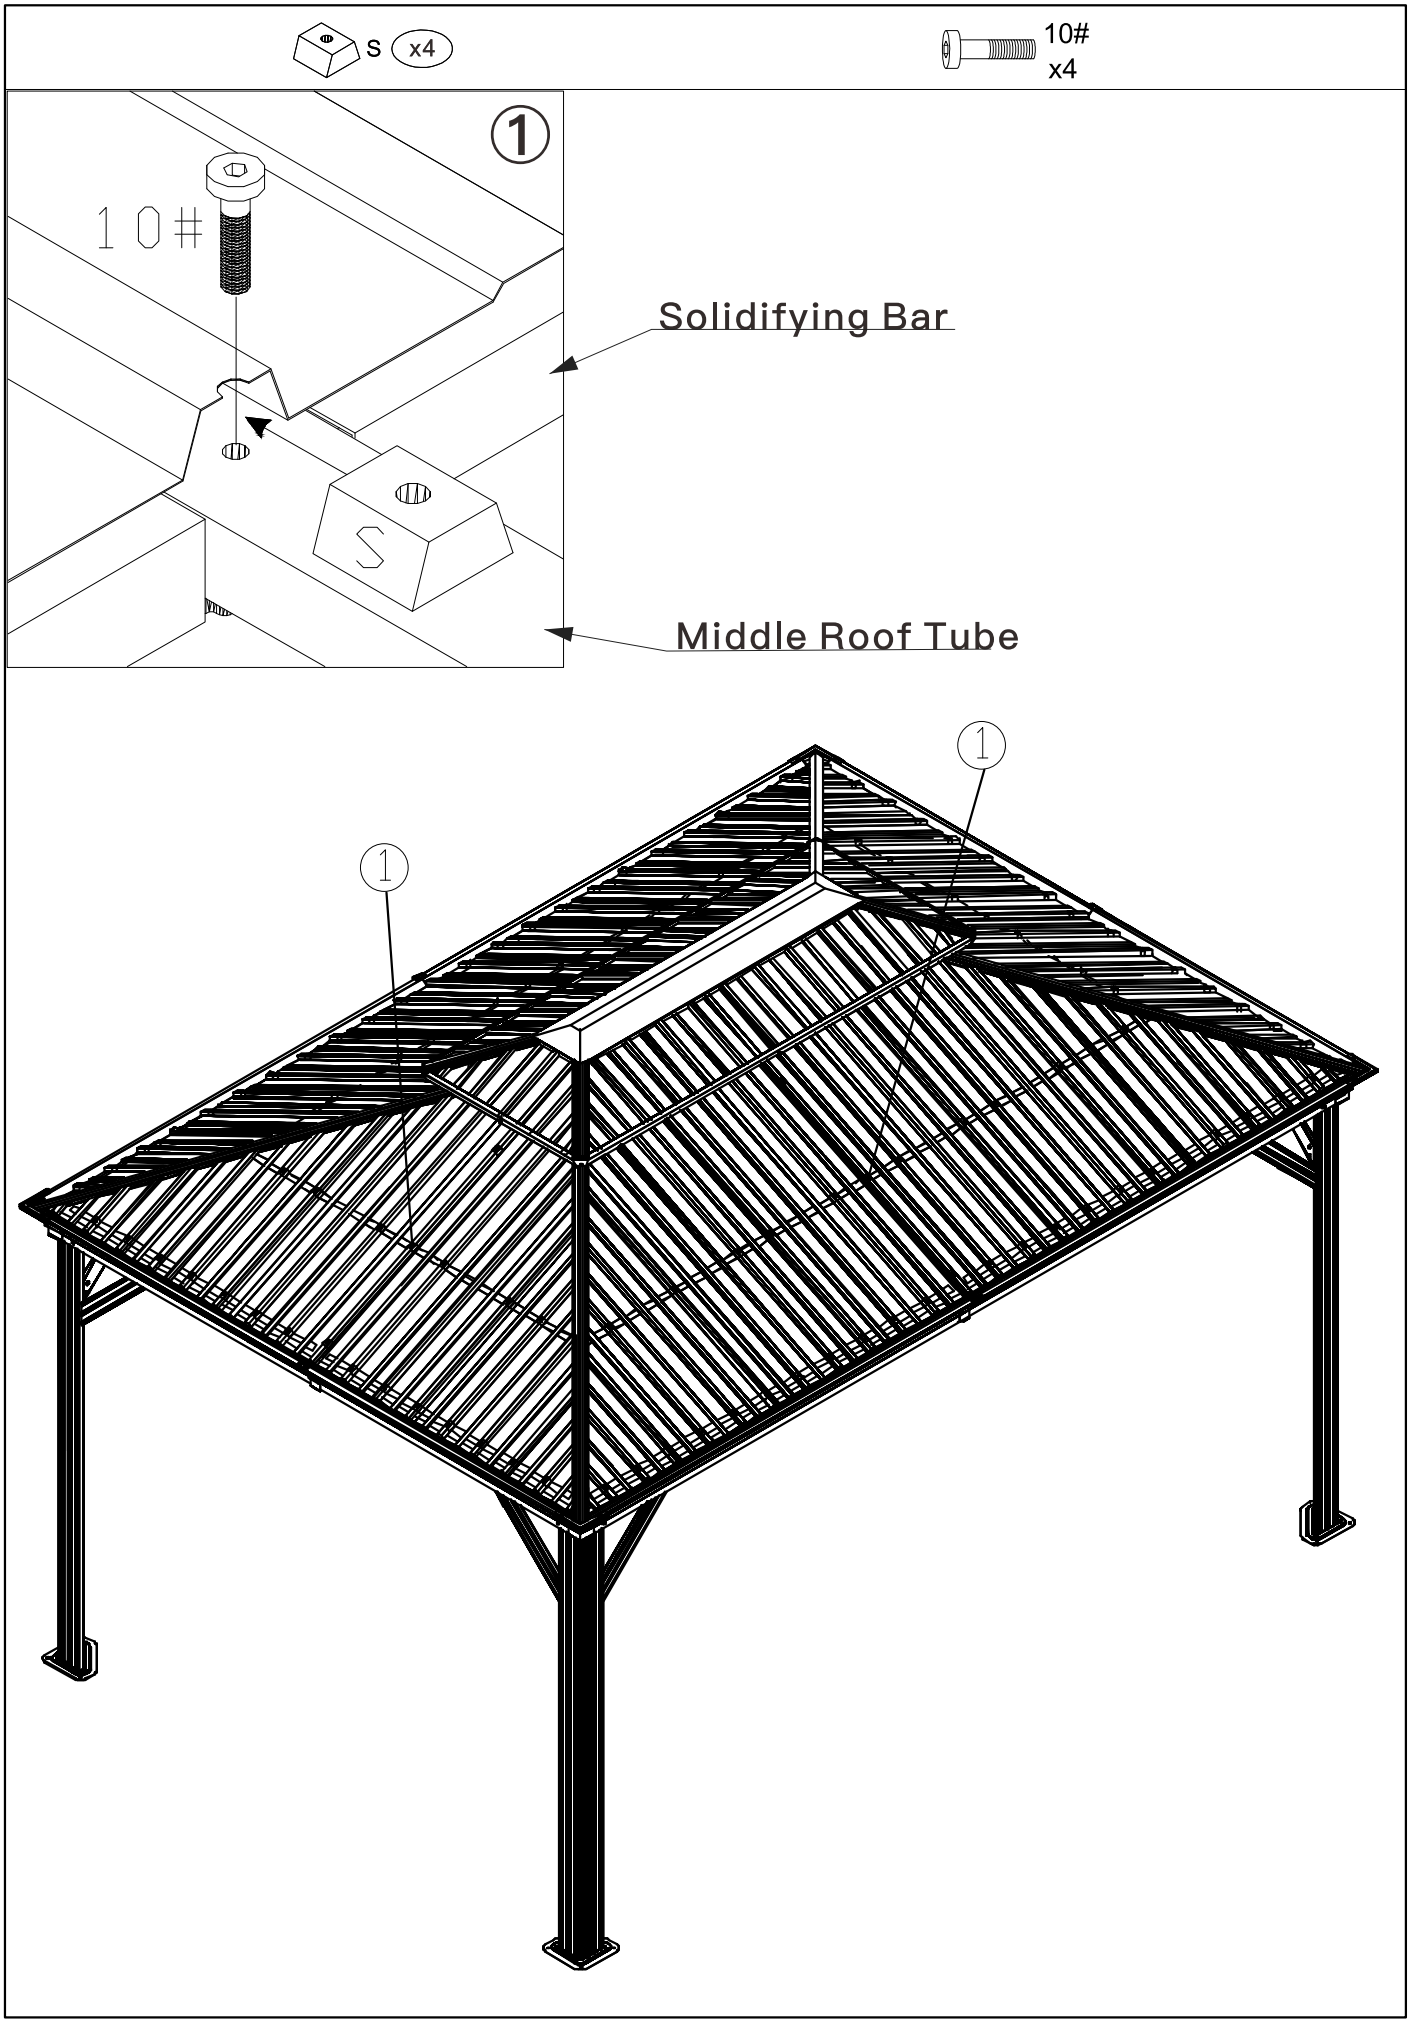

S x4
10#
x4
①
10#
Solidifying Bar
S
Middle Roof Tube
①
①

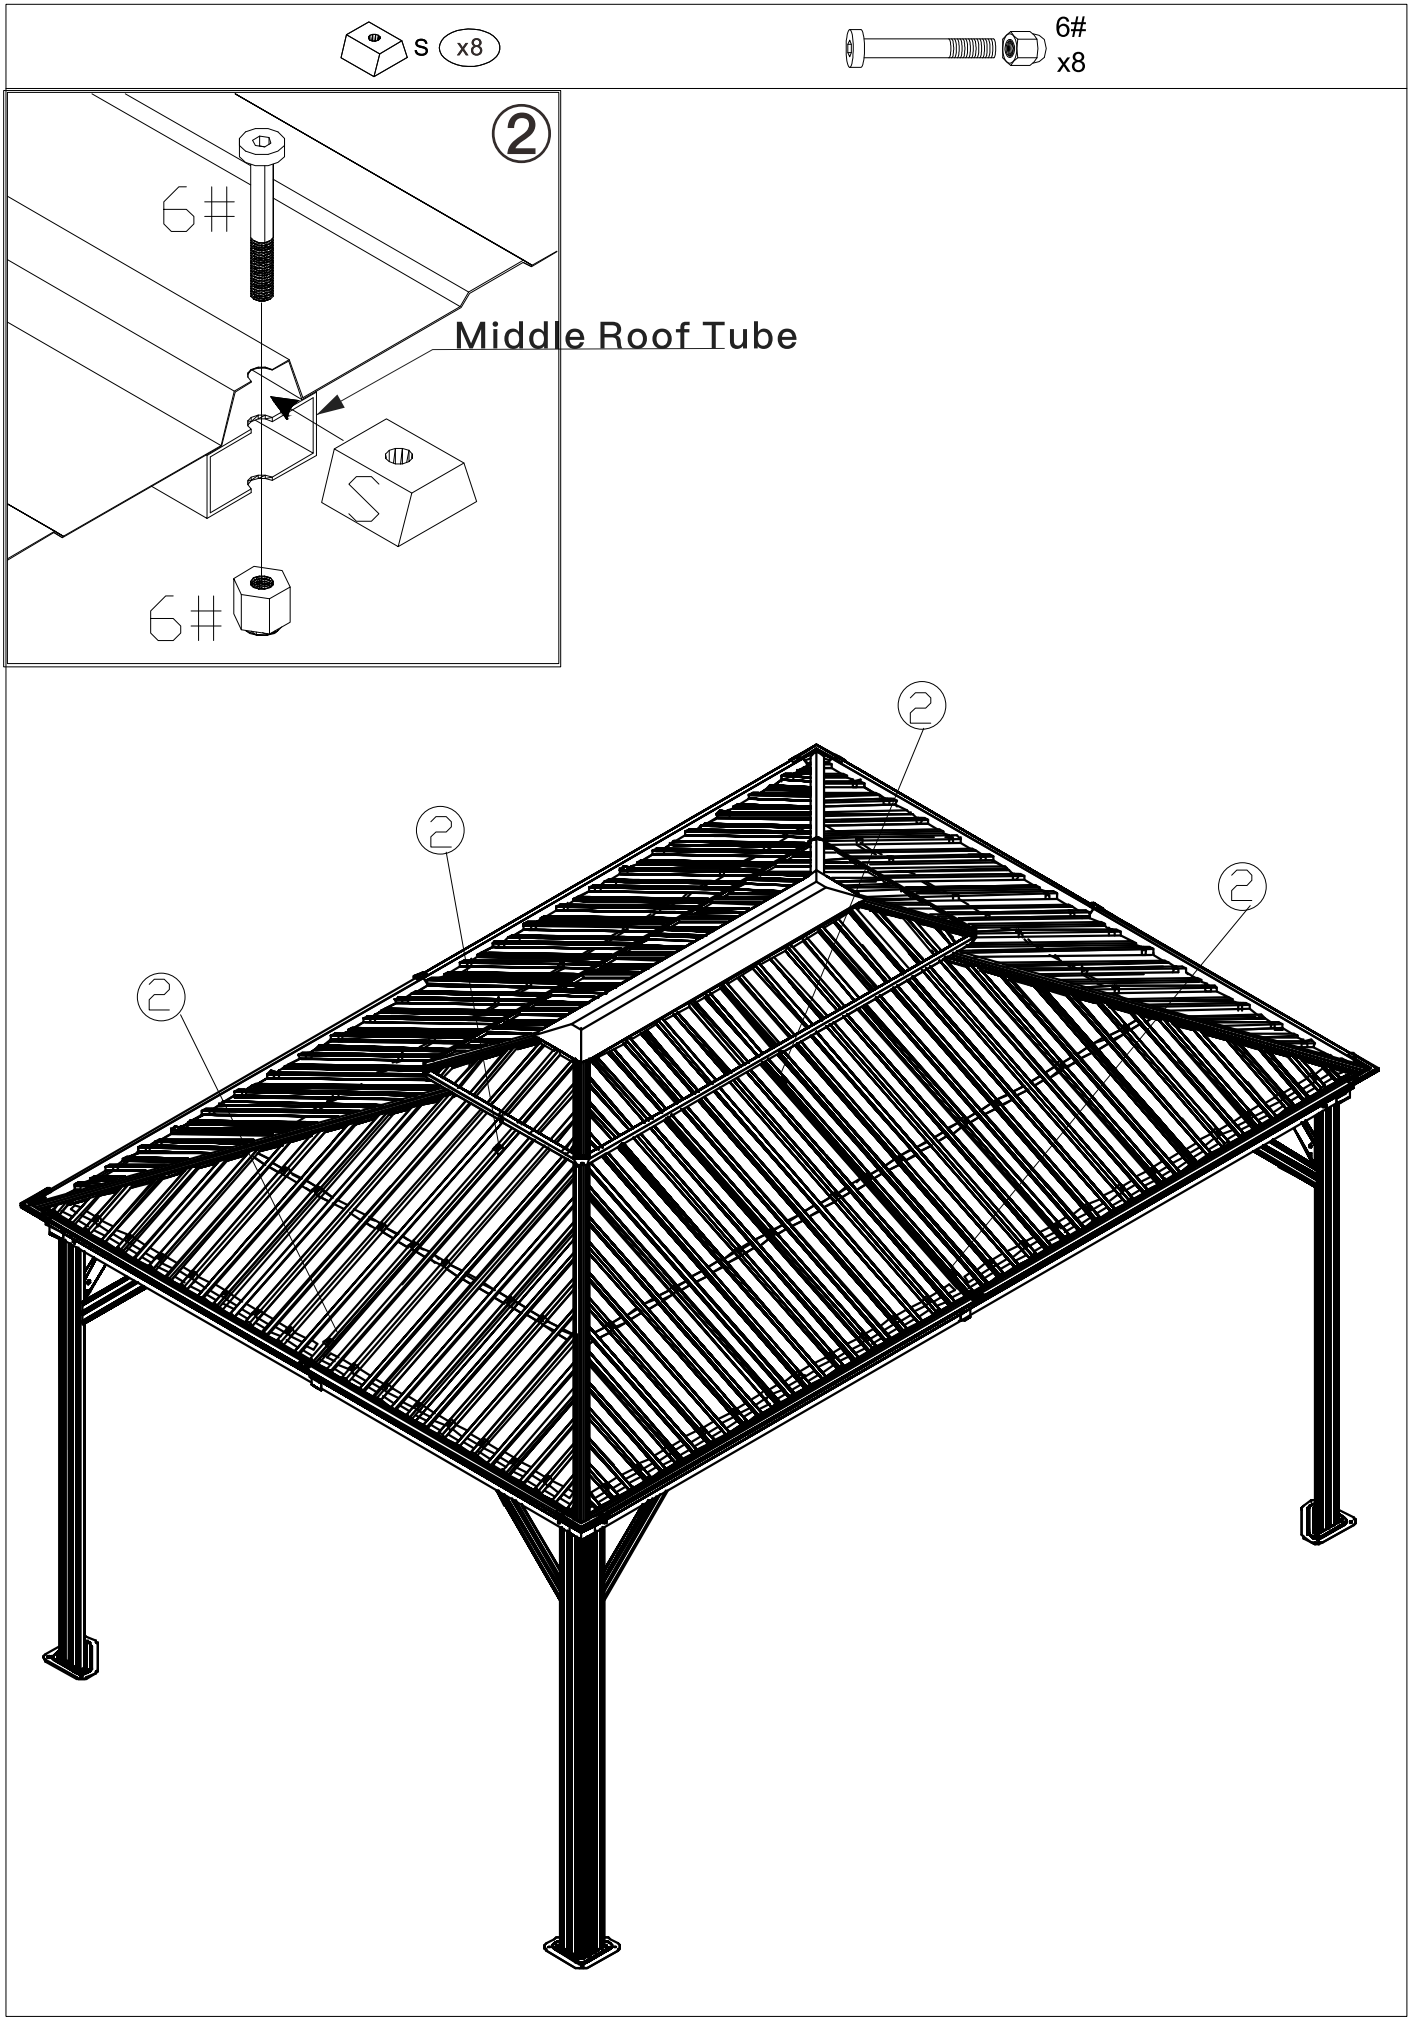
S x8
6# x8
②
6#
Middle Roof Tube
6#
②
②
②

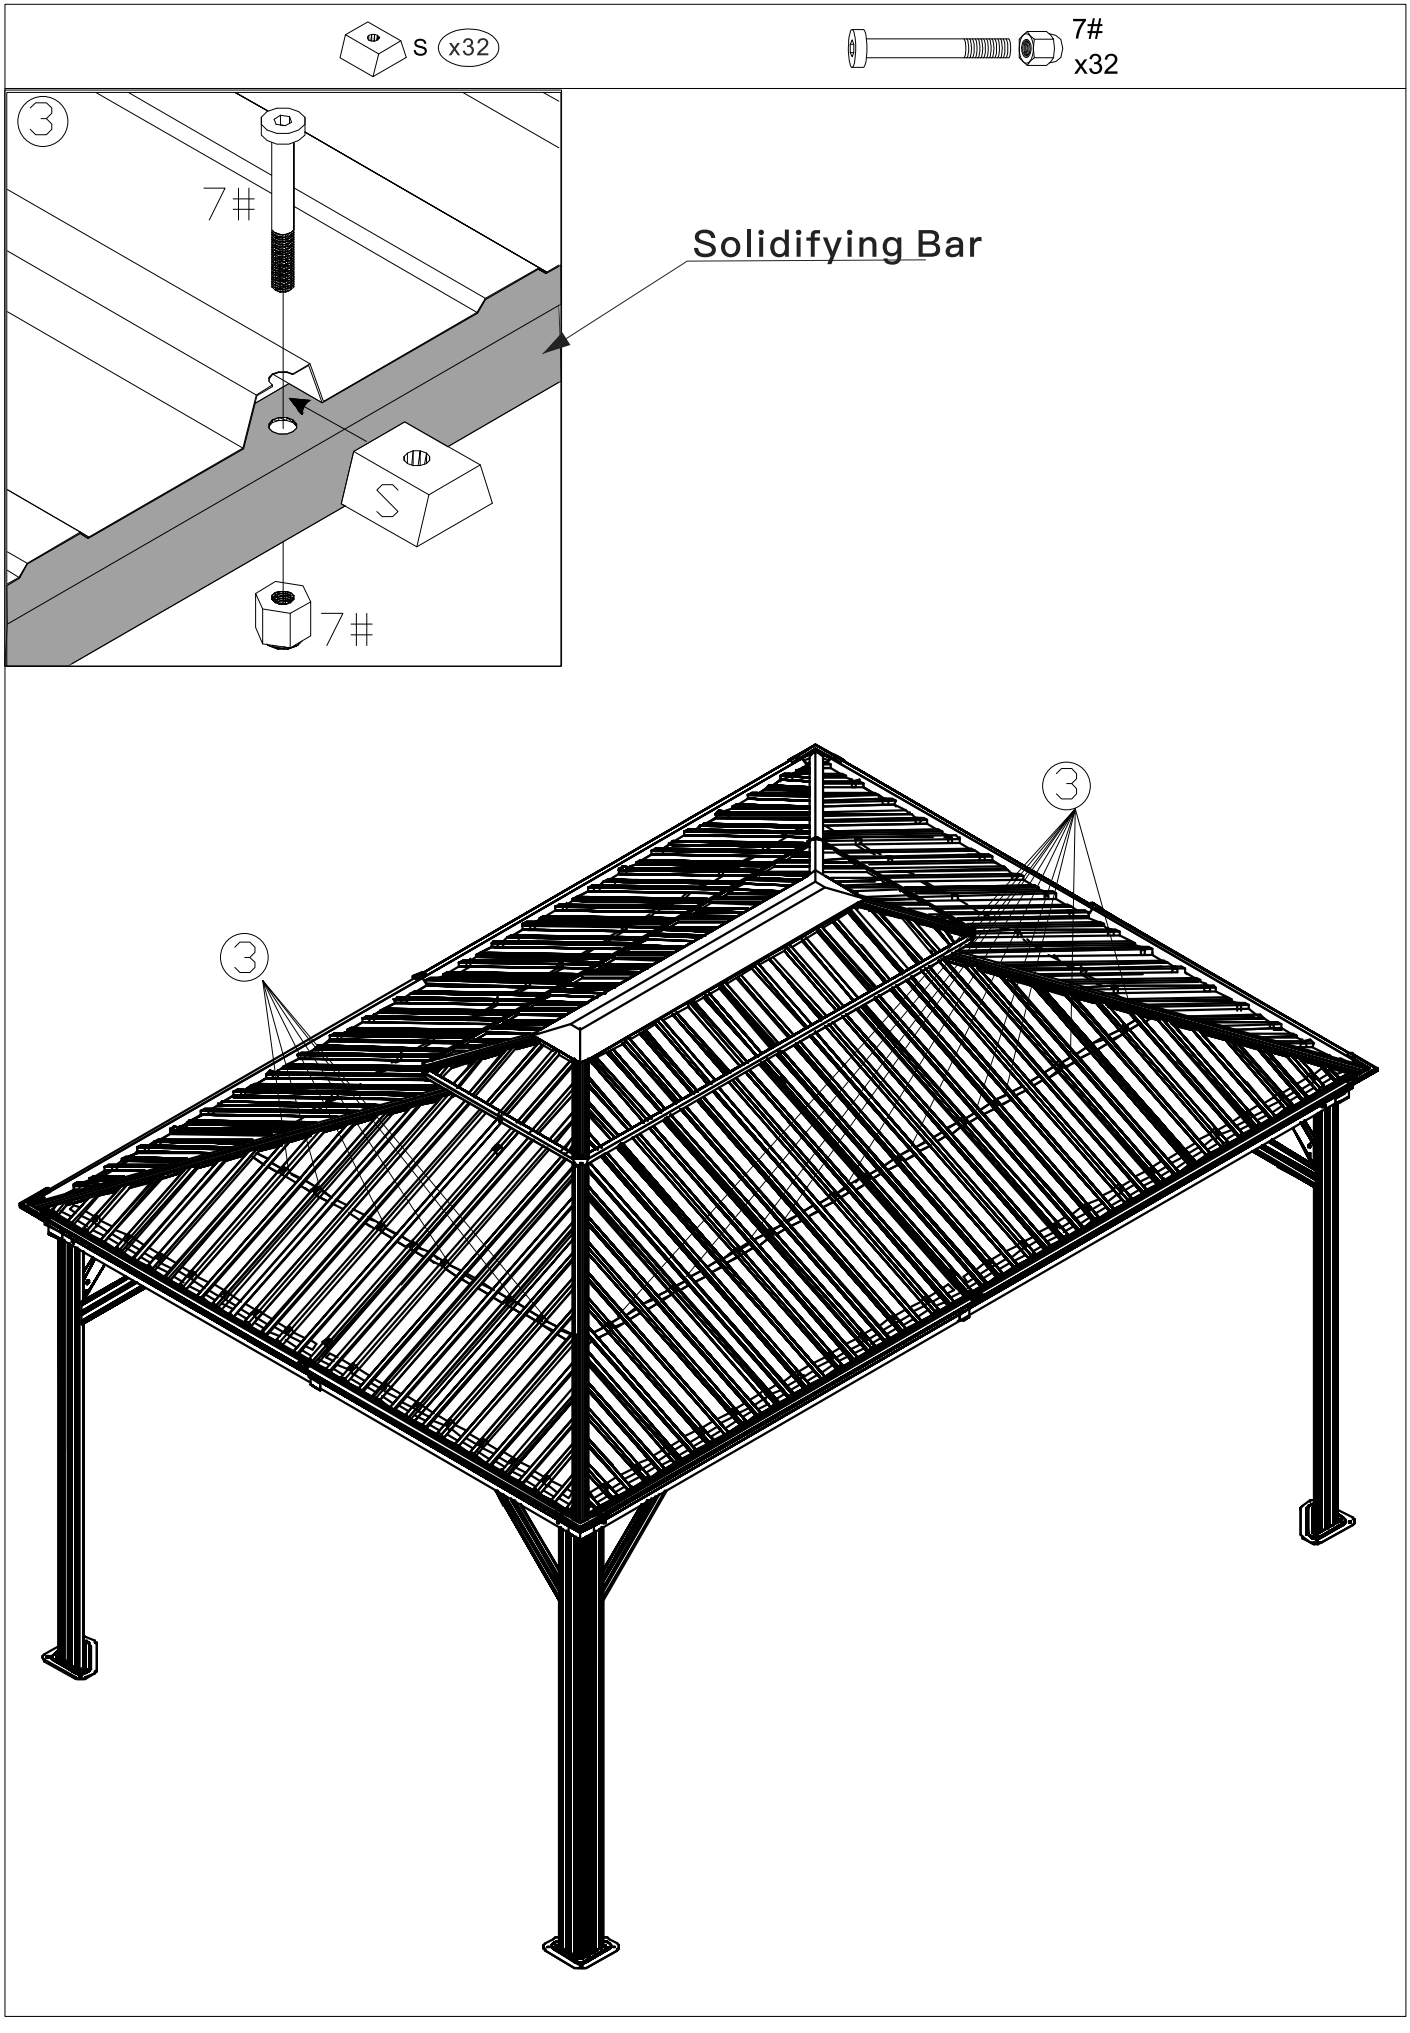
S x32
7#
x32
③
7#
Solidifying Bar
S
7#
③
③


S
x72



5#
x72

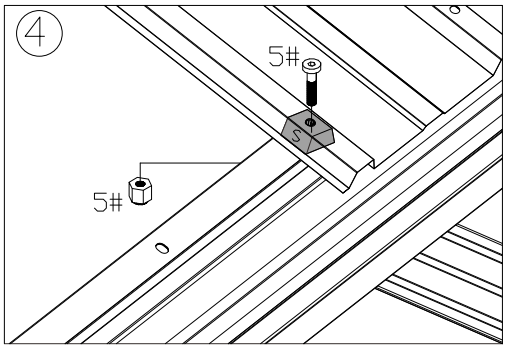

4
5#
5#
S



4
4
4
4




MOSQUITO NETTING AND SOLID SIDEWALL ASSEMBLY:

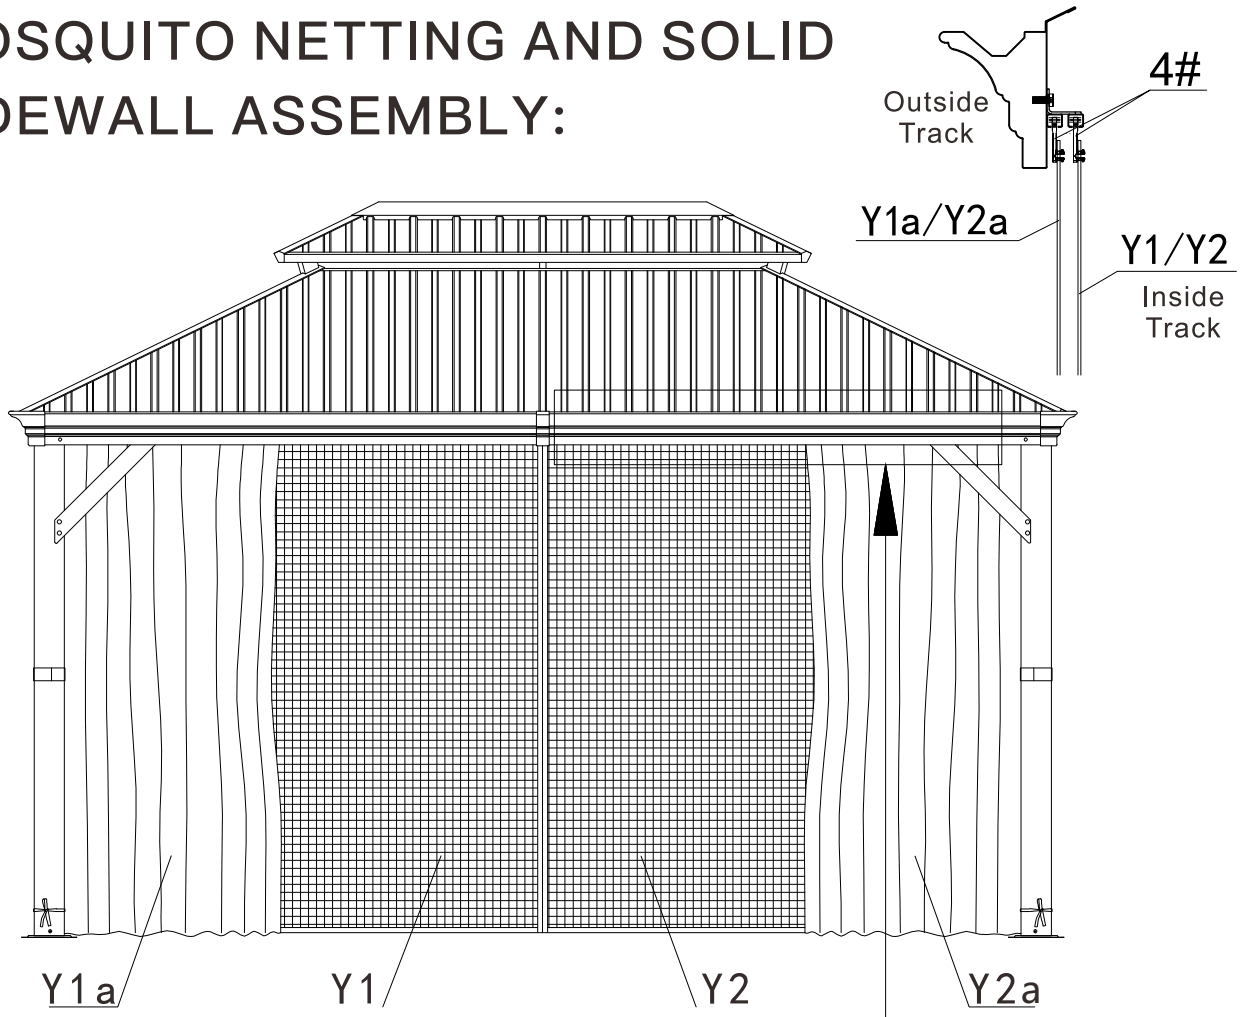


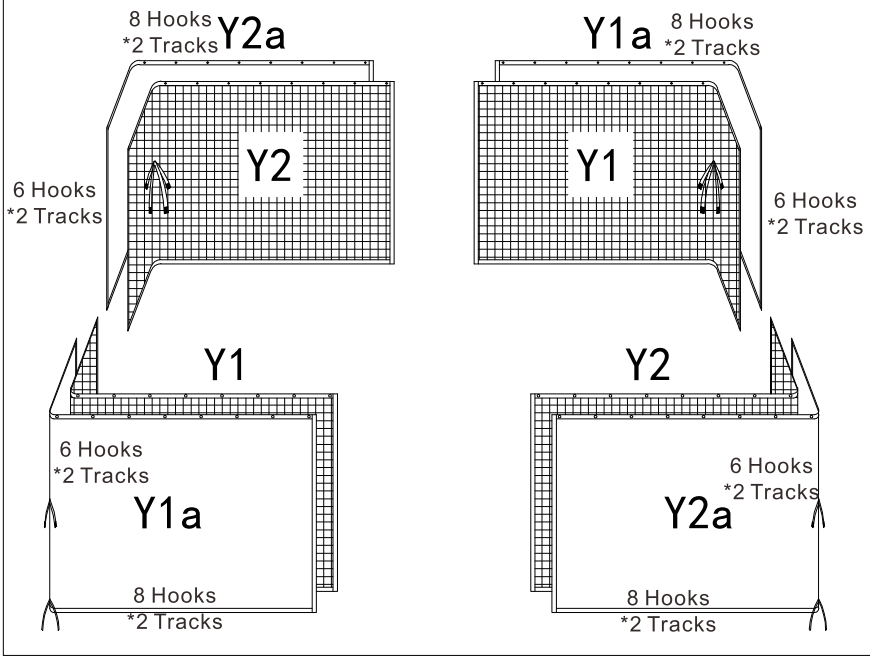

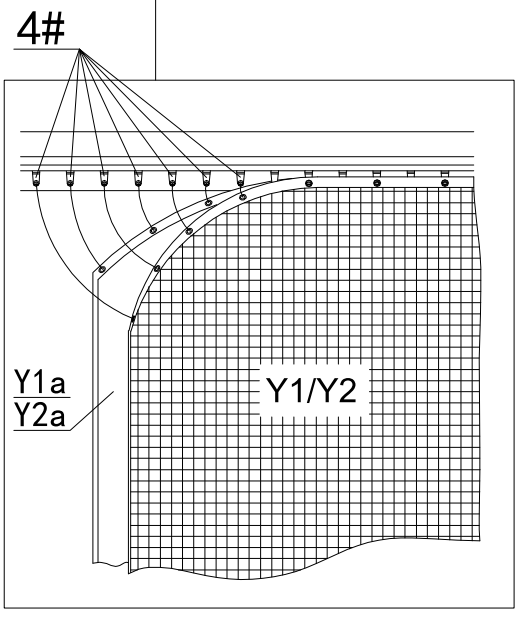

Please **open** your gazebo curtain when it is incoming over 30 mph wind, and tie with Strap #Yb.

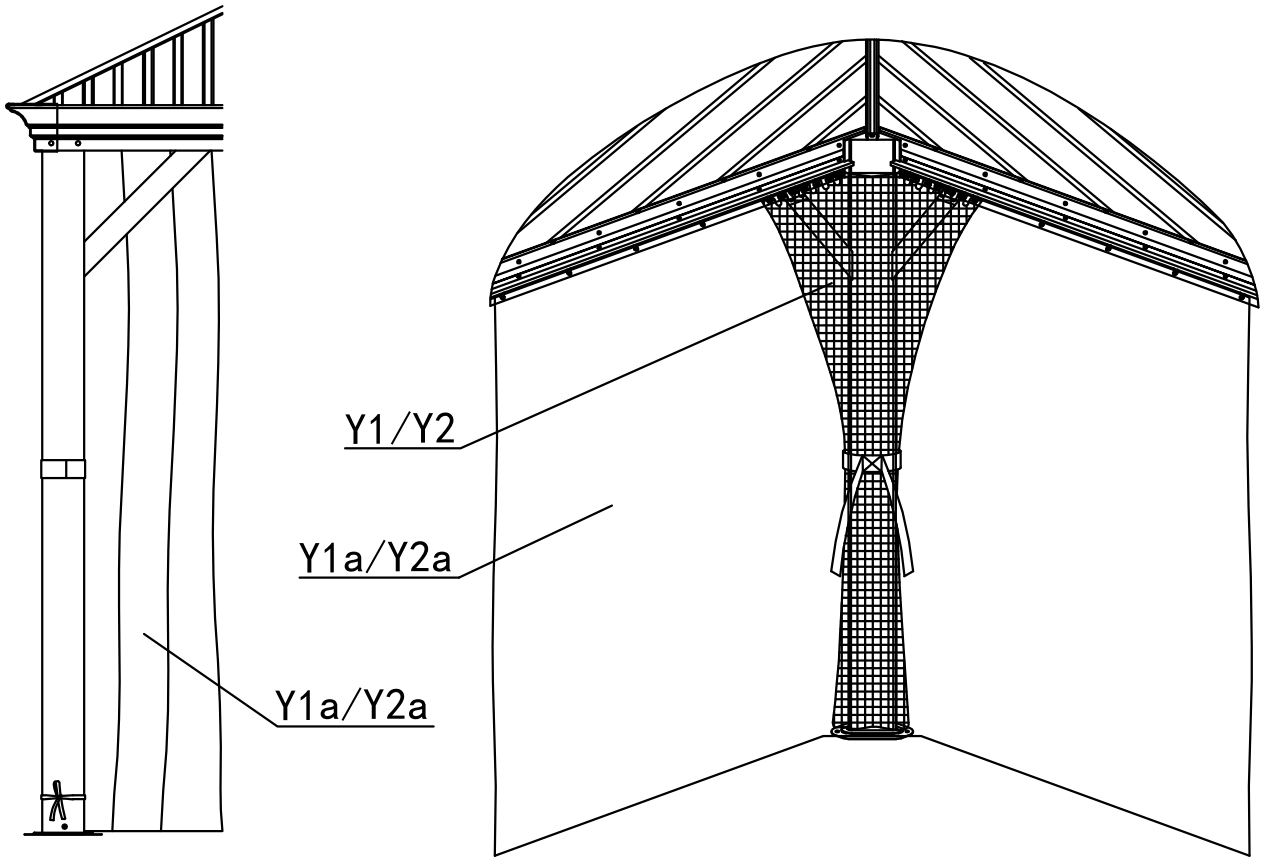

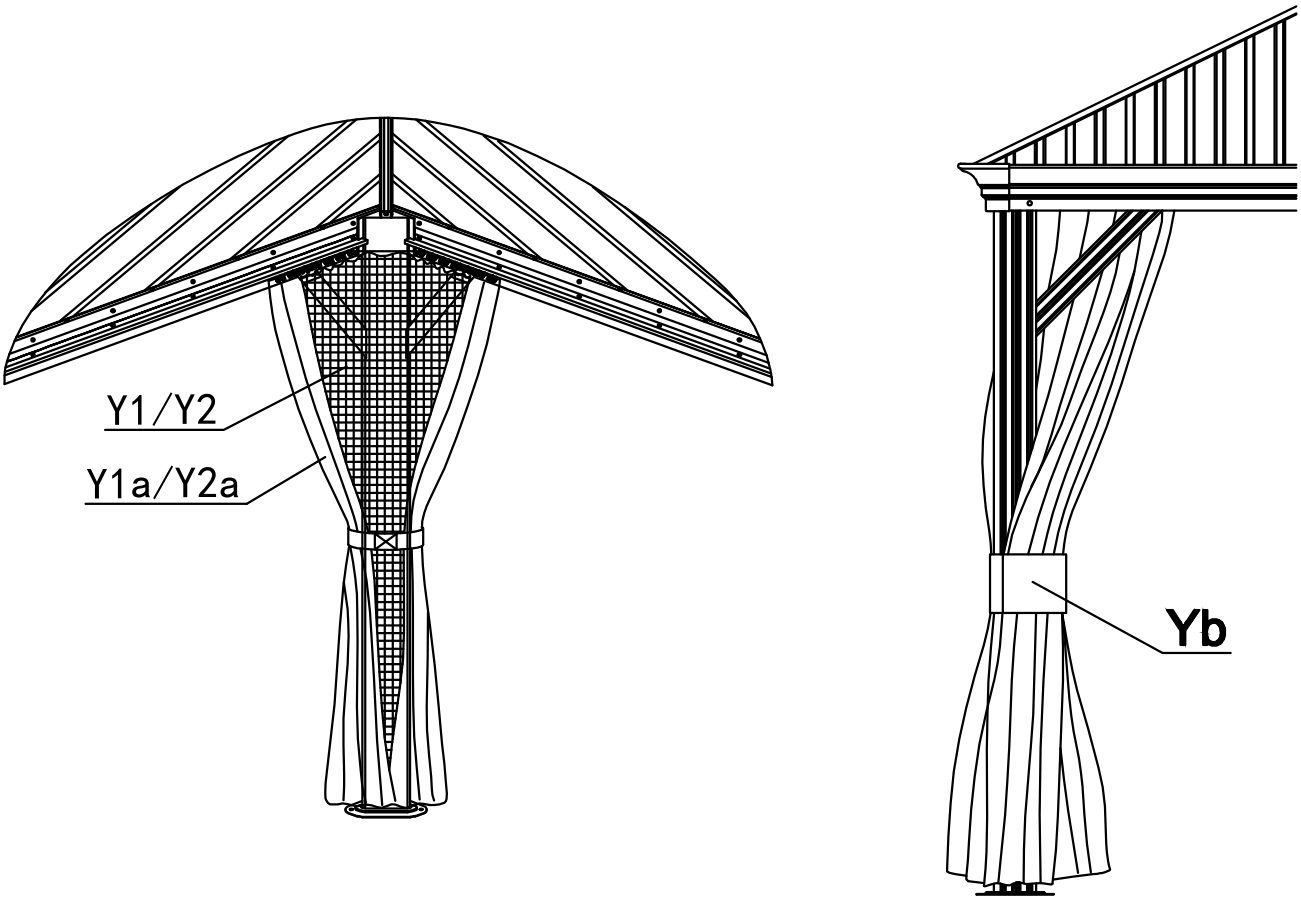

domi
outdoor living

Thanks for your purchase.

At domi outdoor living, we believe in our products.

That's why we provide a 12-month warranty and friendly, easy-to-reach after-sales service. So,if you have any questions about our product or assembly, please feel free to contact us. We are here for you.

Support:

After-sales contact email:
service@domioutdoorliving.com

Business cooperation contact email:
marketing@domioutdoorliving.com

Please have your order ID available if you reach out for support.

If you have damaged parts or product, please send us photos for an immediate response.

© Copyright 2023–2025 domi LLC. All Rights Reserved.