
Domi outdoor living

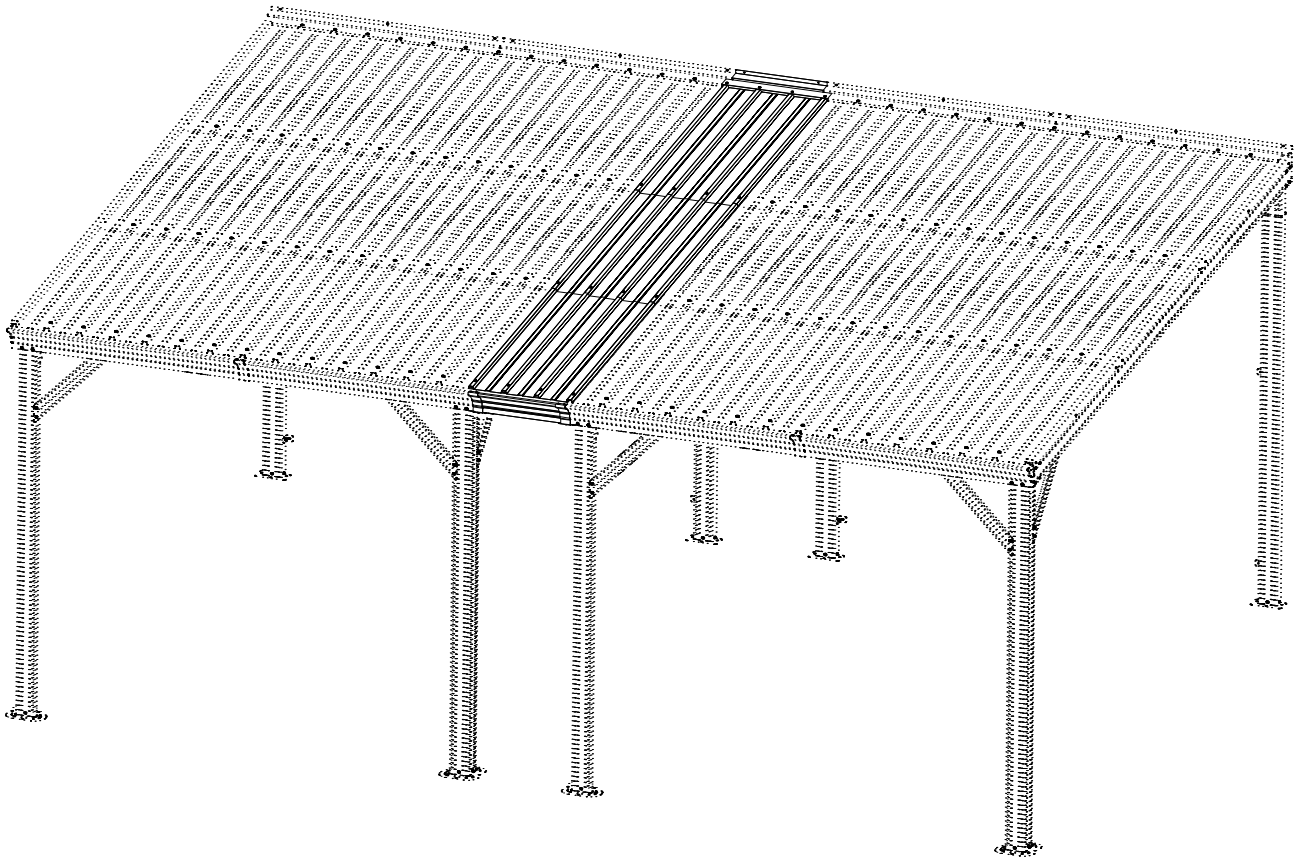


SKU: LGCF1704


ROOF CONNECTOR KIT FOR WALL-MOUNTED GAZEBO

Assembly Manual


© Copyright 2023 –2025 Domi Outdoor Living LLC.All Rights Reserved.


LGCF1704

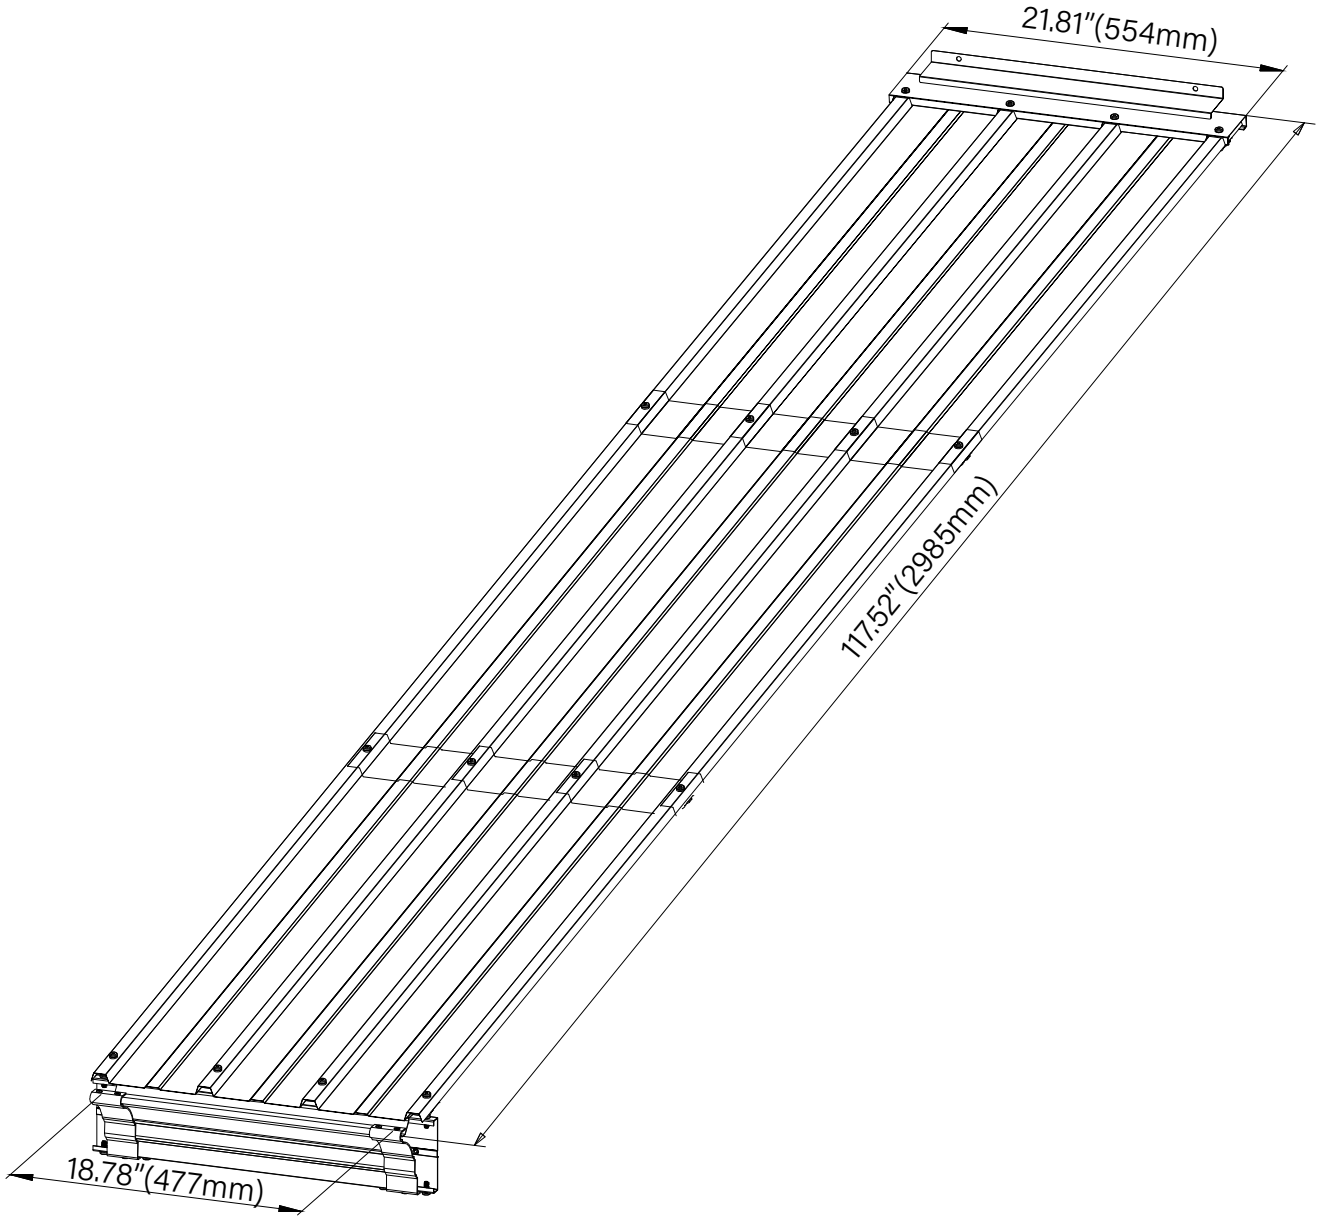

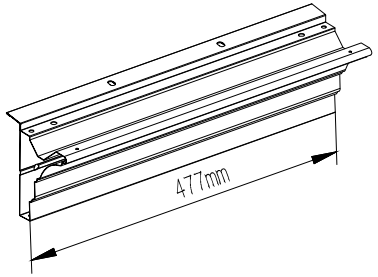


X1 1X

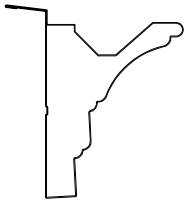


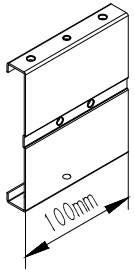


X2 2X

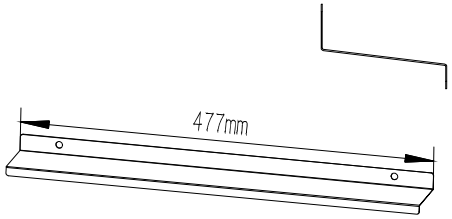


Y1 1X

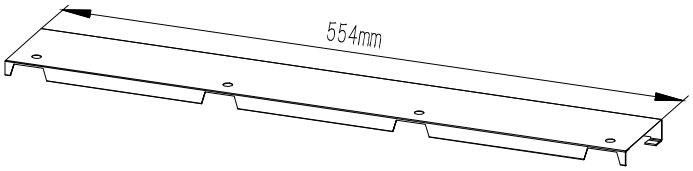




Y2 1X

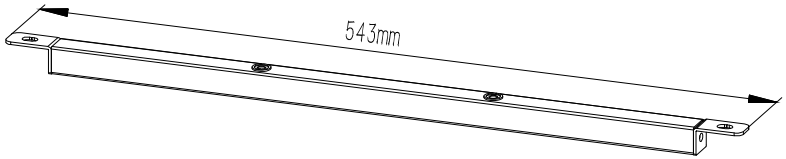





Z1 3X

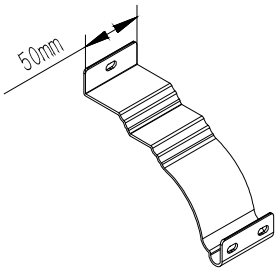


D4 2X

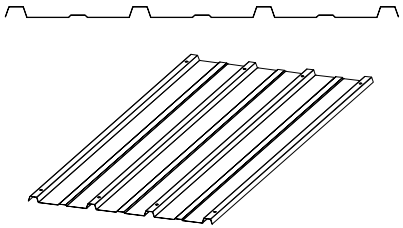


N 3X




S1 16X D12/d6.2*H2

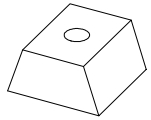


S 16X




1# 4X ST4.8*13




2# 4X M5*12

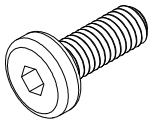


3# 10X M6*16

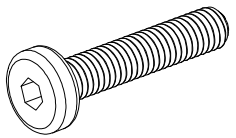


4# 16X M6*30




5# 6X M6



6# 2X ST6*70



7# 2X

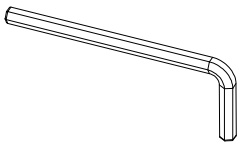


8# 1X S4





9# 1X S13

Remove the side roof cover (#L) on the left/right side of the gazebo that needs to be connected.
Please follow the instruction below.

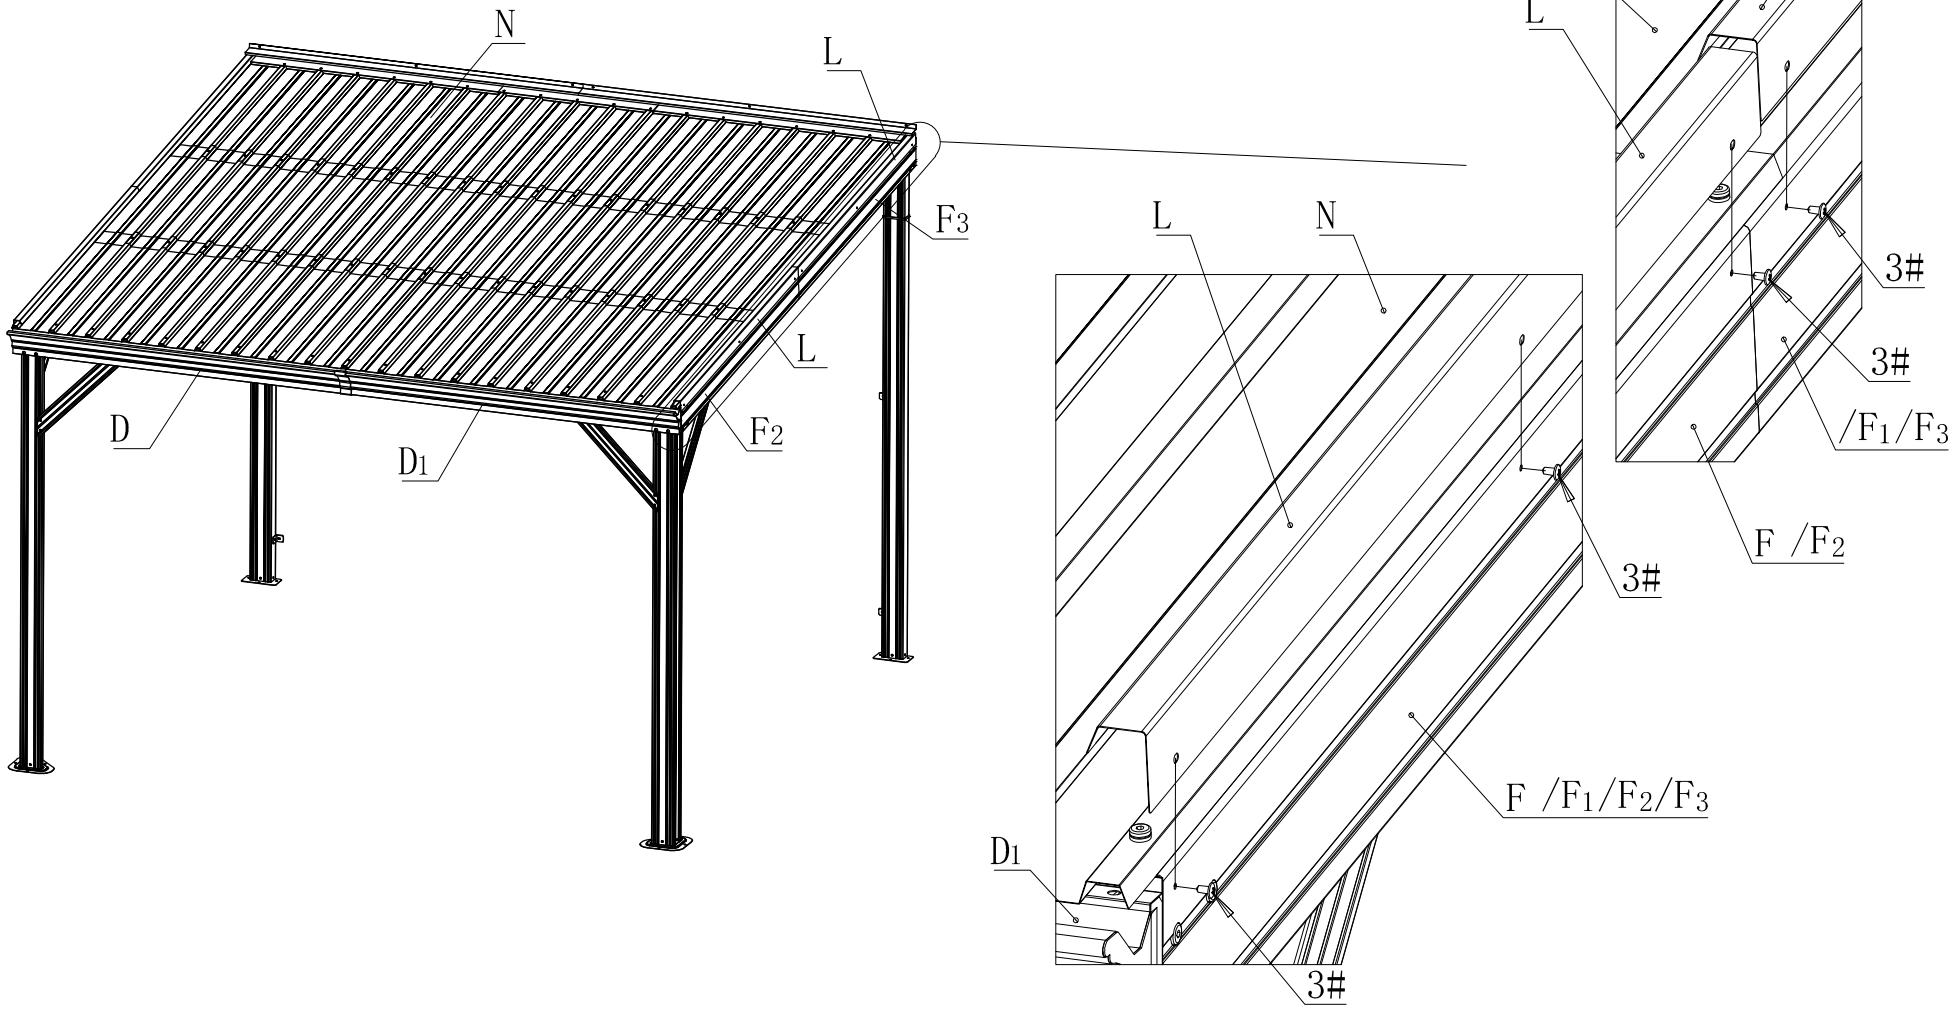

Remove the end cap from one side of the front beam of the gazebo that needs to be connected.

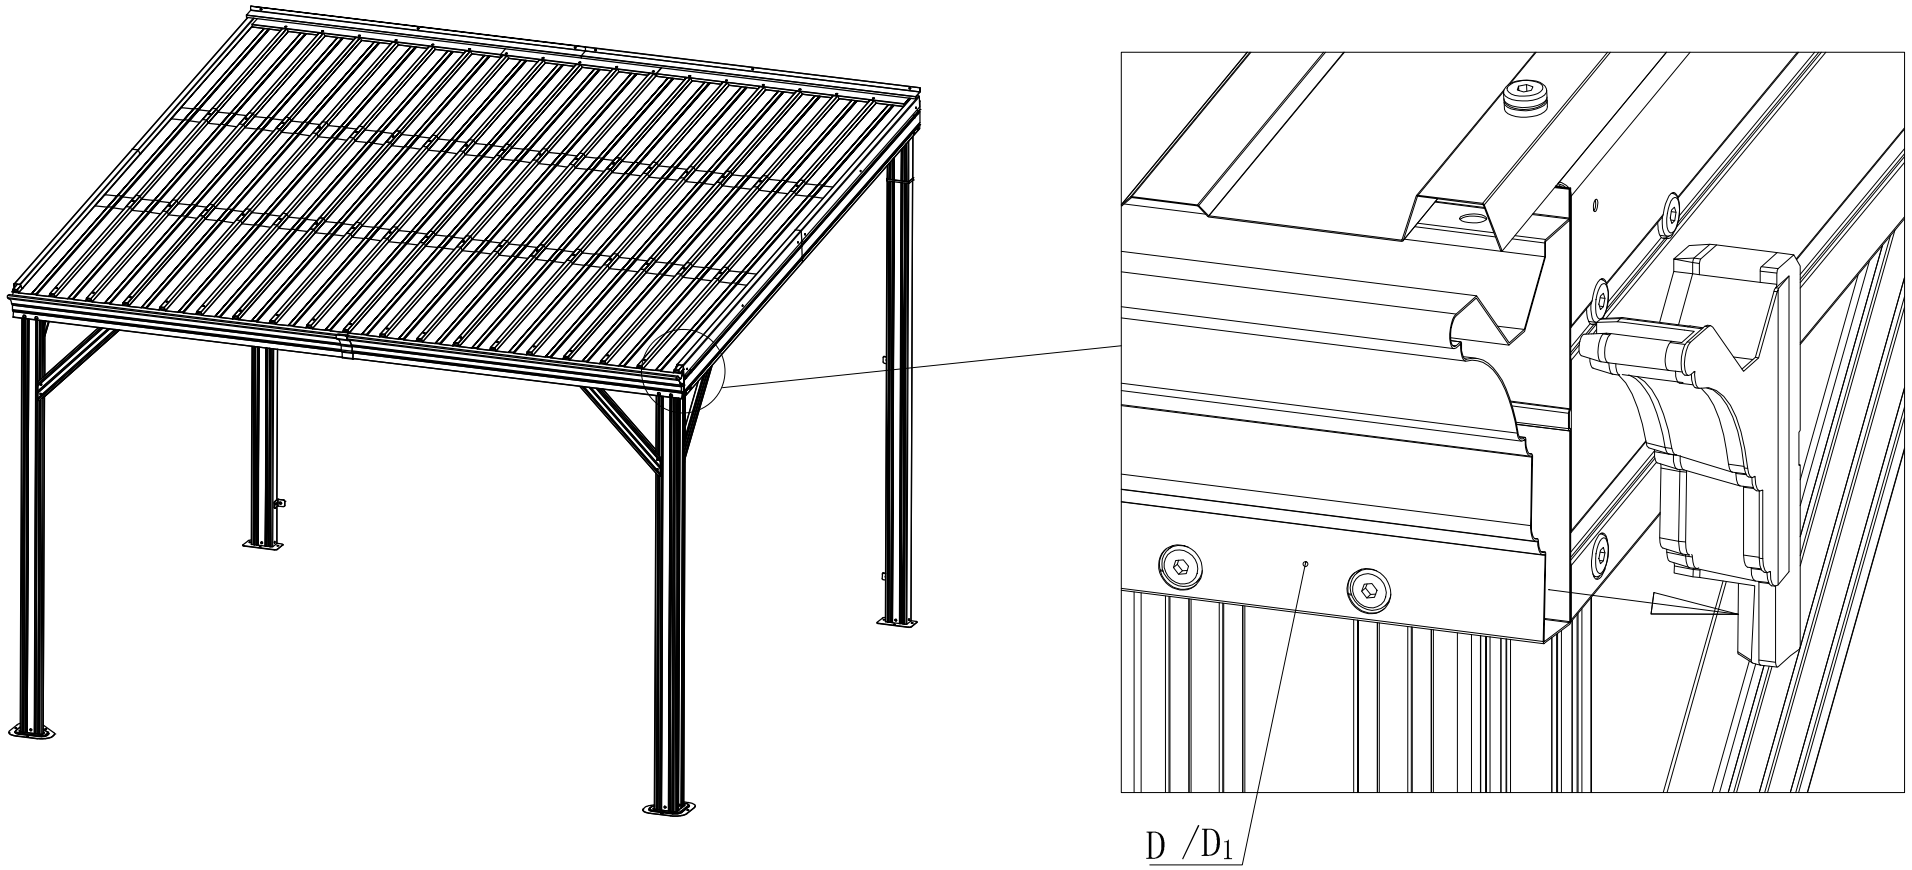

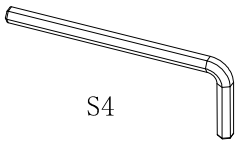



8# 1X



9# 1X


Remove the screws (4#/8#/#S/#S1) on the side roof panels.

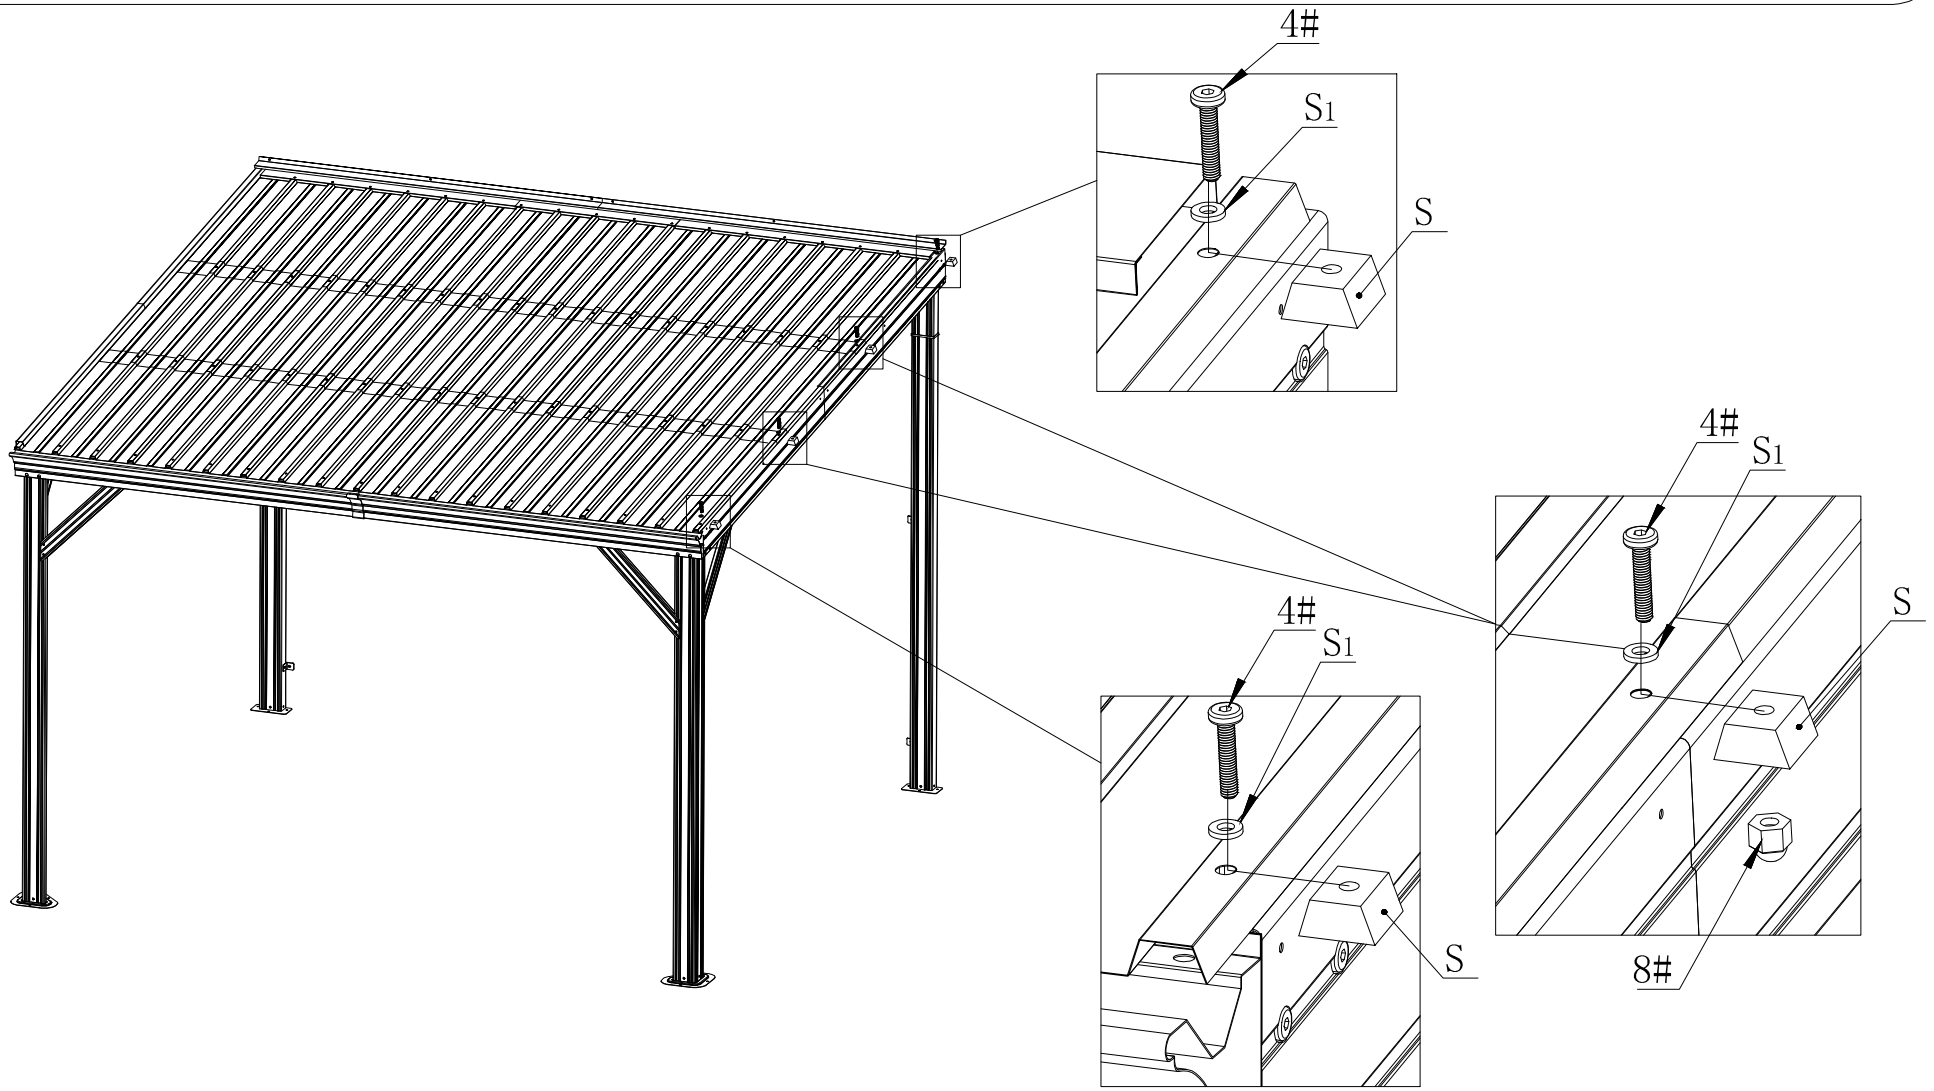


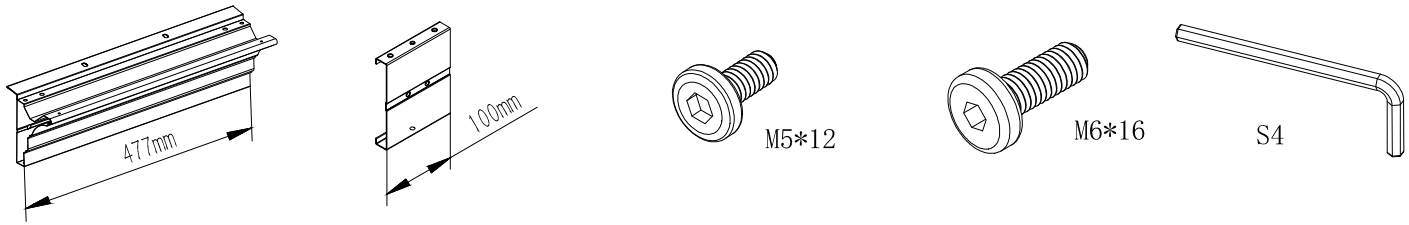


X1 1X X2 2X 2# 2X 3# 6X 8# 1X

Insert 2 connection parts #X2 into beam #X1
and secure with 6 bolts 3# and 2 bolts 2#.

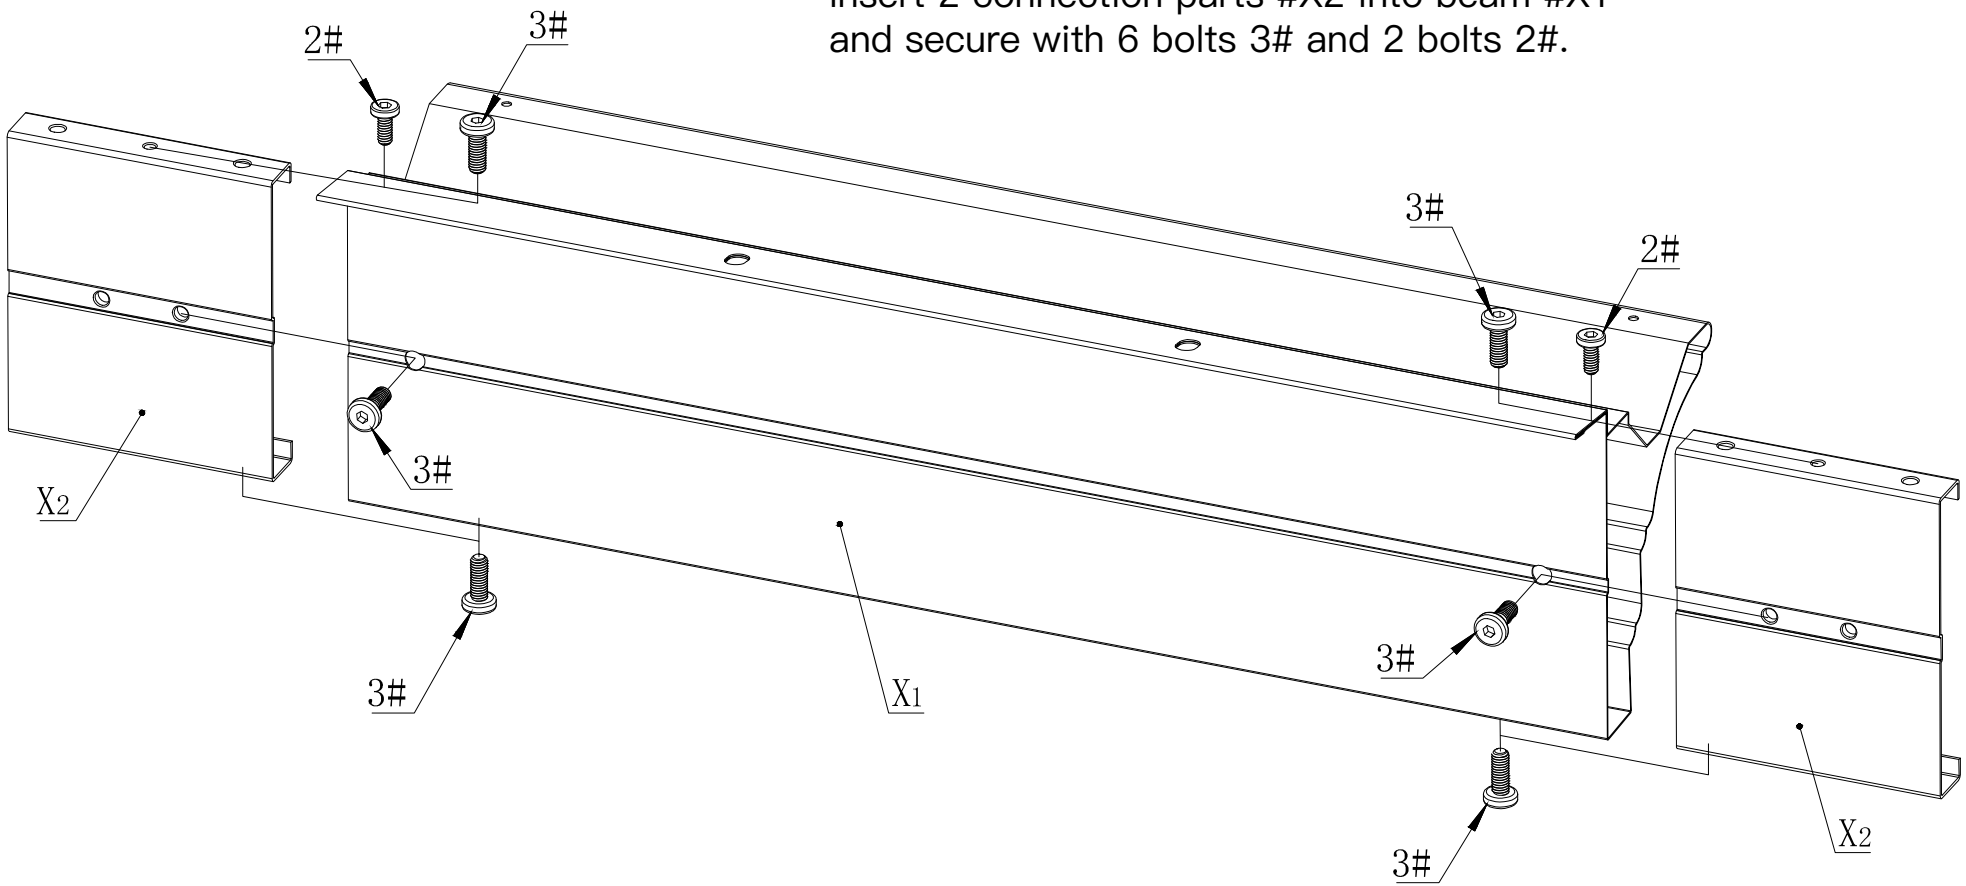

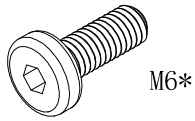


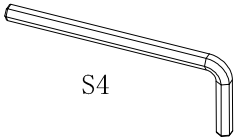

3# 4X 8# 1X


Note: Please ensure the roof panels on the right gazebo are NOT installed before assembly as you may need to stand under it.
Connect #D1 and #X1 with 2 bolts 3#.


Repeat above procedure on #D and #X1.

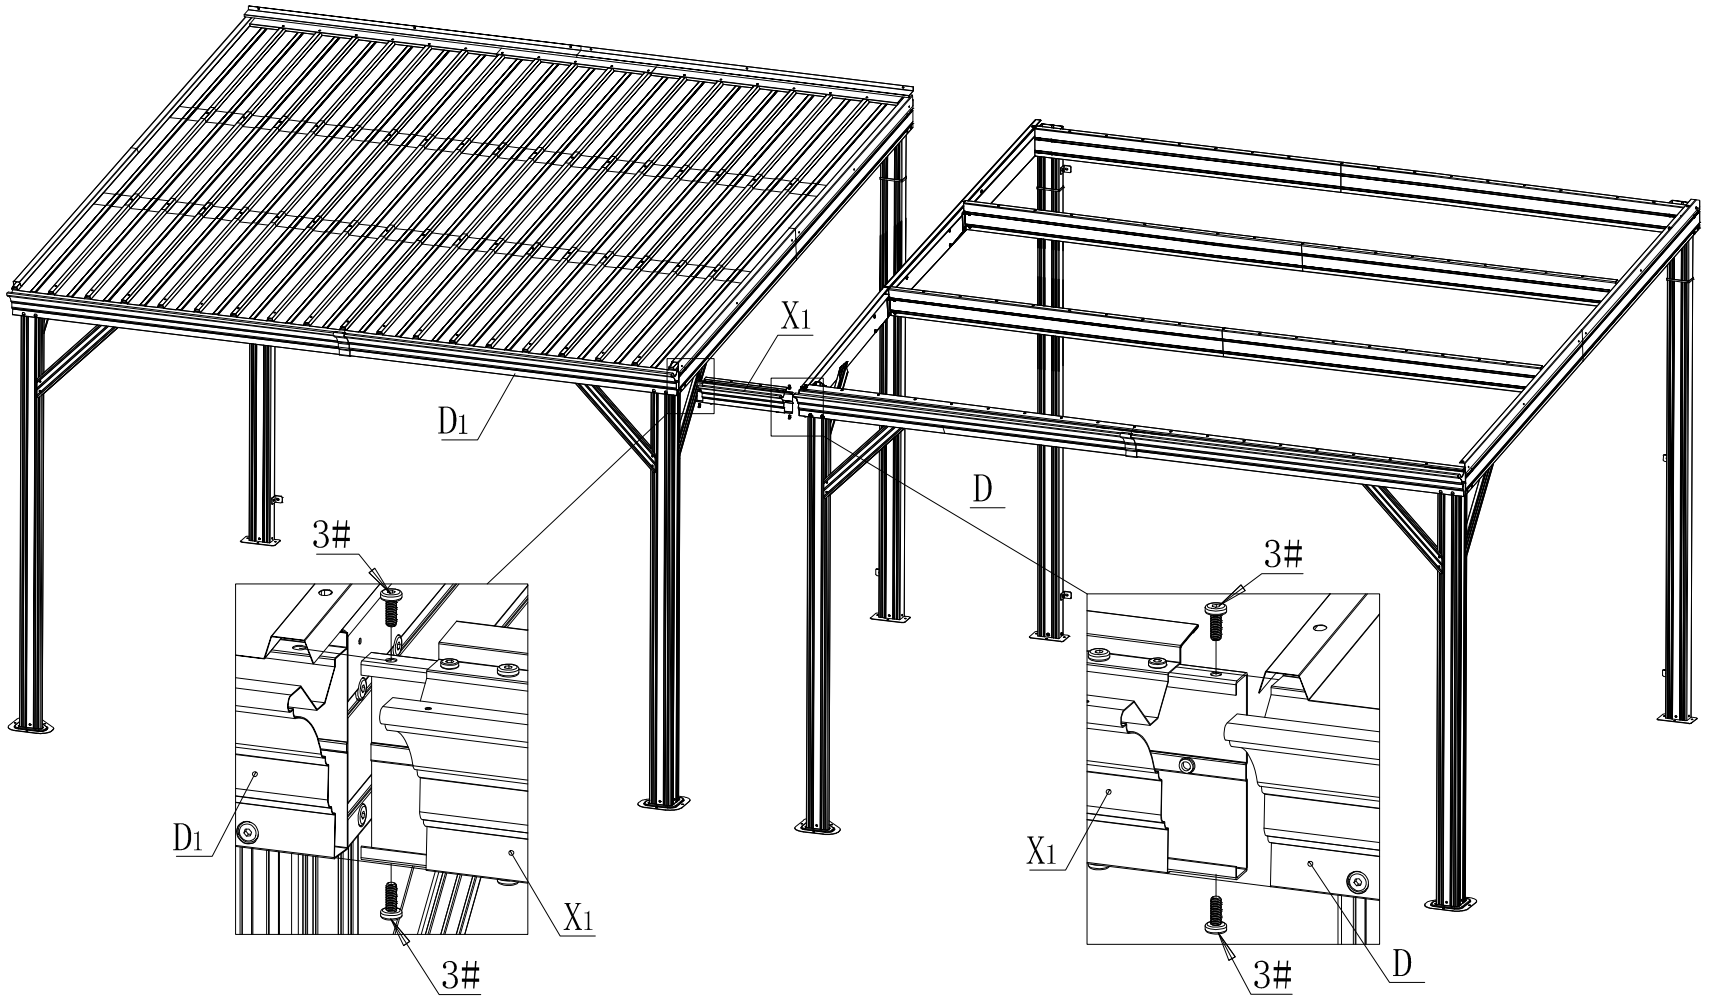


Apply silicon sealant 14# to the connection point between #D1 and #X1.

Repeat the above procedure on #D and #X1.

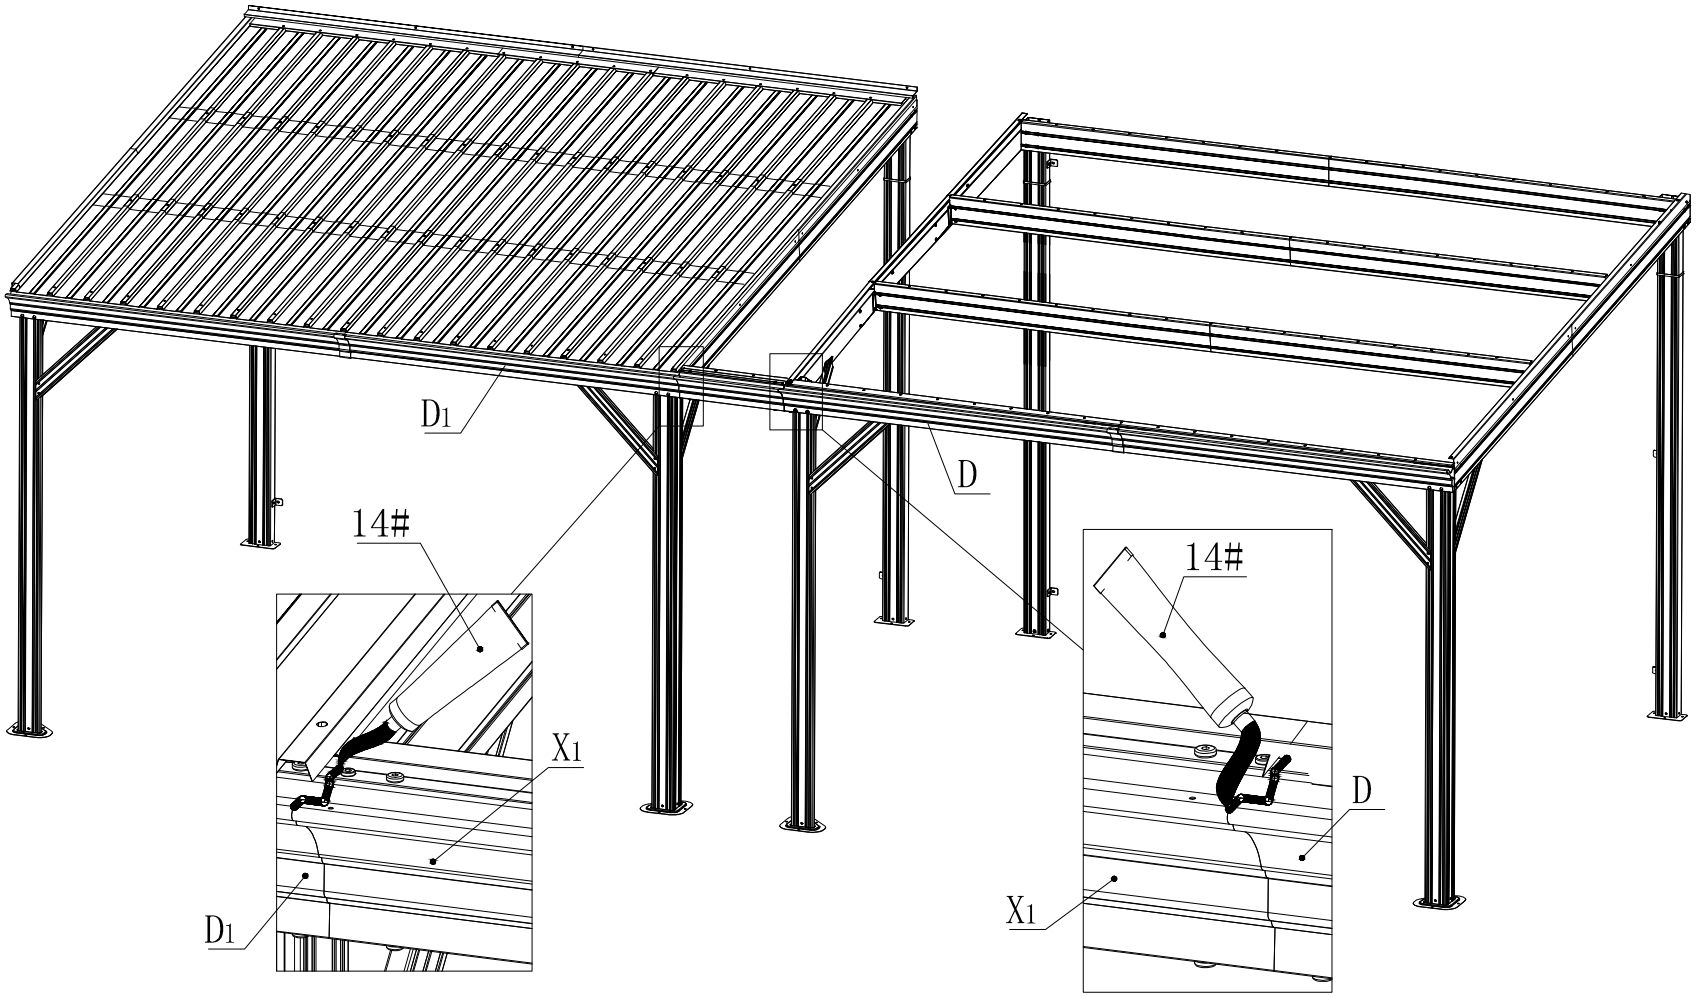

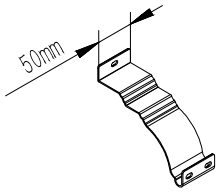


D4 2X



1# 4X




2# 2X

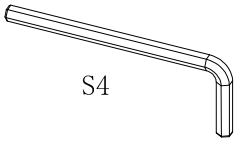


8# 1X


Attach bracket #D4 to the connection point between #X1 and #D1, using 2 screws 1# and 1 bolt 2# to secure it.

Repeat above procedure on #D and #X1.

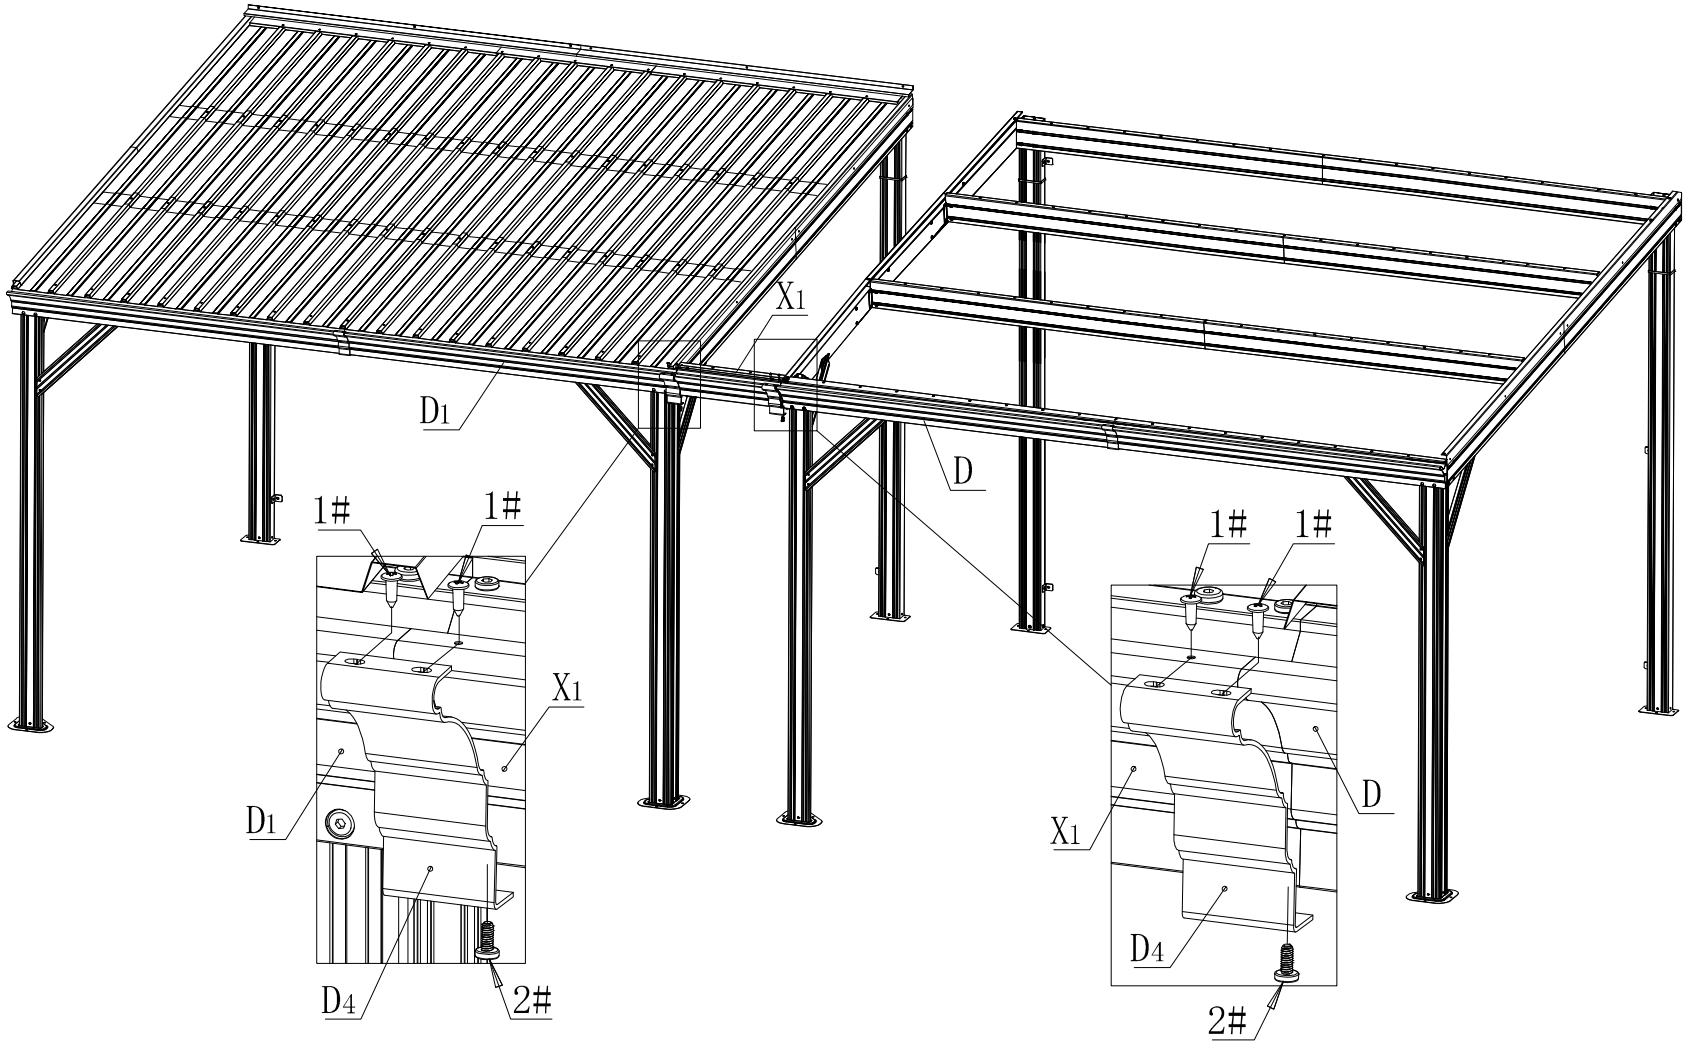


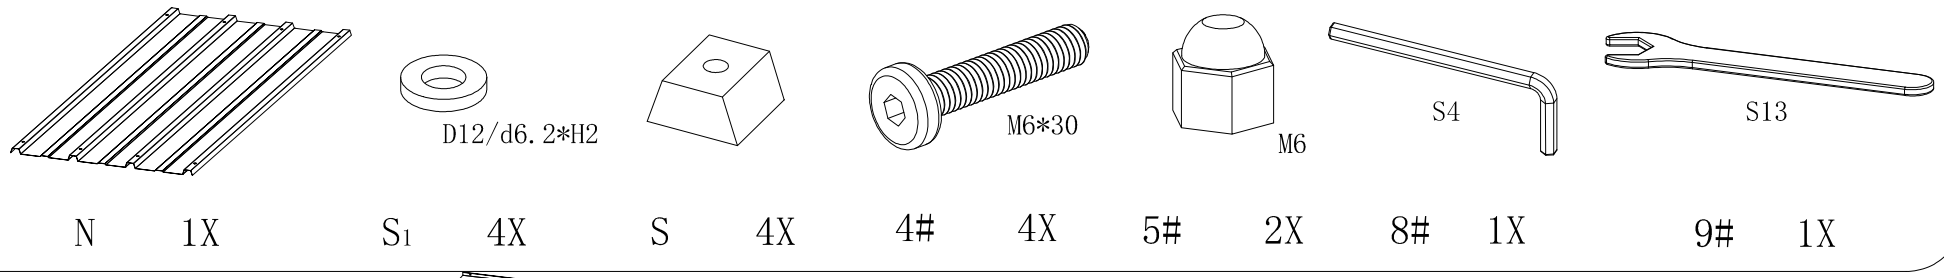


N 1X S1 4X S 4X 4# 4X 5# 2X 8# 1X 9# 1X

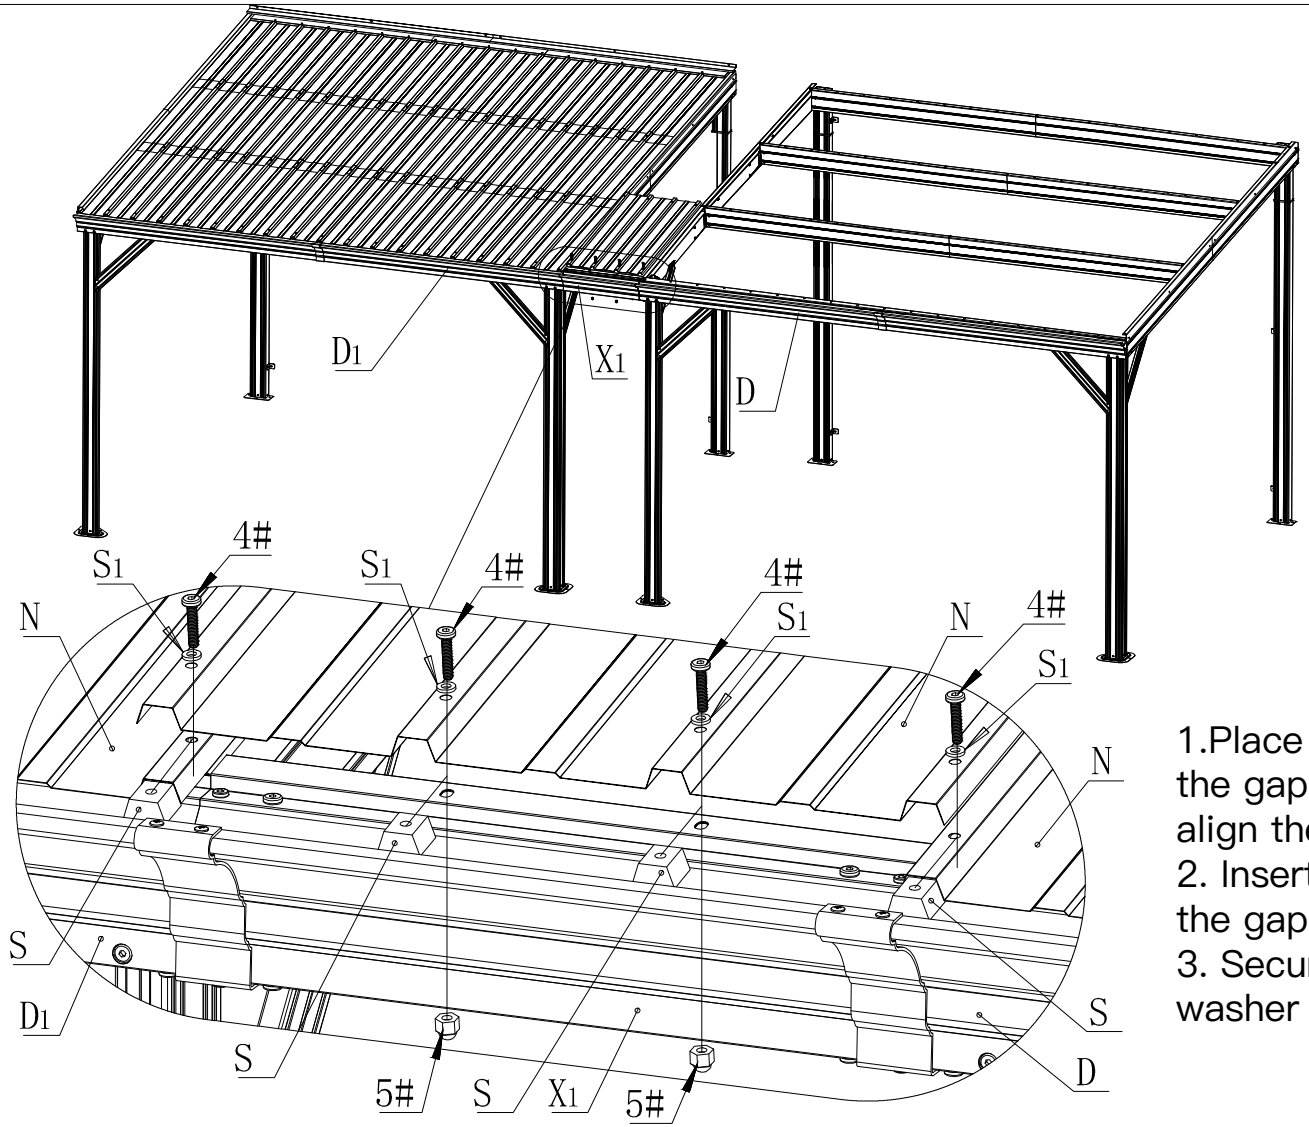


1.Place roof panel #N between the gap of the two gazebos and align the holes with beam X1.
2. Insert rubber spacer #S into the gap between #X1 and #N.
3. Secure #X1 and #N with washer #S1, bolts 4# & Nuts 5#.

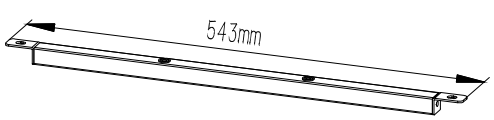

Z1 1X

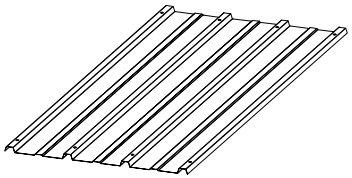


N 1X




D12/d6.2*H2

S1 4X



S 4X




M6*30

4# 4X



M6

5# 2X




S4


8# 1X



S13

9# 1X

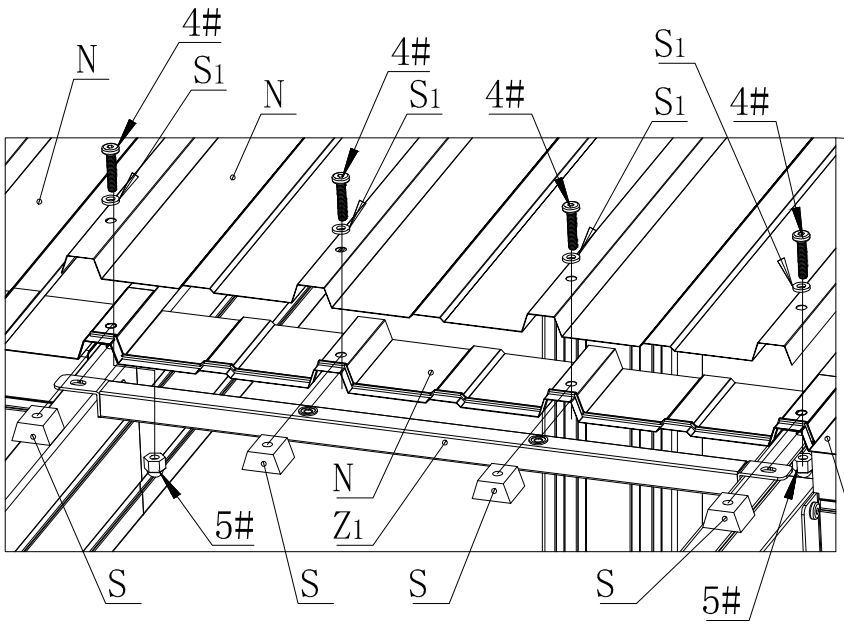


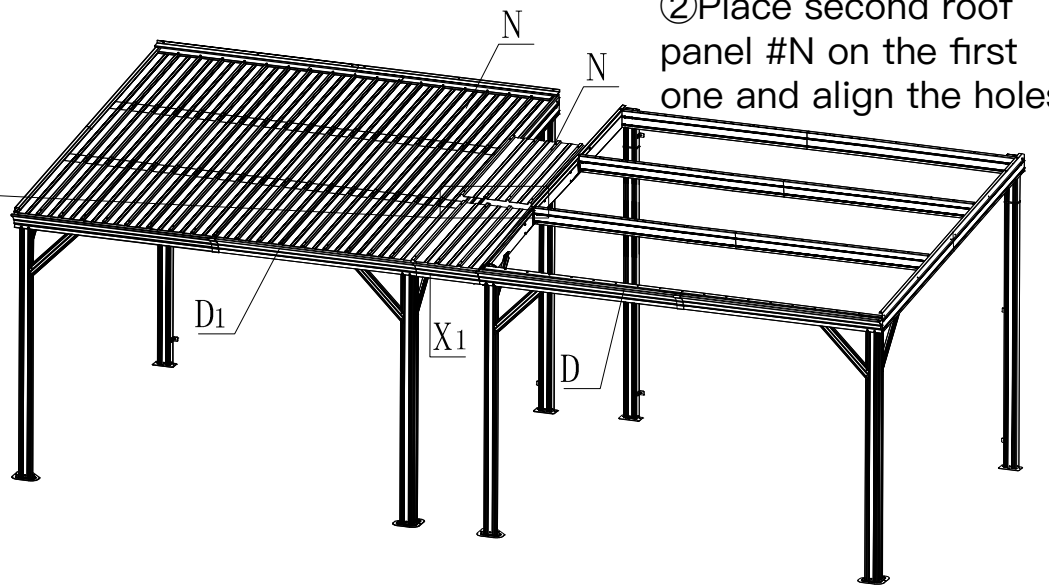


②Place second roof panel #N on the first one and align the holes.

N ③Place #Z1 under the first roof panel #N and insert rubber spacer #S into the gap between #Z1 and #N.


④Secure #Z1 and #N with washer #S1, bolts 4# & Nuts 5#.

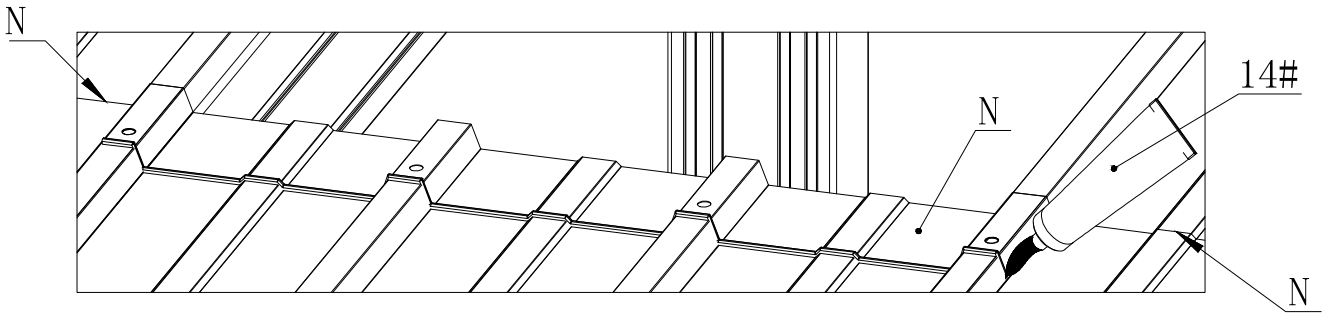

①Please apply silicon sealant 14# to the end of the first roof panel #N as shown, and then follow the instruction to install second one.



Z1 1X

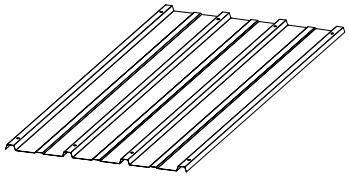


N 1X




D12/d6.2*H2

S1 4X




S 4X




4# 4X




5# 2X




8# 1X





9# 1X

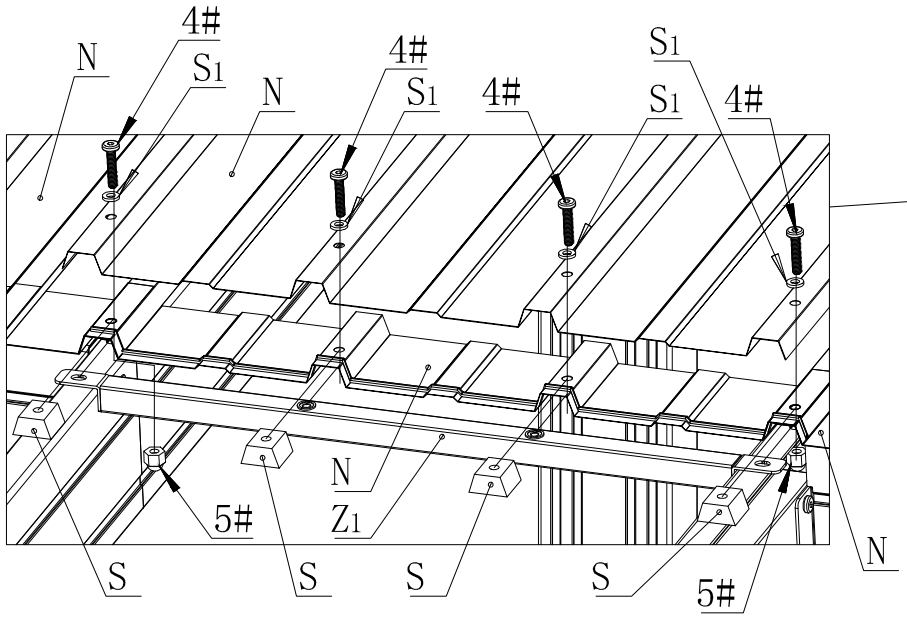


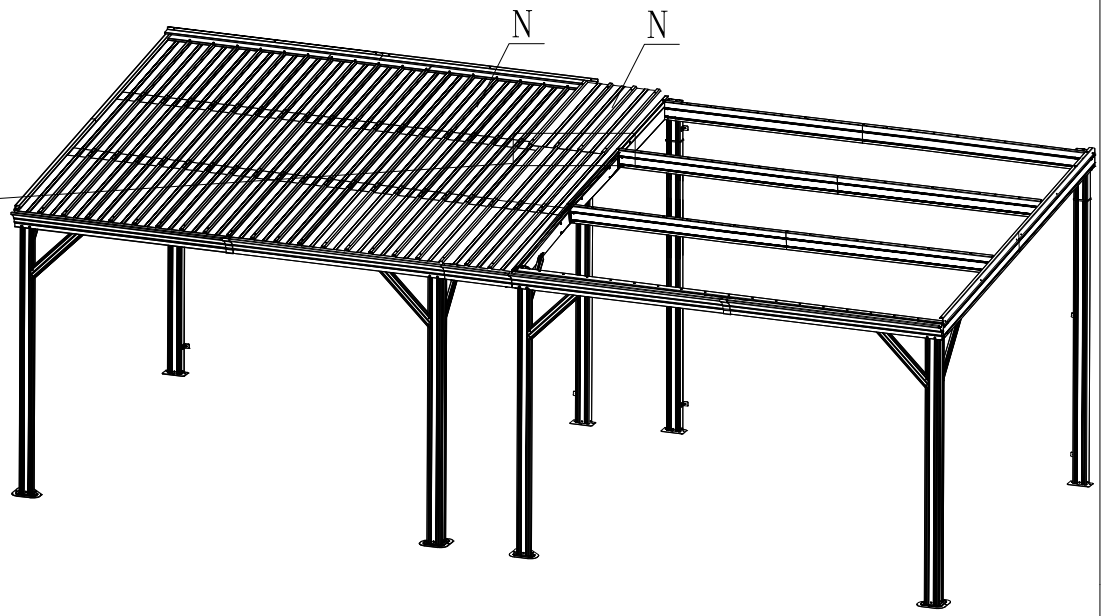


Repeat above procedure on the third roof panel #N.

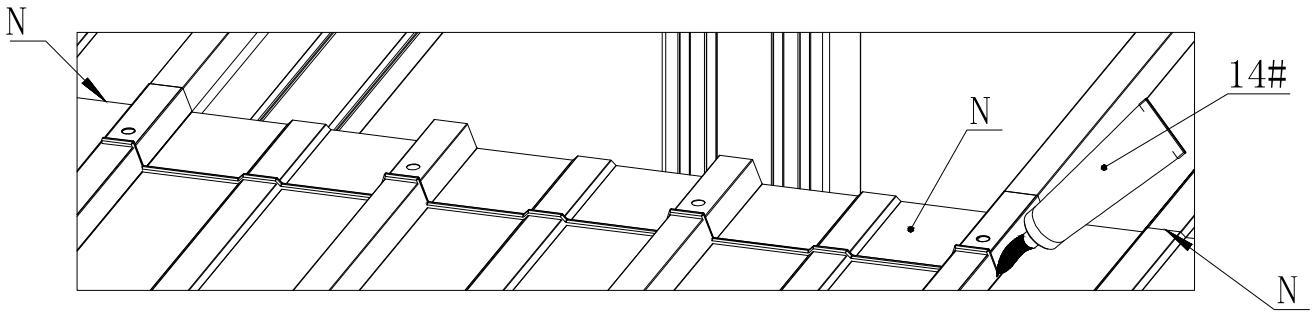

















Z_1 1X	Y_2 1X	S_1 4X	S 4X	4# 4X	8# 1X

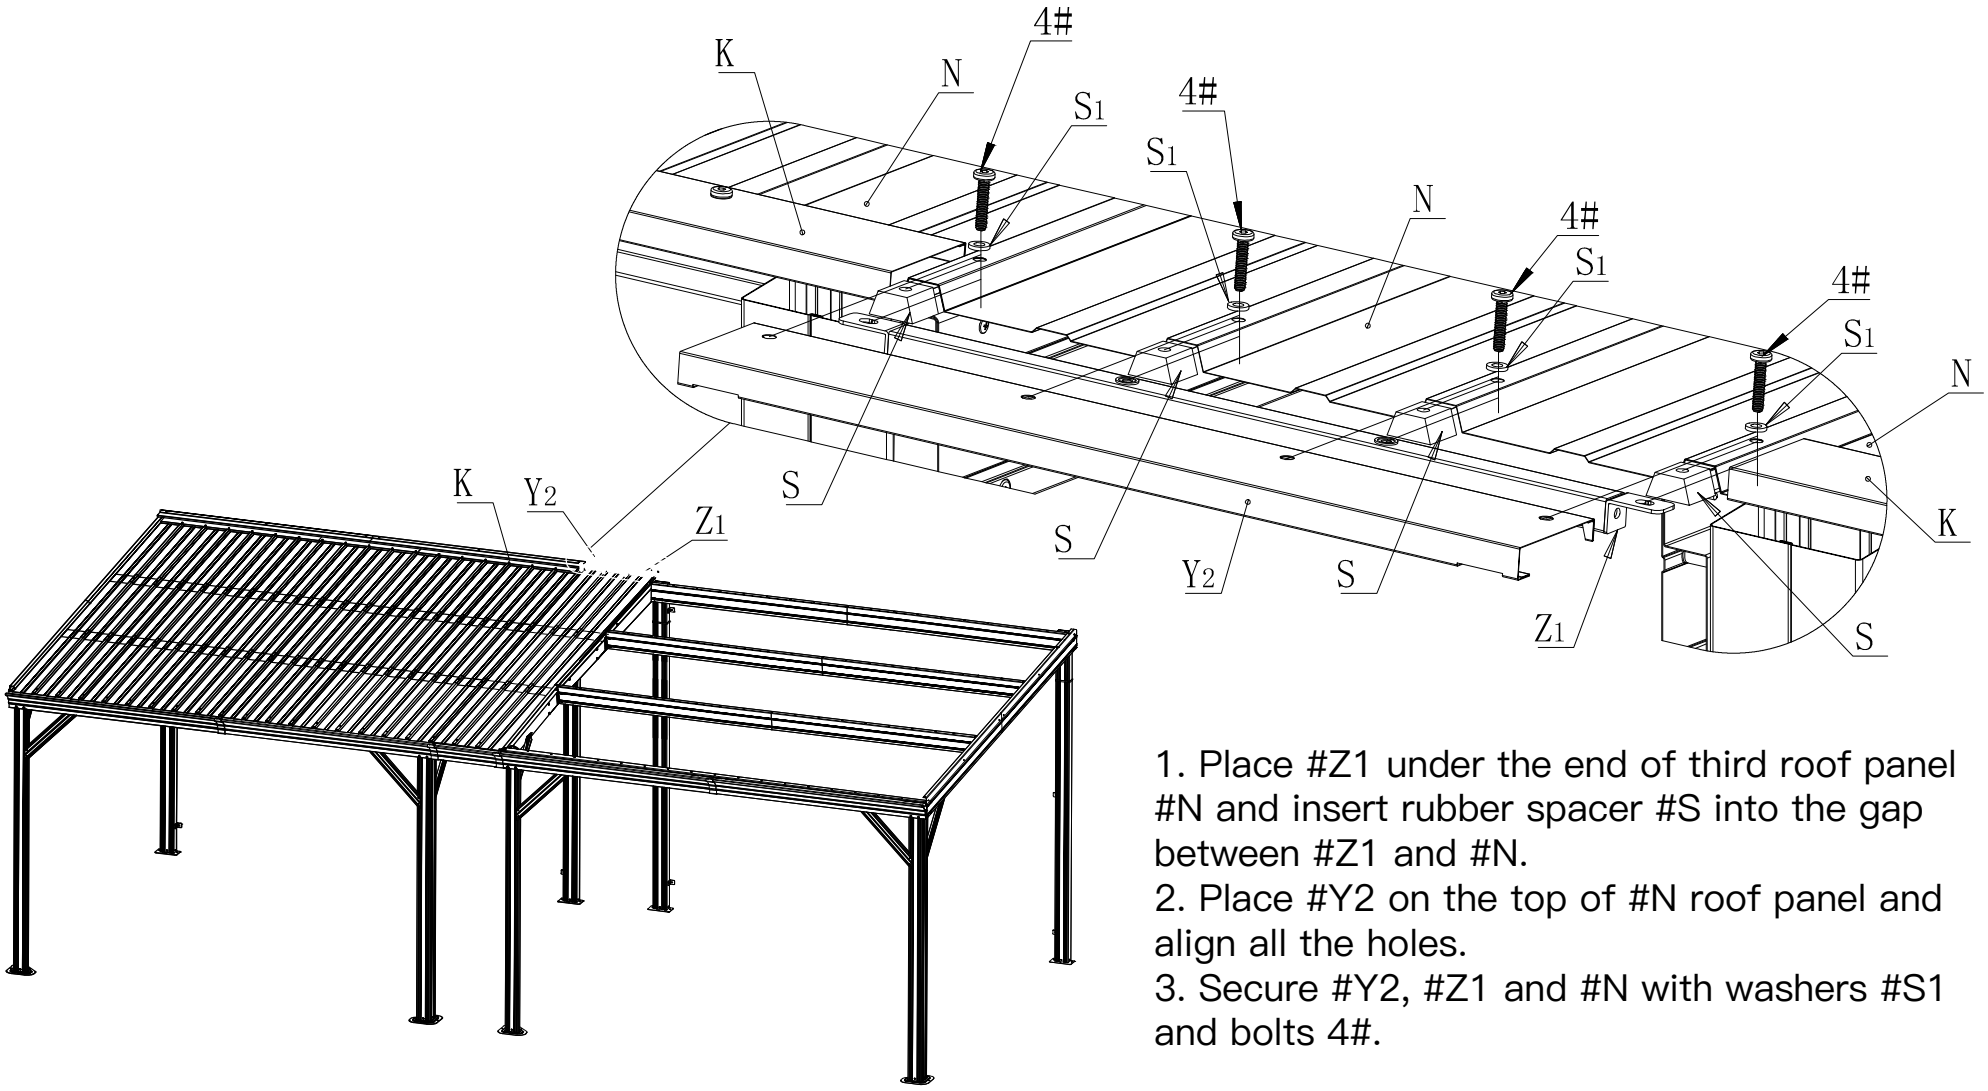


1. Place #Z1 under the end of third roof panel #N and insert rubber spacer #S into the gap between #Z1 and #N.
2. Place #Y2 on the top of #N roof panel and align all the holes.
3. Secure #Y2, #Z1 and #N with washers #S1 and bolts 4#.



Y1 1X





6# 2X



7# 2X

Insert drywall anchor 7# into the wall, attach drip rail #Y1 to the wall and secure it with screws 6#. Apply silicon sealant #14 to the connection point of #Y1 and #M.

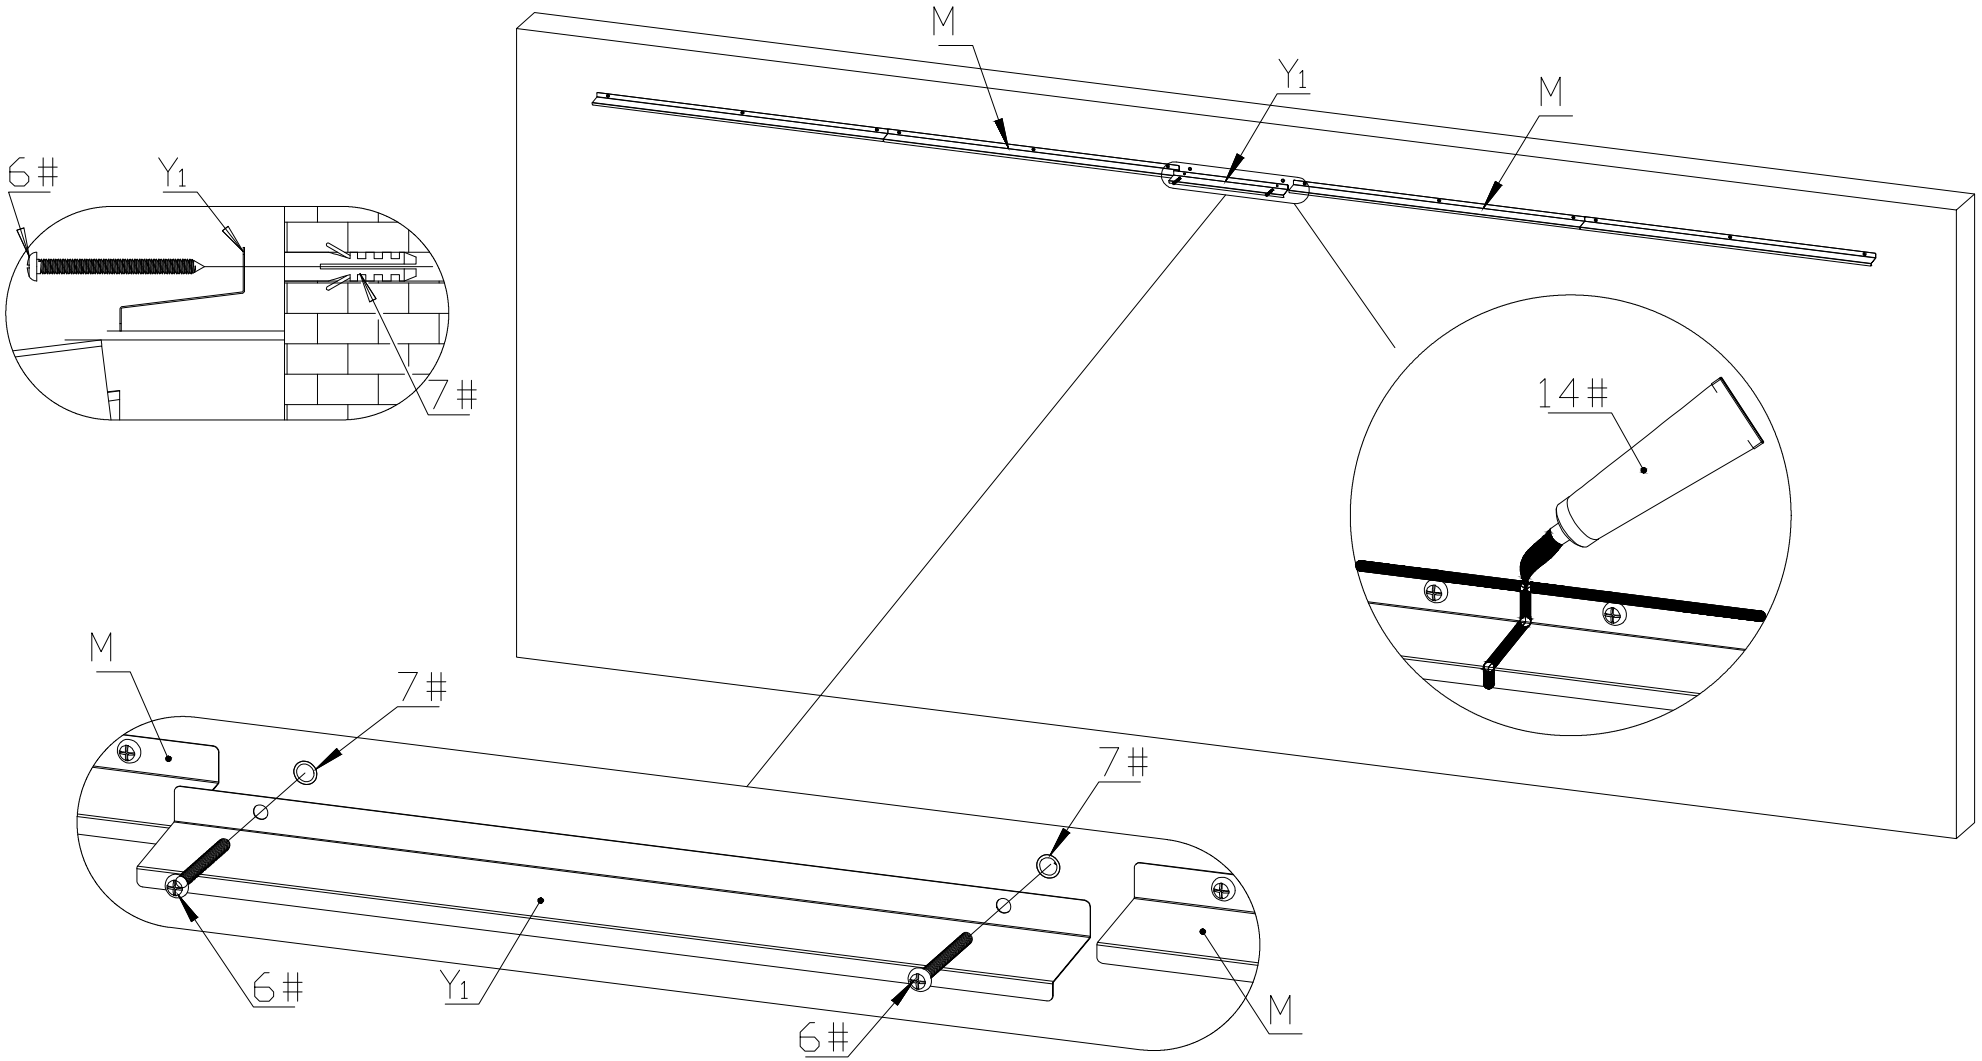

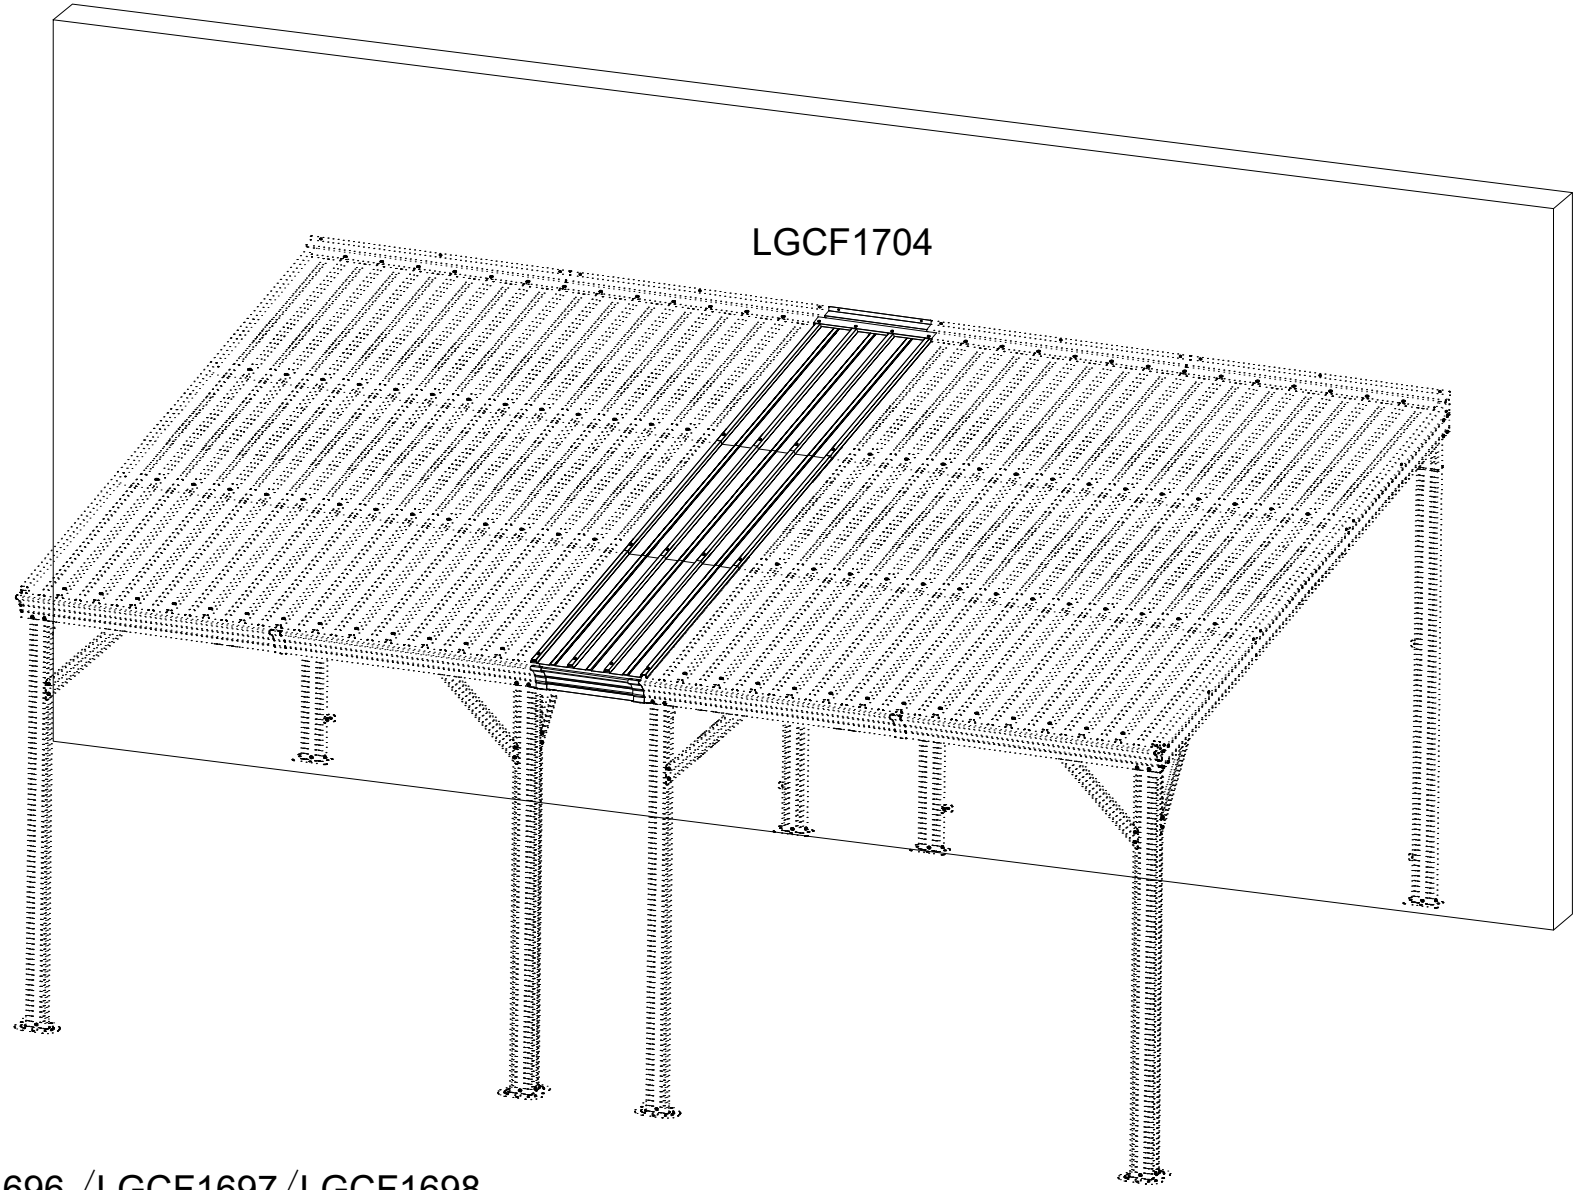

LGCF1696 /LGCF1697/LGCF1698

LGCF1696 /LGCF1697/LGCF1698

domi
outdoor living

RESORT COMFORT IN YONR

OWN BACKYARD

Support:

Business cooperation contact email:
marketing@domioutdoorliving.com

After-sales contact email:
service@domioutdoorliving.com

Please tell us your order ID when contact.

Attach photos of damaged part for instant reply.