

BED FRAME

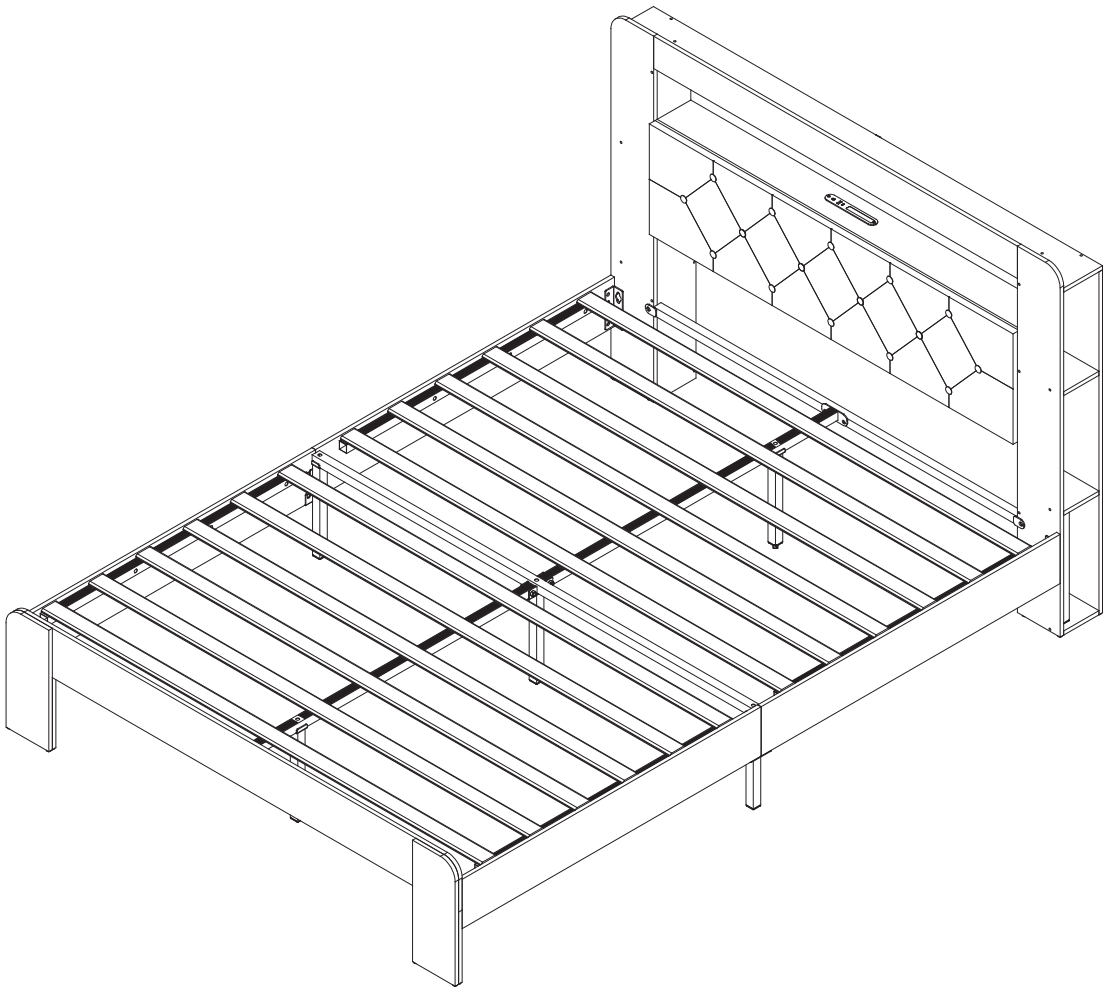

Thank you for choosing our products, please assemble and use it following the instructions.

Assembly Instruction

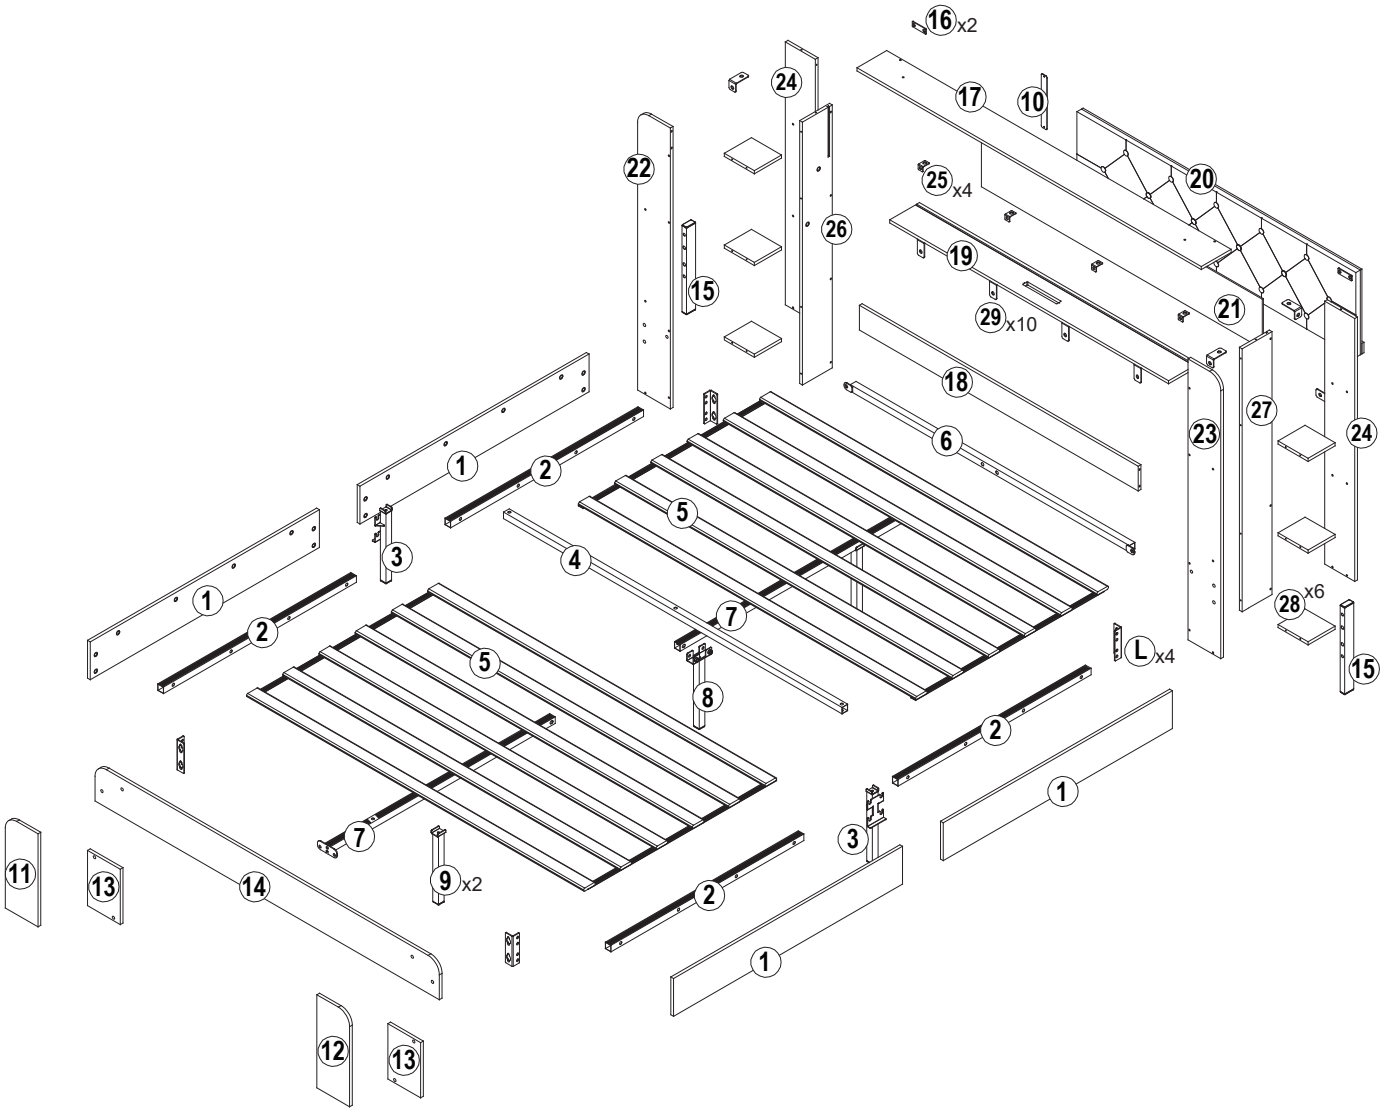

B668


Important Note

HARDWARE NOTE :

1.Two or more people are required for assembly

2.Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.

Components

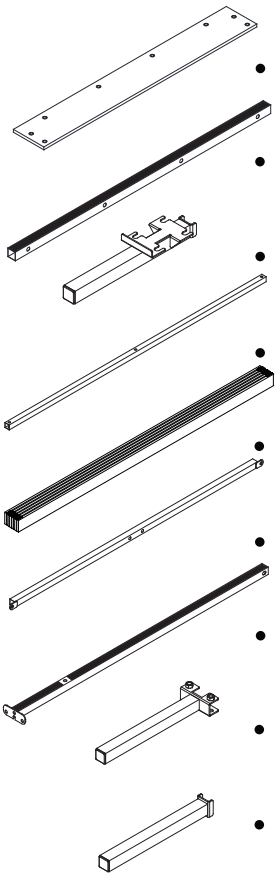

1 x4pcs

2 x4pcs

3 x2pcs

4 x1pc


5 x2pcs

6 x1pc

7 x2pcs

8 x1pc

9 x2pcs

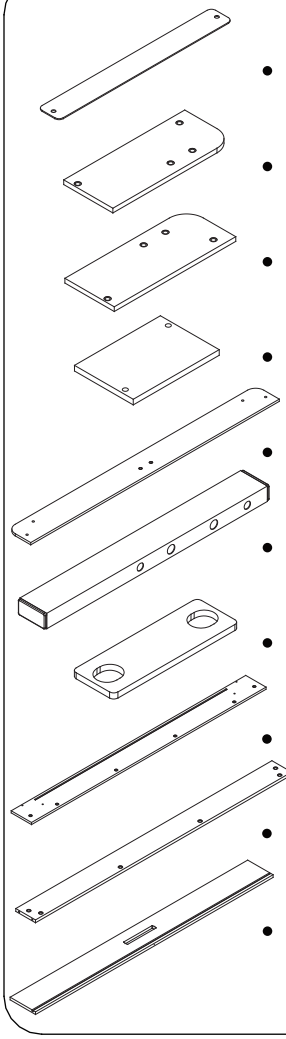

10 x1pc

11 x1pc

12 x1pc

13 x2pcs

14 x1pc


15 x2pcs

16 x2pcs

17 x1pc

18 x1pc

19 x1pc

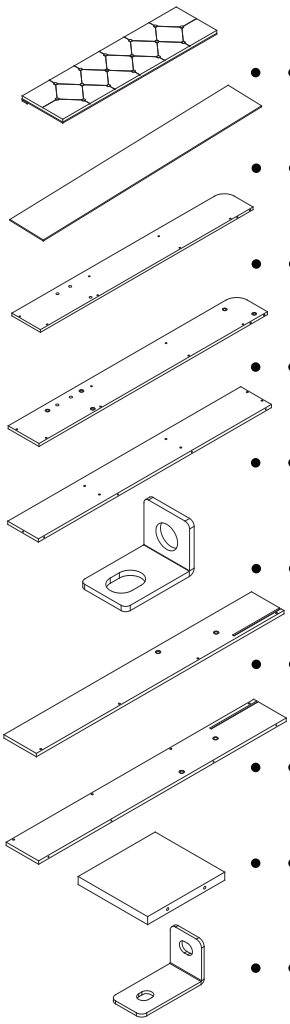

20 x1pc

21 x1pc

22 x1pc

23 x1pc

24 x2pcs


25 x4pcs

26 x1pc

27 x1pc

28 x6pcs

29 x10pcs



L x4pcs



M8x12 A x46pcs




M8x16 white zinc B x6pcs




M8x20 C x6pcs




M8x25 white zinc D x4pcs




M8x33 E x16pcs




M8x40 F x7pcs



M8x50 G x4pcs



M8x60 H x4pcs




M5x40 I x38pcs




ST3.2x12 J x2pcs



ST4.2x14 M x2pcs

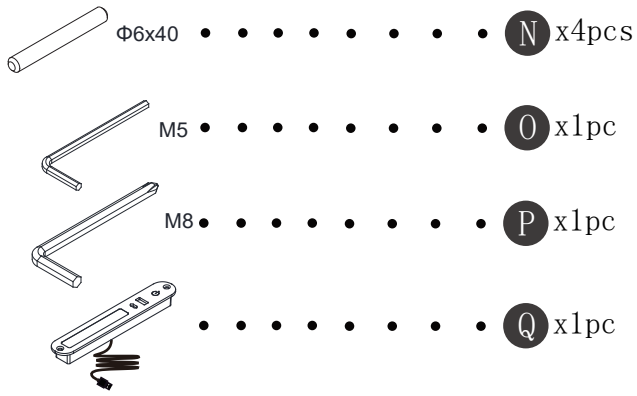


1

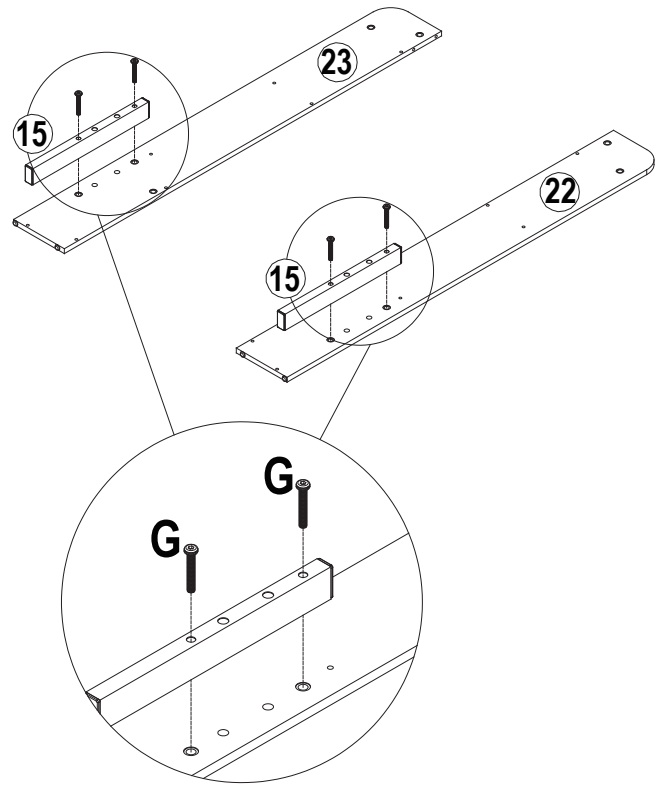


G	M8x50	4pcs

2

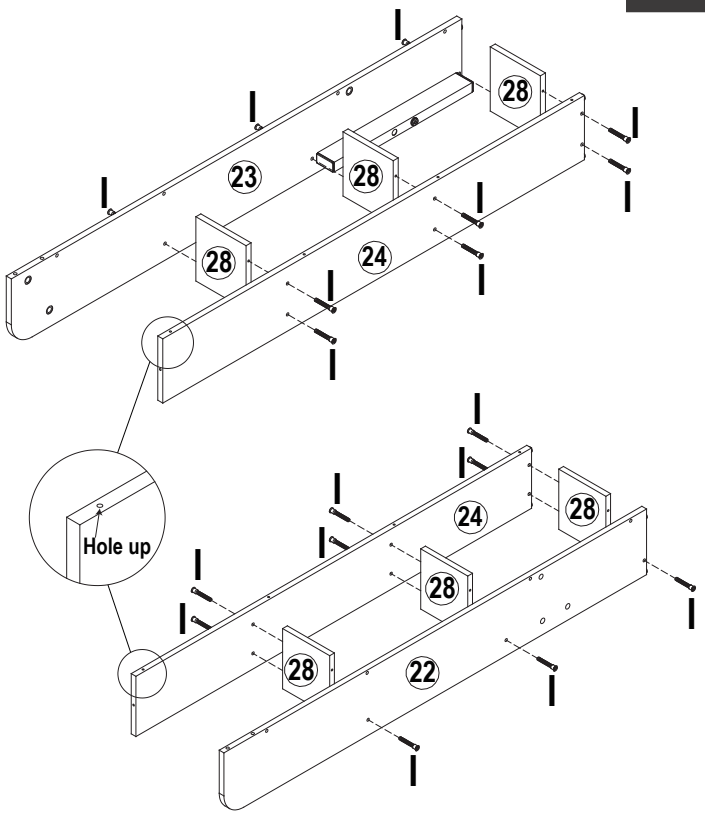


I	M5x40	18pcs

3

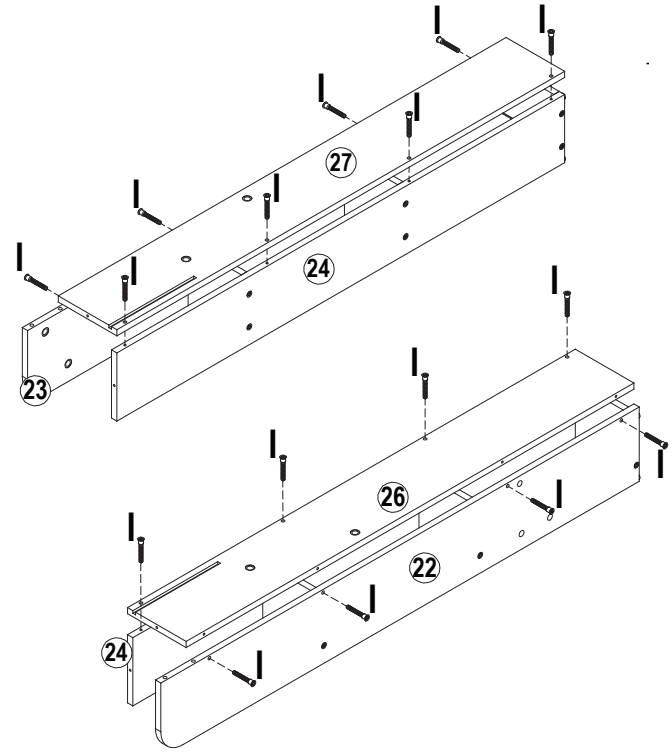

I	M5x40	16pcs


4

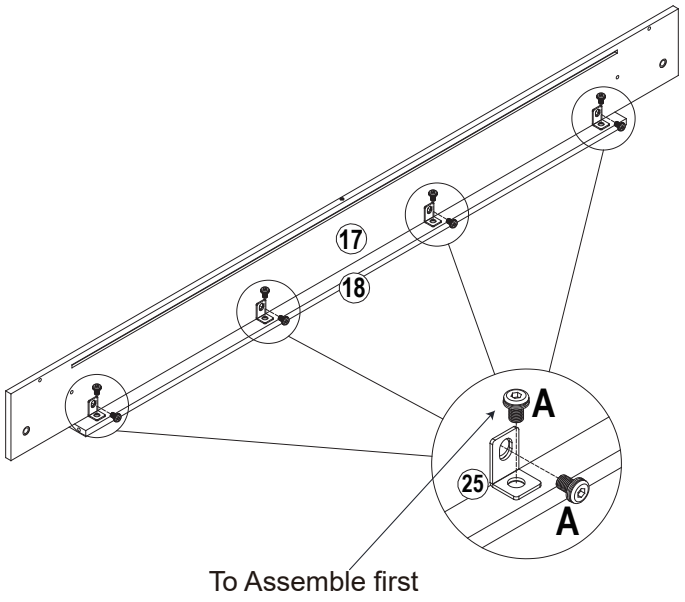

To Assemble first


A	M8x12	8pcs

5

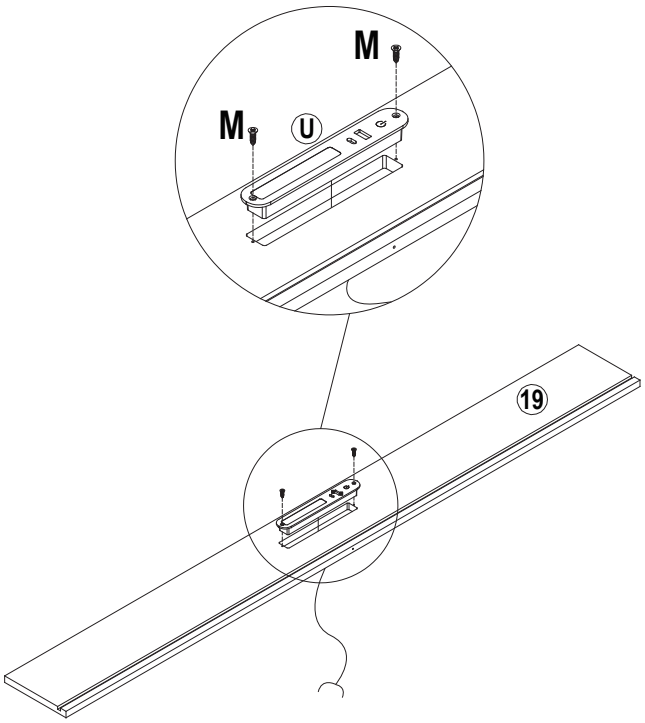

M	ST4.2x14	2pcs


6

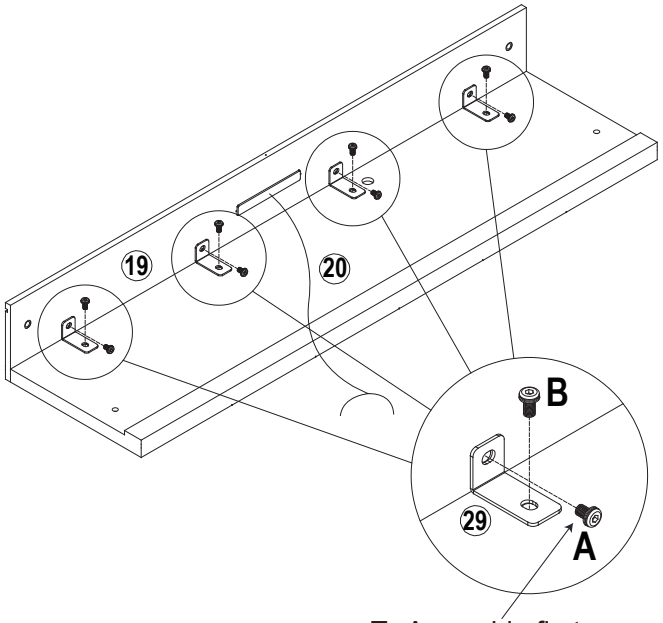

To Assemble first

A	M8x12	4pcs	
B	M8x16	4pcs	white zinc

7

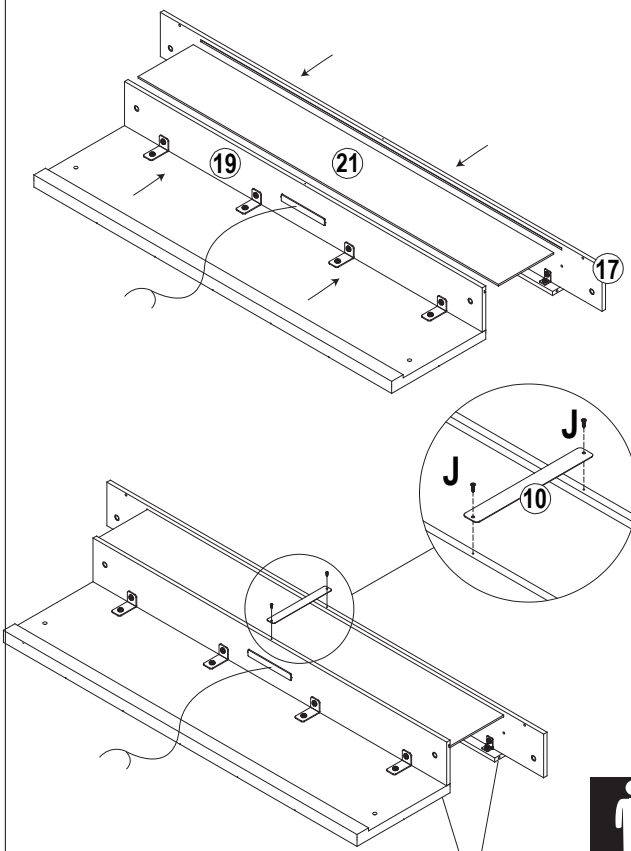


J	ST3.2x12	2pcs

The two boards are flush.

2 persons required for assembling.


8

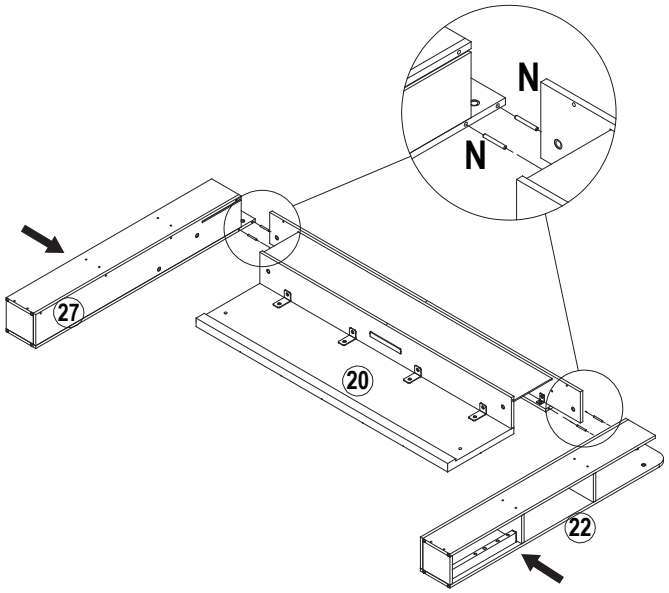

2 persons required for assembling.


N	Φ6x40	4pcs

9

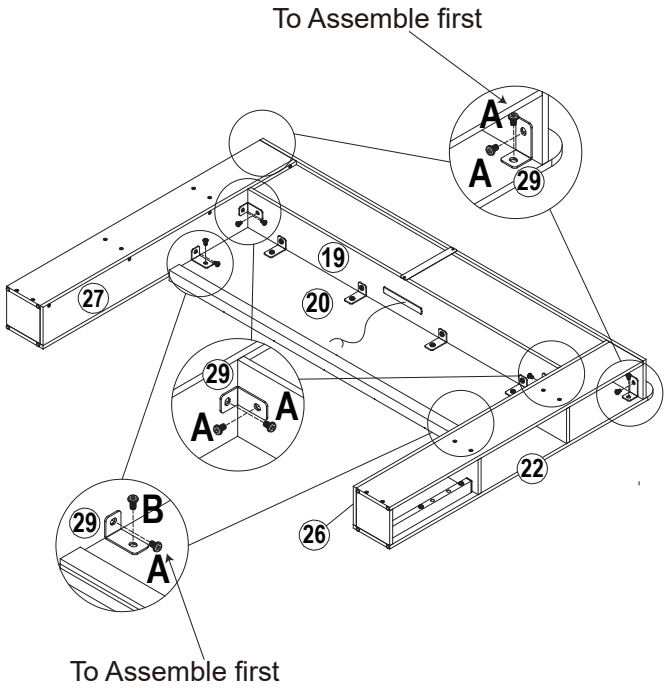


A	M8x12	10pcs	
B	M8x16	2pcs	white zinc

10

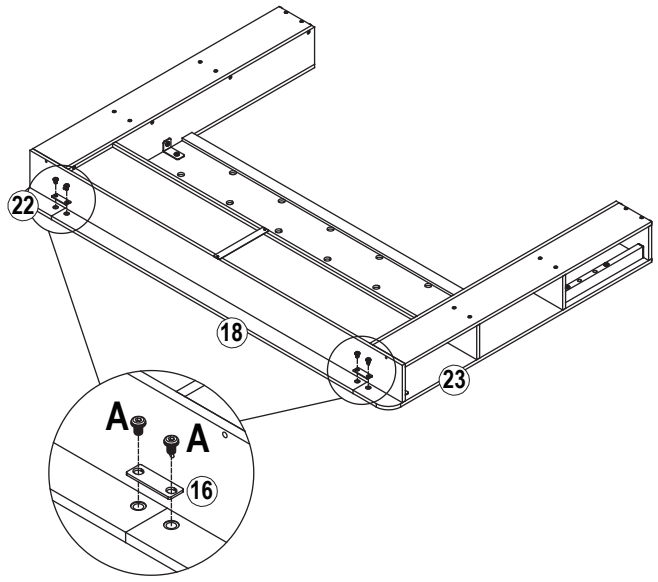


A	M8x12	4pcs

11

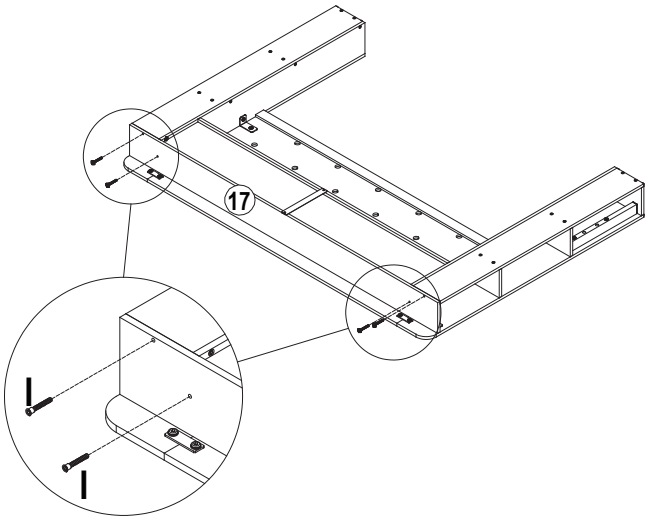


I	M5x40	4pcs

12

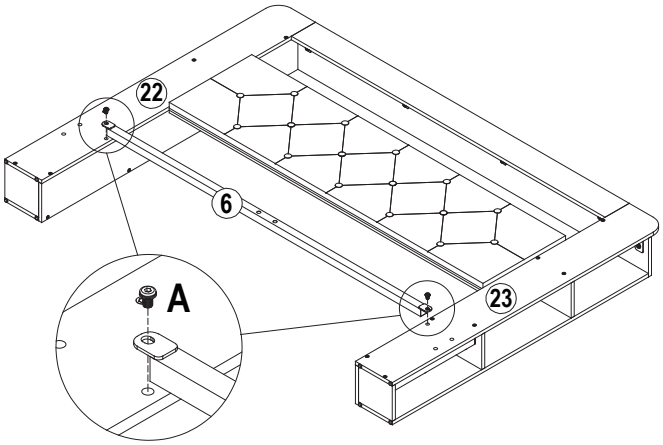

A	M8x12	2pcs


13

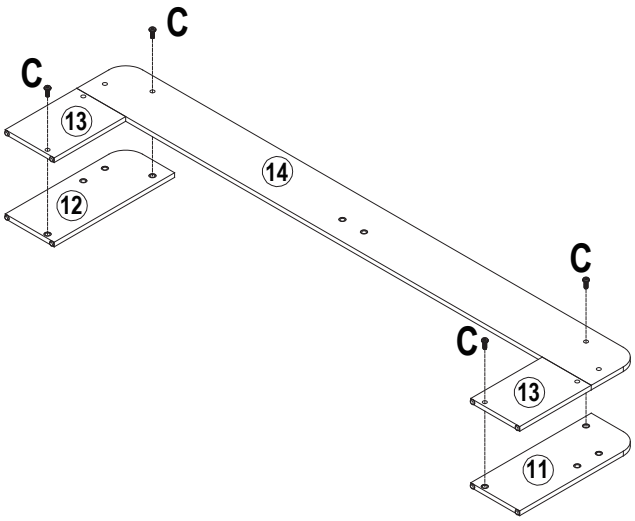

C	M8x20	4pcs

X2


14

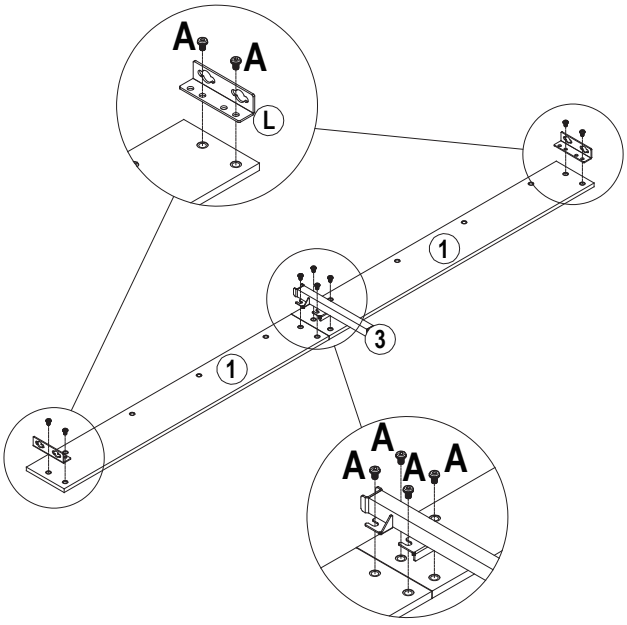

A	M8x12	16pcs


15

X2

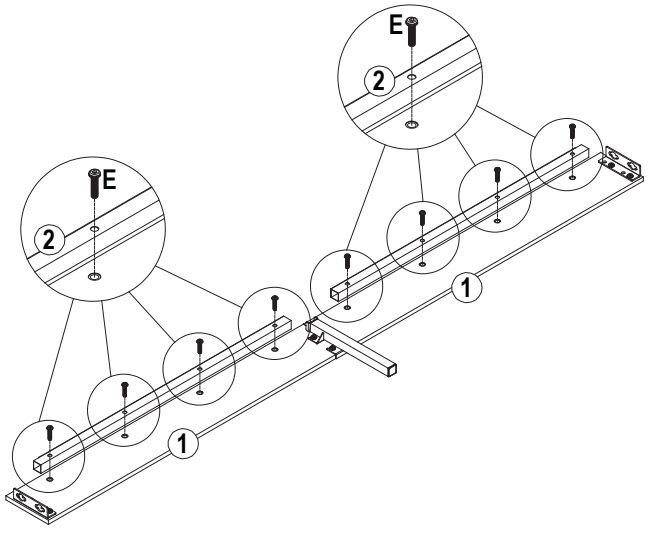


E	M8x33	16pcs

16

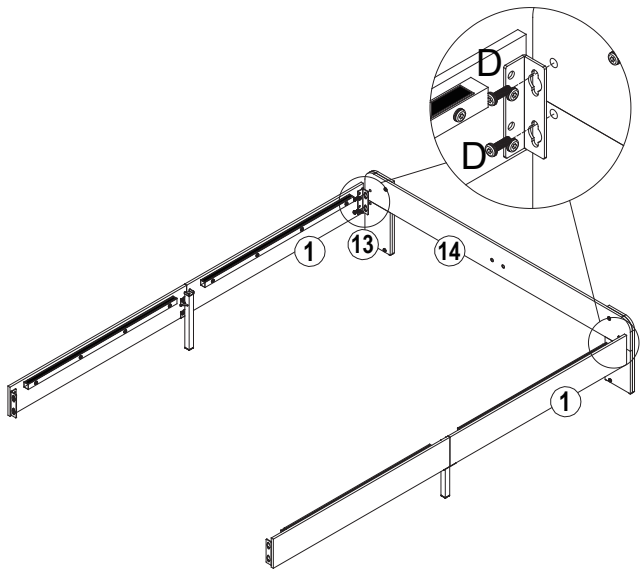


D	M8x25	4pcs white zinc

17

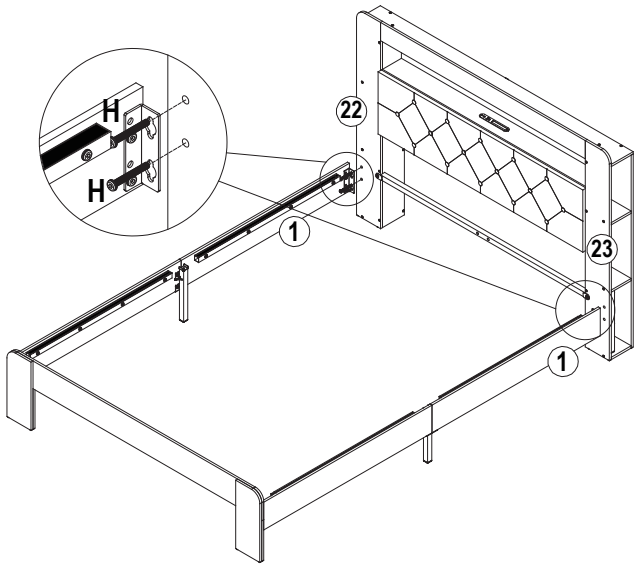


H	M8x60	4pcs

18

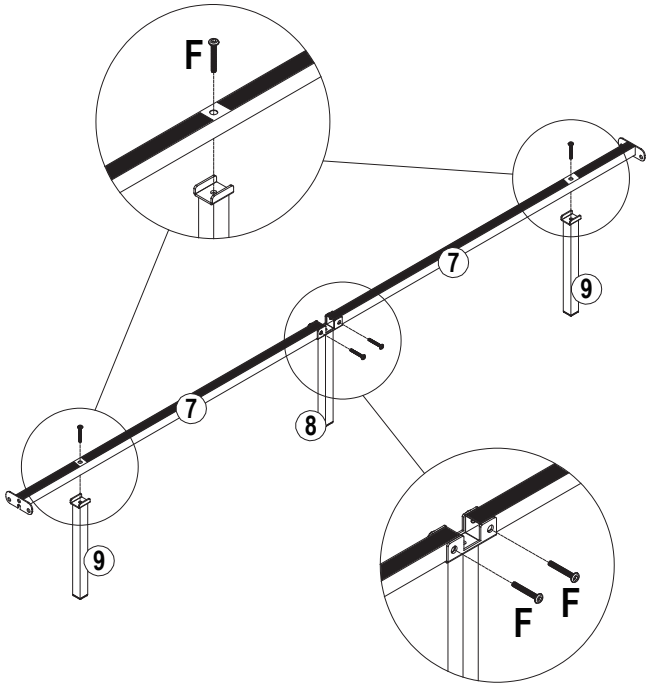


F	M8x40	4pcs

19

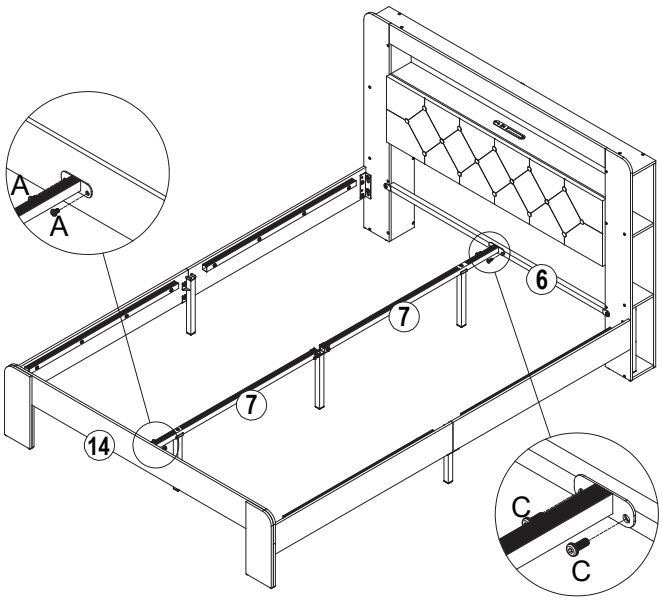


A	M8x12	2pcs
C	M8x20	2pcs

20

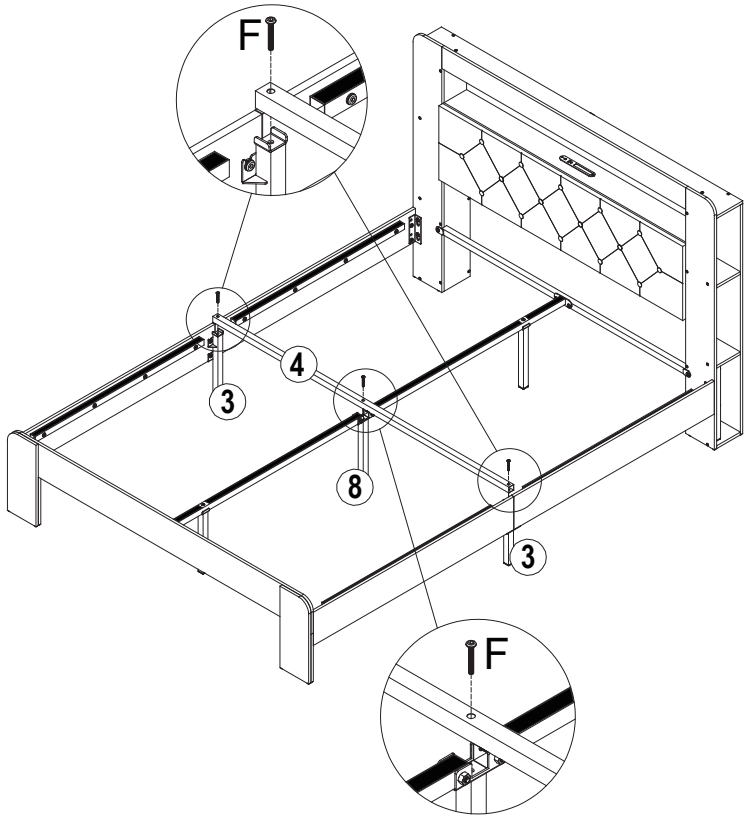

F	M8x40	3pcs

21

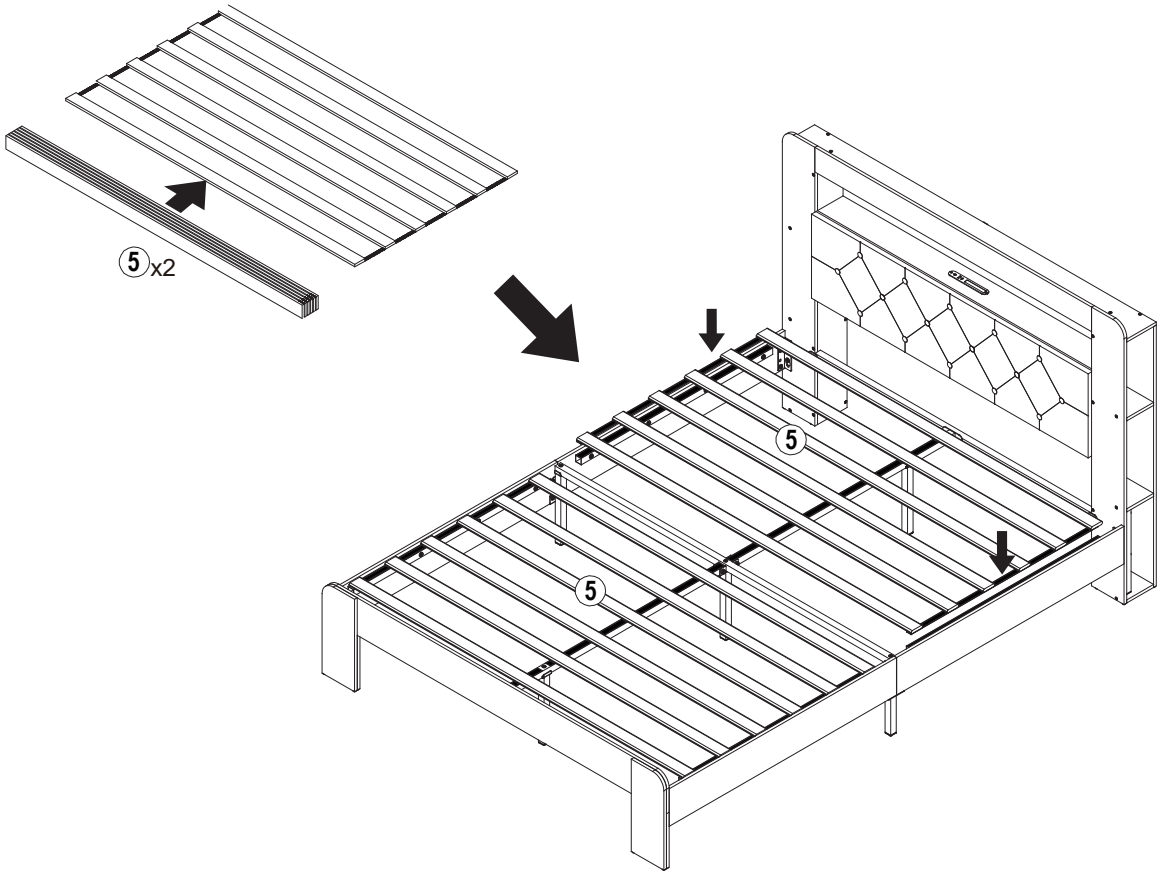

22



Finish